


HOW TO USE THE WOOL WINDER "L"

* Please read the following instructions before using the Wool Winder *

① Name of parts

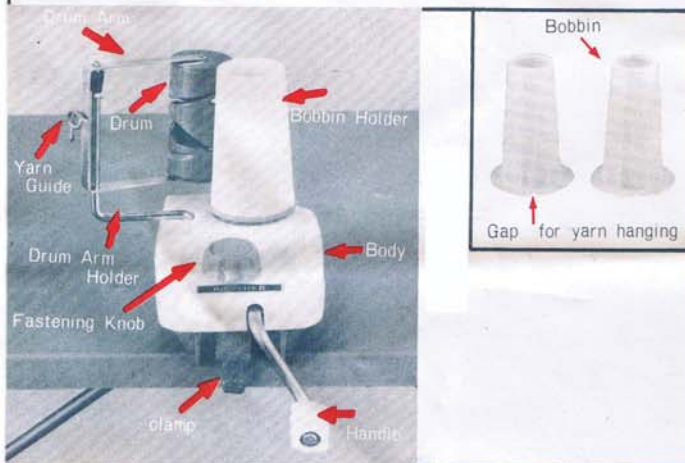


② Setting up




First, turn the Fastening Knob to left and let the Clamp down, and put the Wool Winder on the edge of the table as shown in the picture. Then fasten the Fastening Knob securely.

③ How to set the Drum

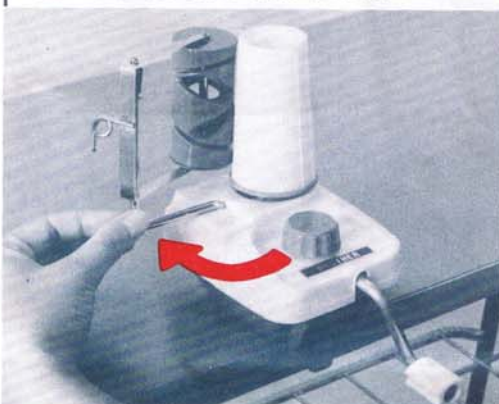


Turn the Drum Arm Holder as far as it will go.

④ How to put the Bobbin

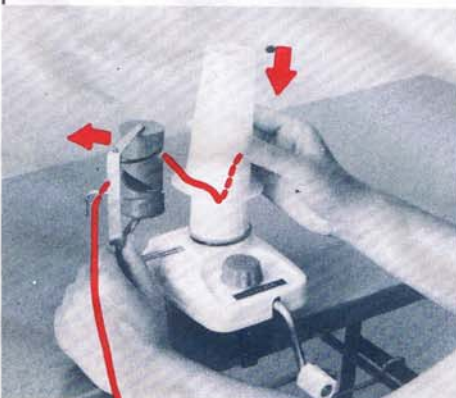


Thread the wool into the Yarn Guide and hook the end of yarn into the Gap of the Bobbin. Open the Drum Arm to left and put the Bobbin on the Bobbin Holder. (see picture). Then press it down slightly.

⑤ Winding the wool

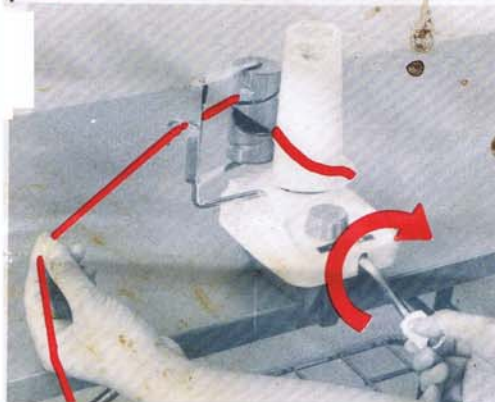


Holding the wool by left hand to give a small tension to it, turn the Handle to right so that you can wind up the wool into the ball. Don't turn the Handle to left because you cannot wind up.

⑥ After winding up the wool

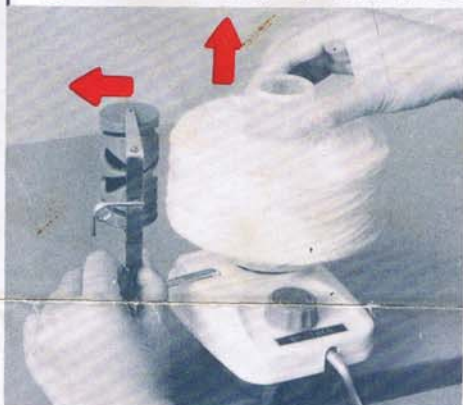

Open the Drum Arm to Left. And holding the top of the Bobbin, pull out the wound wool with Bobbin. NOTE: Don't remove the Bobbin from the wound wool.

⑦ Knitting

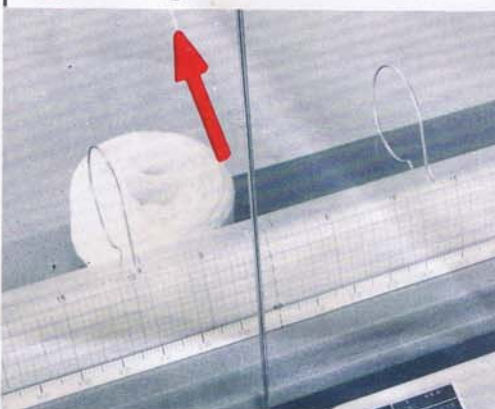

Place the wound wool under the Yarn Guide of the Tension unit and taking up the wool from outer side.



