

WHEN YOU USE THE G CARRIAGE WITH KH900

Please read the original instruction manual for the G carriage in conjunction with the following instructions.

PATTERN

All the patterns shown in the G carriage instruction manual are also memorized in the computer, so you should select the pattern you require from page 11 of KH900 instruction manual. (Please disregard the pattern no. used in the G carriage instruction manual.)

HOW TO KNIT

G carriage instruction manual explains the method using the G carriage with other models. Read the section "when using KH940". In the following points operate the knitting machine as shown below:


p.12

For casting on, push the input key to light the input lamp.



p.7 & step 4 on p.13

G lamp is located at the left side of the operation panel as shown below:

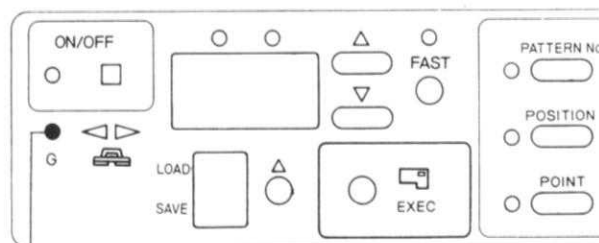

G lampe

step 13 on p.15

Push the input key to turn off the input lamp.



p.16

- pattern program
pattern no. selection
- ① Push the pattern no. key to light the pattern no. lamp.
- ② Choose the pattern no. 41 (1×1 rib) with the up or down key.
- ③ Push the pattern no. key to turn off the pattern no. lamp.

p.19

- pattern program
pattern no. selection
- ① Push the pattern no. key to light the pattern no. lamp.
- ② Choose the pattern no. 50 with the up or down key.
- ③ Push the pattern no. key to turn off the pattern no. lamp.


step 2 on p.31

Note the row number where you divide for the neck on the memo to remember it easily.

- ♣ When using the double length key.....
Each row is knitted twice. Check whether the last knitted row is the first or the second row of the double length pattern.

step 8 on p.33

- ① Select the row number you have memorized in step 2, using the up or down key. Both lamps of carriage direction indicator go out.

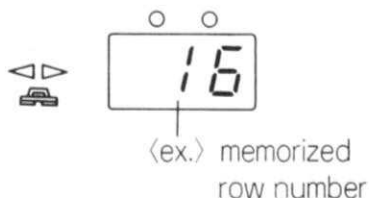

- ♣ When using the double length key……
When the last knitted row is the first row of the double length pattern, select the first one.
When the last knitted row is the second row of the double length pattern, select the second one.
- ② Push the up key (when using the upside down key, push the down key instead).
 - ♣ When using the double length key, the display may not change.

p.39

Changing the yarn

- In case of built-in pattern……
You cannot enter the memo data.
Keep in mind the row number where you want to change the yarn. When the display shows the row number while knitting, stop the G carriage and change the yarn.
- In case of your own pattern……
Enter the memo data using the pattern input or pattern edit program.

step 11 on p.42

Push the down key as many number of times as unravelled rows. Both lamps of carriage direction indicator go out and the row number in the display gets back.

ex. Push the down key two times (=unravell ed row plus one because you move the G carriage to the yarn in step 10).

- ♣ When using the upside down key, push the up key instead of the down key.
- ♣ When using the double length key……
Even if you push the down key or up key, the display may not change. But push the down or up key as many number of times as unravelled rows.

p.46

- When both power of the G carriage and the knitting machine is cut off……
Follow the instructions on pages 46 & 47, but skip step 4.
- When the power of the G carriage is cut off……
 - ① Turn off the power switch of the knitting machine.
 - ② Follow the instructions on pages 46 & 47, but skip the step 4.
- When the power of the knitting machine is cut off……
 - ① Move the G carriage to either side of the knitting machine (outside the turn mark).
 - ② Unravel the knitting down to a row of correct pattern knitting.
 - ③ Move the G carriage to the yarn and place it outside the turn mark.
 - ④ Turn on the power switch of the knitting machine.
 - ⑤ Move the G carriage to the edge of the knitting. Make sure that the G lamp is lit.
 - ⑥ Make sure the yarn is thraded and start knitting again.