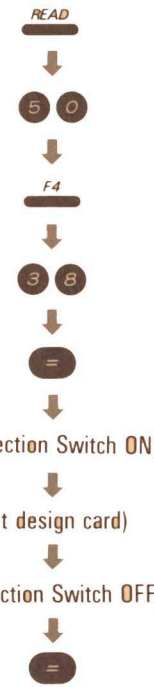
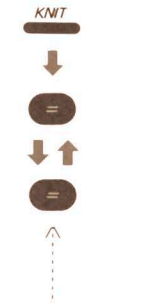
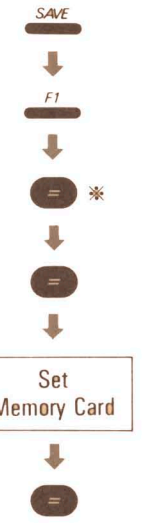
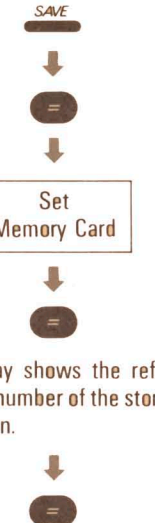
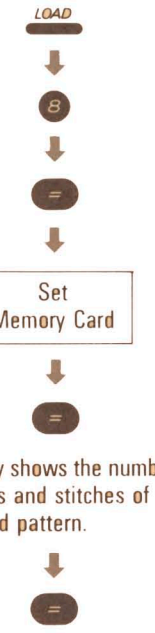
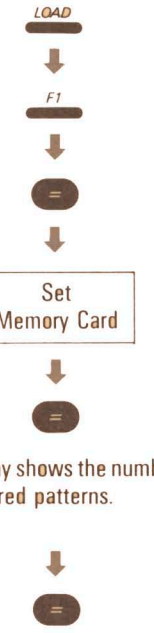








# HOW TO USE PE1

1. To read a pattern on design card. Ex. 50 rows/38 sts.	2. To knit using PE1 or to confirm a pattern.	3. To format a Memory Card or to erase all patterns.	4. To store a pattern into a Memory Card.	5. To recall a pattern from a Memory Card. Ex. To recall 8th pattern.	6. To see how many patterns are in Memory Card.
 <p>READ</p> <p>↓</p> <p>5 0</p> <p>↓</p> <p>F4</p> <p>↓</p> <p>3 8</p> <p>↓</p> <p>=</p> <p>(Inspection Switch ON)</p> <p>↓</p> <p>(Set design card)</p> <p>↓</p> <p>(Inspection Switch OFF)</p> <p>↓</p> <p>=</p> <p>* Always set the pattern width indicator to 60 when using PE1.</p>	 <p>KNIT</p> <p>↓</p> <p>=</p> <p>↓ ↑</p> <p>=</p> <p>* You can change between the pattern and the row number by pressing = key.</p>	 <p>SAVE</p> <p>↓</p> <p>F1</p> <p>↓</p> <p>= *</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>↓</p> <p>Set Memory Card</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>* To abandon the erase, press C key here.</p>	 <p>SAVE</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>↓</p> <p>Set Memory Card</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>* Display shows the reference number of the stored pattern.</p>	 <p>LOAD</p> <p>↓</p> <p>8</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>↓</p> <p>Set Memory Card</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>	 <p>LOAD</p> <p>↓</p> <p>F1</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>↓</p> <p>Set Memory Card</p> <p>↓</p> <p>=</p> <p>↓</p> <p>=</p> <p>* Display shows the number of stored patterns.</p>

\*Use C key if...

1. You make a mistake. (You can delete the last entry, one character at a time.)
2. You want to stop PE1 from reading a pattern.
3. PE1 doesn't work whatever key you press.
4. Display doesn't show OK sign when you want to READ, KNIT, SAVE or LOAD.

\*The pattern read into PE1 is not erased by pressing C key.
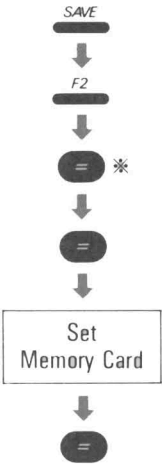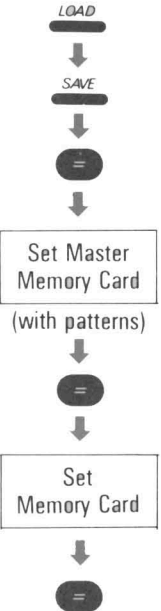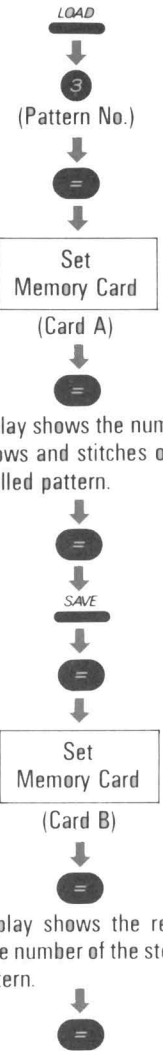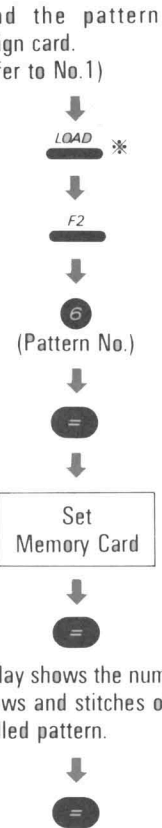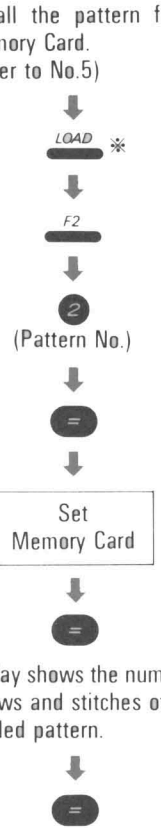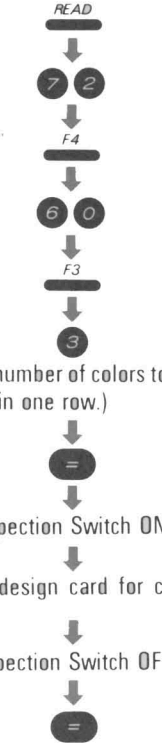
<p>7. To erase the last pattern stored in Memory Card.</p>	<p>8. To copy all patterns from Memory Card to another Memory Card.</p>	<p>9. To copy one pattern from Memory Card to another Memory Card. Card A → Card B</p>	<p>10. To combine patterns from design card and Memory Card.</p>	<p>11. To combine patterns from Memory Card.</p>	<p>12. To read for Multi-Colored Jacquard. Ex. 72 rows/60 sts. 3 colored Jacquard.</p>
 <p>* To abandon the erase, press <b>C</b> key here.</p>		 <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p> <p>* Display shows the reference number of the stored pattern.</p>	 <p>* Read the pattern on design card. (Refer to No.1)</p> <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p> <p>* When combining more than three patterns, repeat from *</p> <p>* Make sure that the patterns to be combined always must be the same width.</p>	 <p>* Recall the pattern from Memory Card. (Refer to No.5)</p> <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>	 <p>(The number of colors to be used in one row.)</p> <p>(Inspection Switch ON) *</p> <p>(Set design card for color A.)</p> <p>(Inspection Switch OFF)</p> <p>* When the display shows "OK" sign, repeat from * for color B and C.</p> <p>* When working Multi-Colored Jacquard, always set Cam Lever to Slip and put the left light ON of Pattern Switch No.1.</p>