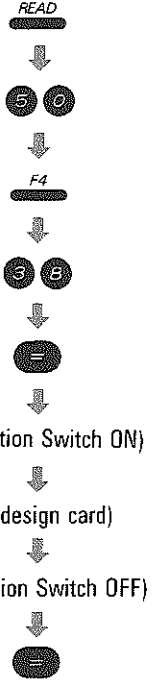
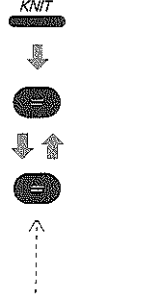
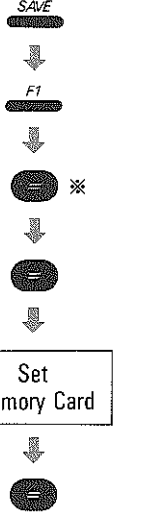
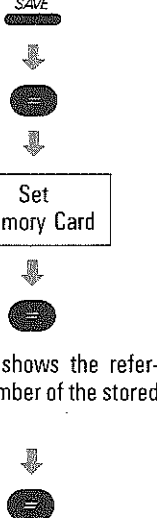
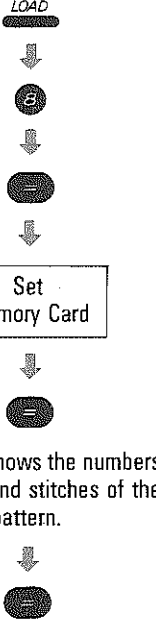



HOW TO USE PE1

1. To read a pattern on design card. Ex. 50 rows/38 sts.	2. To knit using PE1 or to confirm a pattern.	3. To format a Memory Card or to erase all patterns.	4. To store a pattern into a Memory Card.	5. To recall a pattern from a Memory Card. Ex. To recall 8th pattern.	6. To see how many patterns are in Memory Card.
<p>READ</p>  <p>(Inspection Switch ON)</p> <p>(Set design card)</p> <p>(Inspection Switch OFF)</p> <p>=</p> <p>* Always set the pattern width indicator to 60 when using PE1.</p>	<p>KNIT</p>  <p>* You can change between the pattern and the row number by pressing = key.</p>	<p>SAVE</p>  <p>Set Memory Card</p> <p>Set Memory Card</p> <p>=</p> <p>* To abandon the erase, press C key here.</p>	<p>SAVE</p>  <p>Set Memory Card</p> <p>Set Memory Card</p> <p>=</p> <p>* Display shows the reference number of the stored pattern.</p>	<p>LOAD</p>  <p>Set Memory Card</p> <p>Set Memory Card</p> <p>=</p> <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>	<p>LOAD</p>  <p>Set Memory Card</p> <p>Set Memory Card</p> <p>=</p> <p>* Display shows the number of stored patterns.</p>

*Use **C** key if...

1. You make a mistake. (You can delete the last entry, one character at a time.)
2. You want to stop PE1 from reading a pattern.
3. PE1 doesn't work whatever key you press.
4. Display doesn't show OK sign when you want to READ, KNIT, SAVE or LOAD.

*The pattern read into PE1 is not erased by pressing **C** key.

7. To erase the last pattern stored in Memory Card.	8. To copy all patterns from Memory Card to another Memory Card.	9. To copy one pattern from Memory Card to another Memory Card. Card A → Card B	10. To combine patterns from design card and Memory Card.	11. To combine patterns from Memory Card.	12. To read for Multi-Colored Jacquard. Ex. 72 rows/60 sts. 3 colored Jacquard.
<p>※ To abandon the erase, press key here.</p>		<p>* Display shows the numbers of rows and stitches of the recalled pattern.</p> <p>* Display shows the reference number of the stored pattern.</p>	<p>* Read the pattern on design card. (Refer to No.1)</p> <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p> <p>* When combining more than three patterns, repeat from ※</p> <p>* Make sure that the patterns to be combined always must be the same width.</p>	<p>* Recall the pattern from Memory Card. (Refer to No.5)</p> <p>* Display shows the numbers of rows and stitches of the recalled pattern.</p>	<p>(The number of colors to be used in one row.)</p> <p>(Inspection Switch ON) ※</p> <p>(Set design card for color A.)</p> <p>(Inspection Switch OFF)</p> <p>* When the display shows "OK" sign, repeat from ※ for color B and C.</p> <p>* When working Multi-Colored Jacquard, always set Cam Lever to Slip and put the left light ON of Pattern Switch No.1.</p>