 


バリエーション模様

Variation Patterns

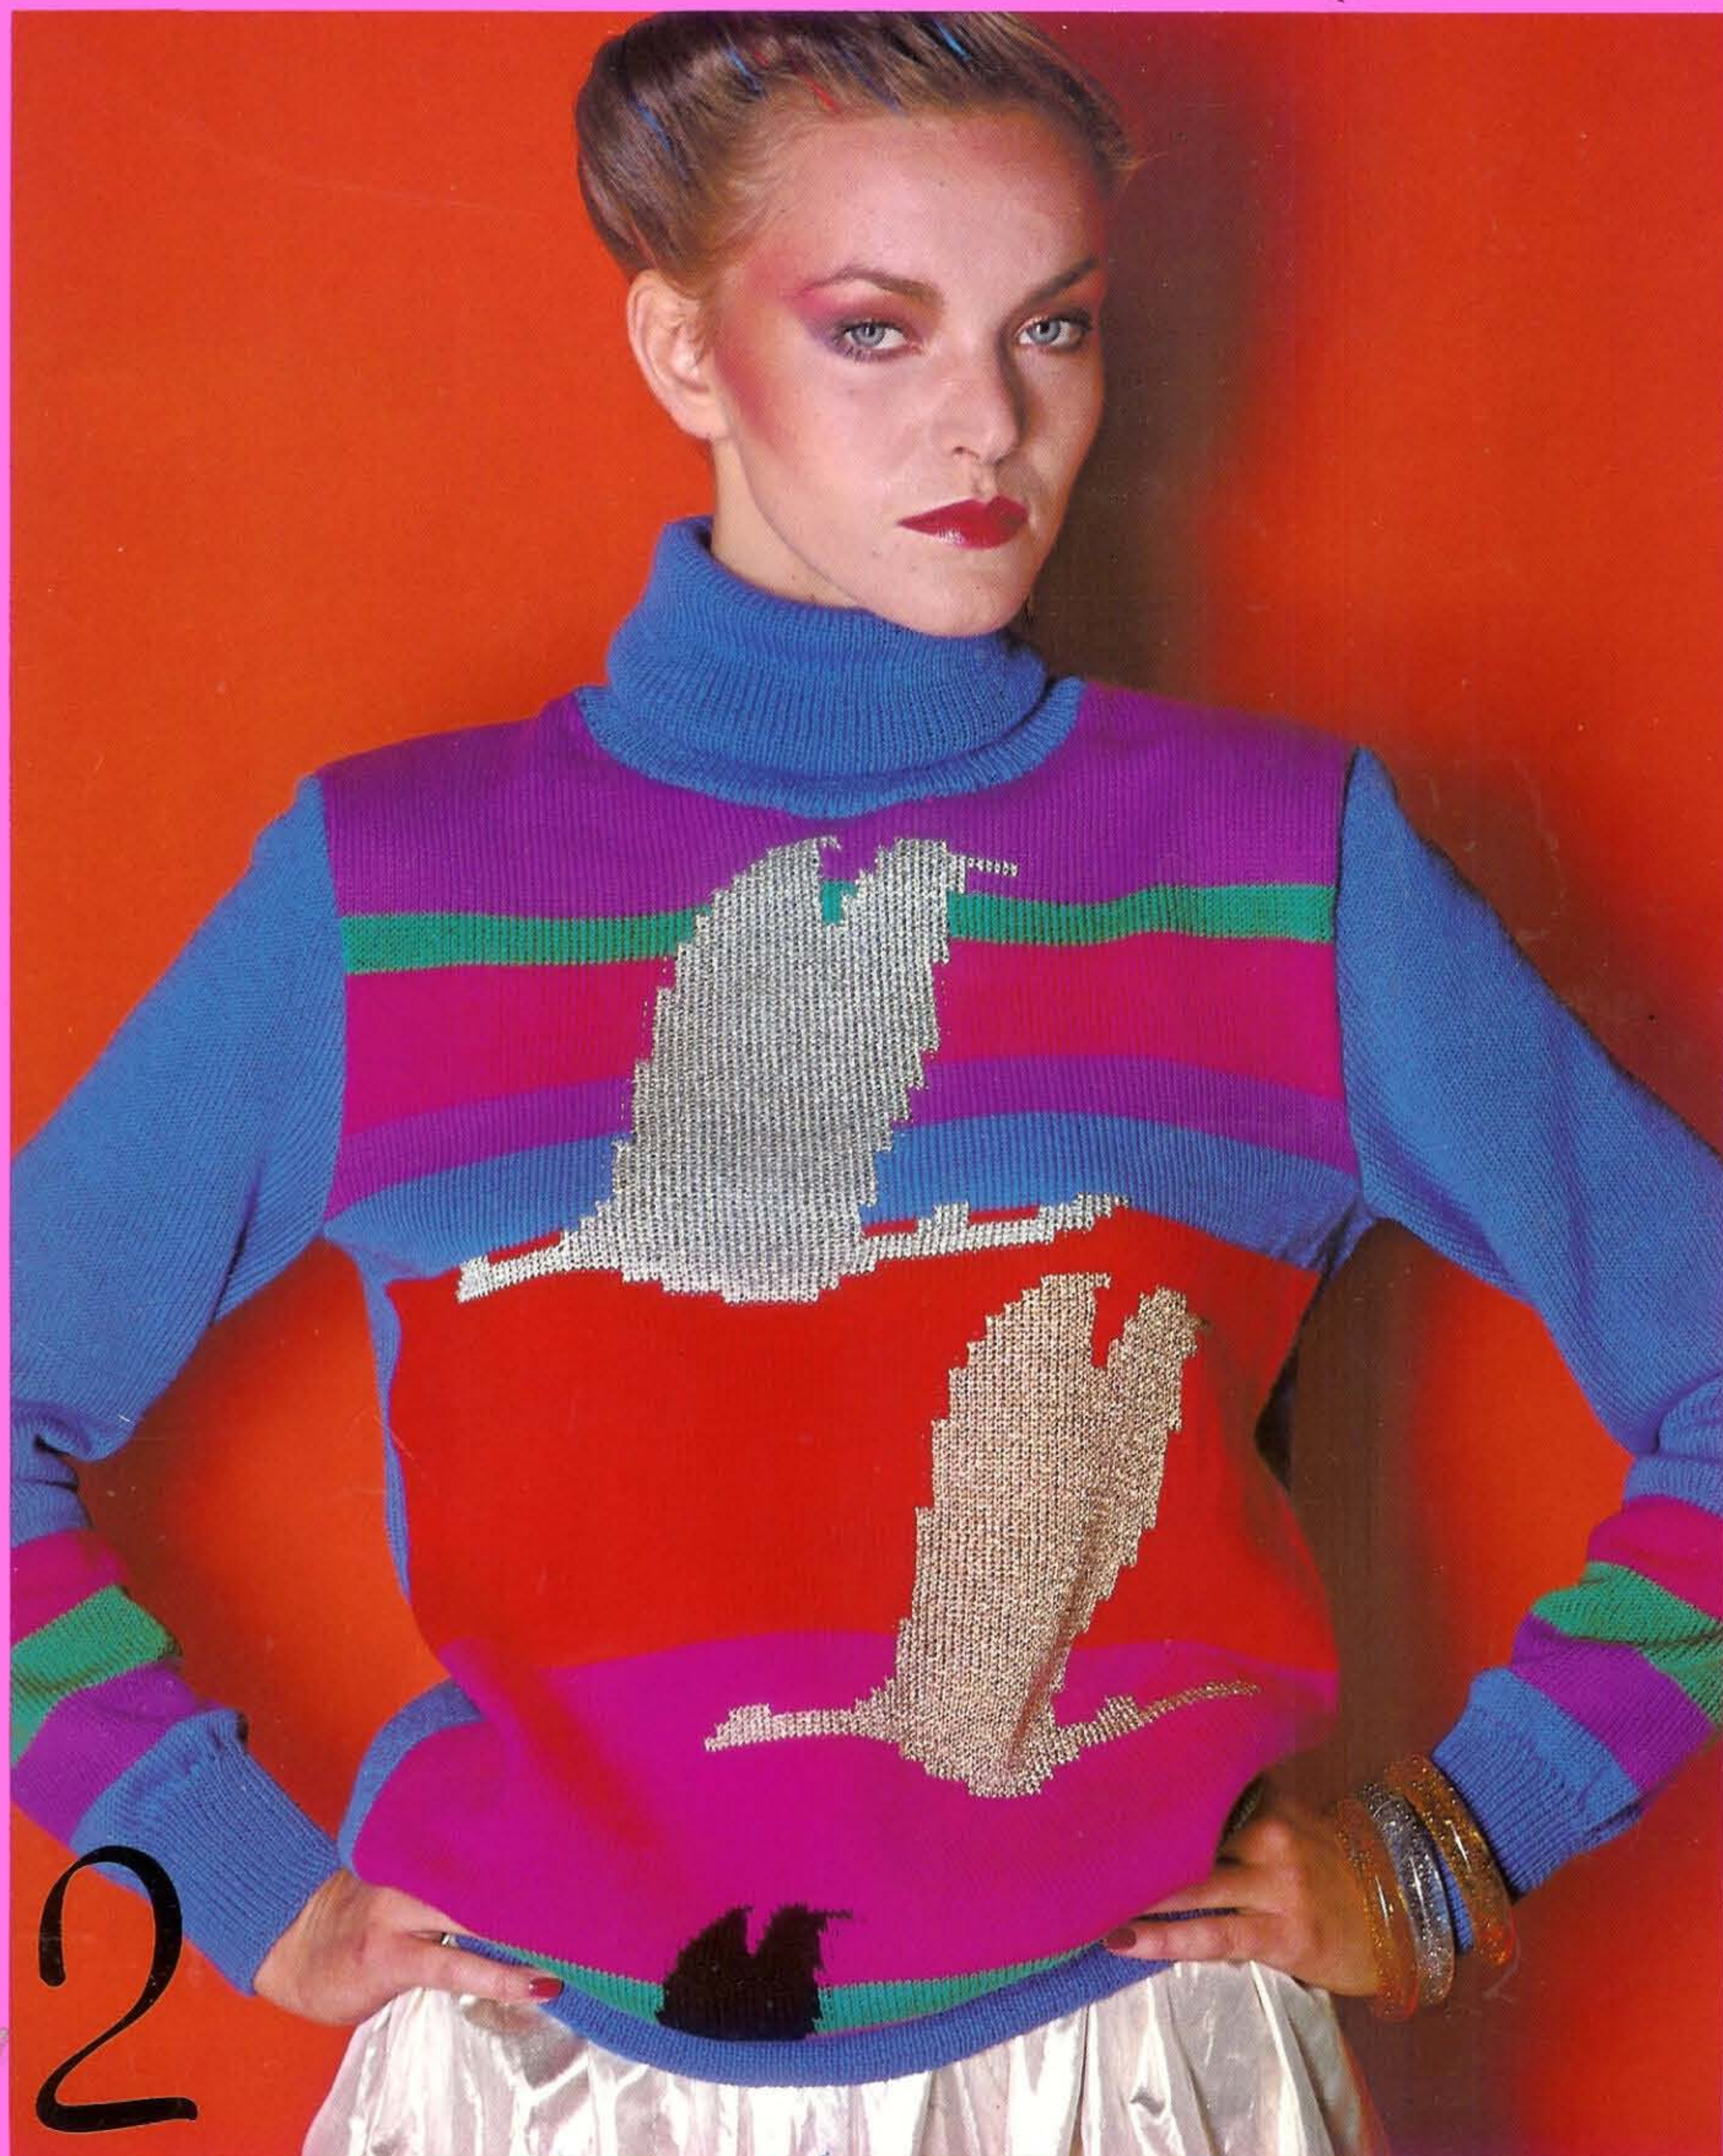

2

HOW TO USE THE ELECTROKNIT PATTERN Vol.2

1

Please use this pattern book after learning the basic operations with the instruction manual.

2

The patterns are printed in life-size, therefore place the Blank card over the pattern and trace it with special pencil provided in the accessory box.

3

The patterns are printed in dark-blue colour. It is not necessary to trace the part which is printed in lighter colour. This part indicates the stitches for embroidering by hand after knitting.

4

There are illustrations of garment bodice for each pattern which are very useful when knitting the garment. Each illustration is arranged under the condition of medium size of garment and medium thickness yarn. However the position of the pattern and number of patterns on the garment are subject to the knitting gauge and size of garment being knitted. Number of rows of plain stitch between pattern knitting portions is not indicated due to same reasons as above.

5

The patterns are printed on the corner of left and bottom of the pattern sheet. However you can trace the pattern on any position of Blank card. In this case, the step No. ① – ④ on the Operation chart would change. Enter the actual numbers you get from the Blank card for the step No. ① – ④.

6


There are 2 setting positions, KC(I) and KC(II), for Change knob on K-carriage. Select suitable position by yourself according to the pattern and pattern knitting width. Please refer to the instruction manual on page 32 for the details.
KC(II) position is used for the patterns of this book as a general rule.

7

It is possible to knit the Multi-colour rib pattern by attaching the Ribber to the knitter, and changing the yarn with the Colour changer, KRC-830. For this purpose, set the PATTERN VARIATION SWITCH No. 7 to upper position. The number of row of the pattern should be even number, IF NOT, ADD ONE ROW WITH PLAIN STITCH.

HOW TO READ THE OPERATION CHART


OPERATION CHART (Please follow operation in the PATTERN MANUAL.)

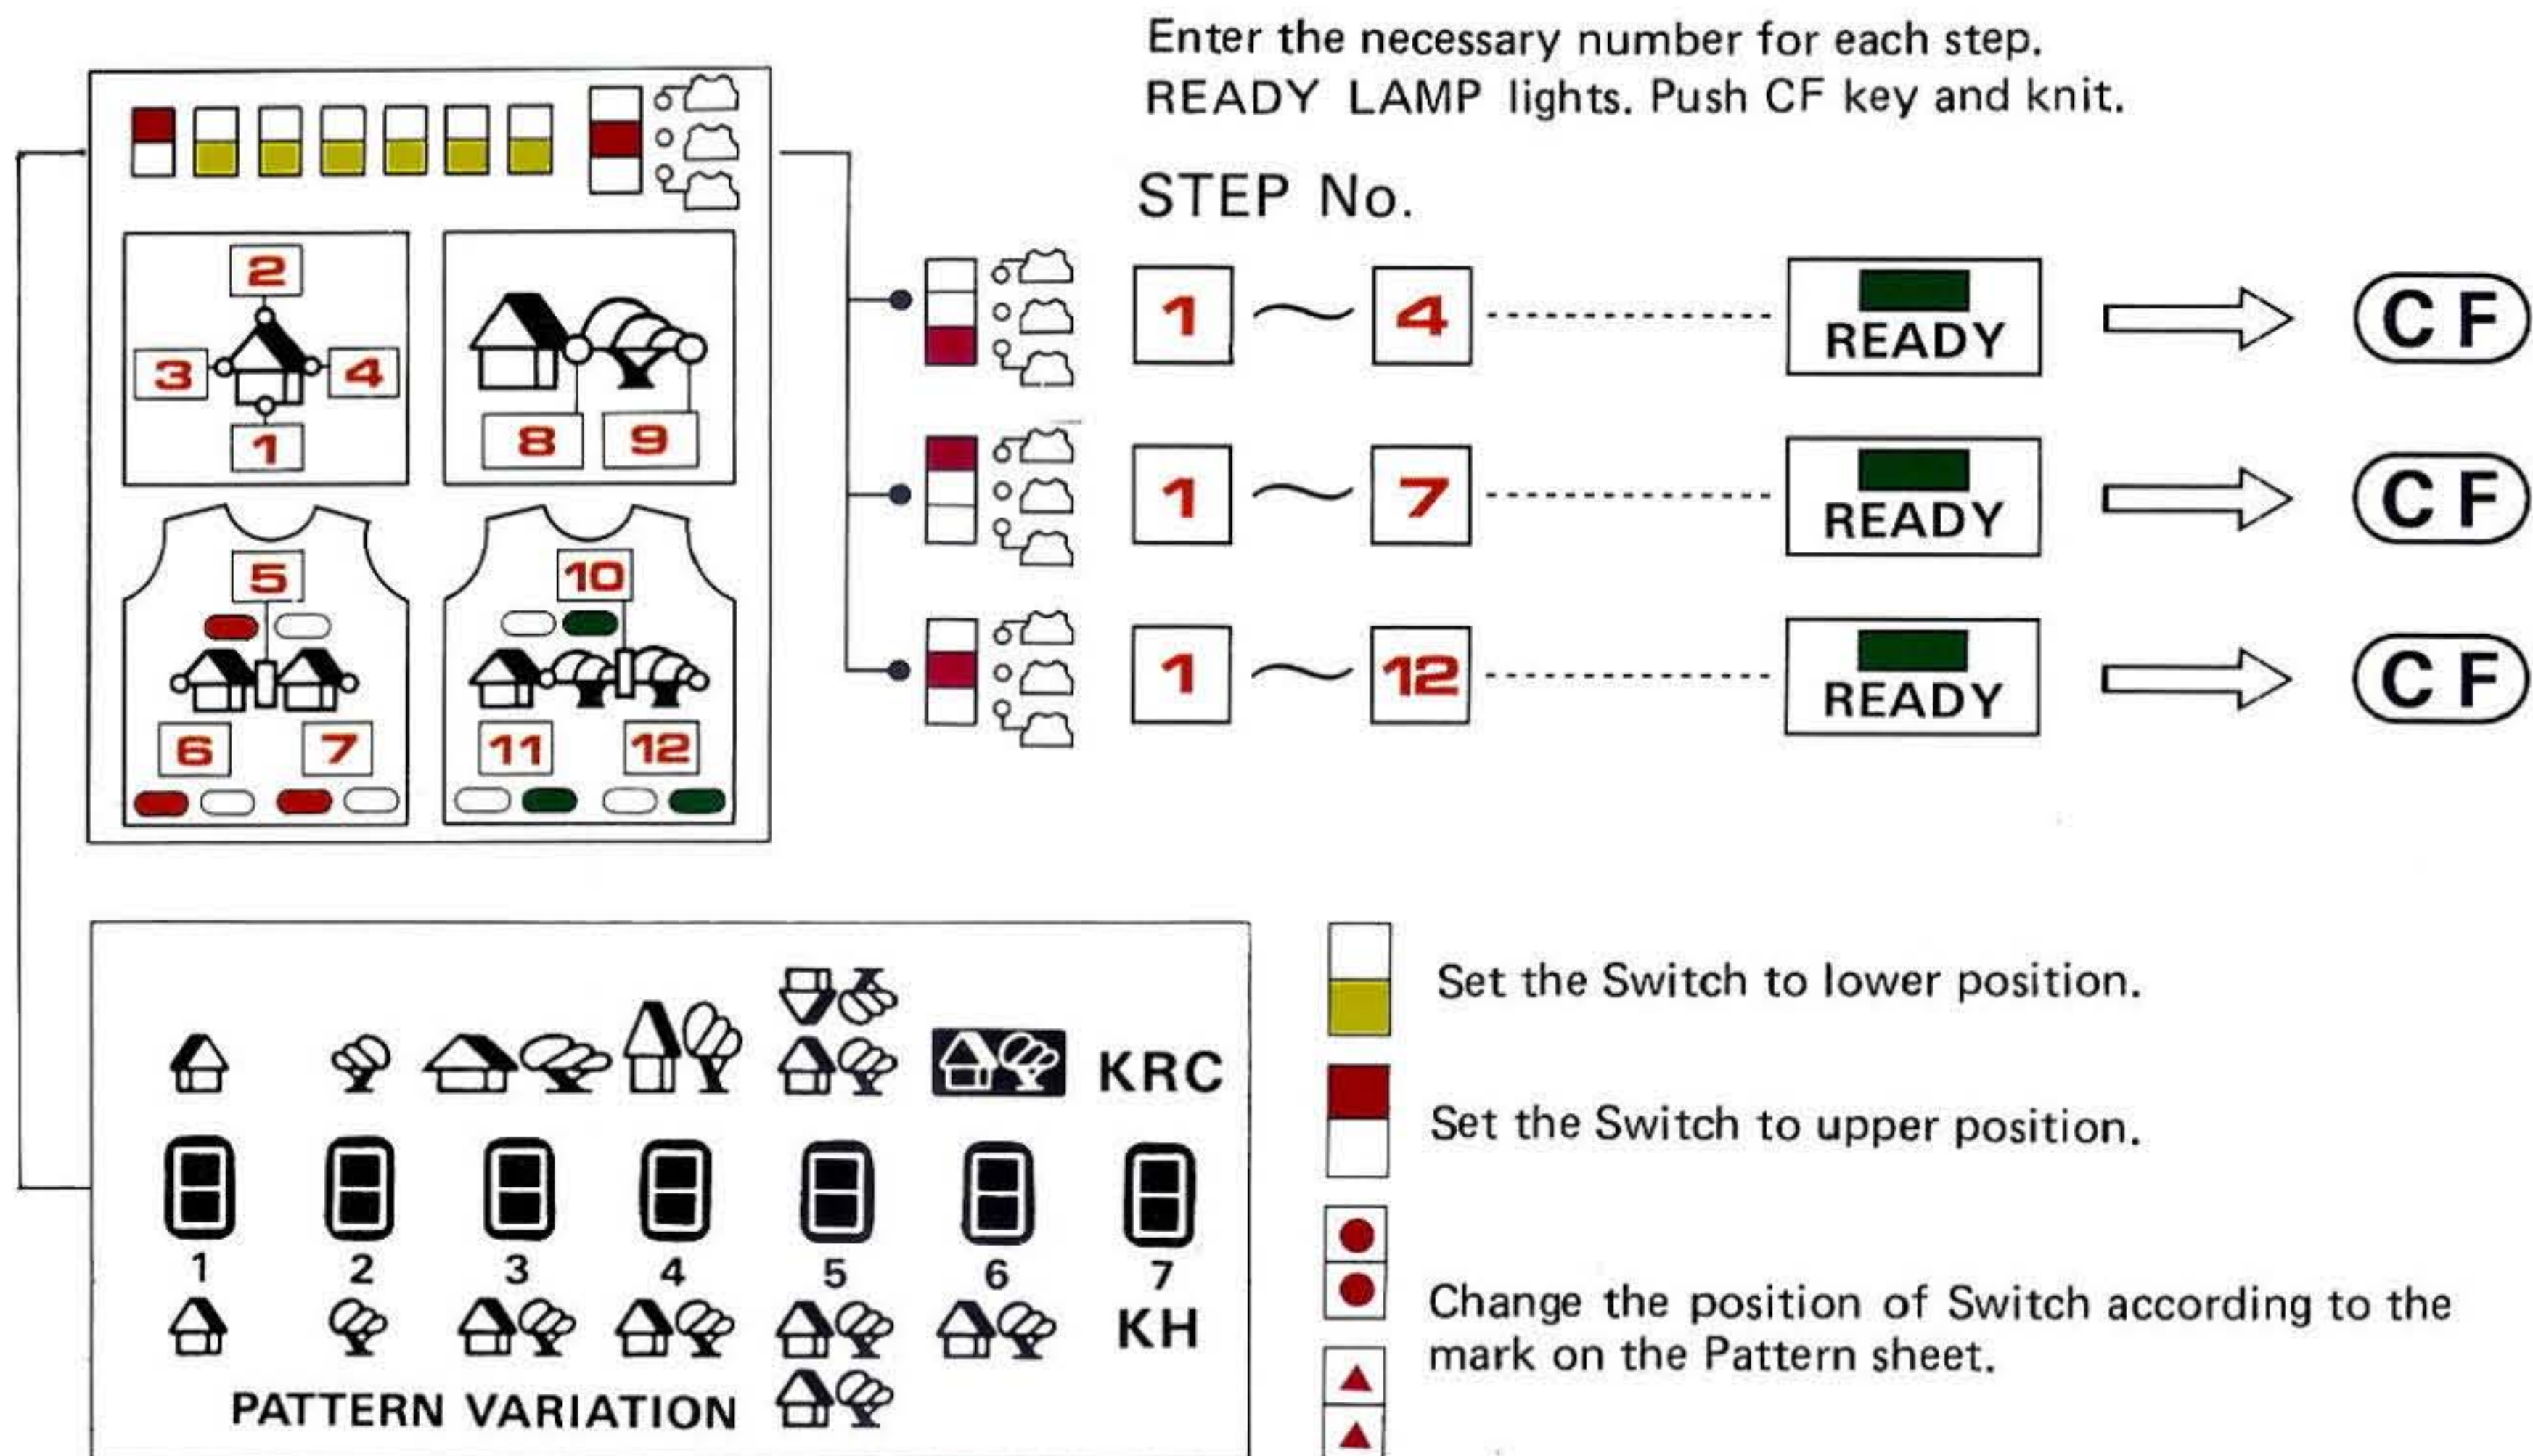

There are 3 examples (A, B and C) for each pattern, and operation charts corresponding to examples are included.

EXAMPLE 1 (P. 10)

★ Follow the Operation chart from the bottom when knit.

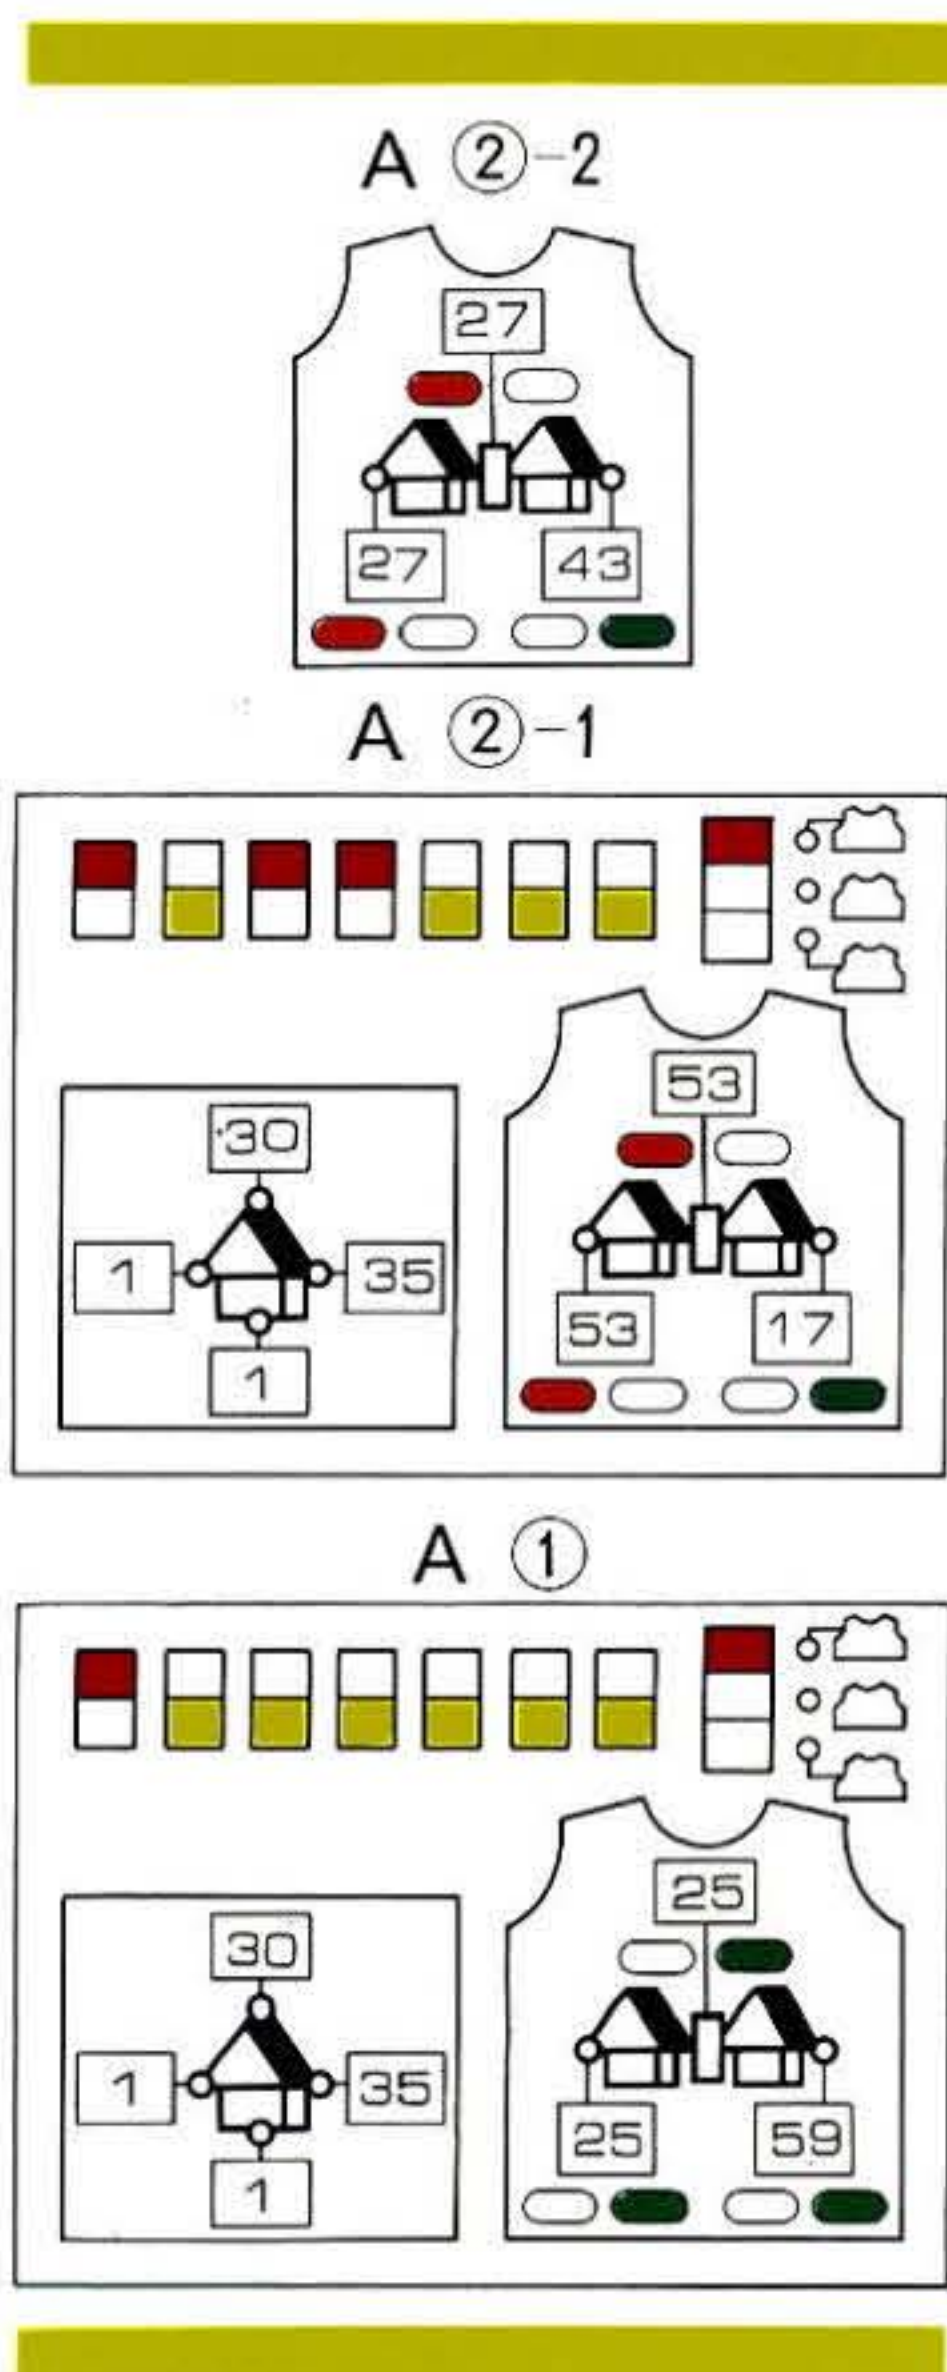


A ①
Set the PATTERN VARIATION SWITCHES and PATTERN SELECTOR SWITCH, and enter the necessary number for the step ① to ⑦. READY LAMP lights. Push (CF) key and knit.

A ②-1
The same operation as A ①.




A ②-2
The same program as A ②-1 except the numbers for the step ⑤ to ⑦. Enter the necessary number for the step ⑤ to ⑦.

EXAMPLE 2 (P. 11)

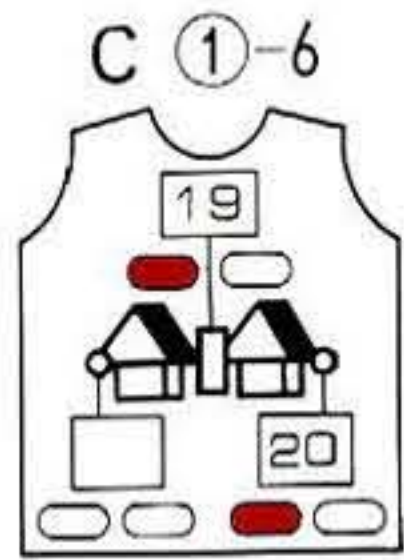


C ①-1
Make the program and knit.

C ①-2 to C ①-6
The same program as **C ①-1** except the numbers for the steps ⑤ and ⑦.
(Skip the step ⑥ by pushing the **(M)** key.)

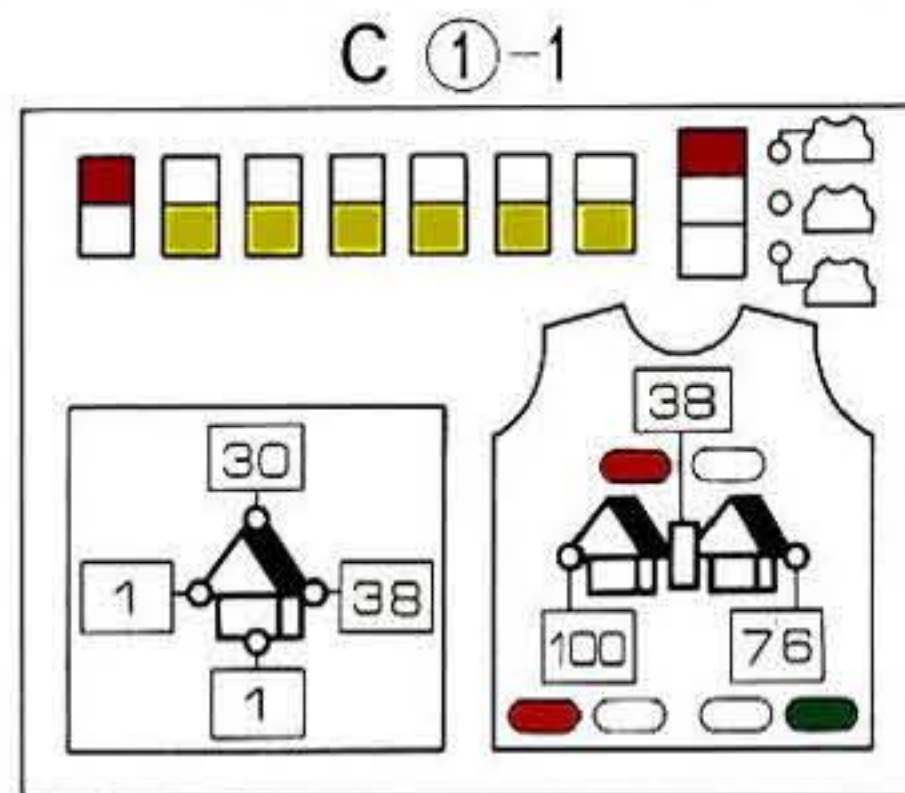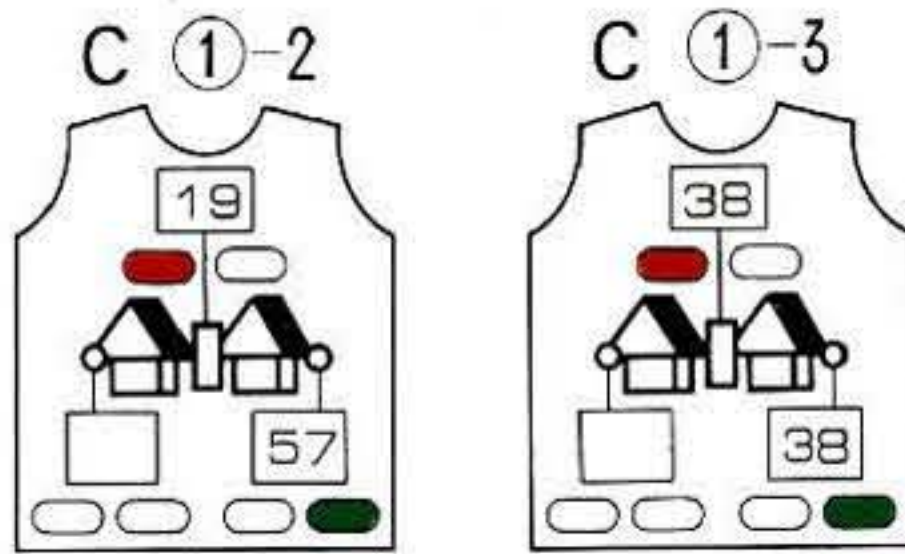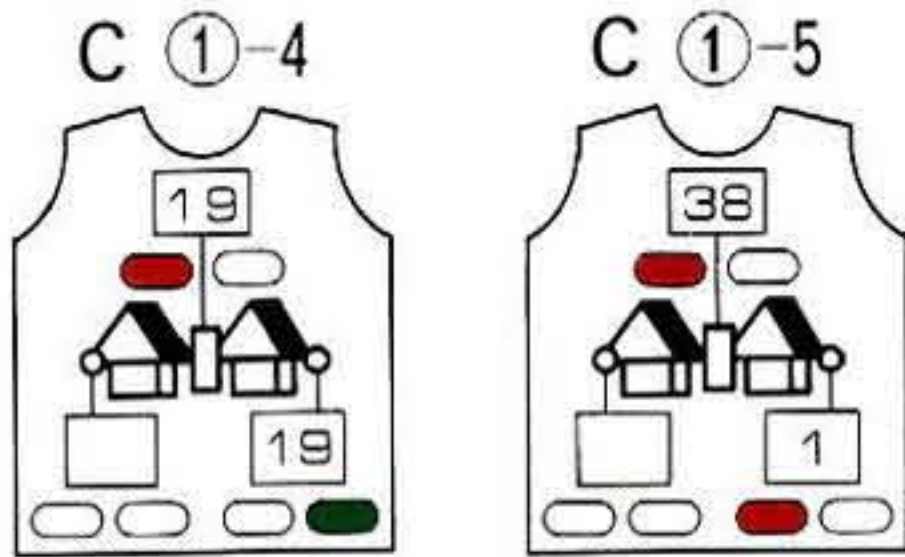

EXAMPLE 3 (P. 50)

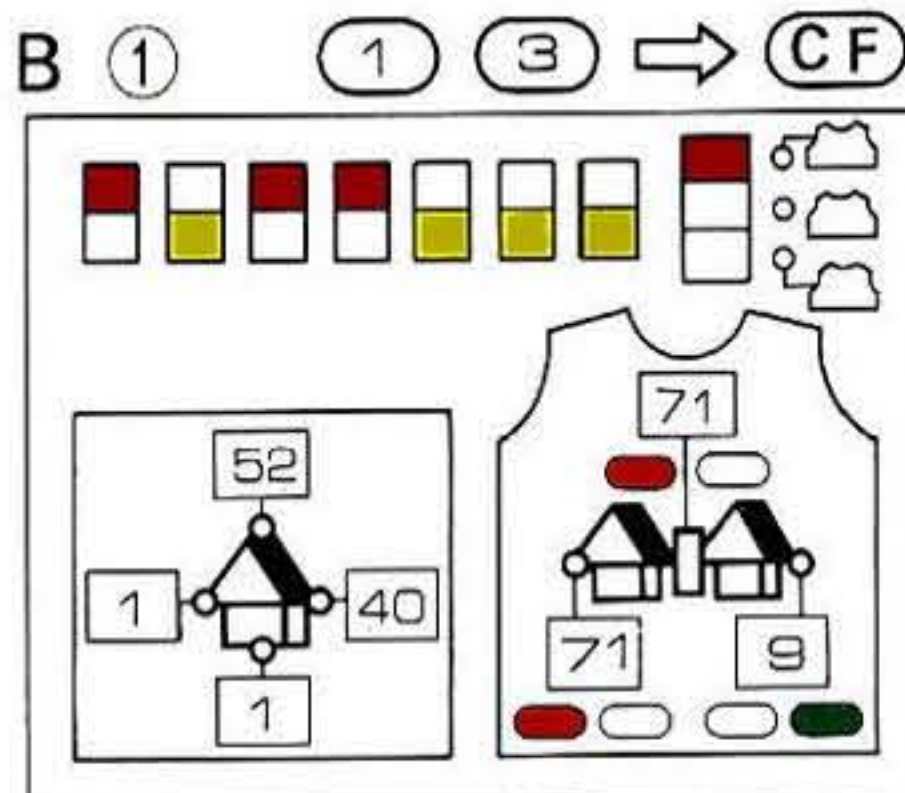


B ①
Make the program by referring to the Operation chart. READY LAMP lights, then push (1) (3) and **(CF)** keys. The pattern starts from 13th row.

EXAMPLE 4 (P. 22)

- B ①-7** (4) (9) → **(CF)**
- B ①-6** (4) (5) → **(CF)**
- B ①-5** (4) (1) → **(CF)**
- B ①-4** (3) (7) → **(CF)**
- B ①-3** (3) (3) → **(CF)**
- B ①-2** (2) (9) → **(CF)**
- B ①-1**


B ①-1
Make the program and knit.

B ①-2 to B ①-7
The program is the same as **B ①-1**
Push the number indicated and **(CF)** key and knit.

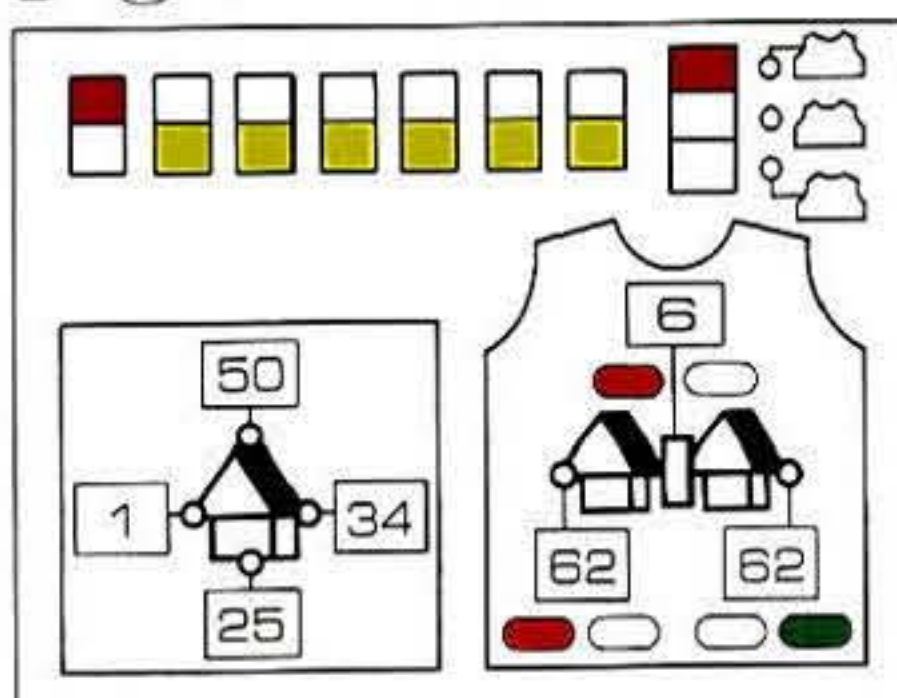


EXAMPLE 5 (P. 34 & 48)

B ①-2

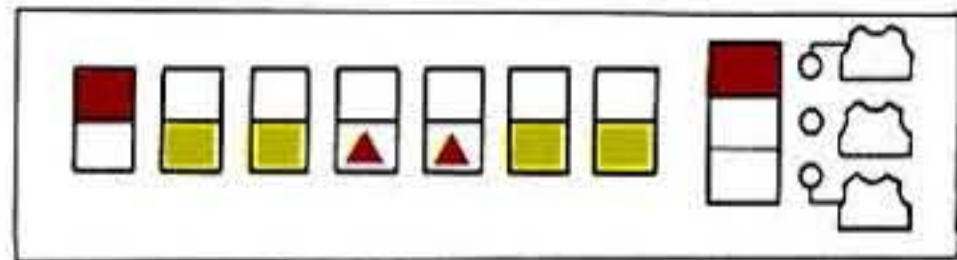

B ①-1 (4) (4) → CF

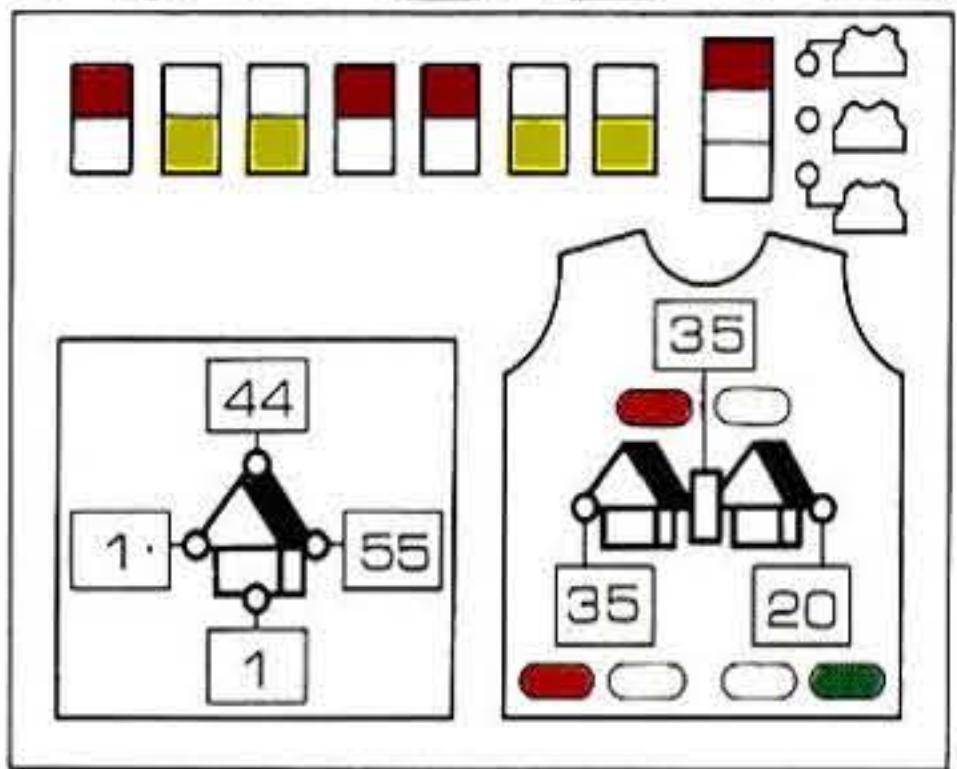

B ①-1

When trace the pattern, trace the ▲ (or ●) mark in L-window as well. The other operation is the same as for EXAMPLE 3. Knit to the ▲ mark at the Card inlet.

B ①-2


Knit one more row. Set the PATTERN VARIATION SWITCHES No. 4 and No. 5 to lower position.

GENERAL INFORMATION:

IF THE PATTERN VARIATION SWITCH No. 4 IS AT LOWER POSITION, CHANGE THE POSITION OF OTHER SWITCHES WHEN ▲ MARK APPEARS AT THE CARD INLET. (NOT NECESSARY TO KNIT ONE EXTRA ROW.)

EXAMPLE 6 (P. 77)


B ①

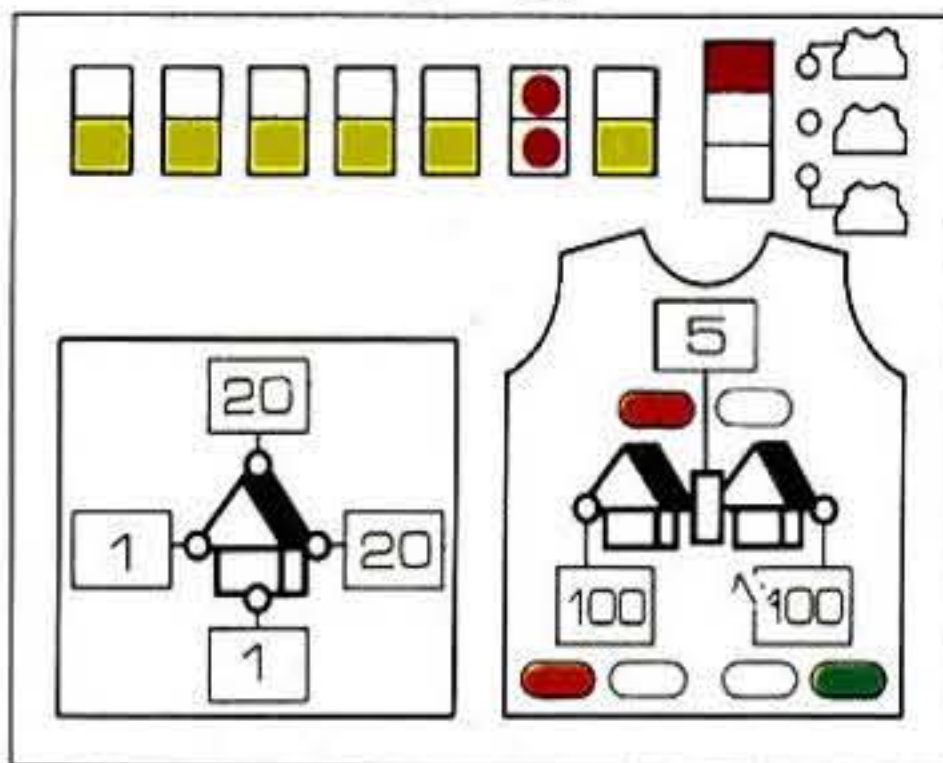

B ① and C ①

Make the program and knit by changing the position of PATTERN VARIATION SWITCH No. 6 from lower to upper position or vice versa when ▲ (or ●) mark appears at the Card inlet.

C ①

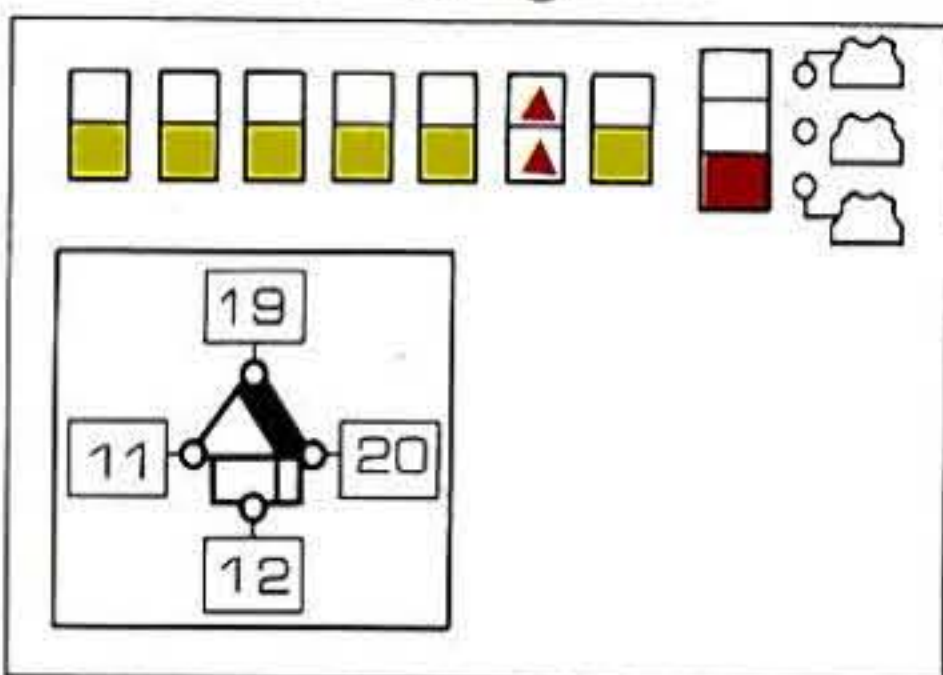


配色の切替え位置


●模様カード右側のメモ欄に配色の切替え位置を記入して編みます。
 ●メモ欄は4行ありますが、5色以上の場合には色分けまたは記号などで、区分けしてください。

■：地糸口の糸の切替え位置を示します。
 ■：色糸口の糸の切替え位置を示します。





COLOUR CHANGING CHART for sample motif.

■：indicating the colour in YARN FEEDER A
 ■：indicating the colour in YARN FEEDER B

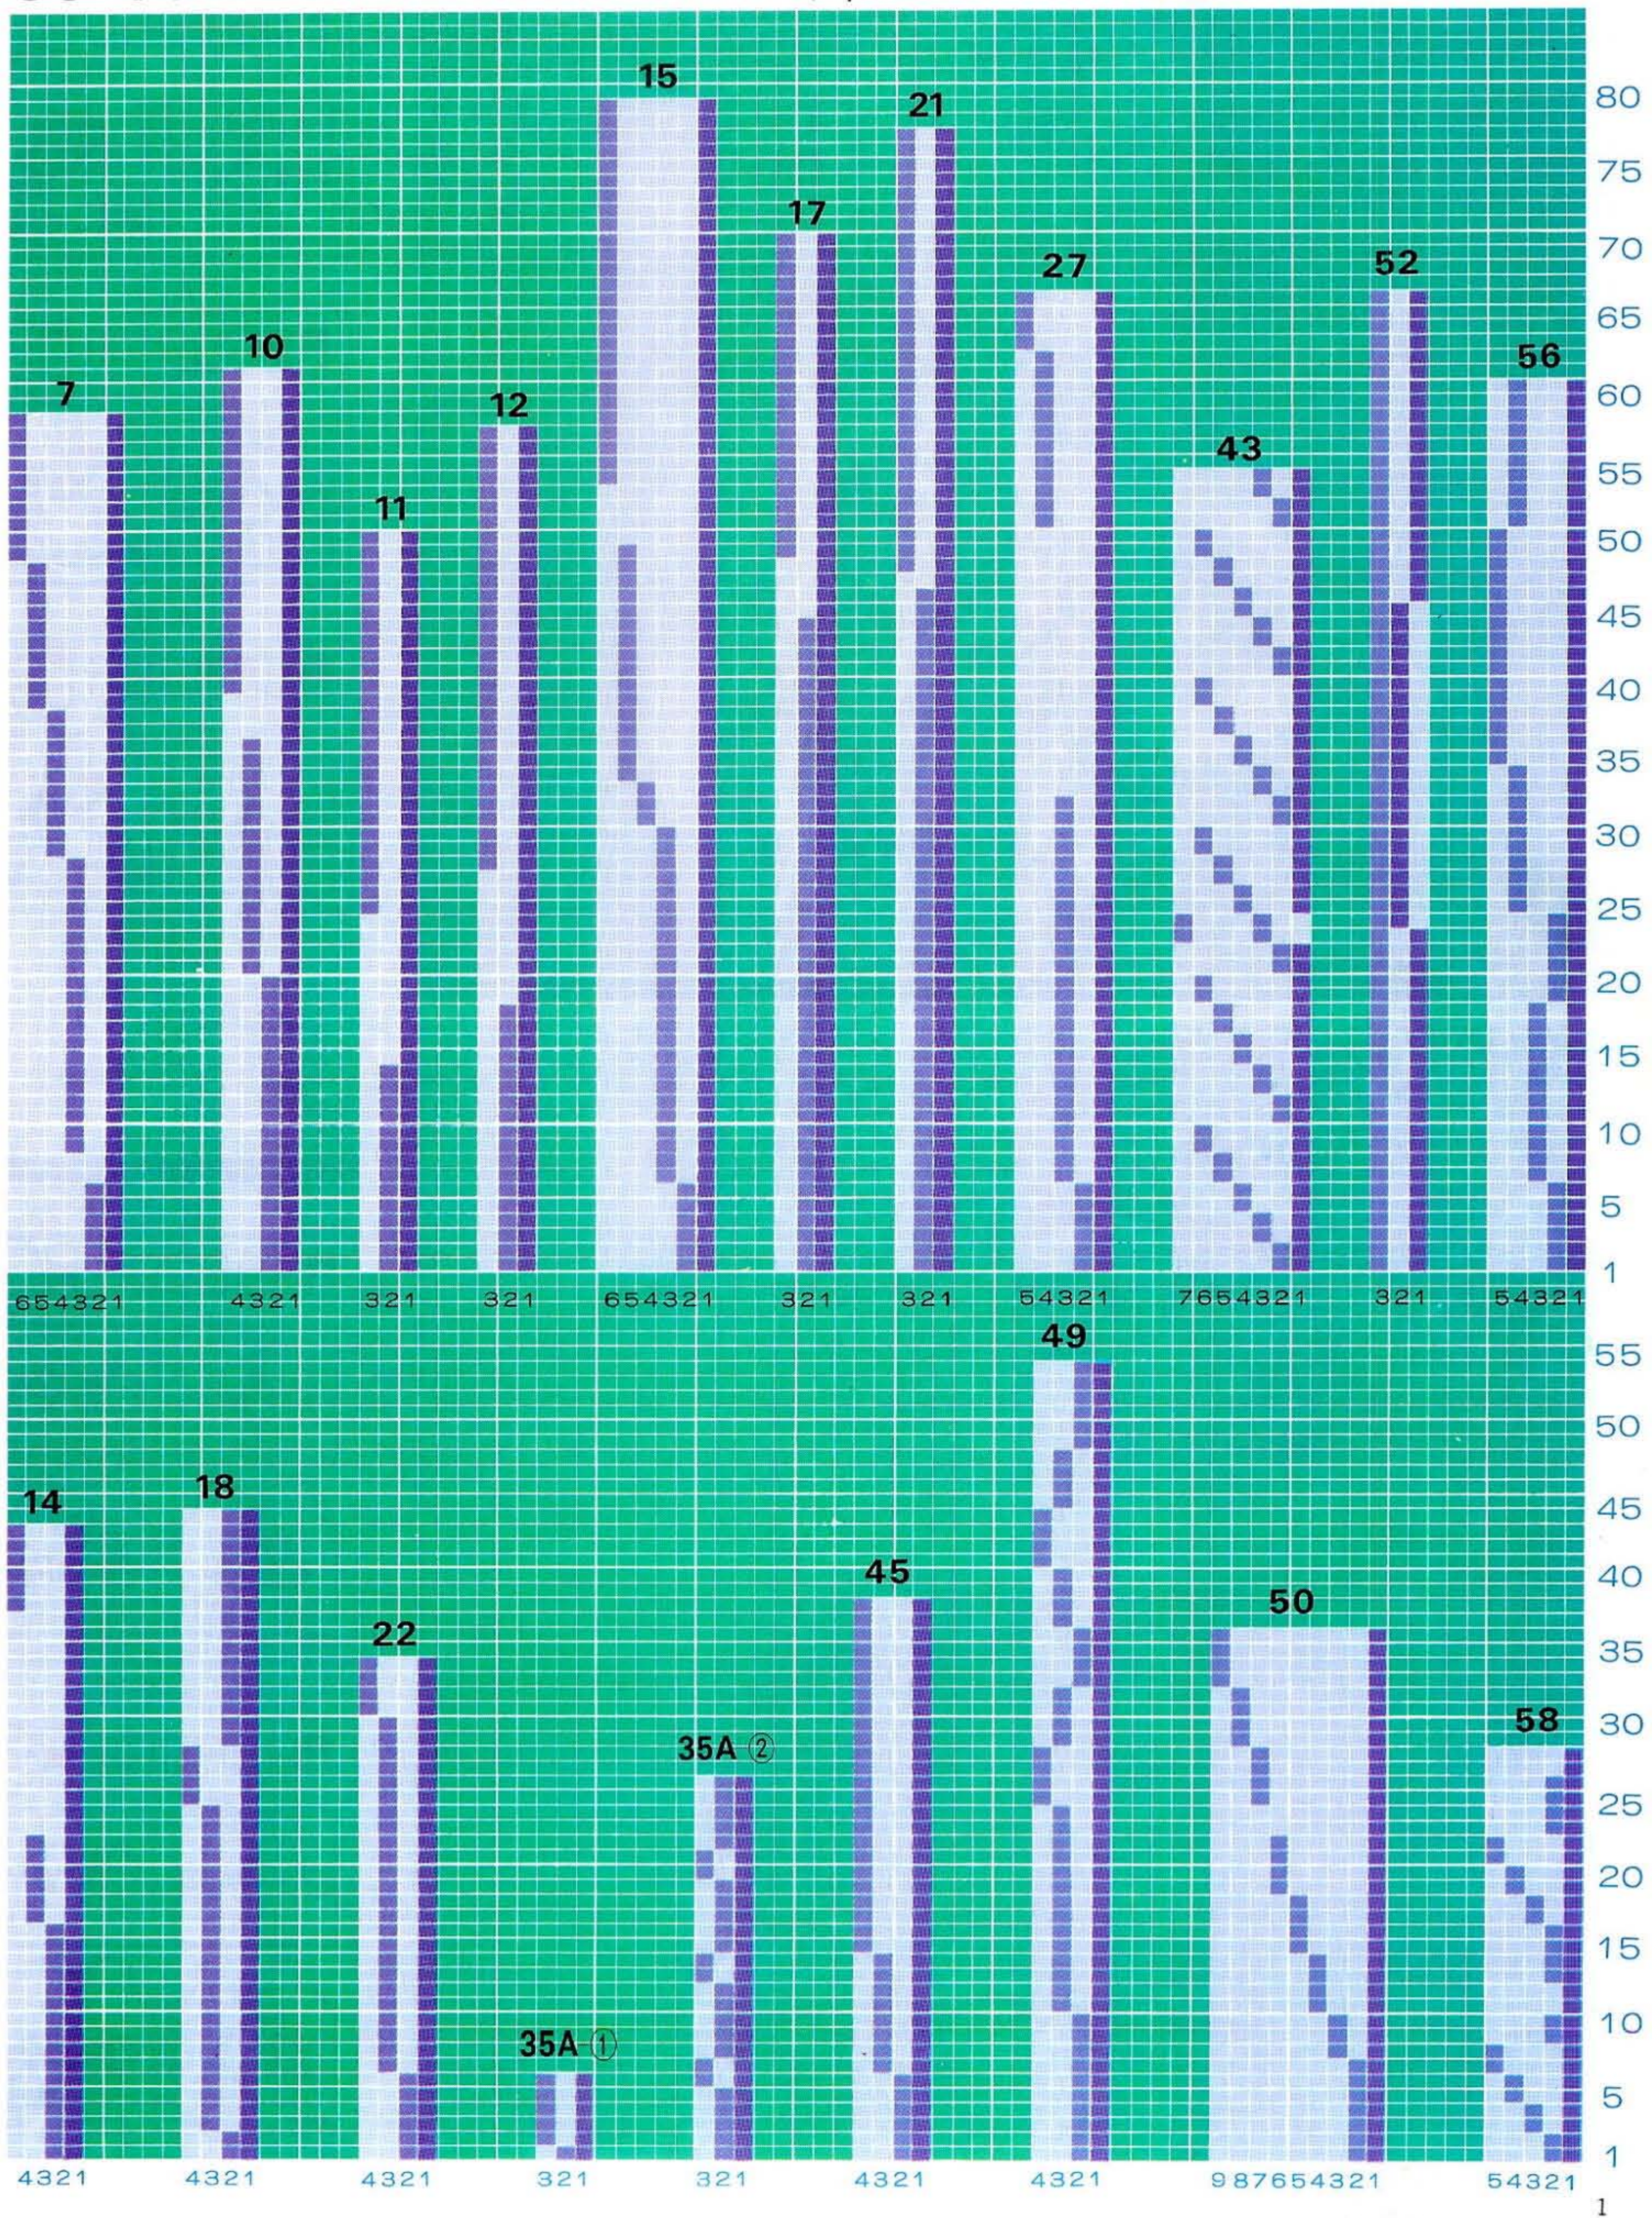

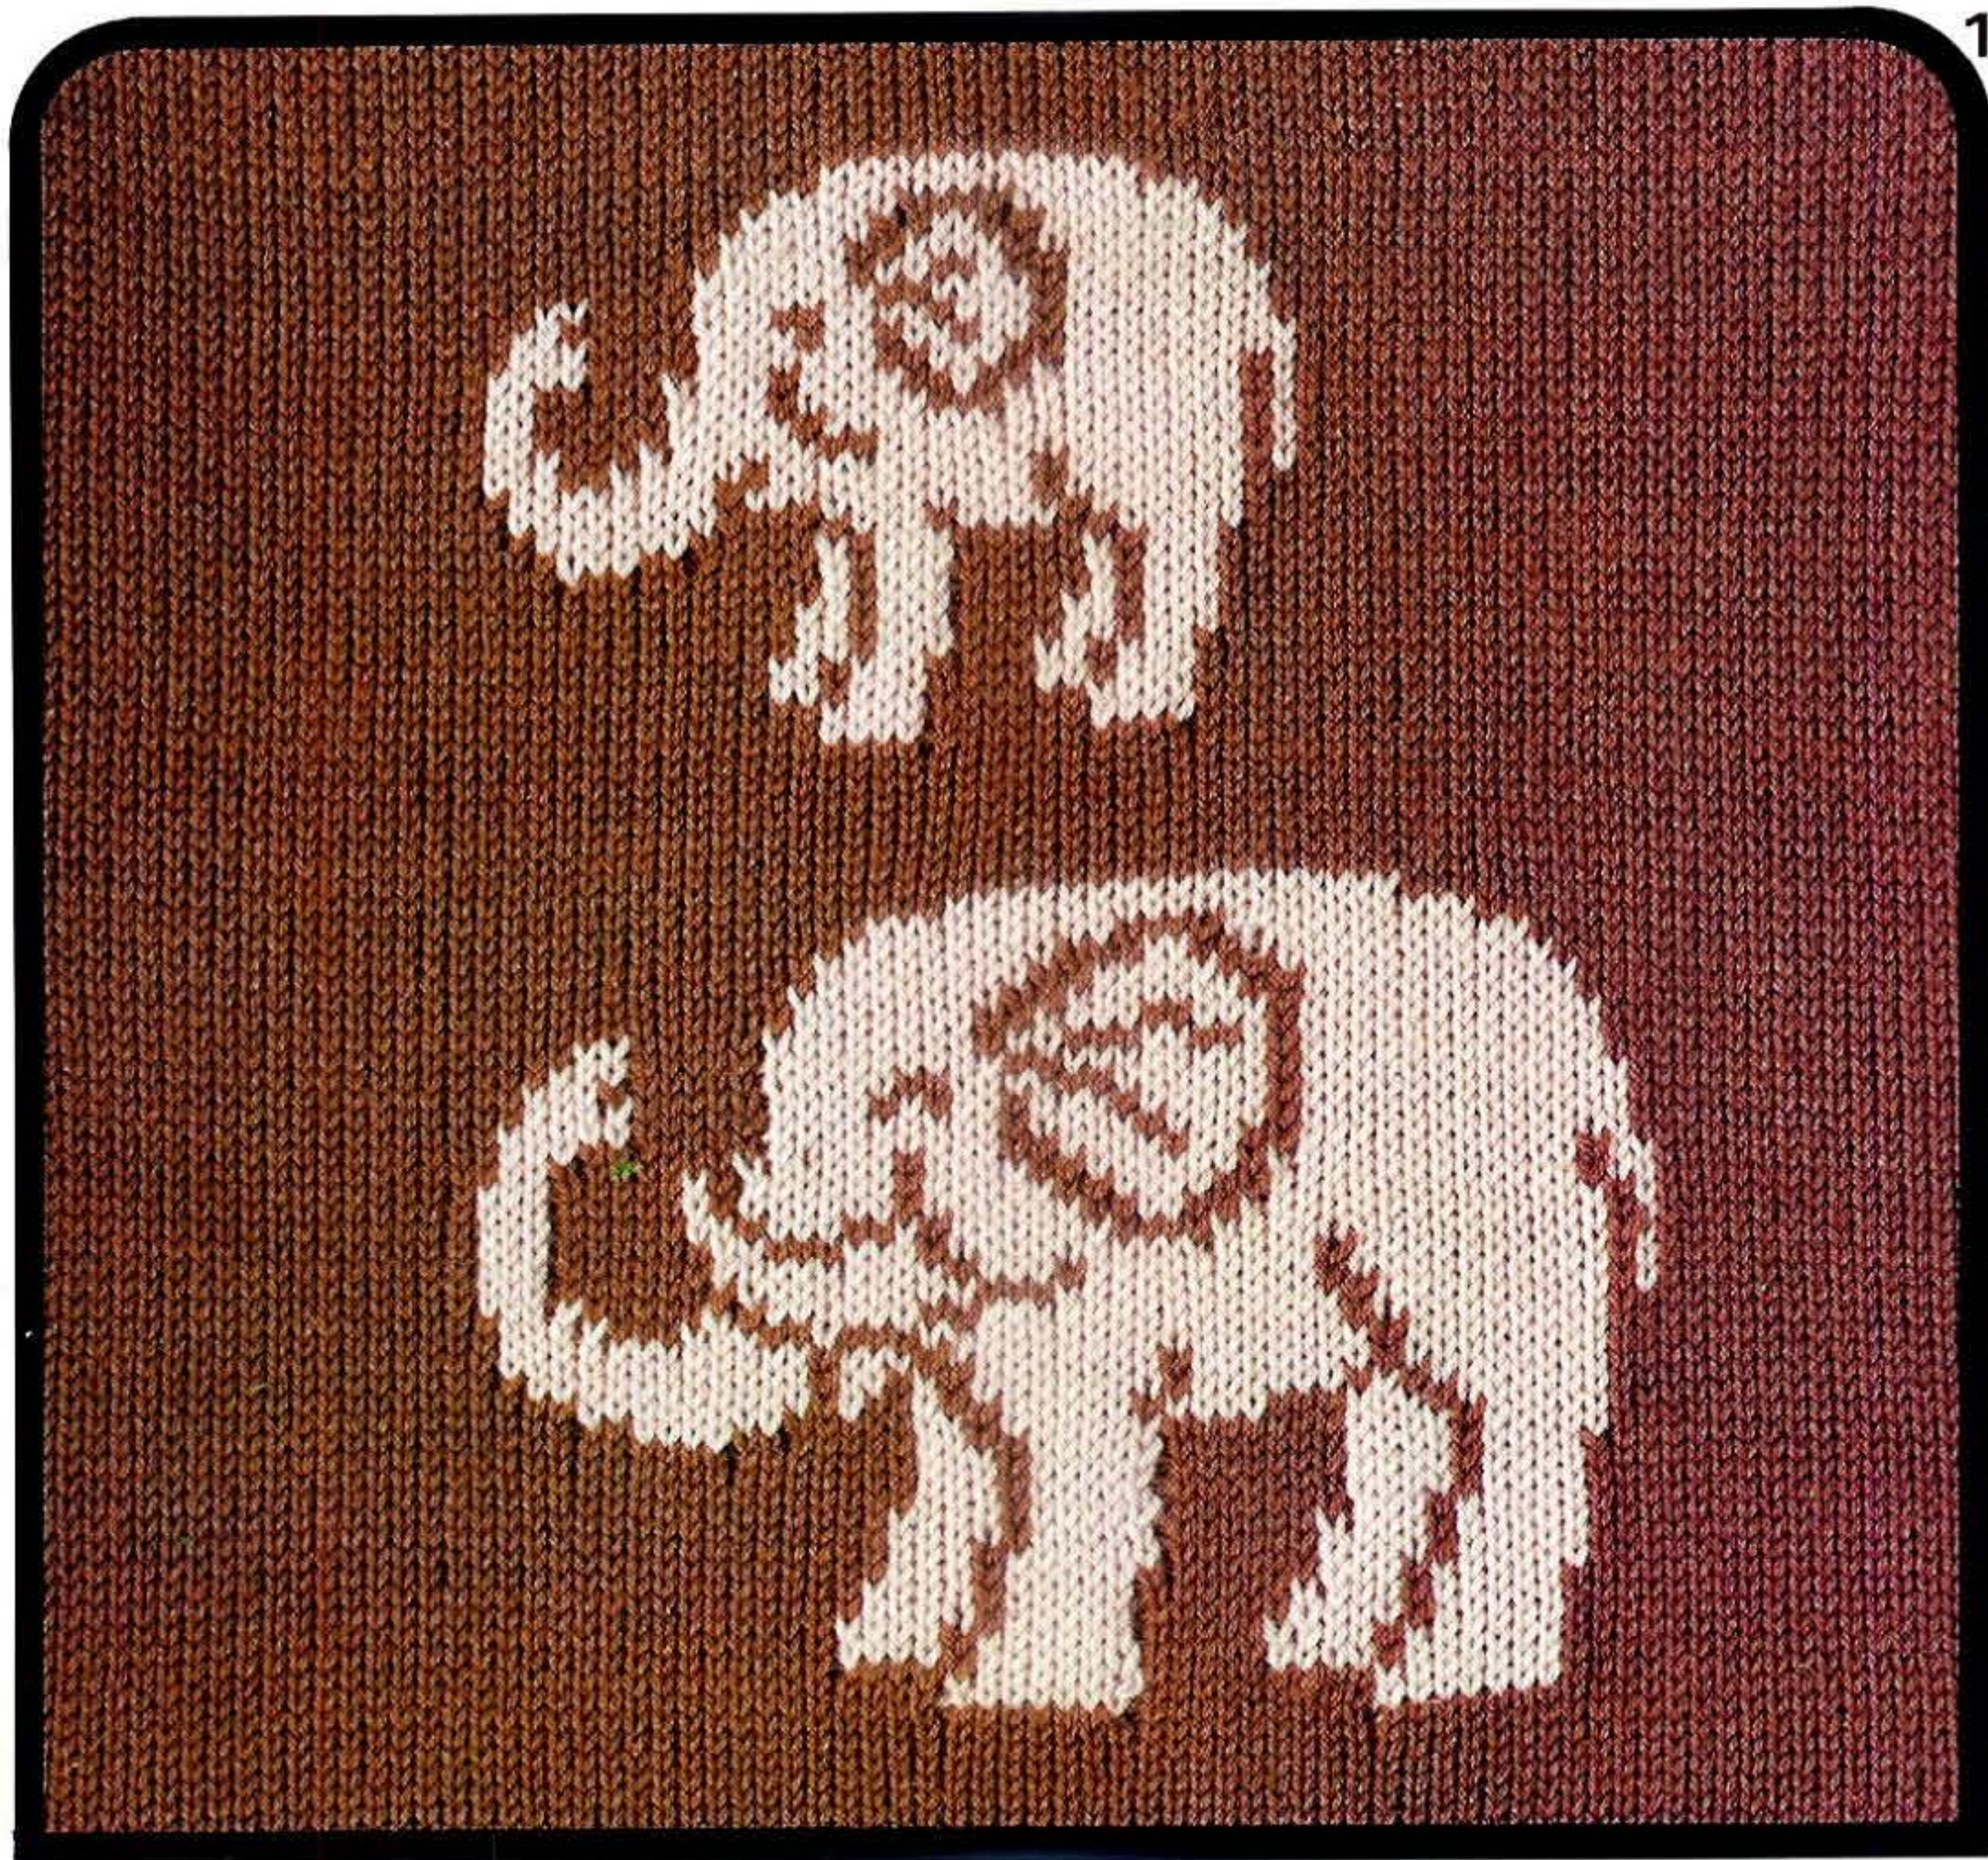

1

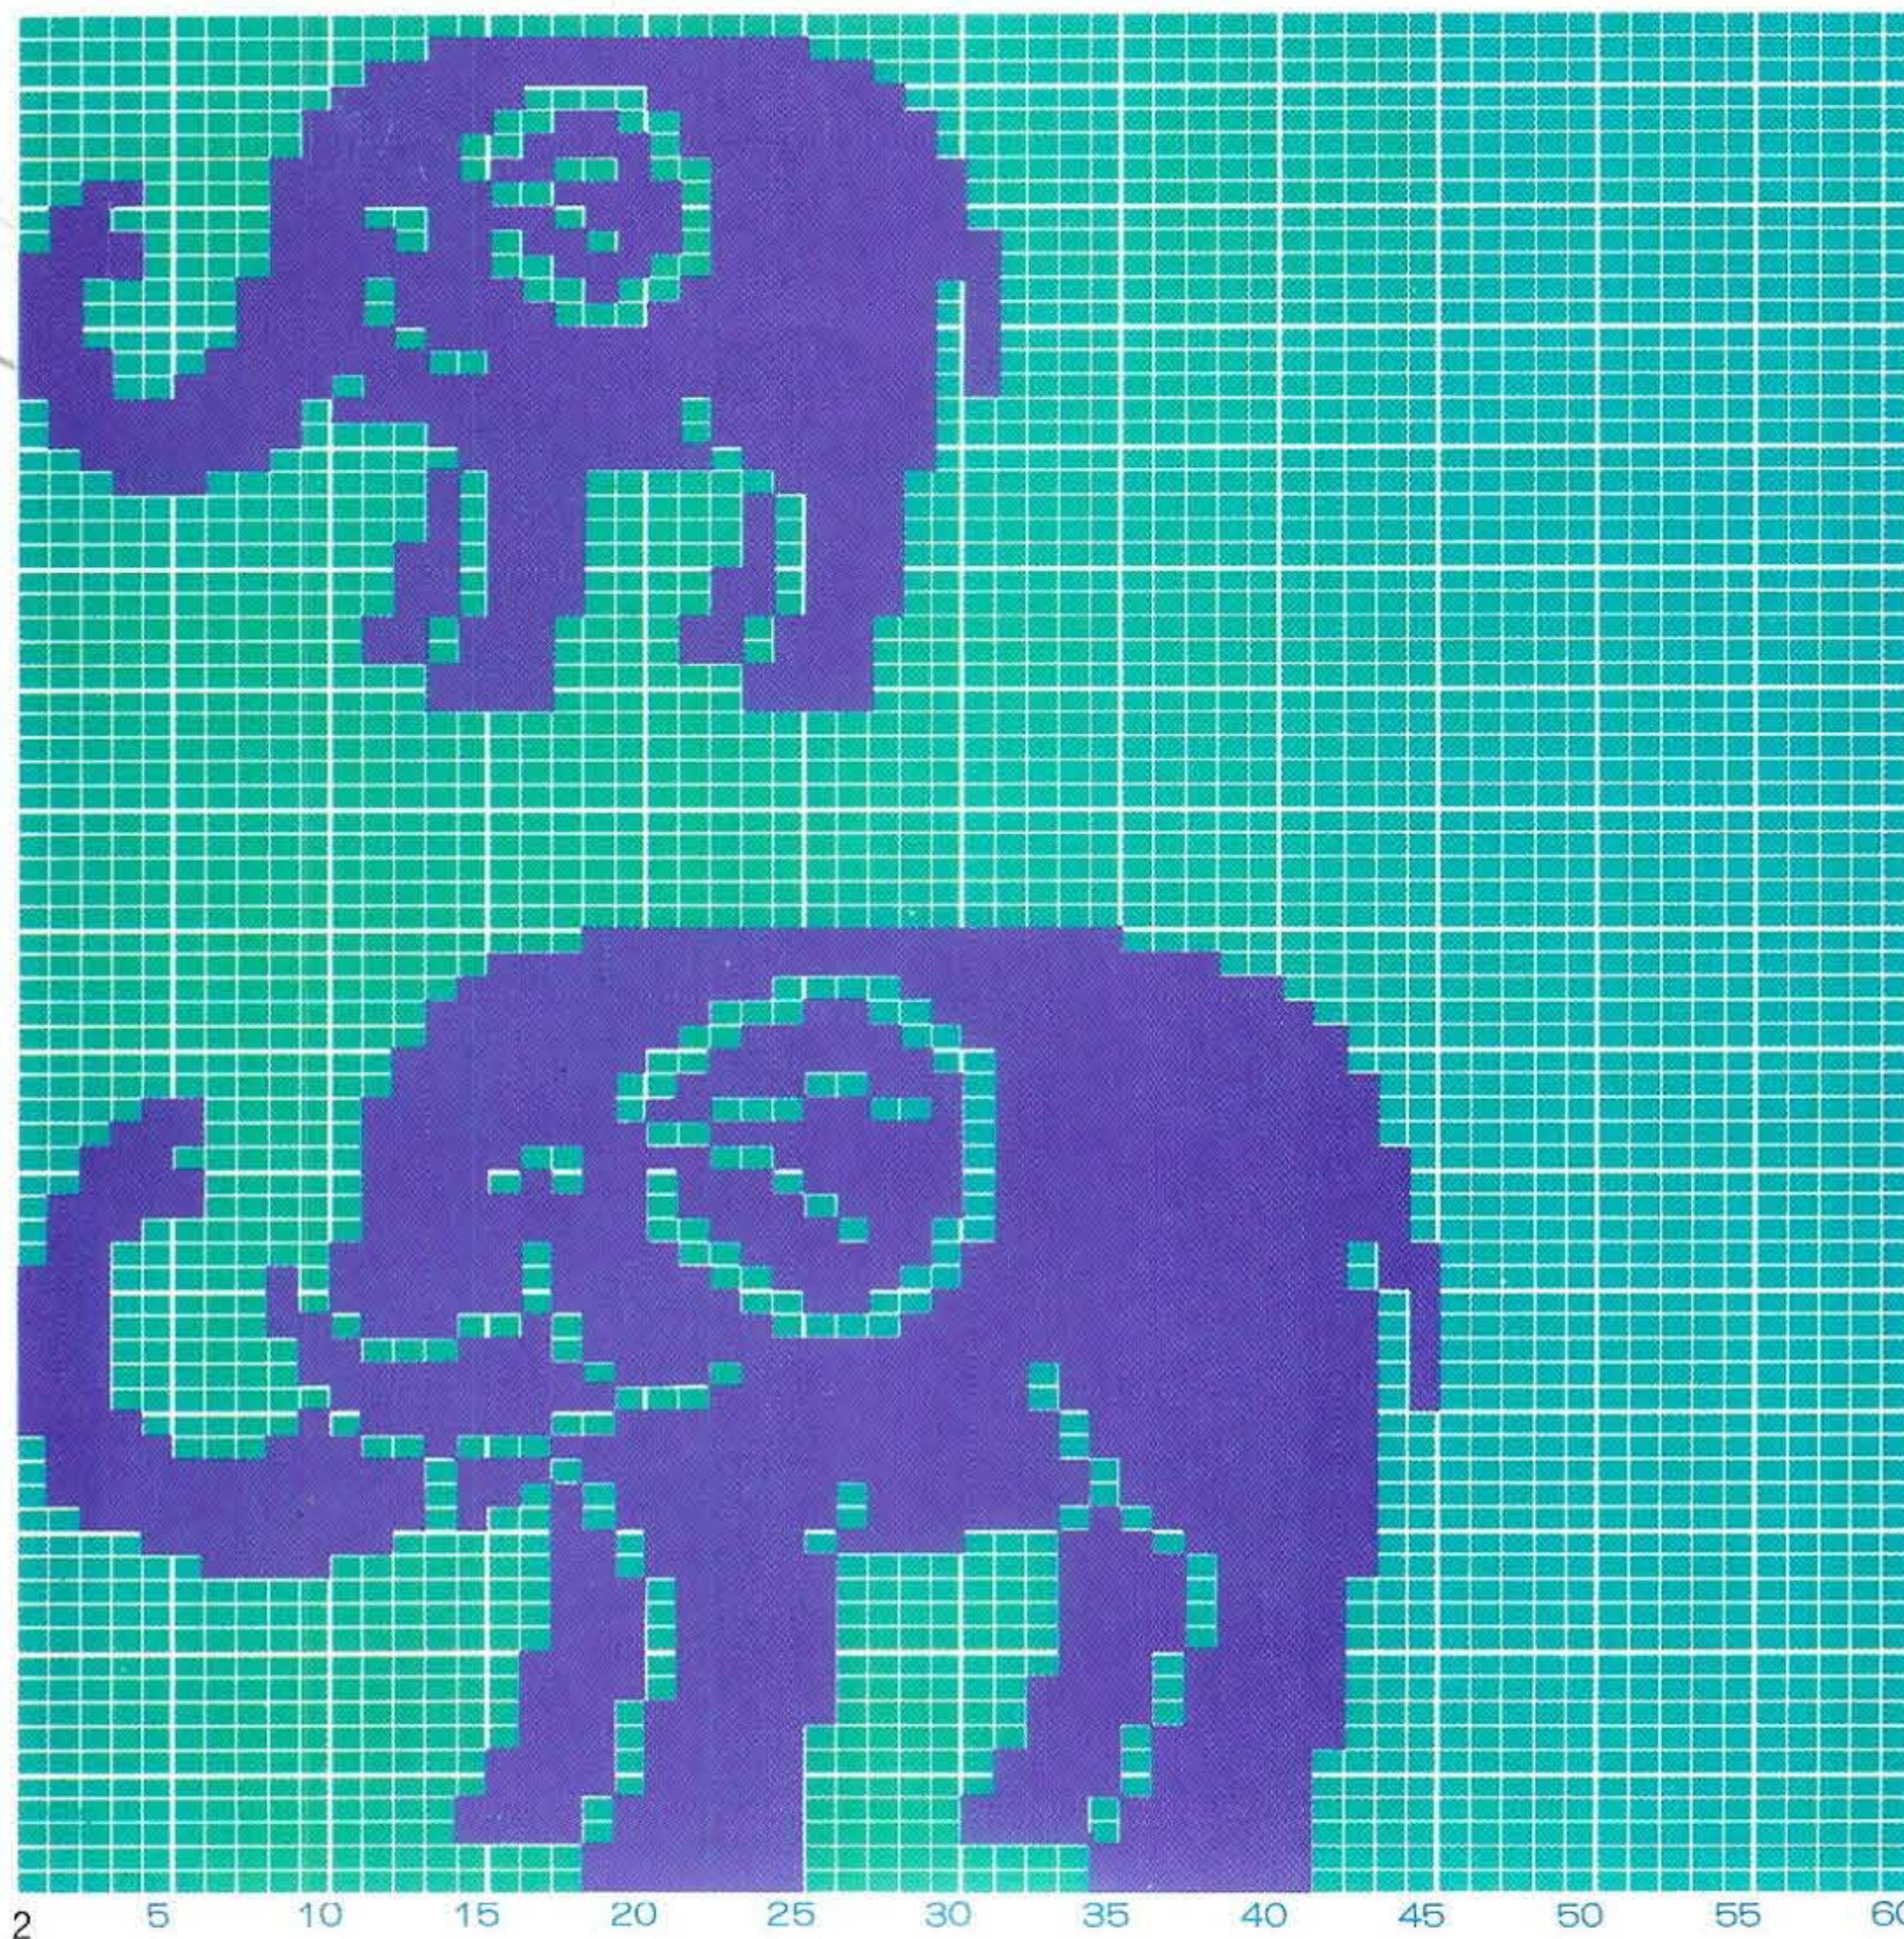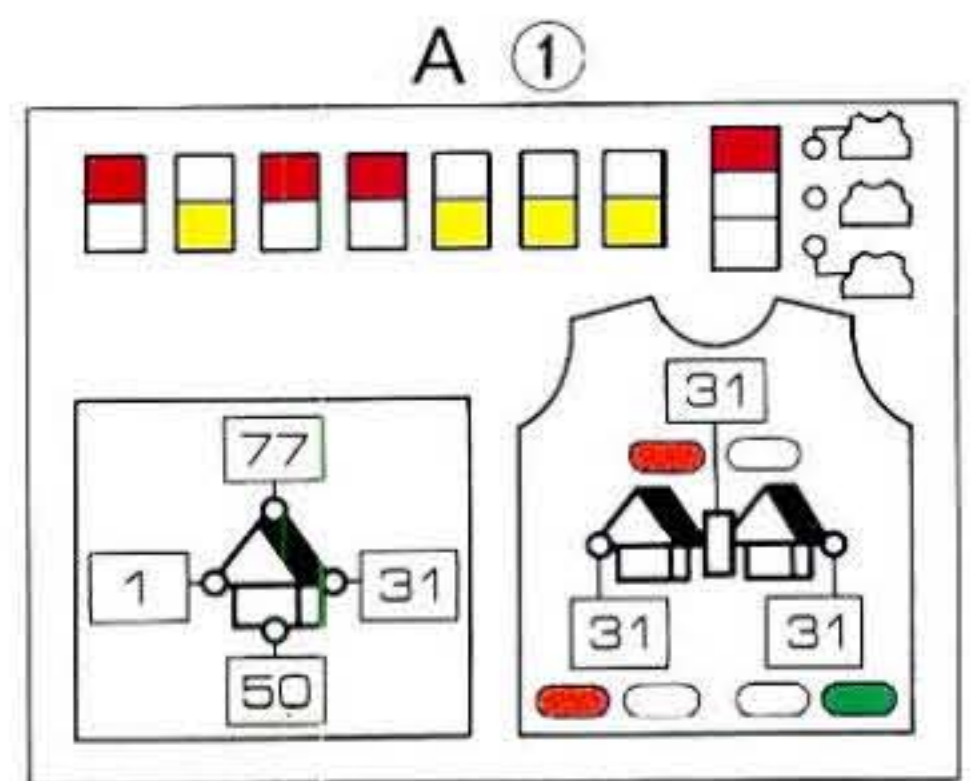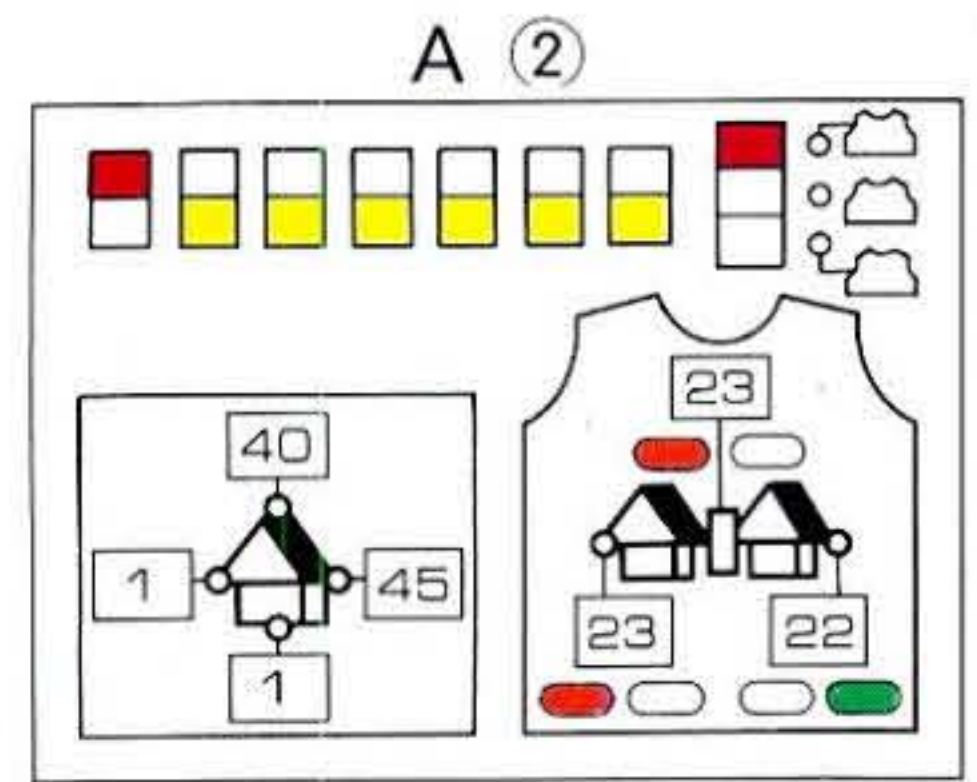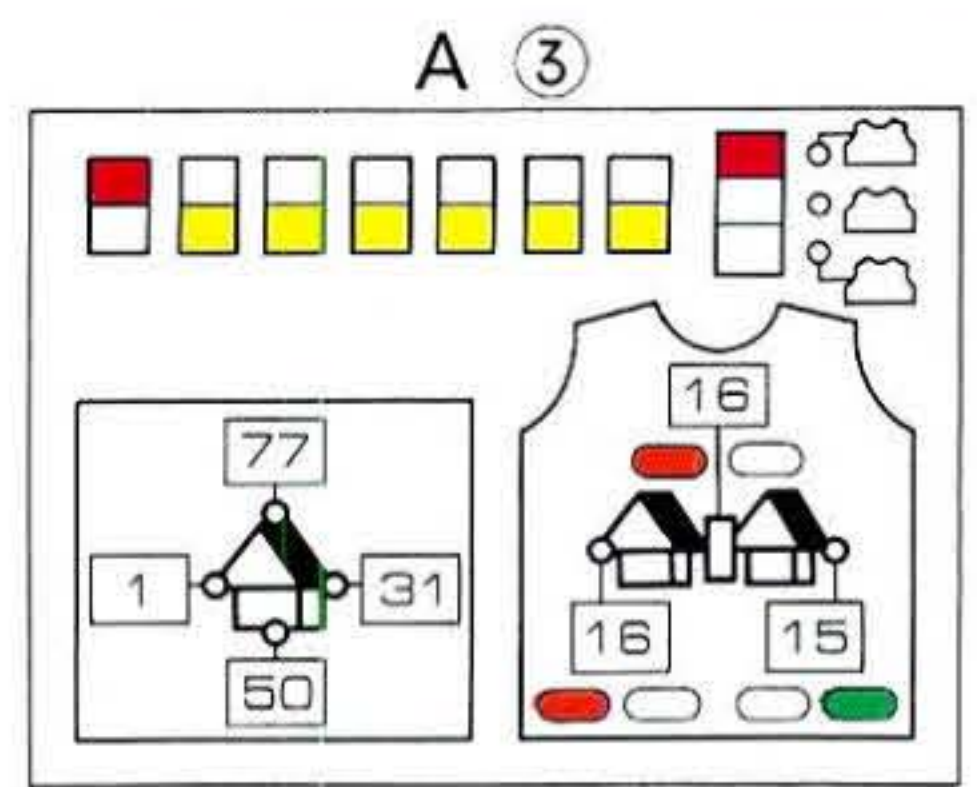    

75

70

65

60

55

50

45

40

35

30

25

20

 
 
15

10

5


1

2 5 10 15 20 25 30 35 40 45 50 55 60

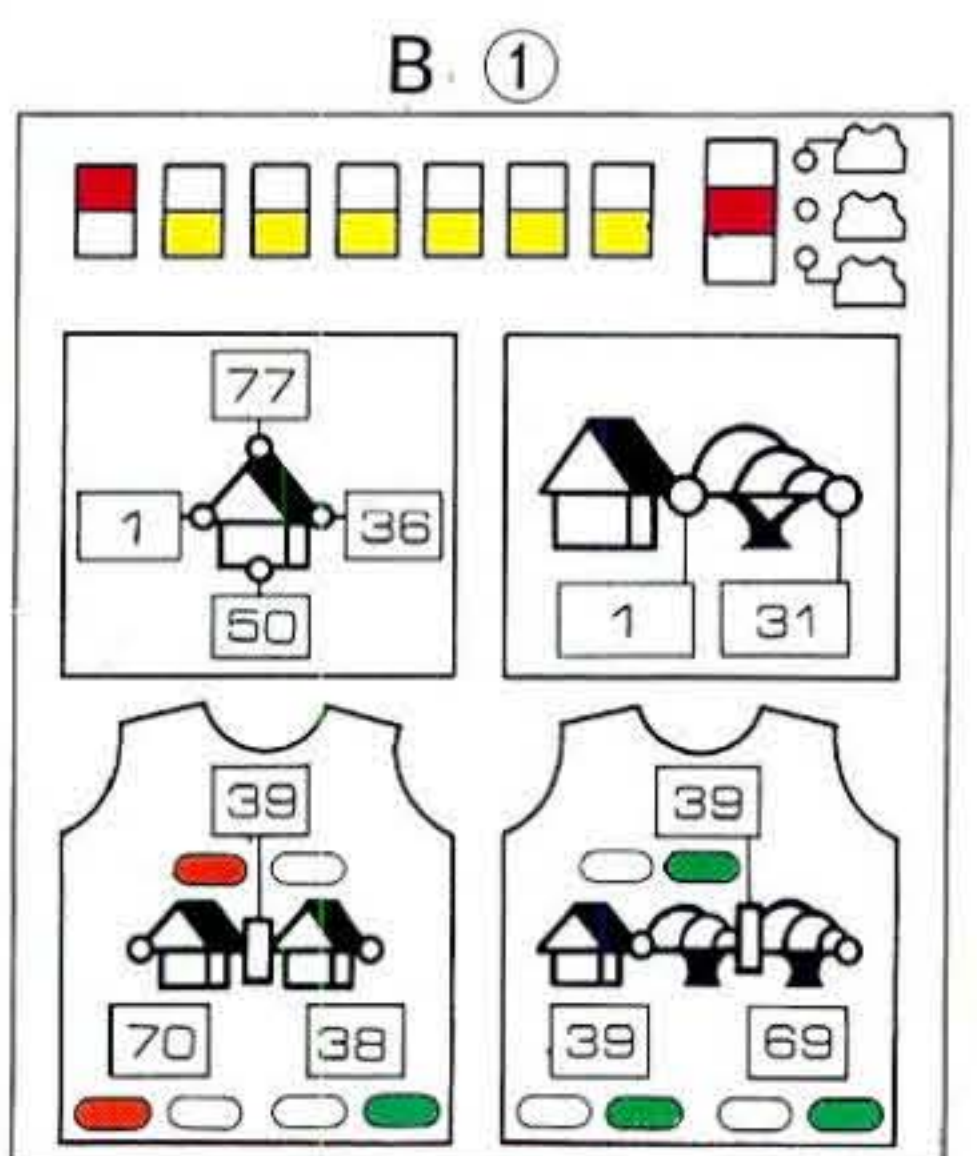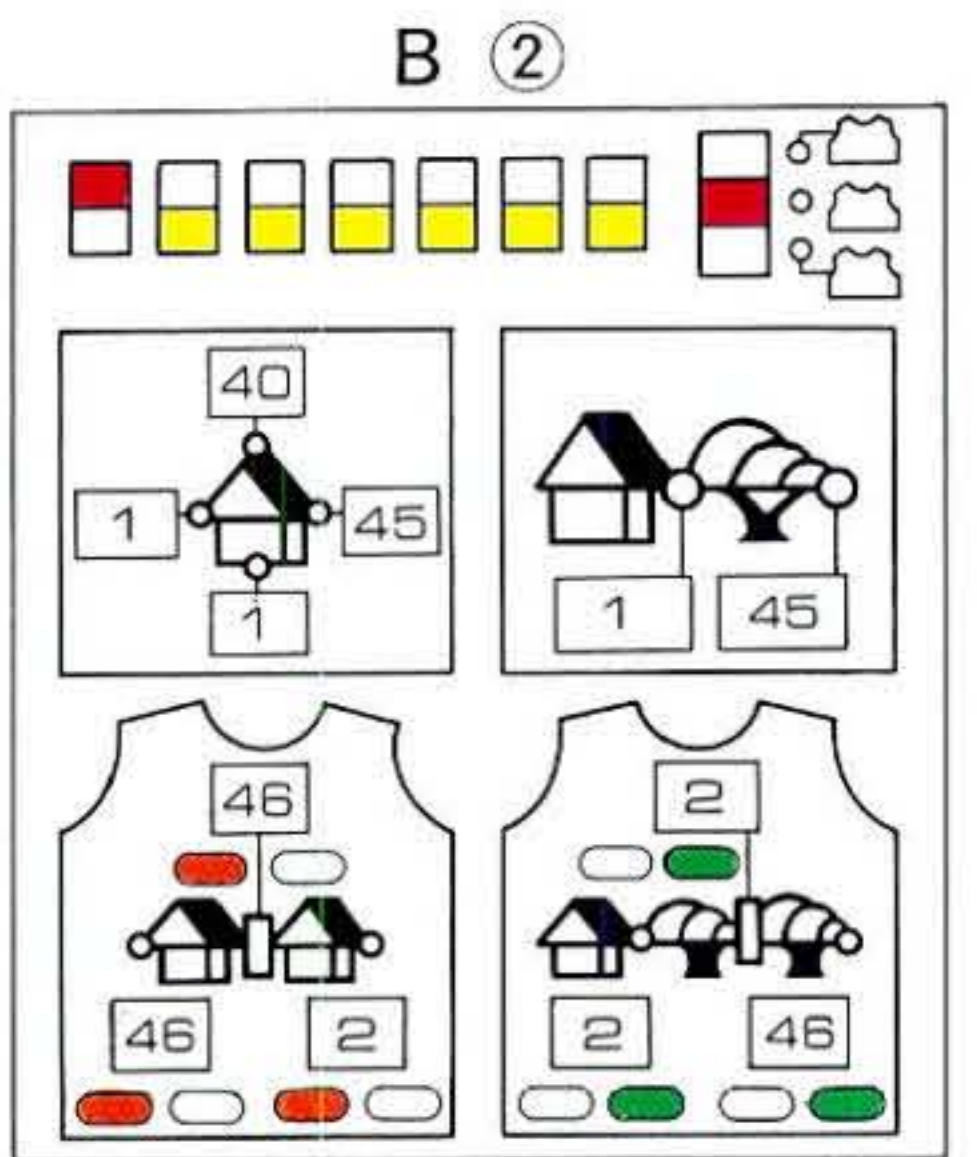

1


 
A






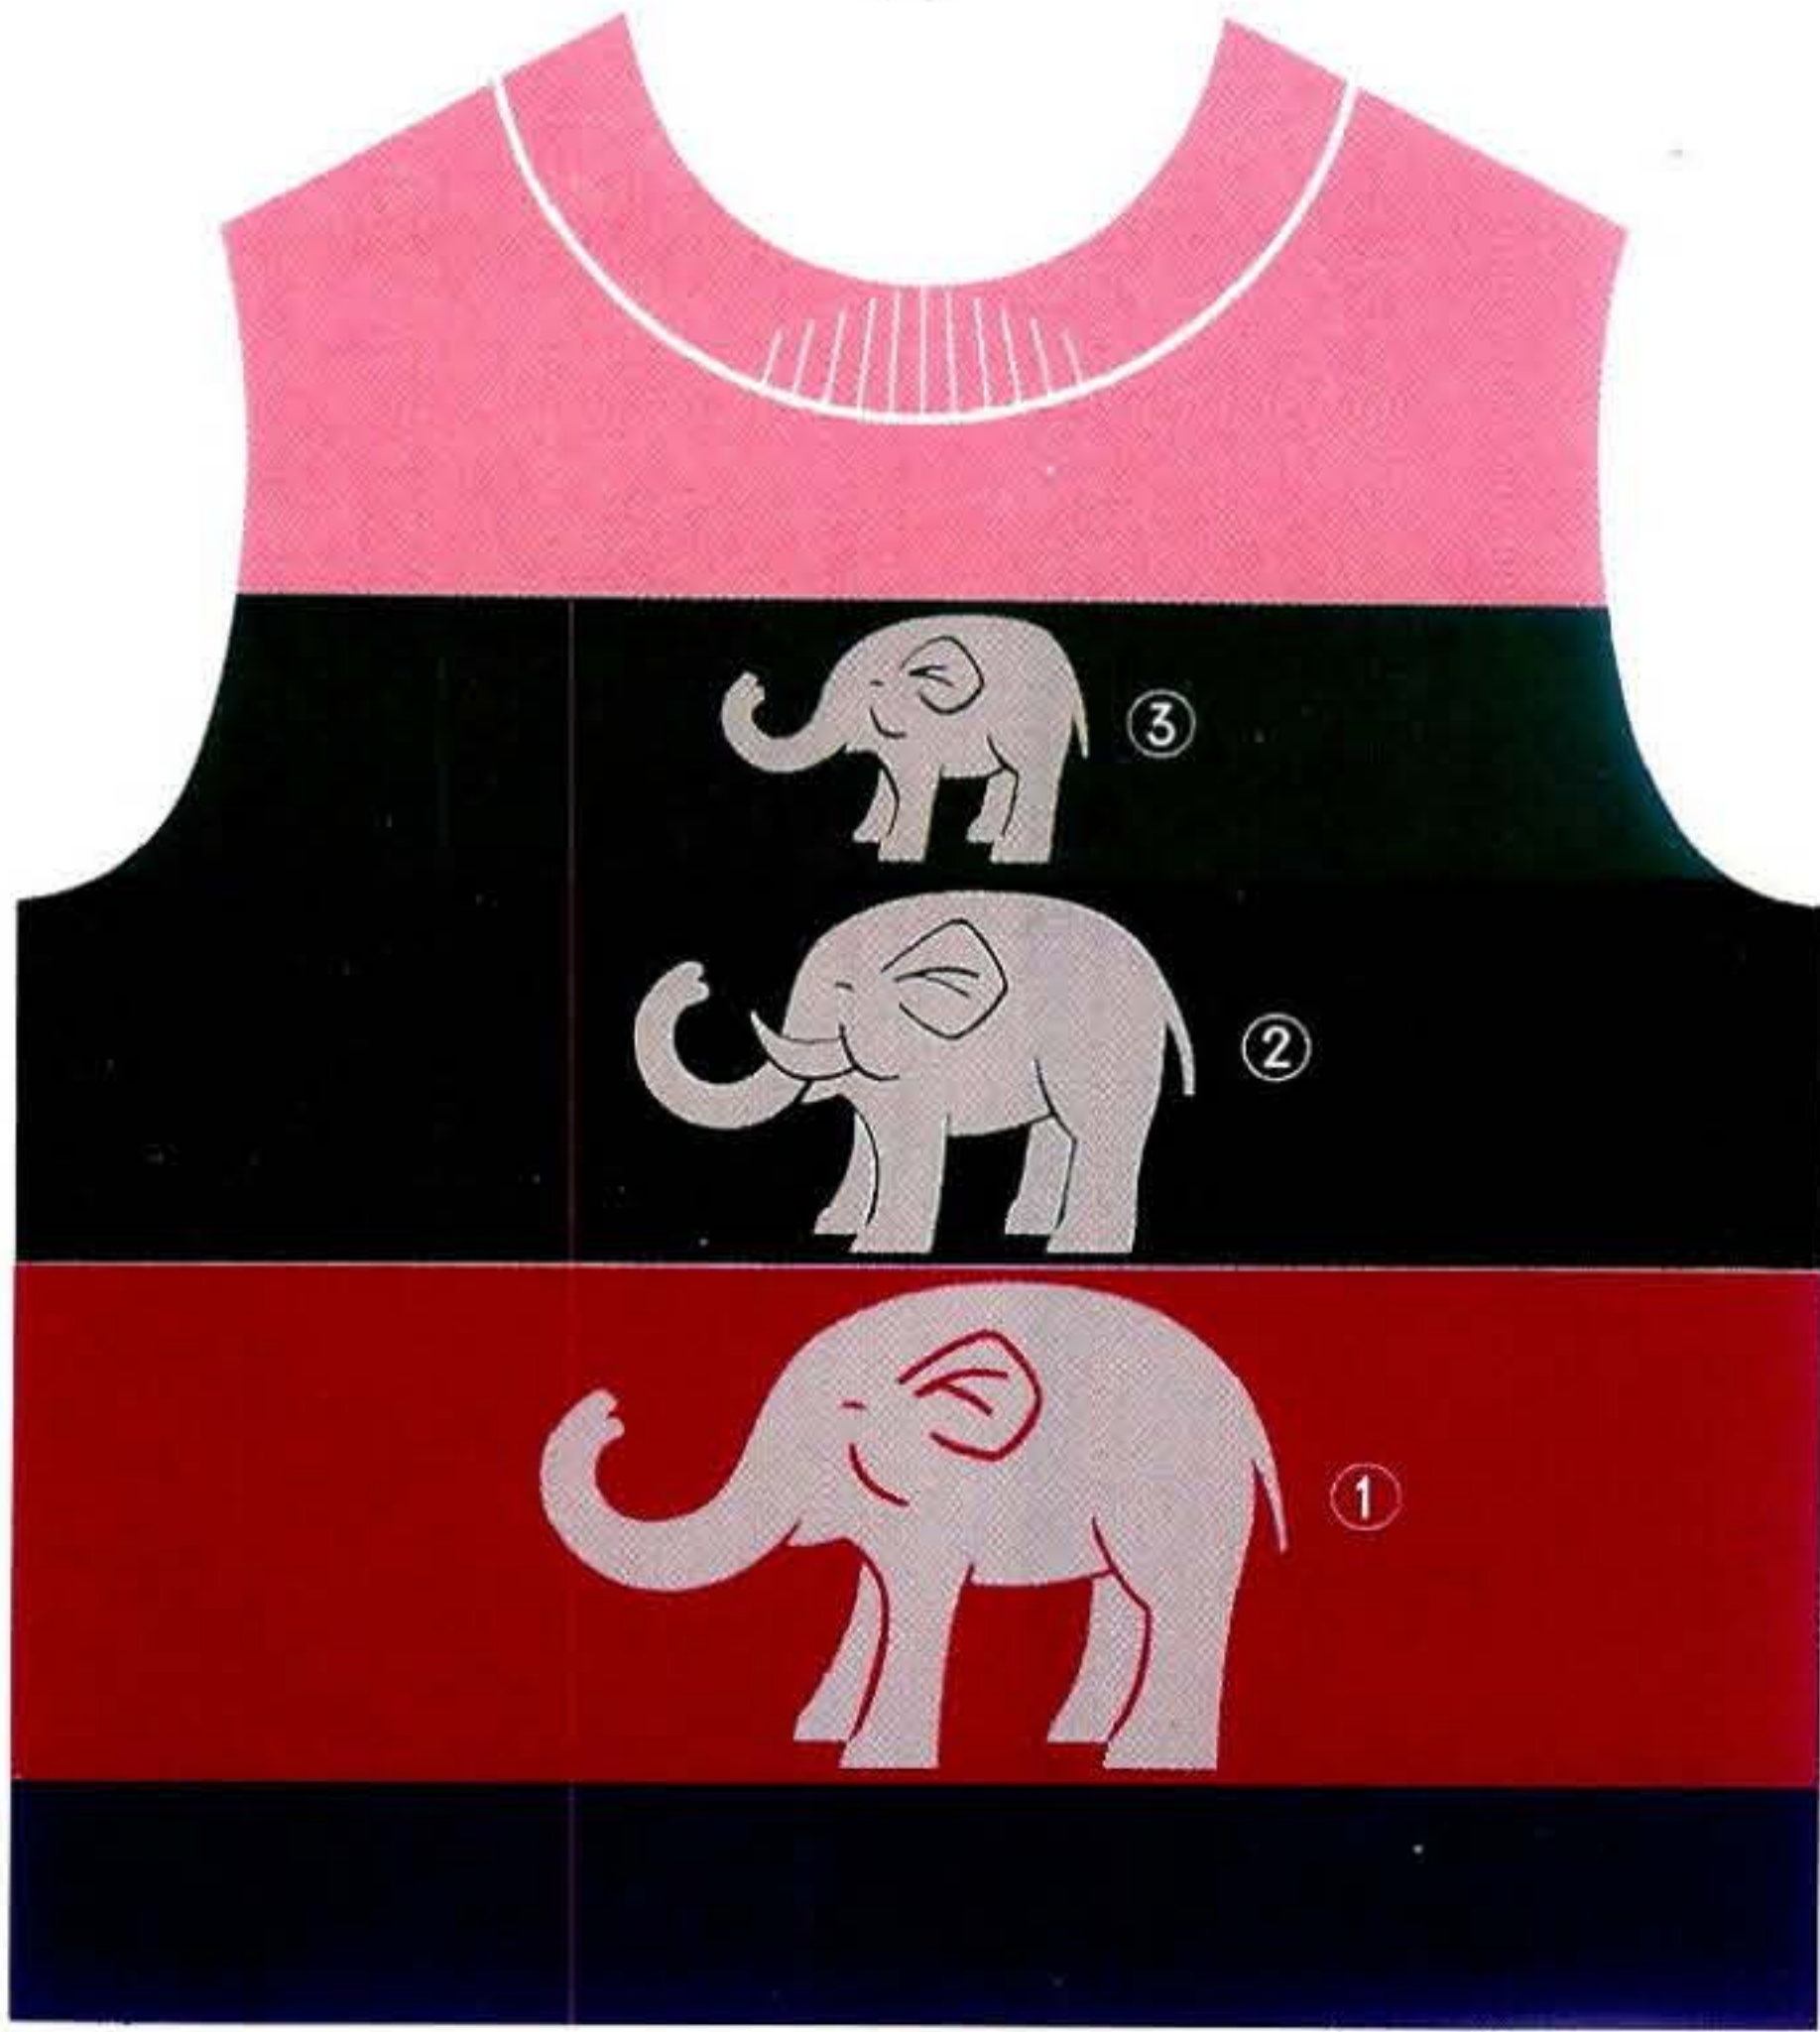


B




        C

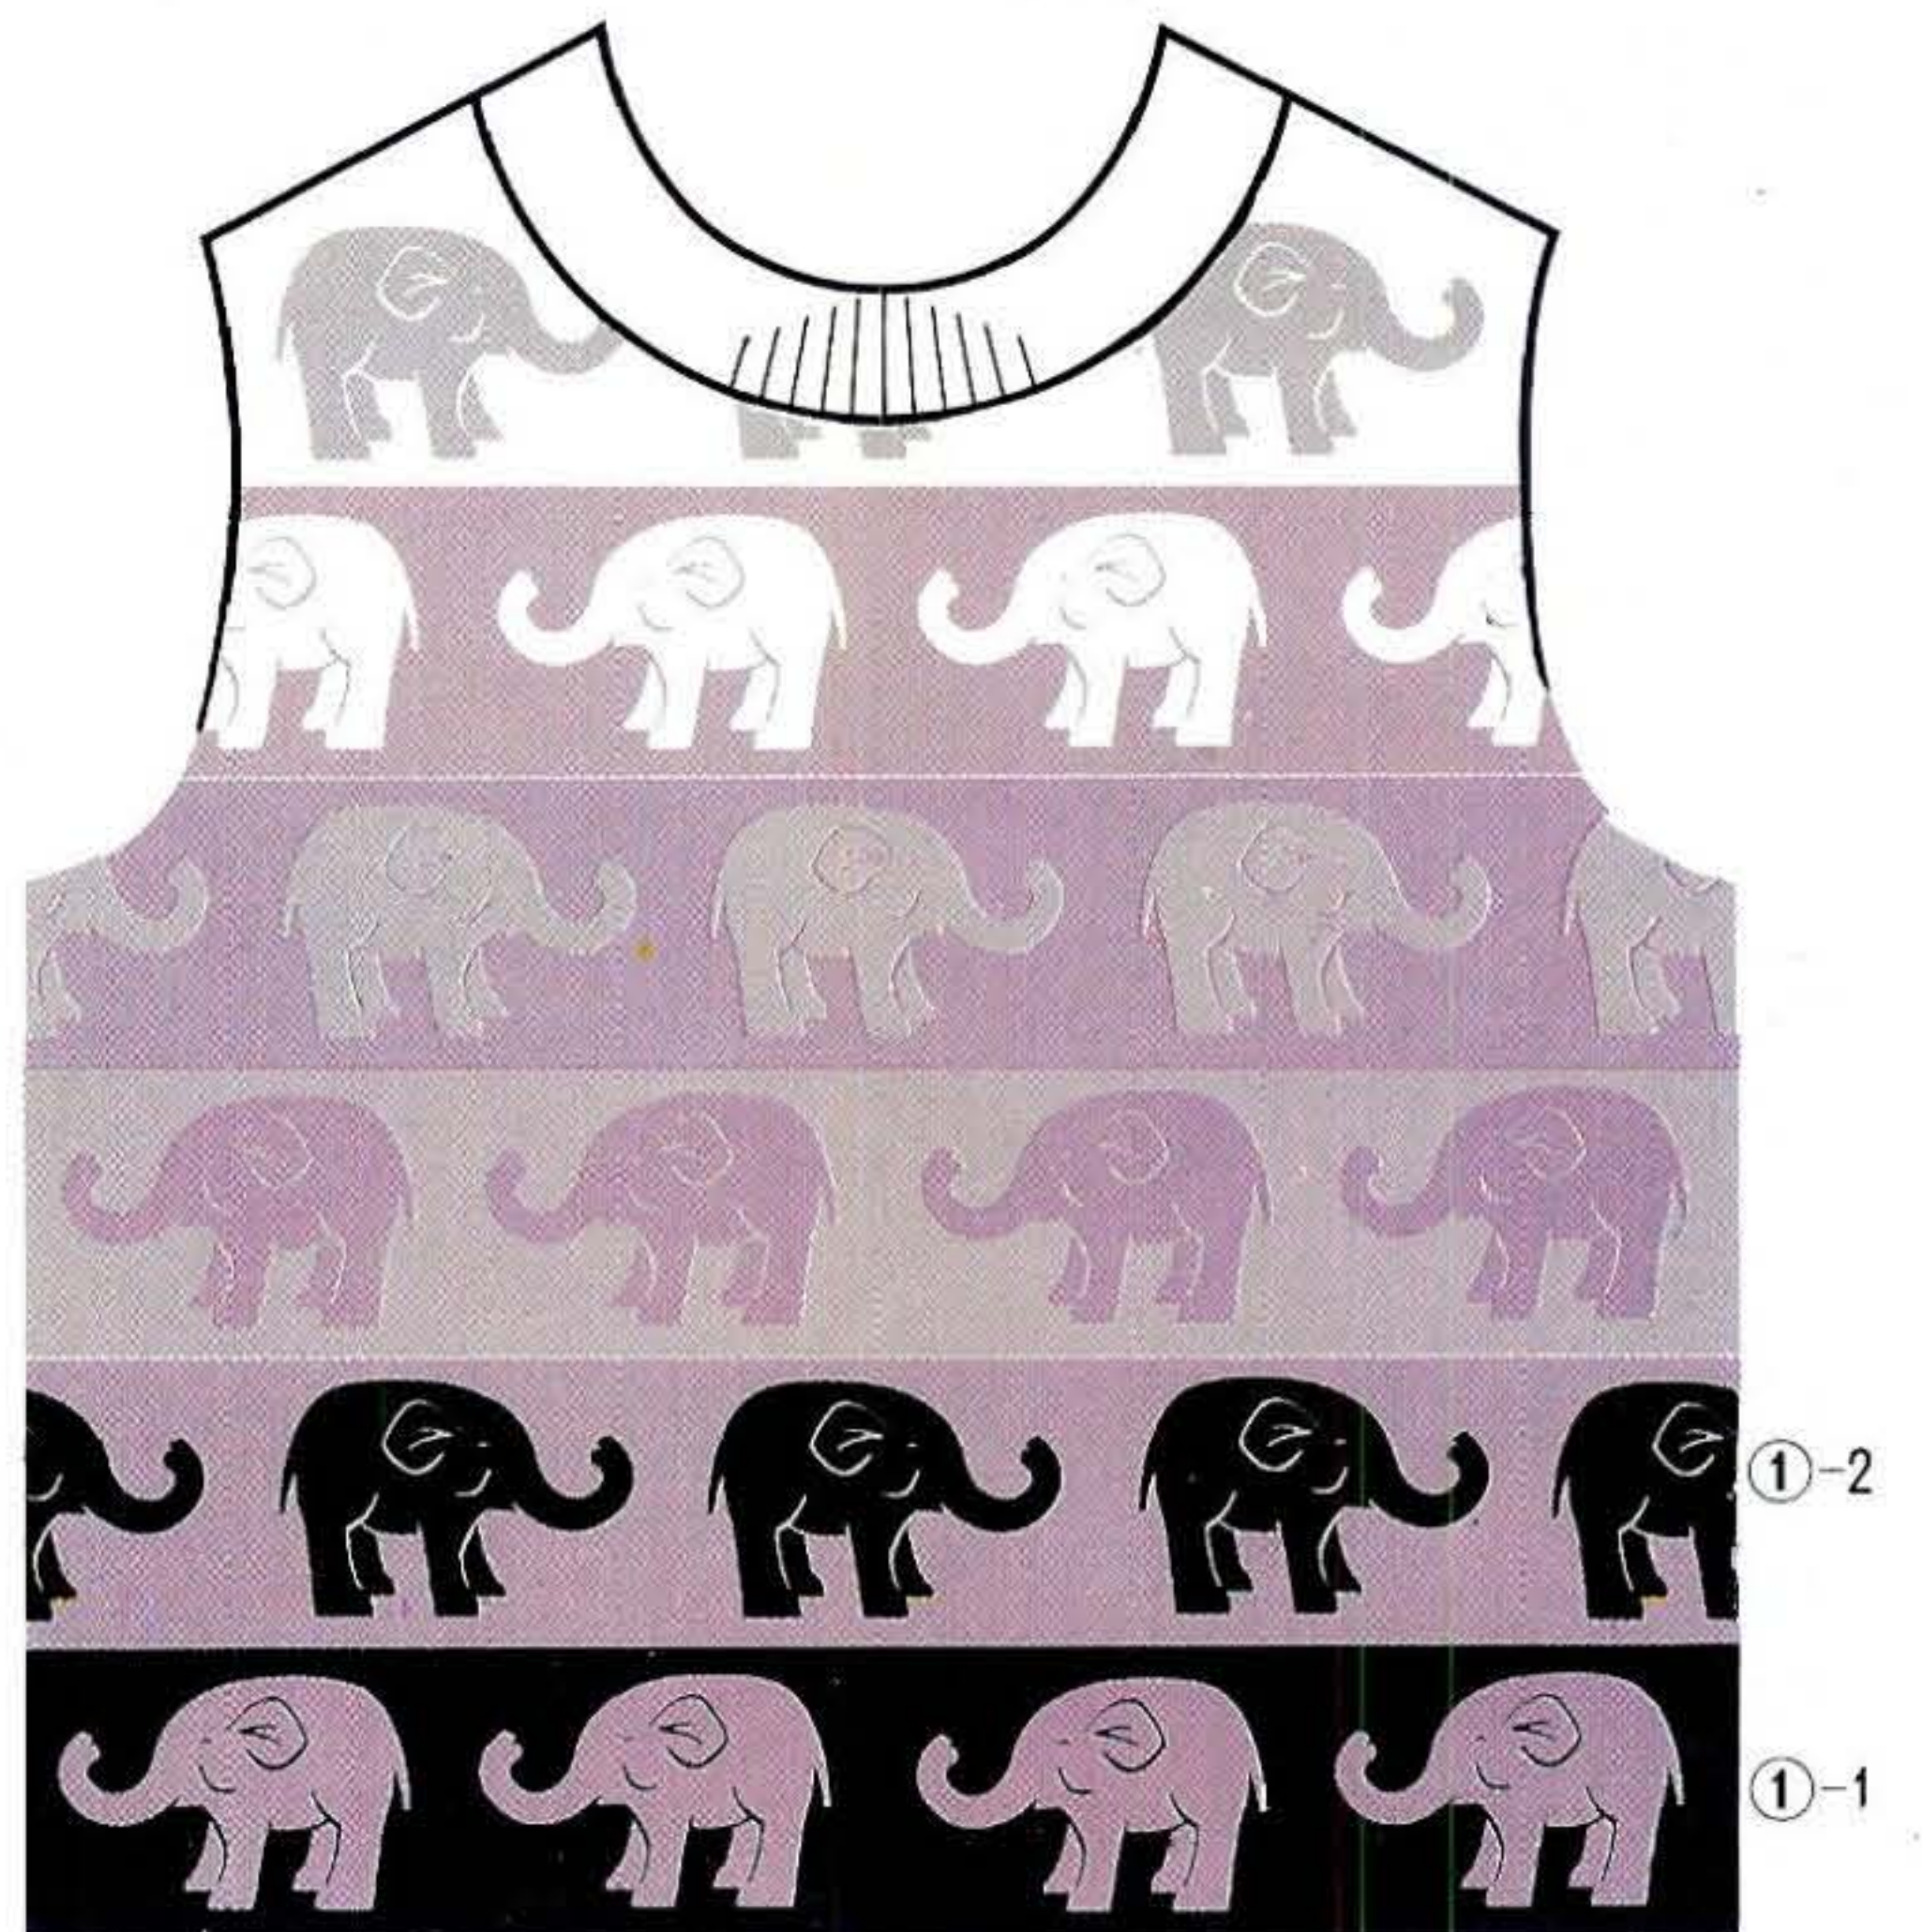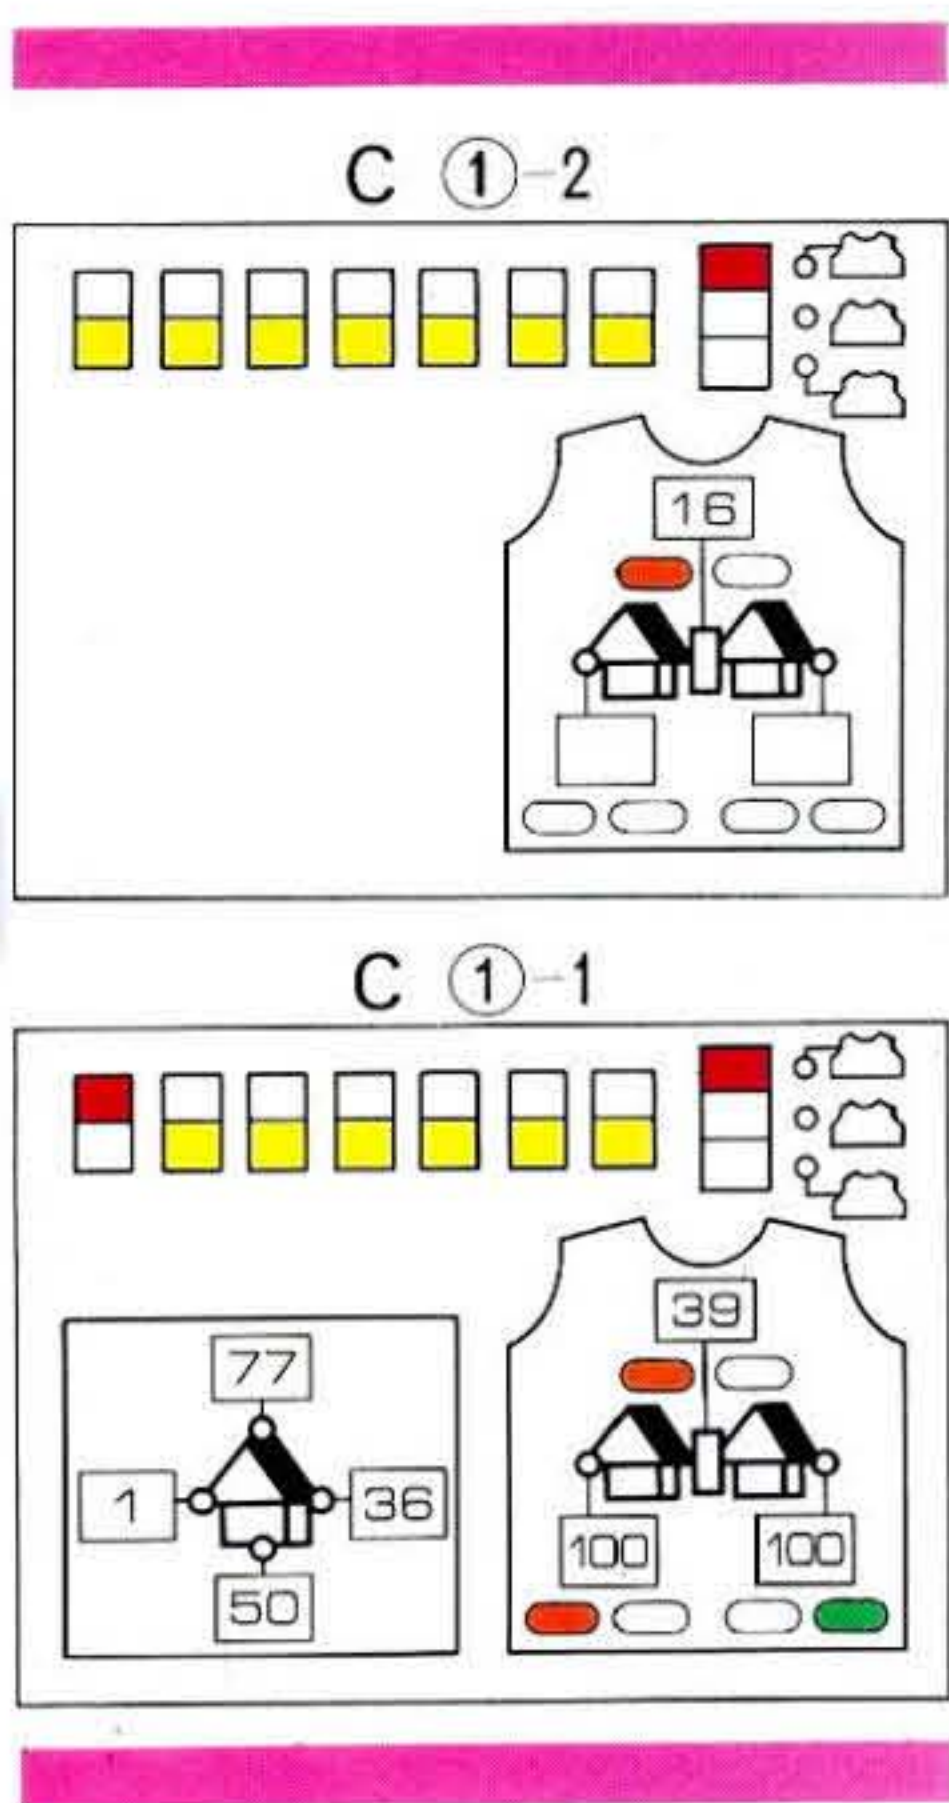


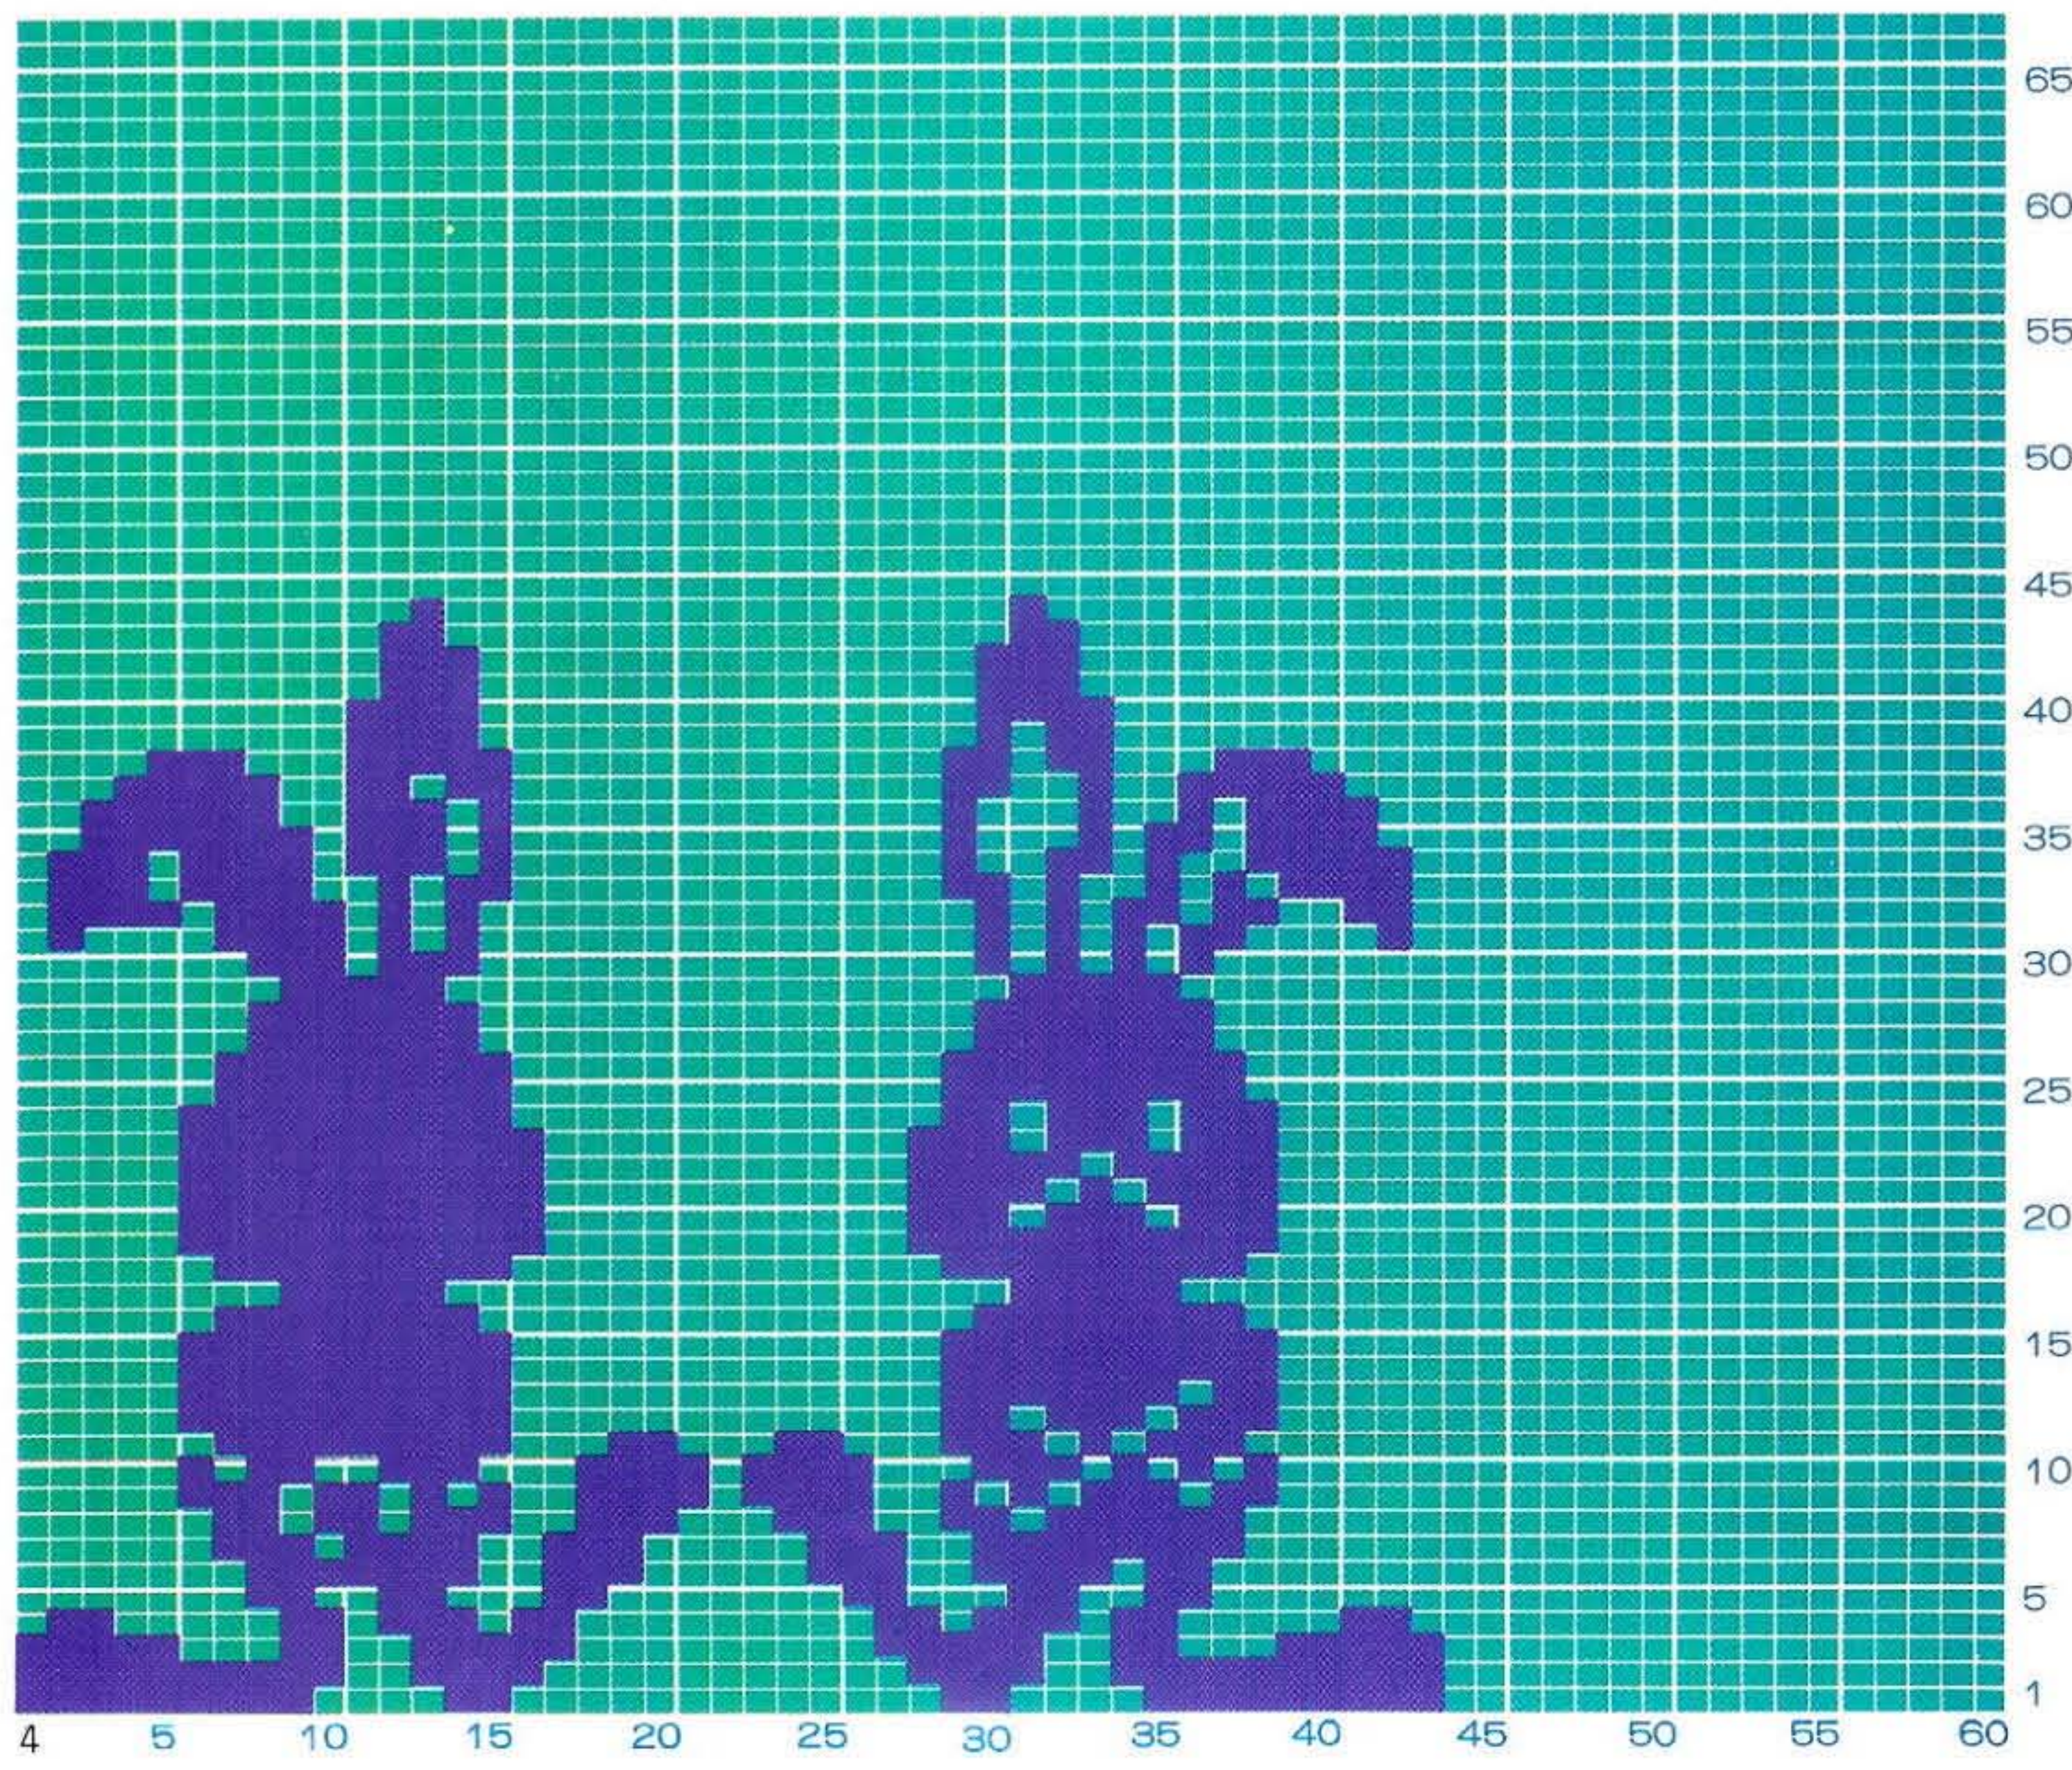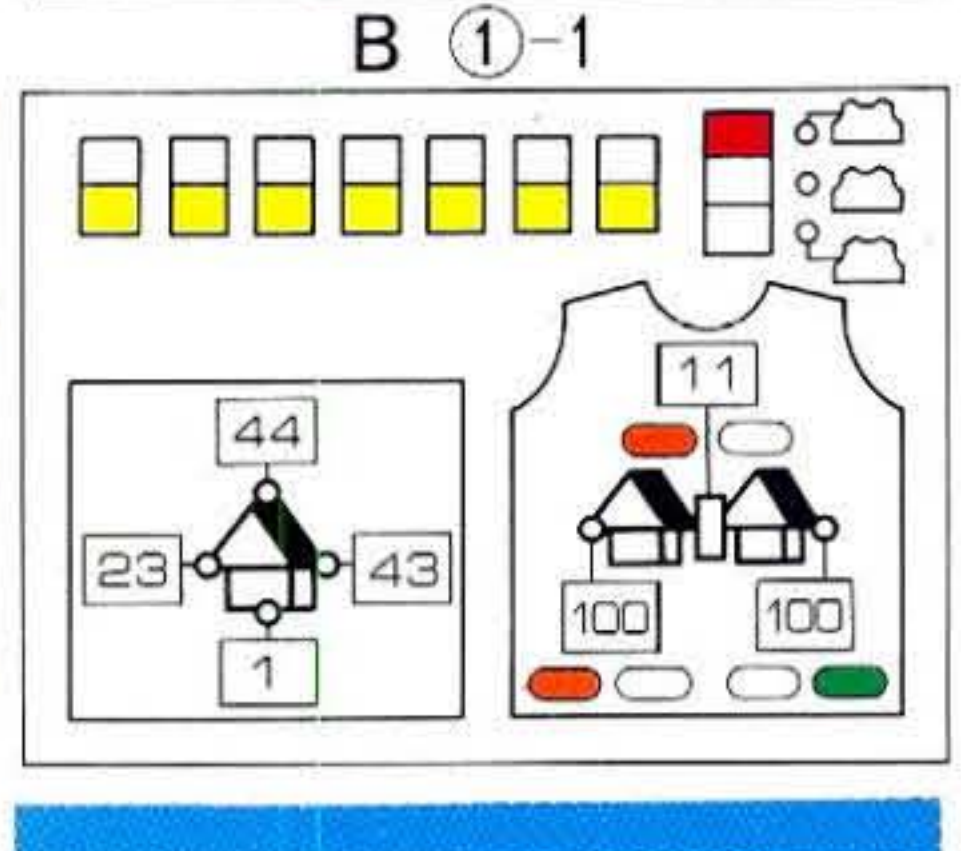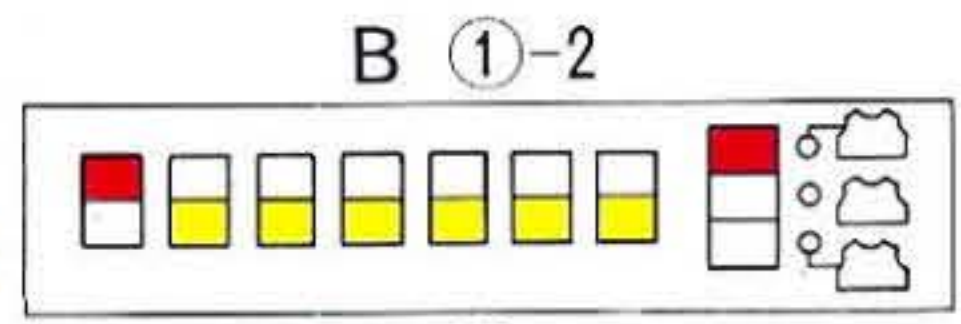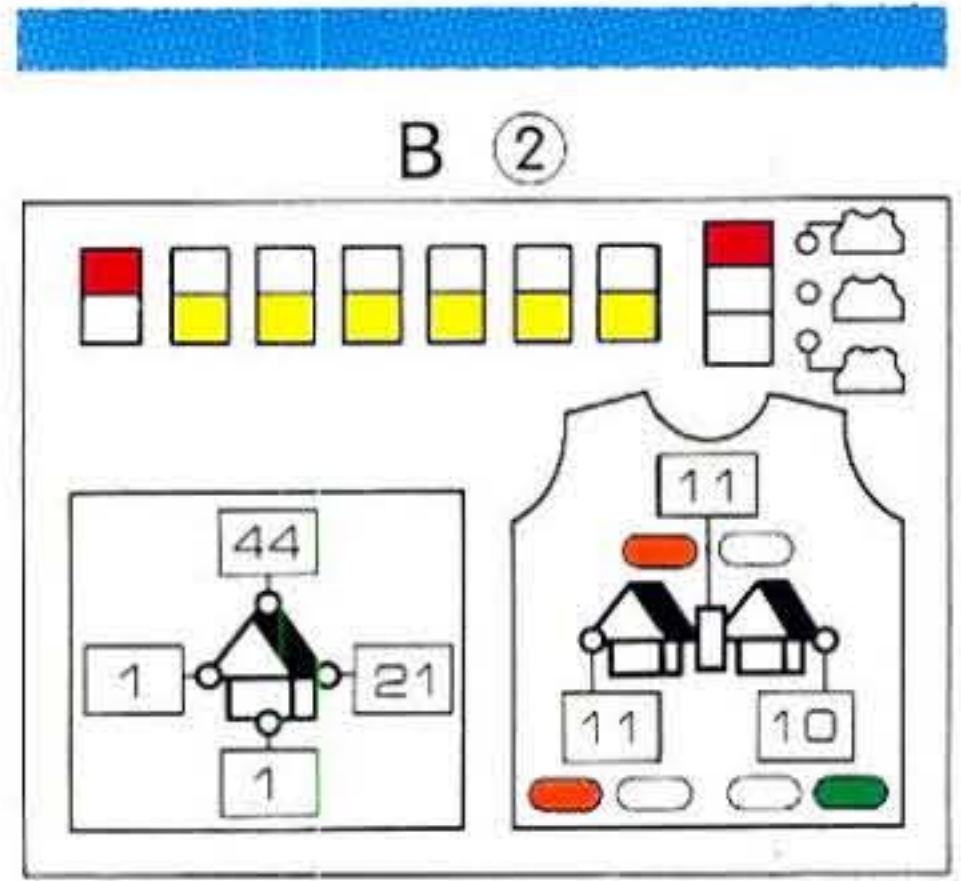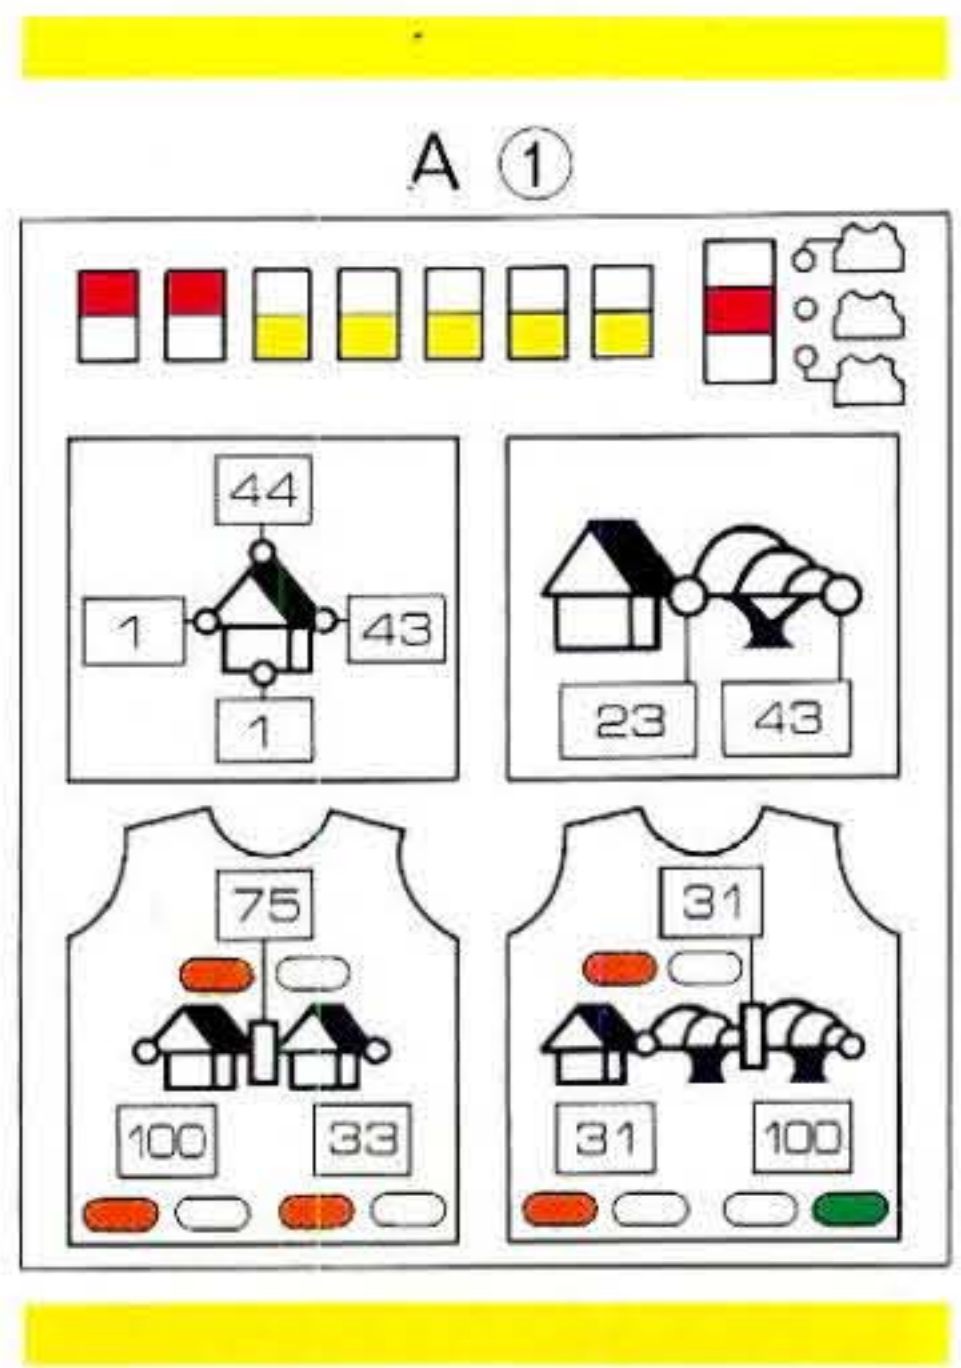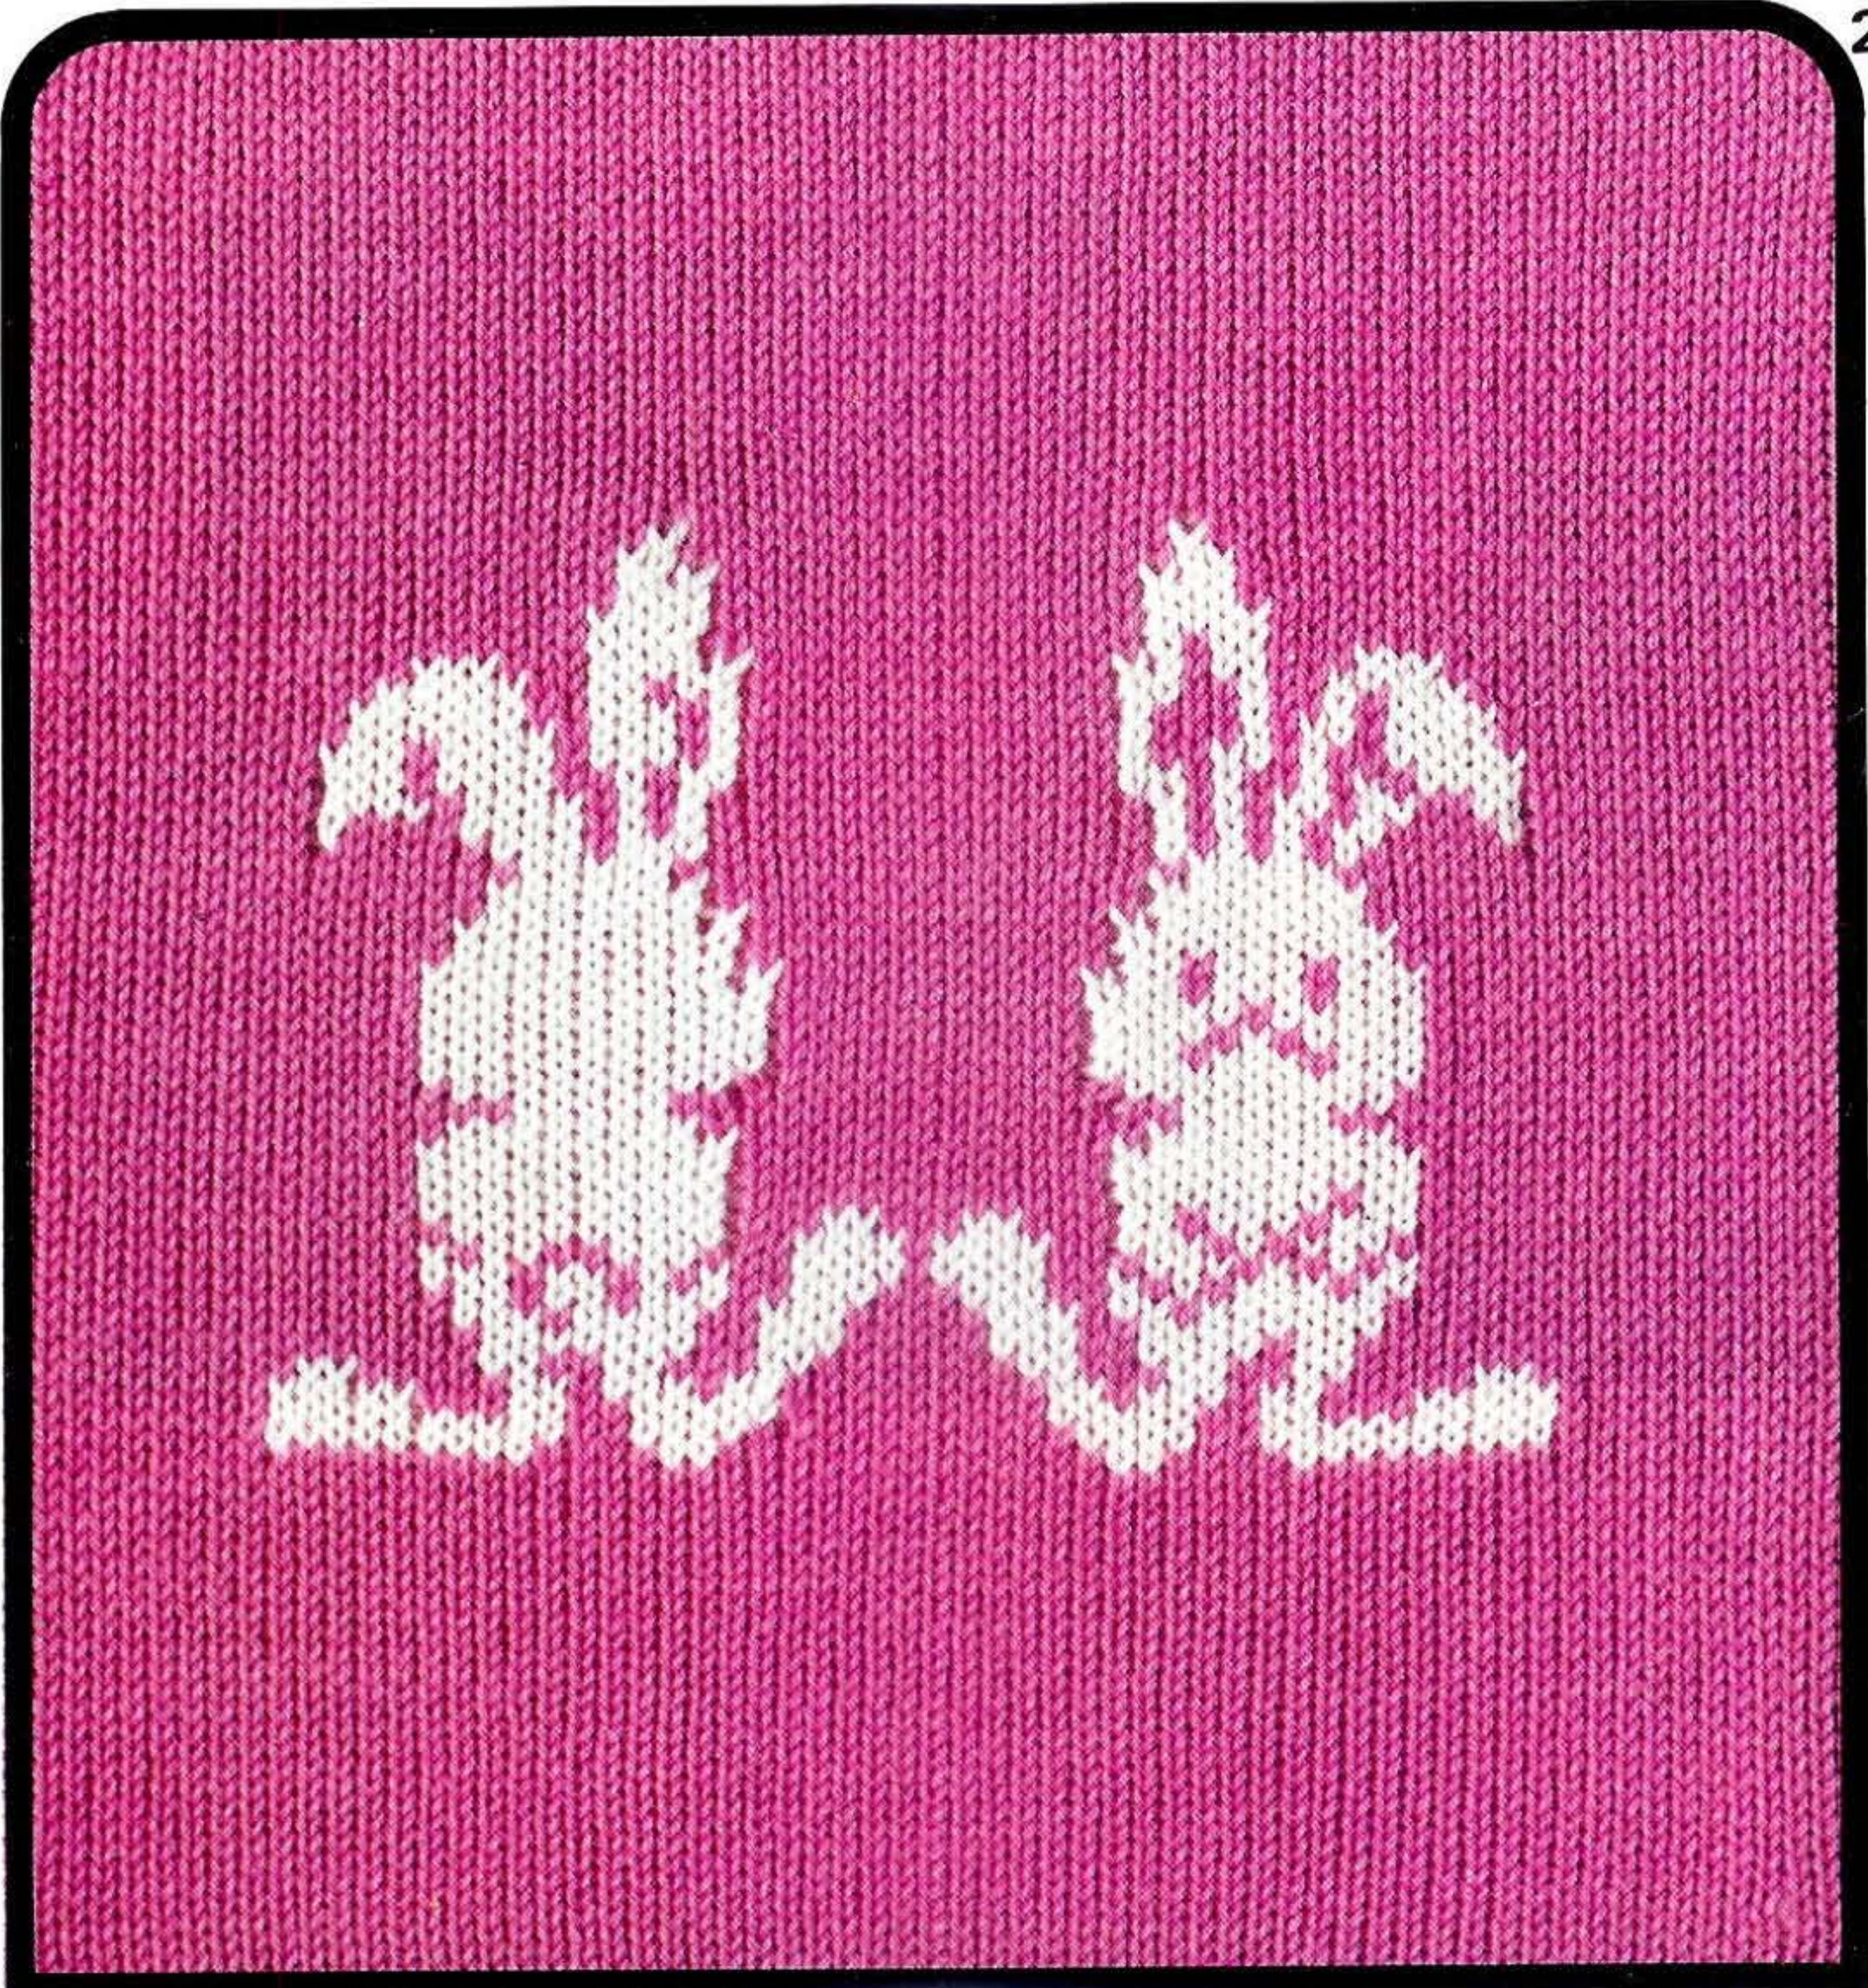



A






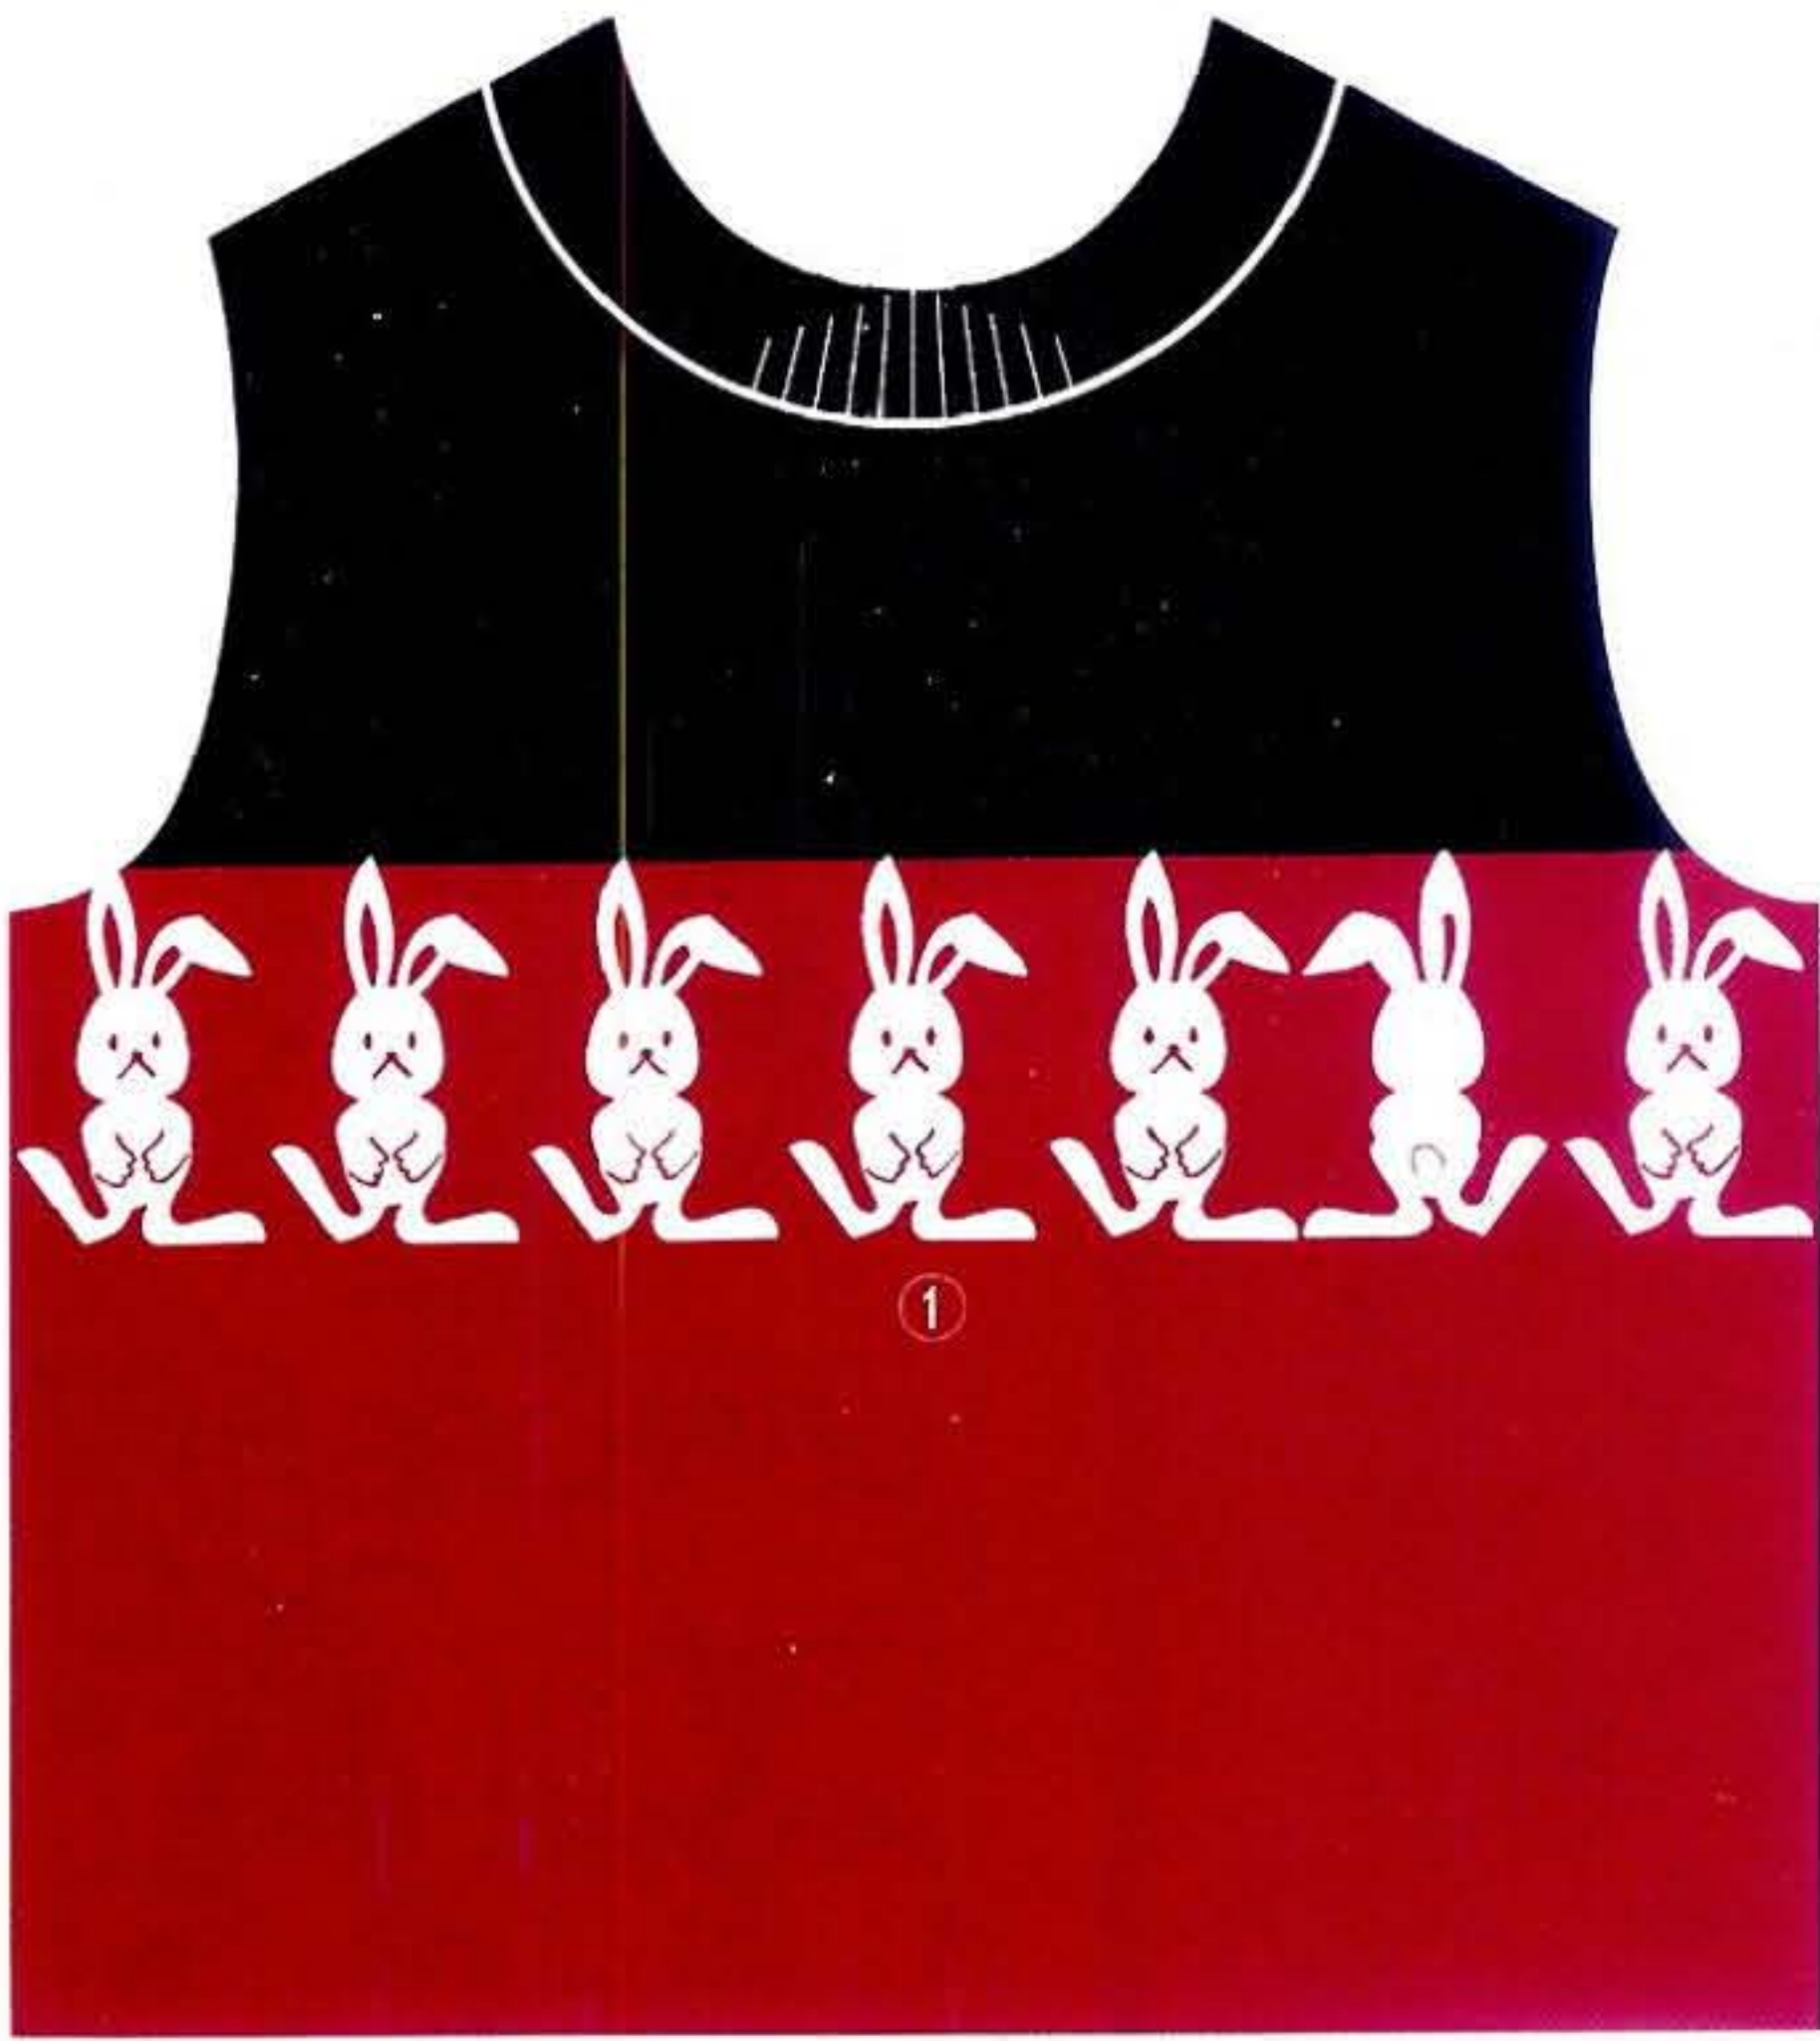 


B

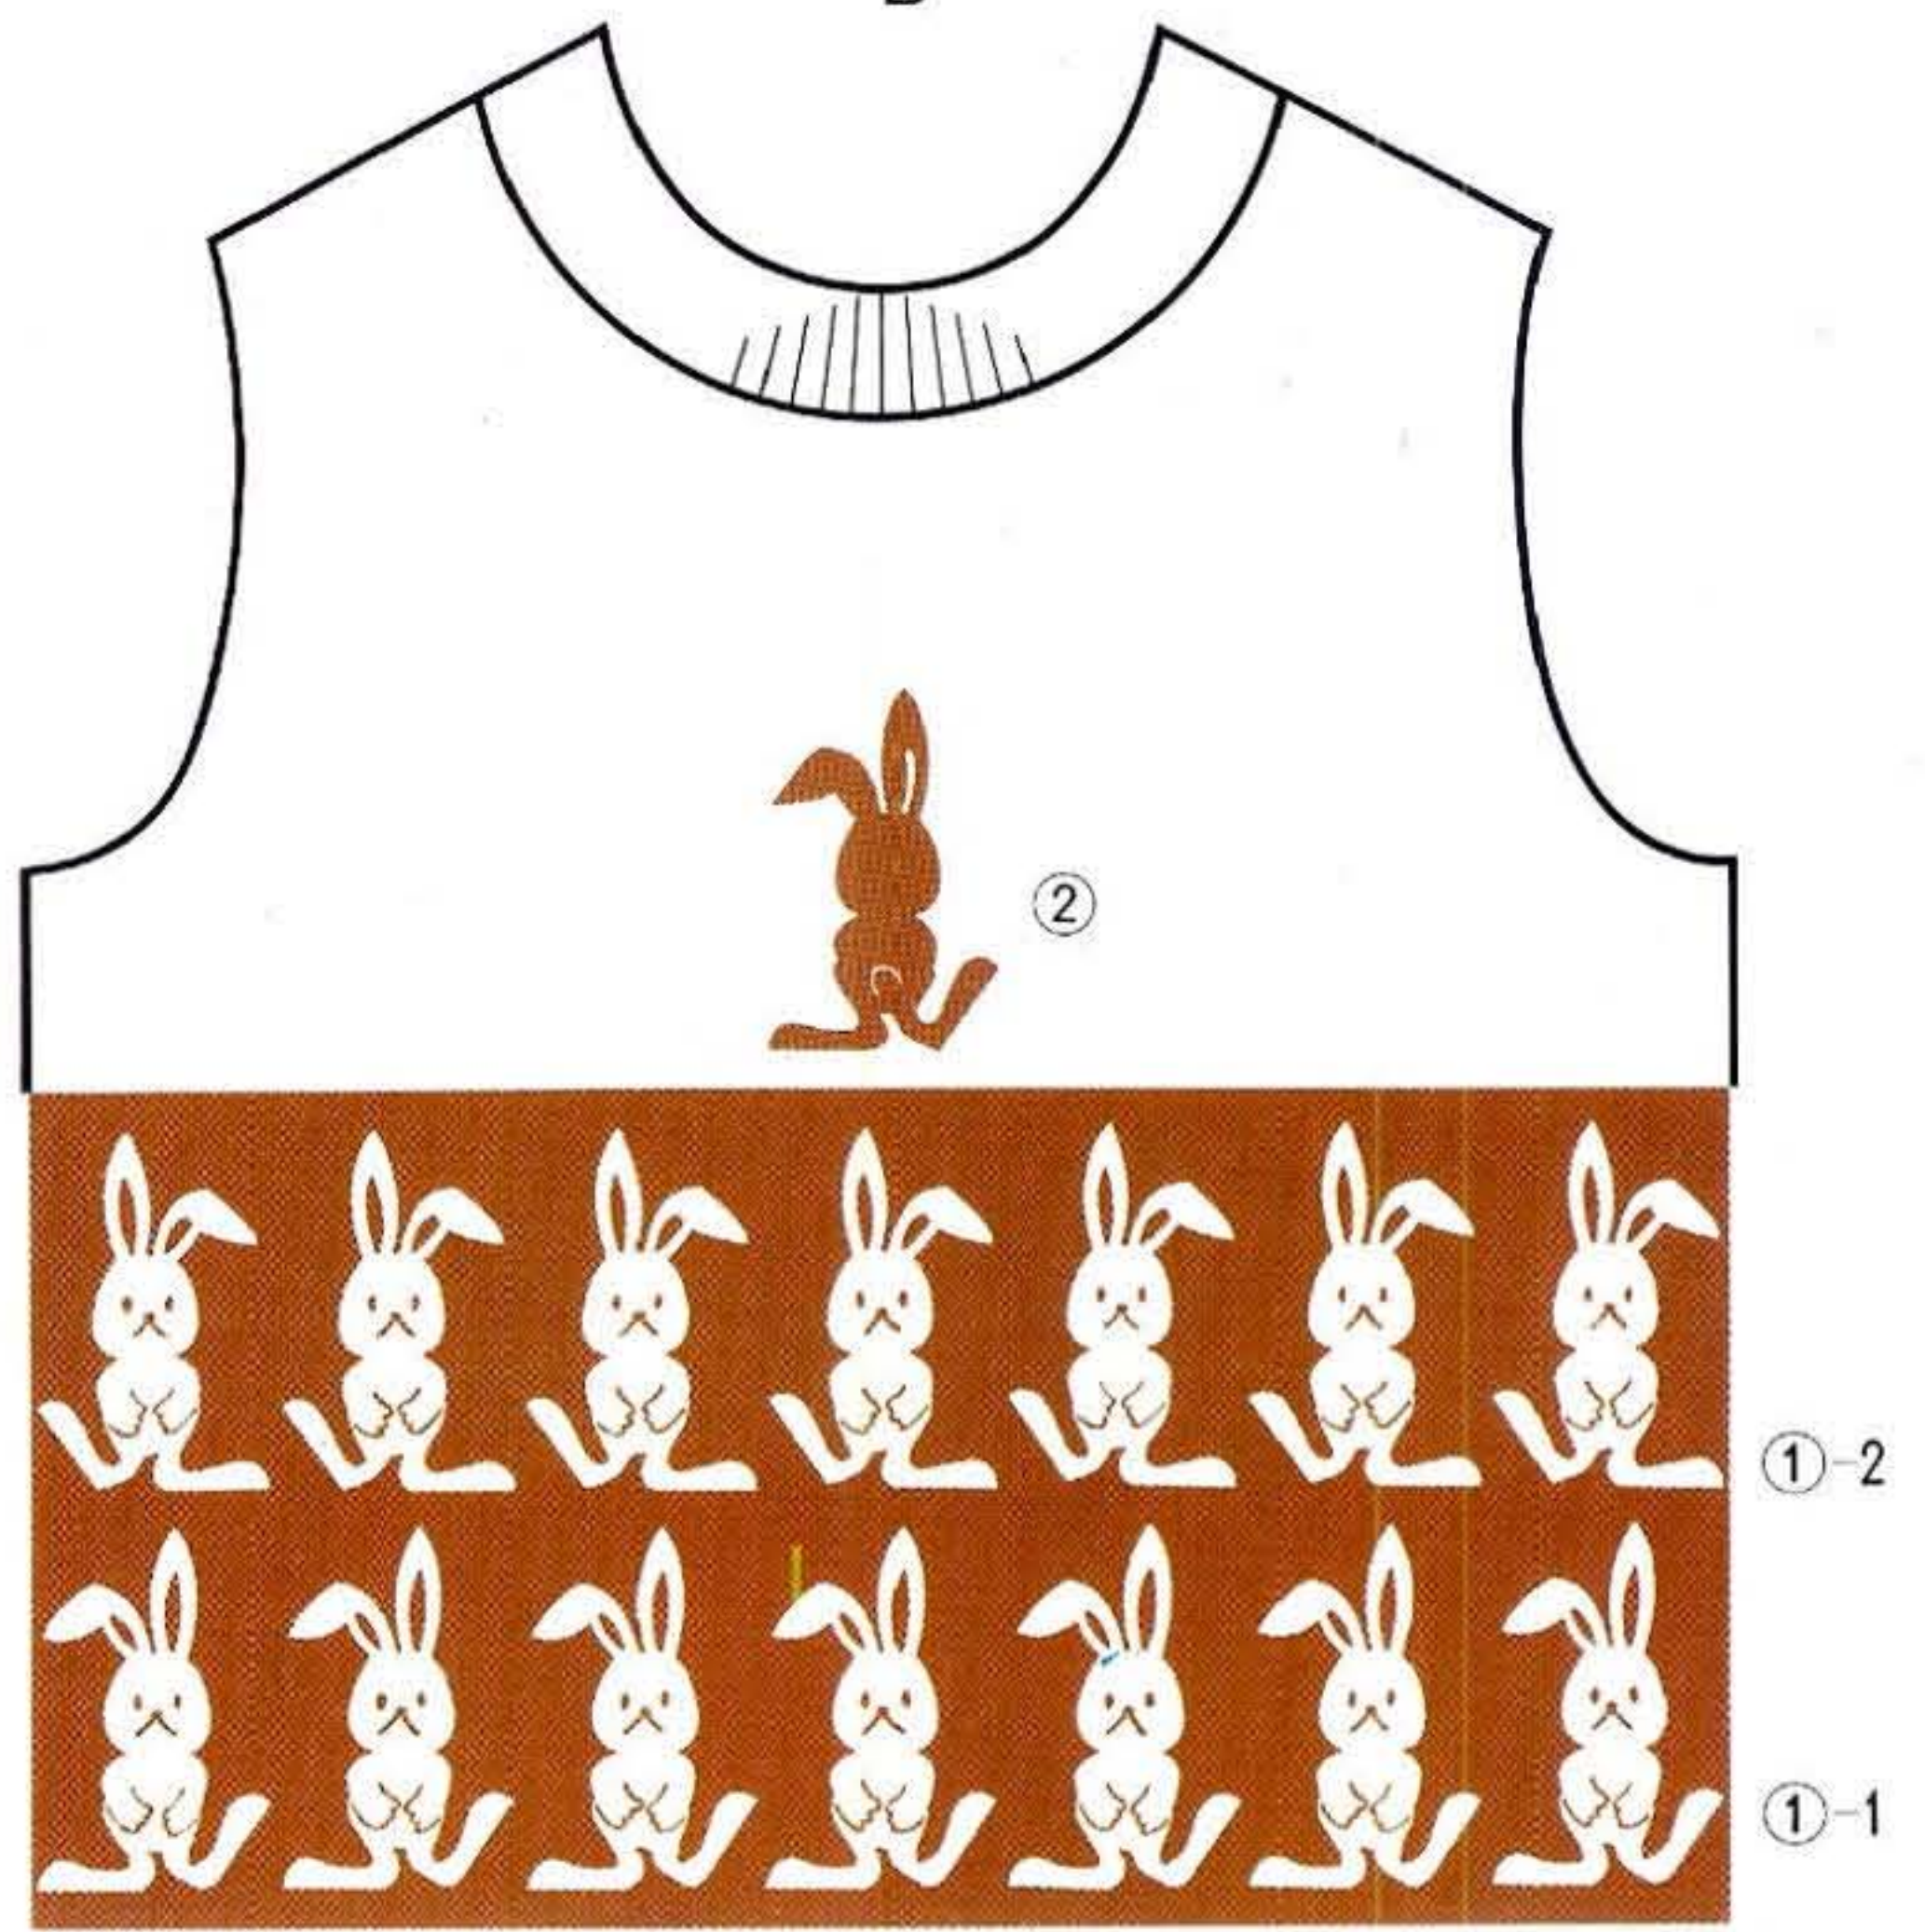 

C

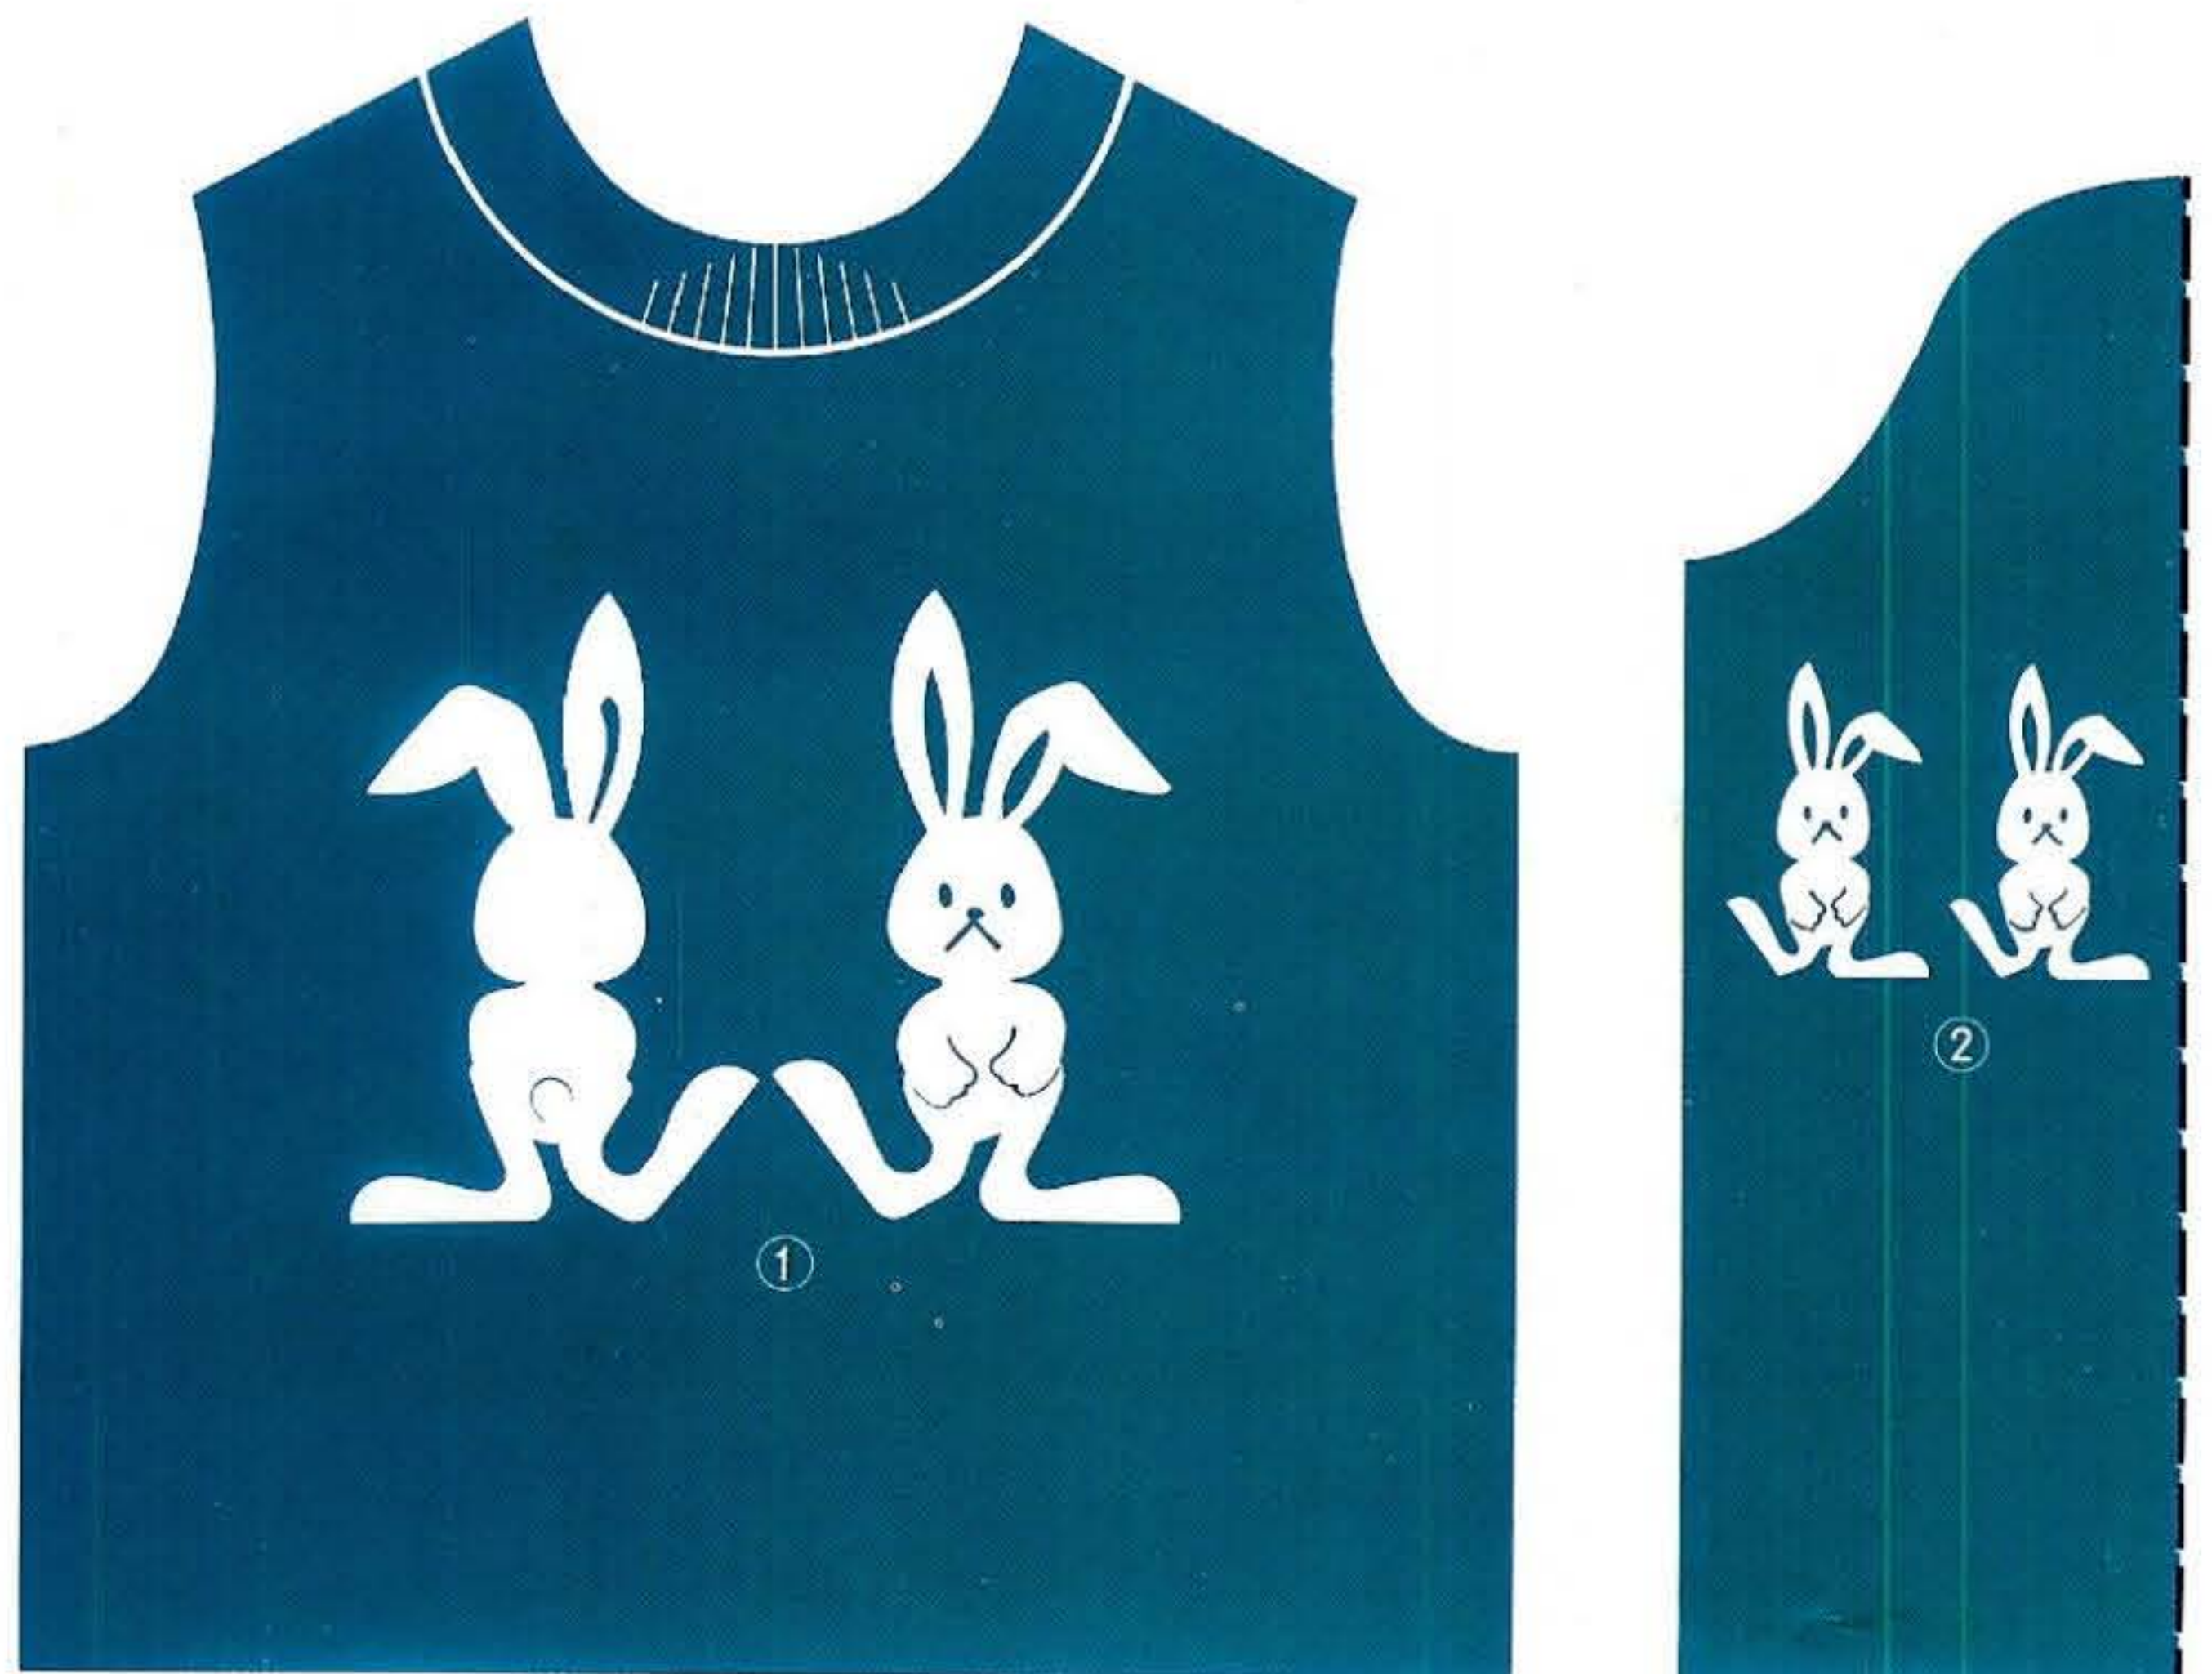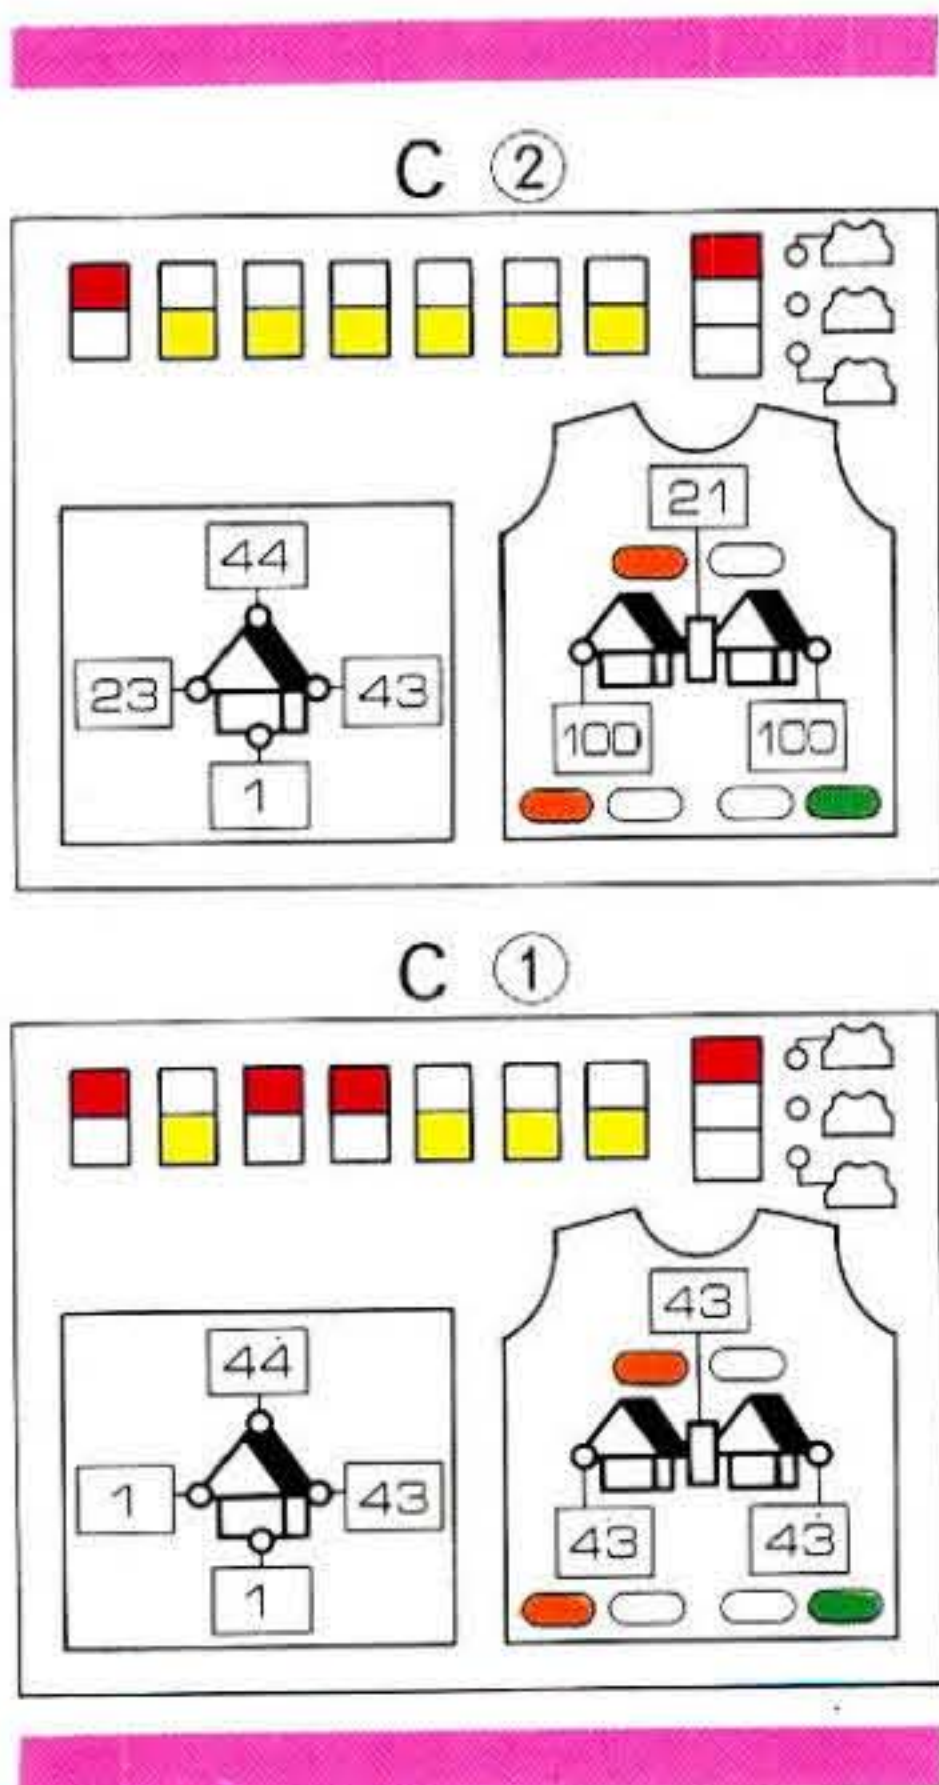  

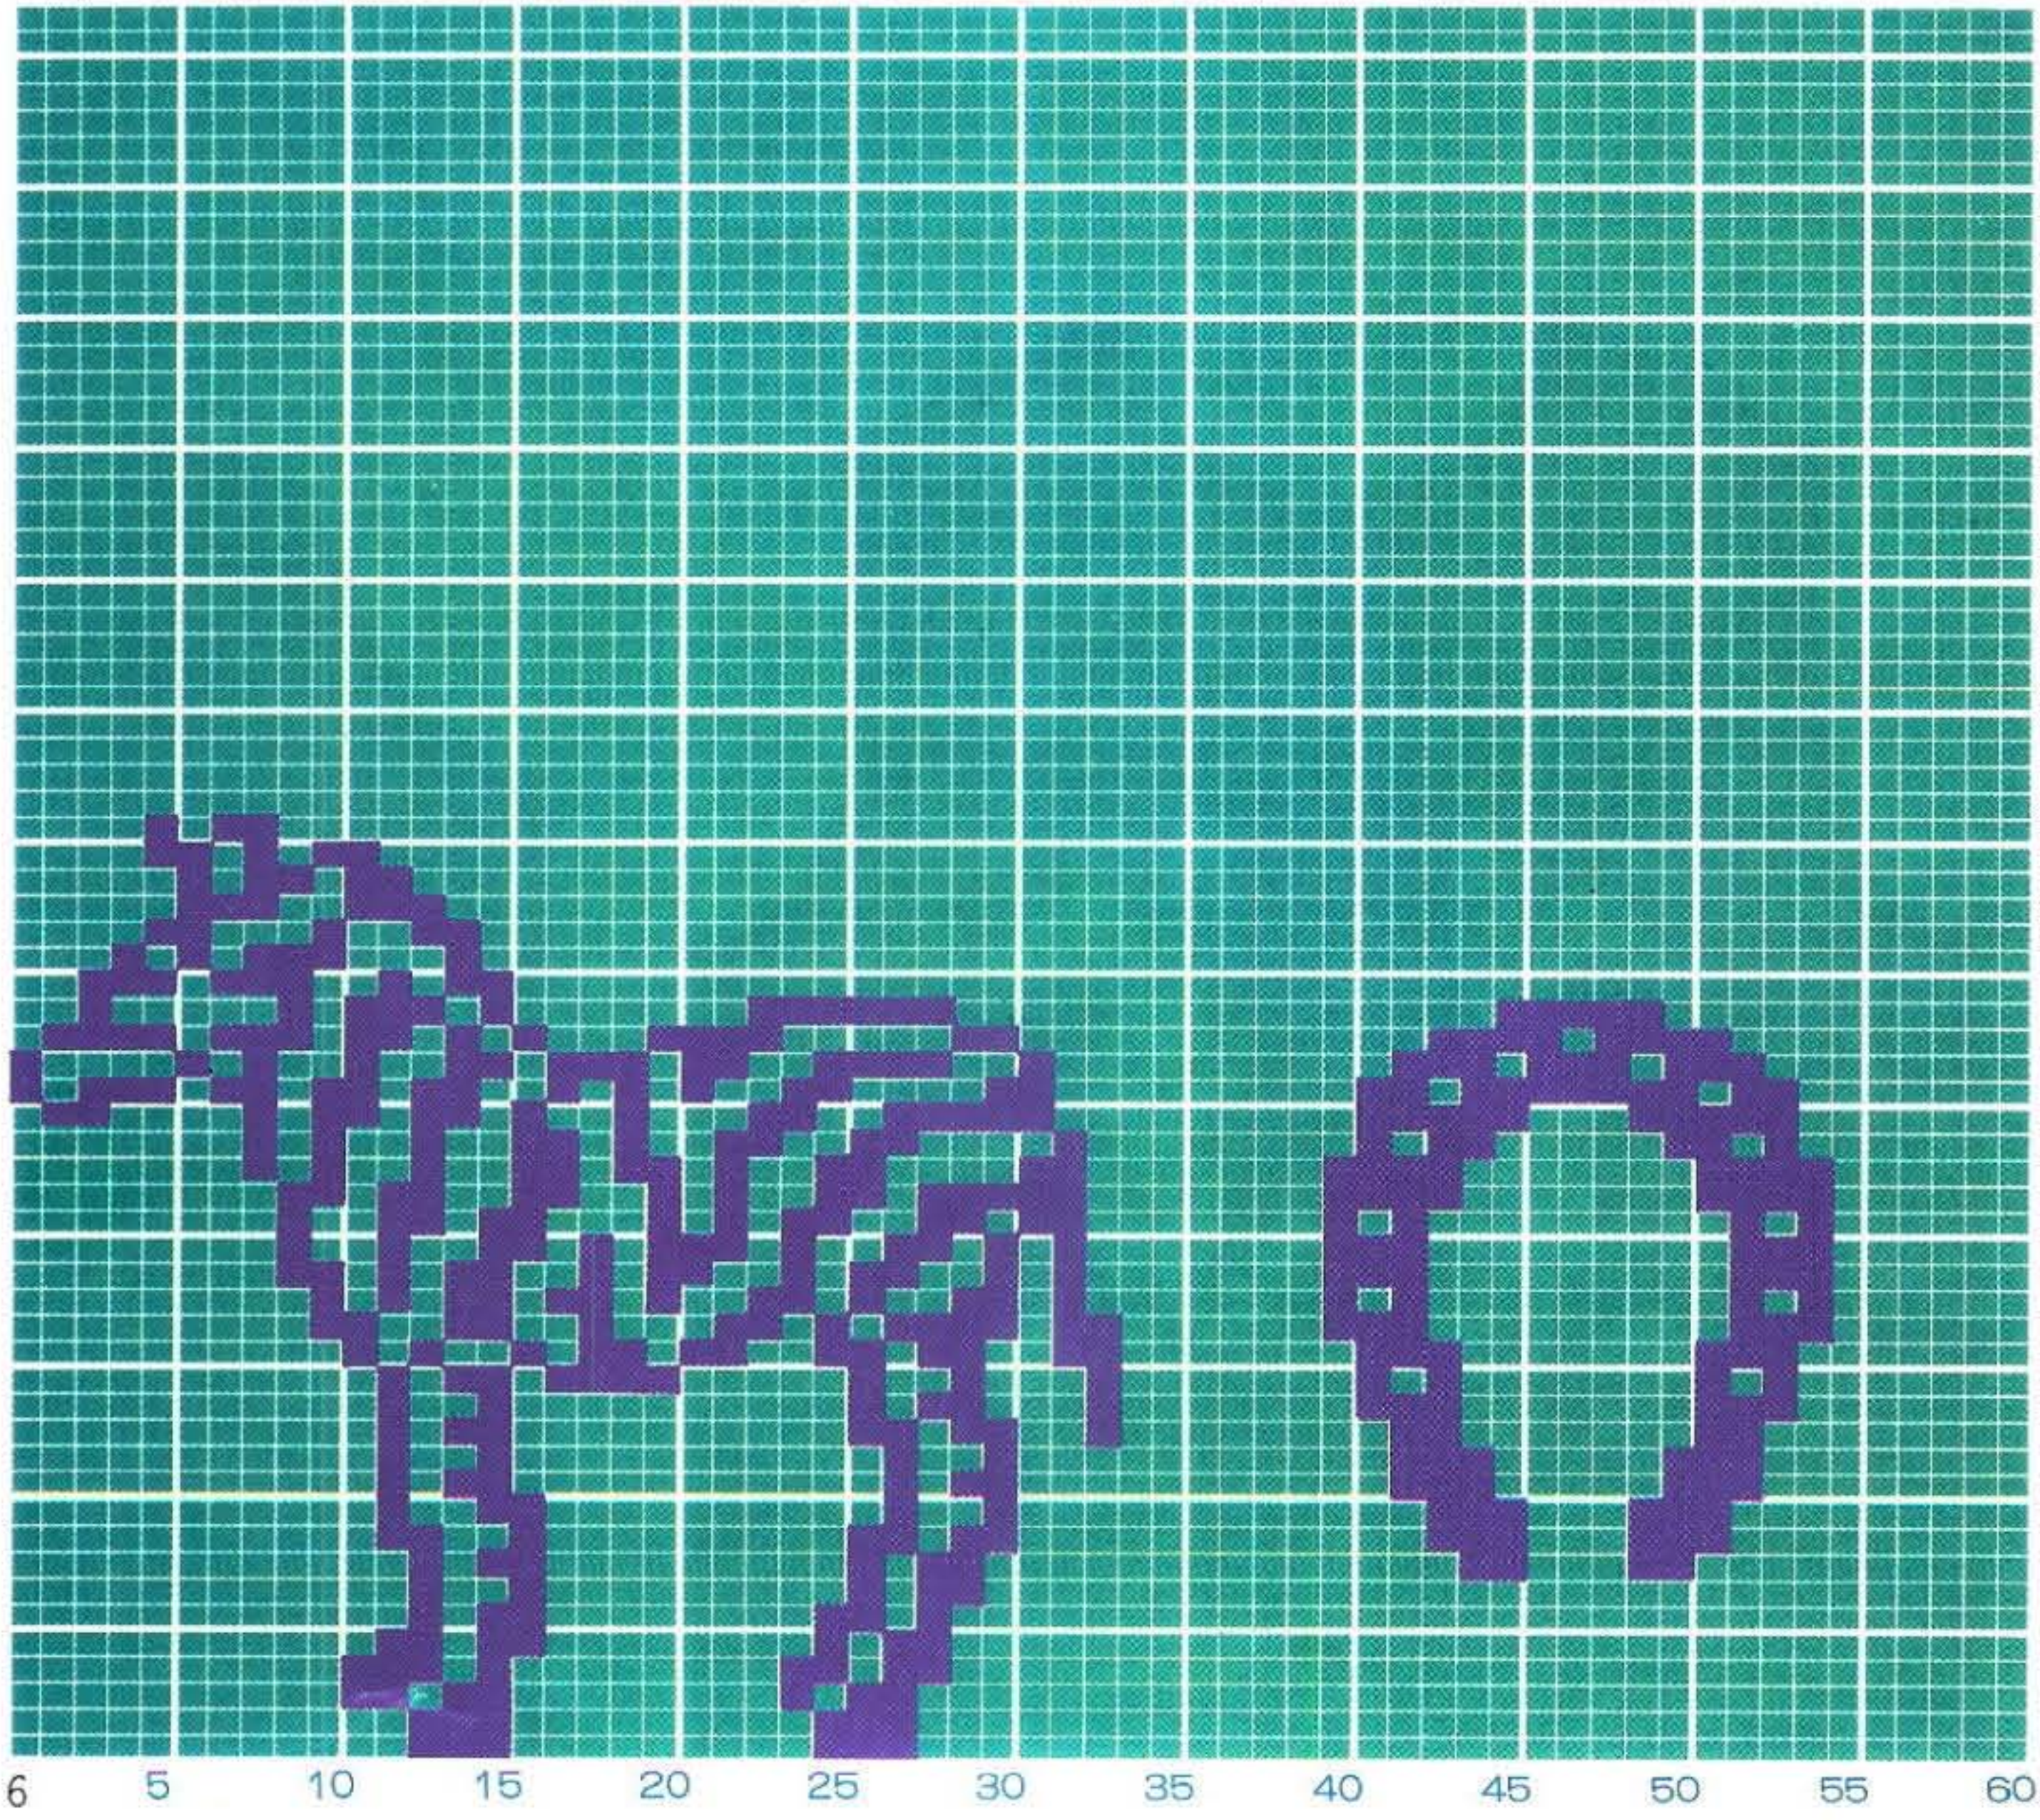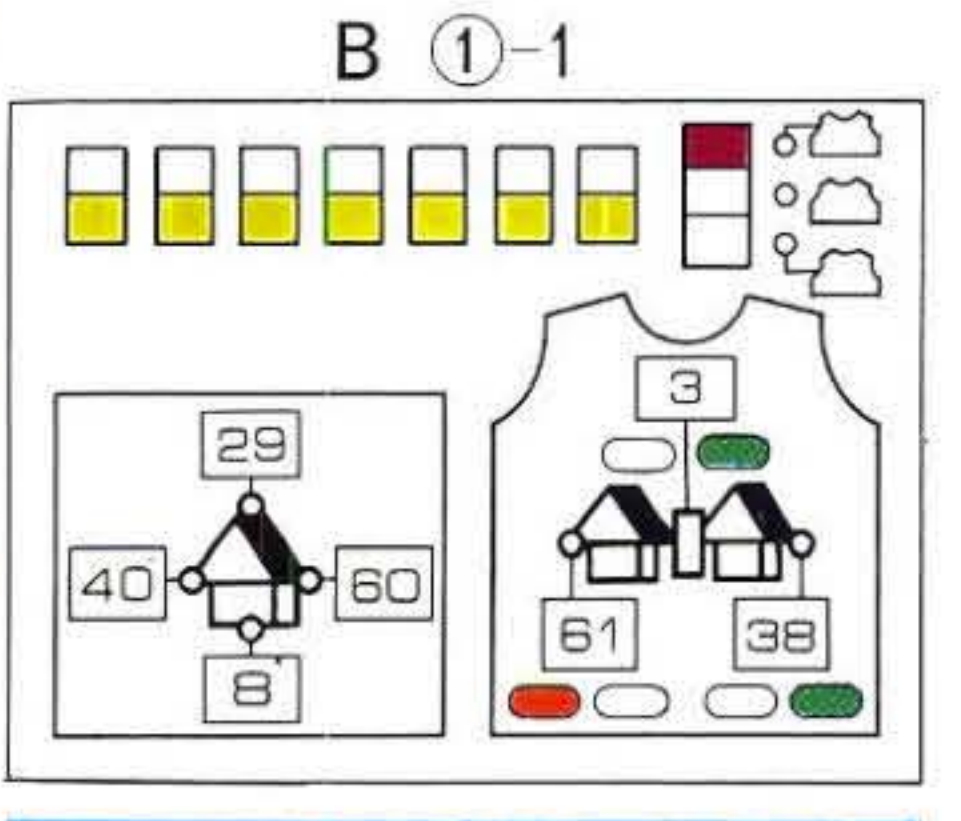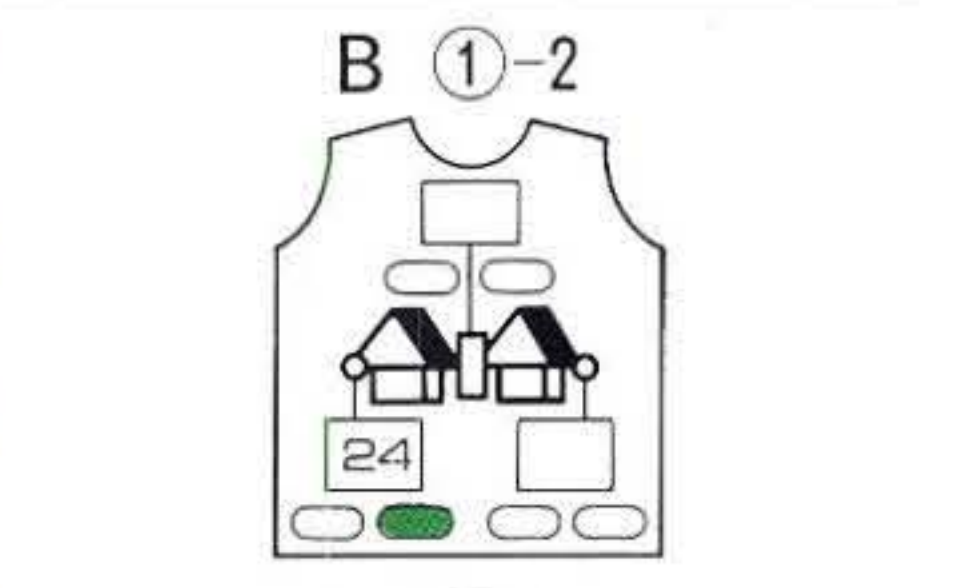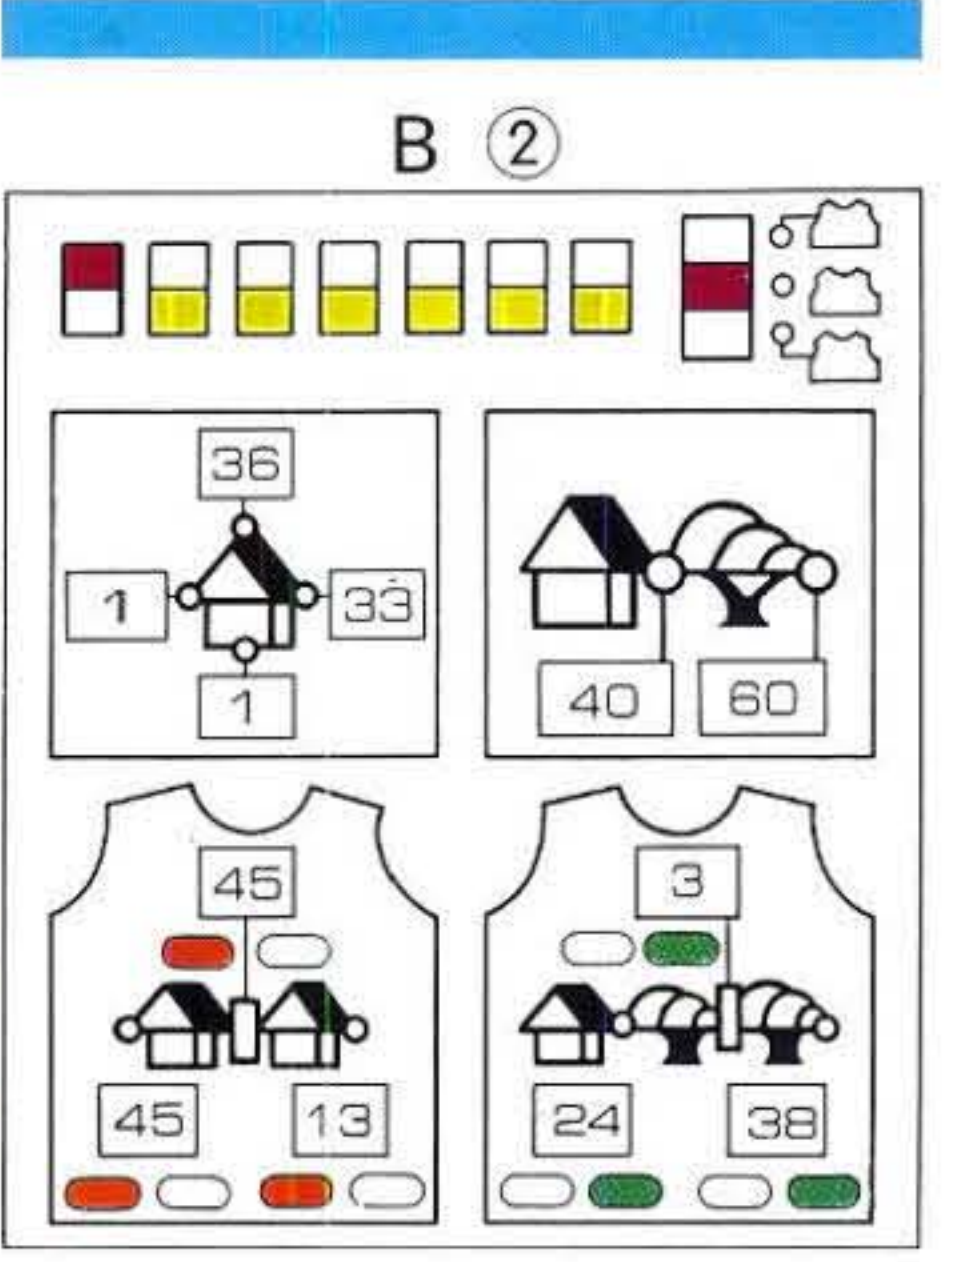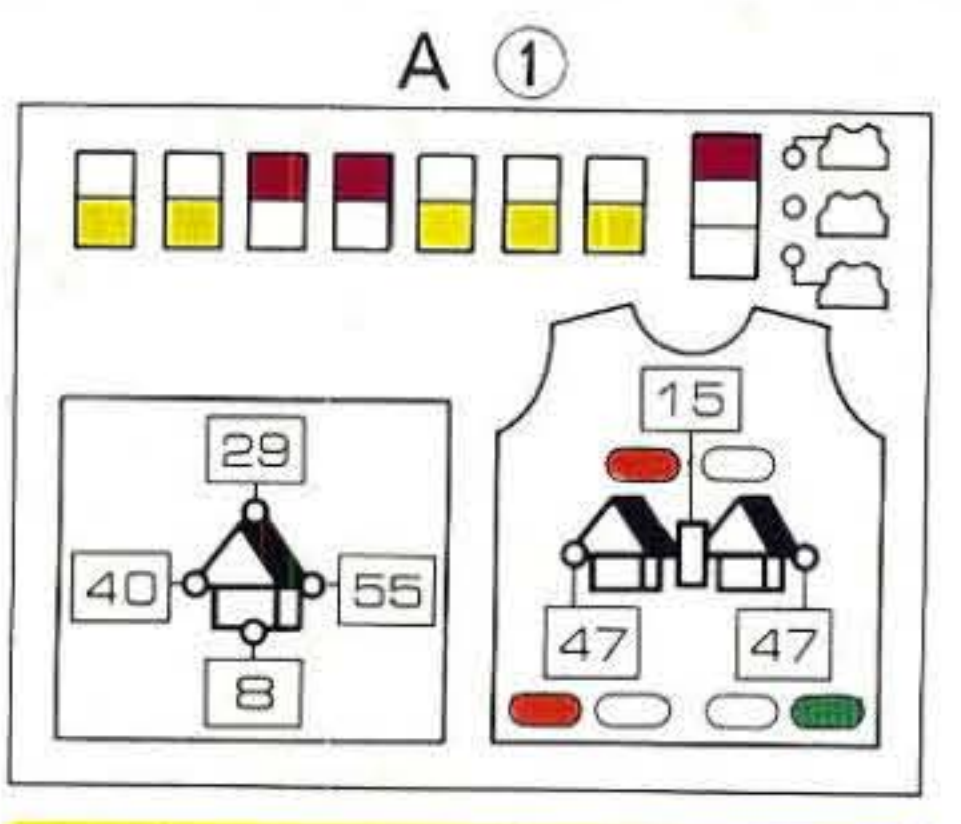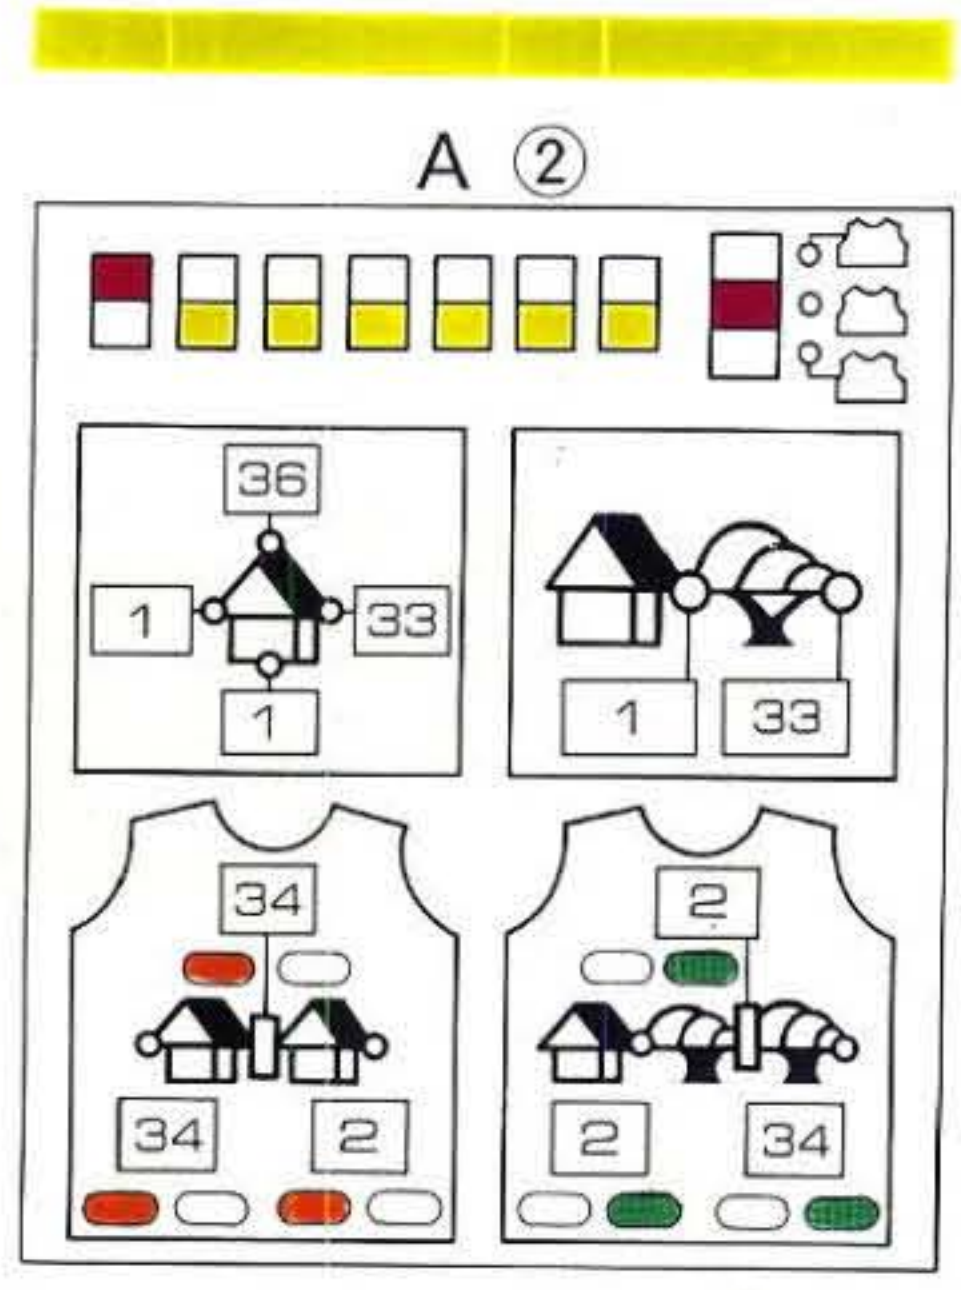      


A






B




    C

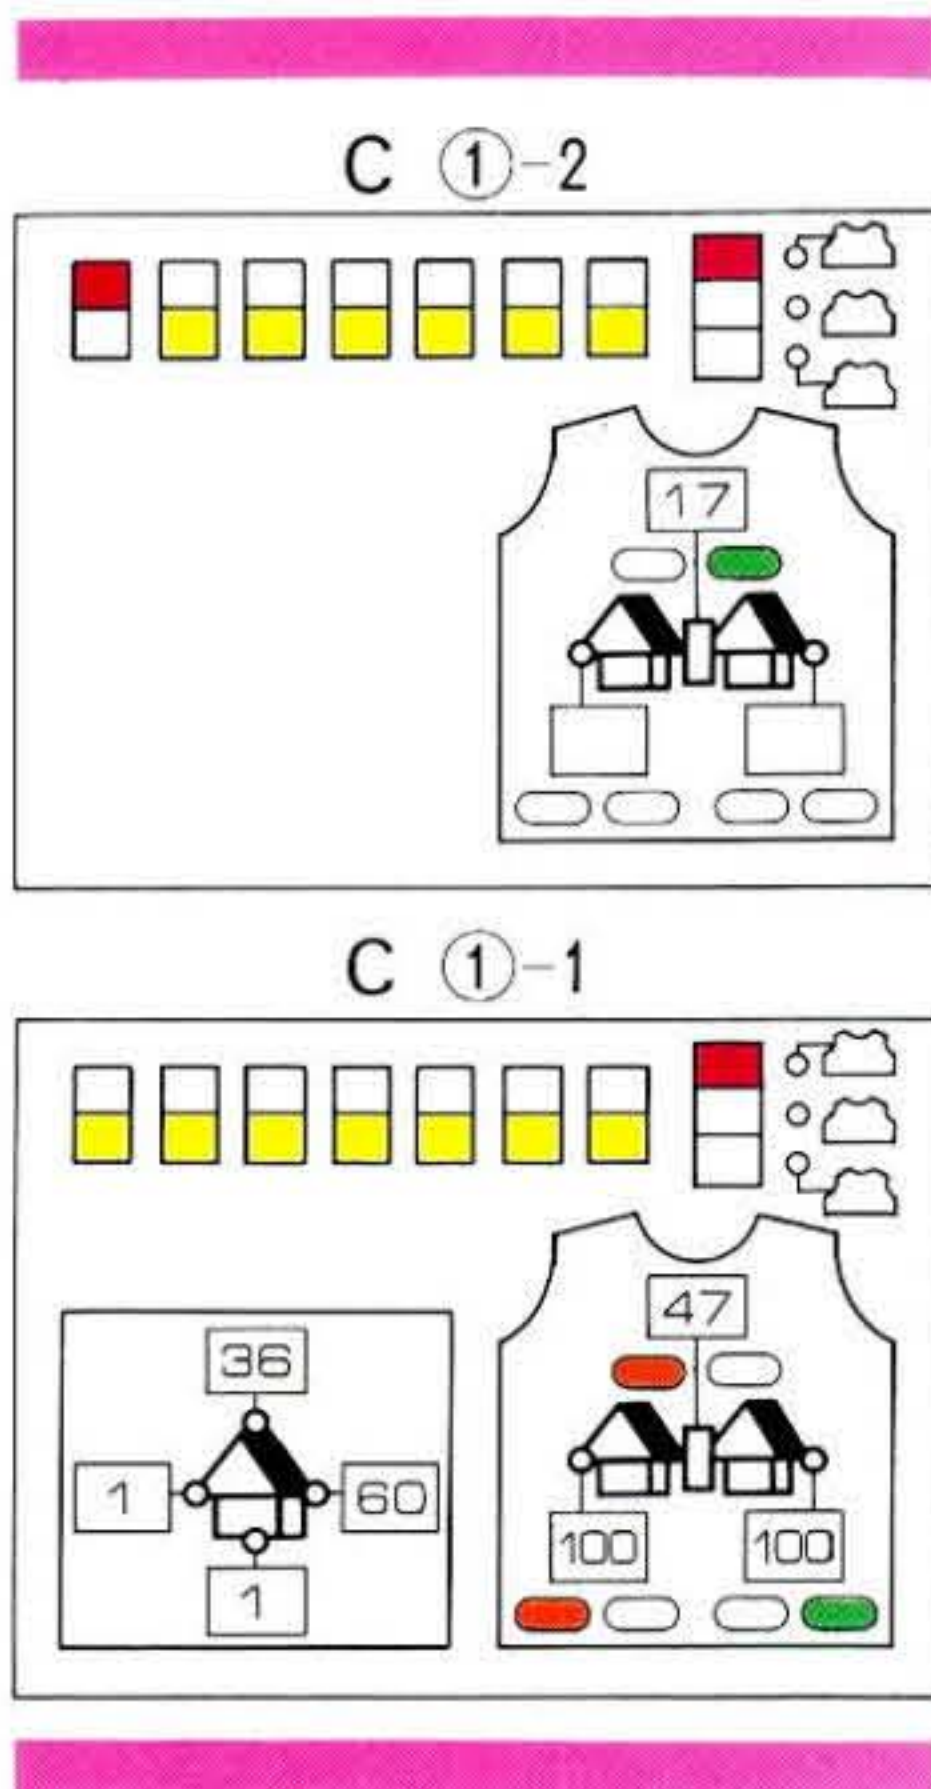

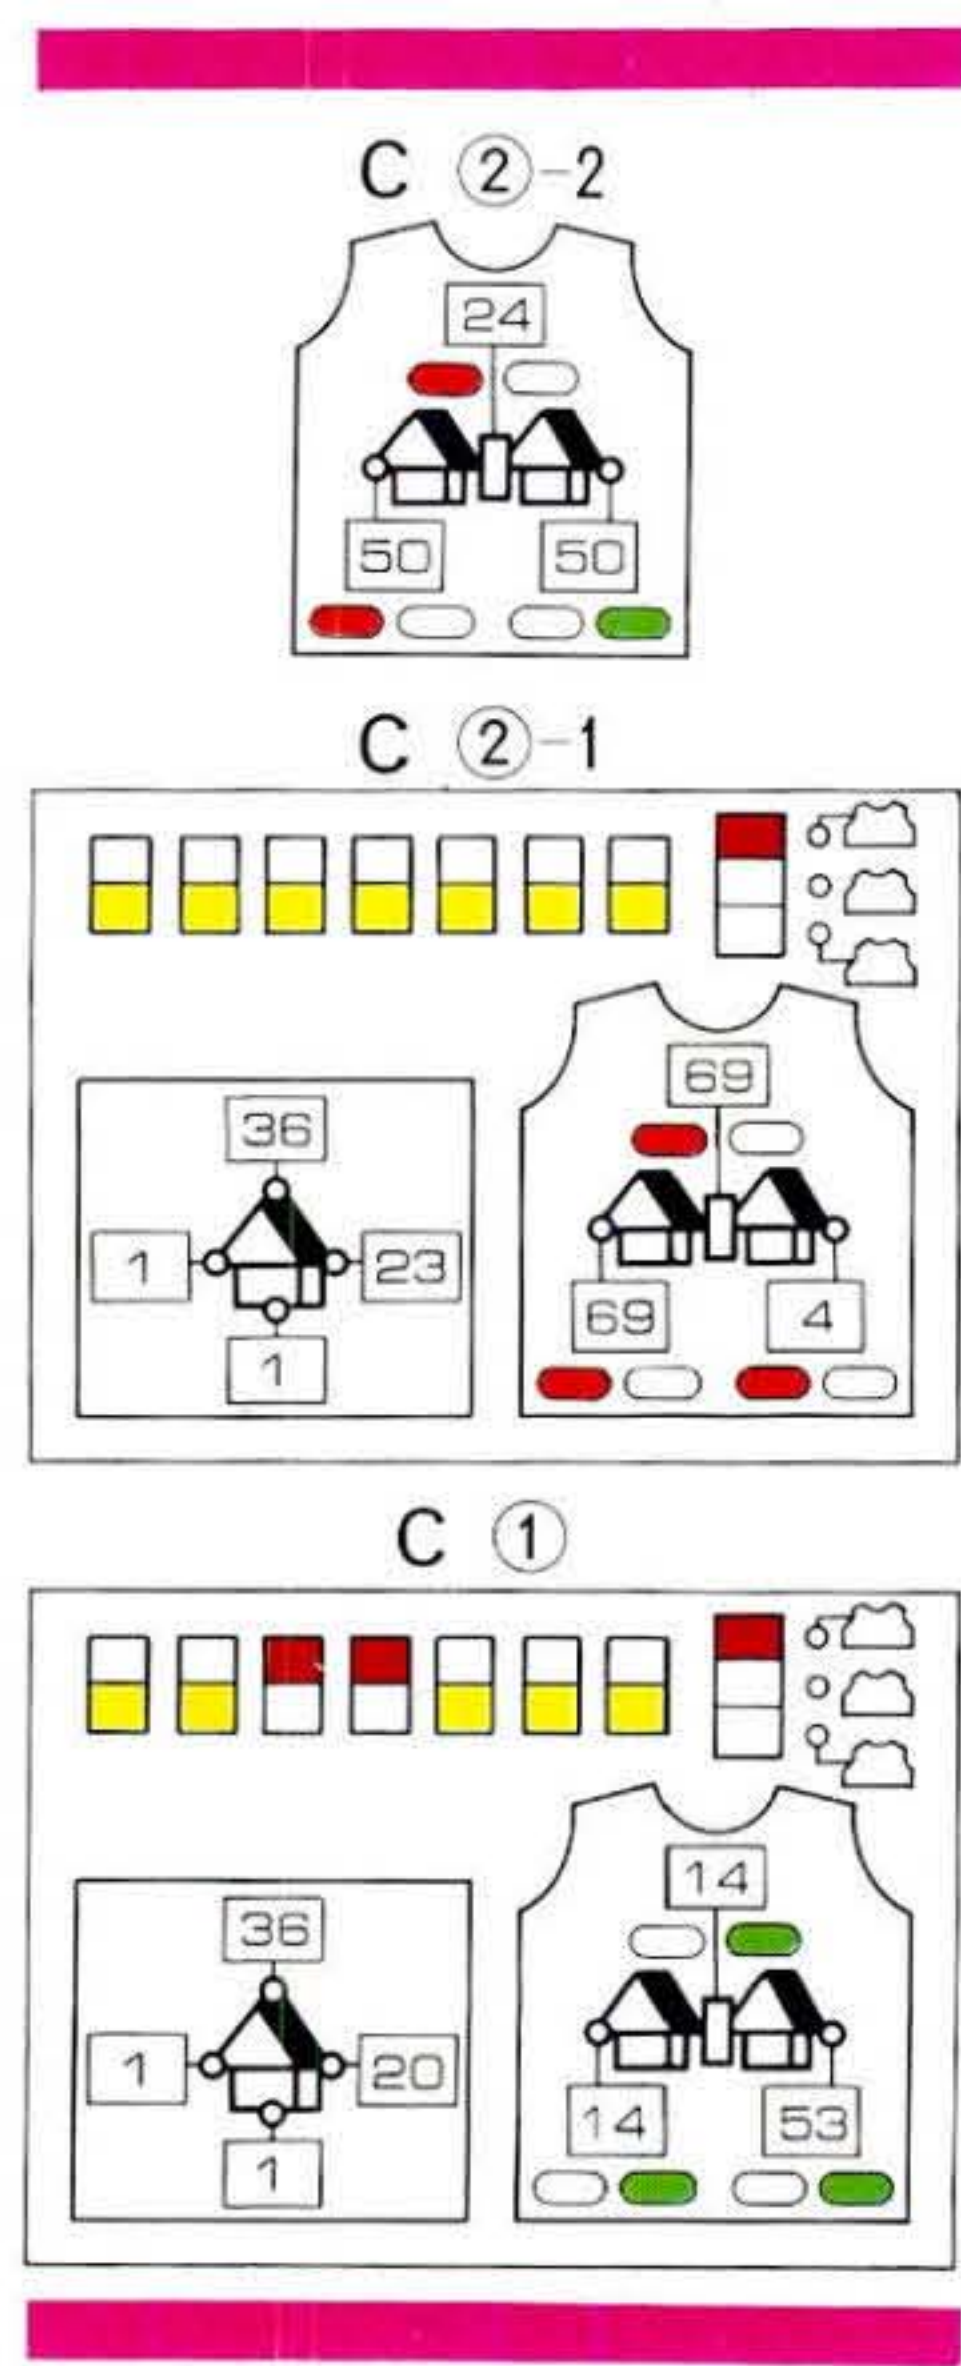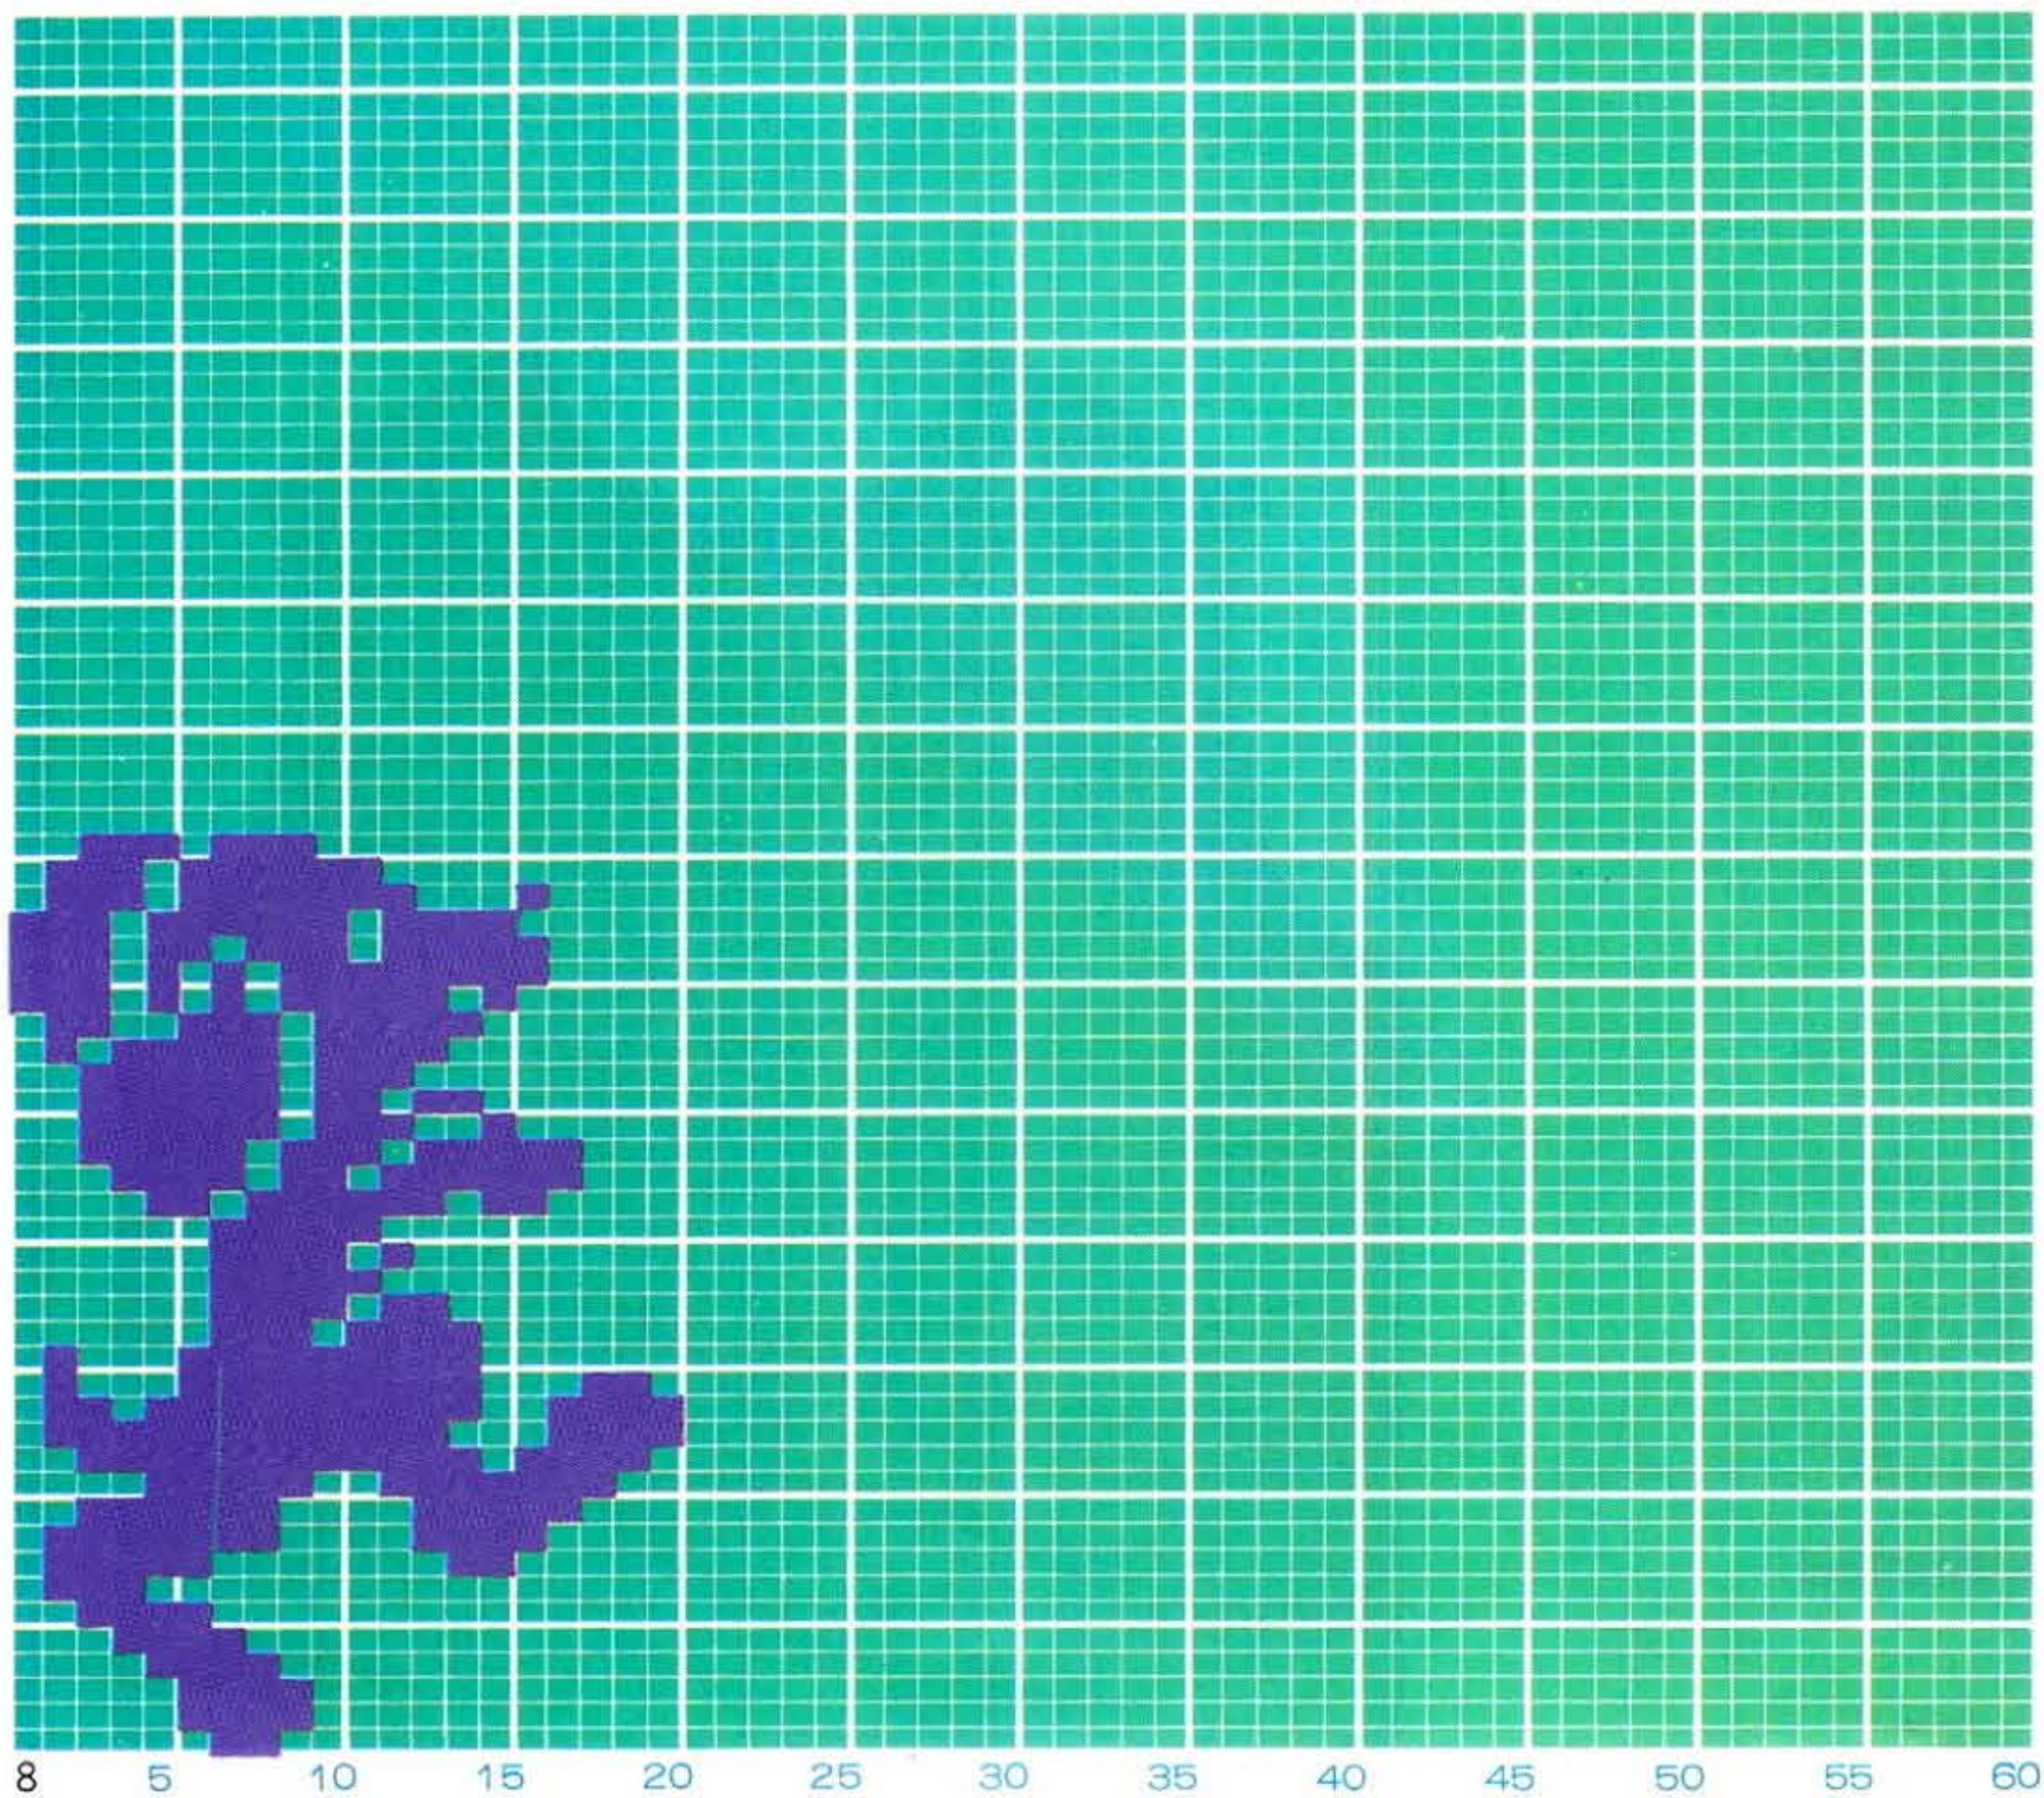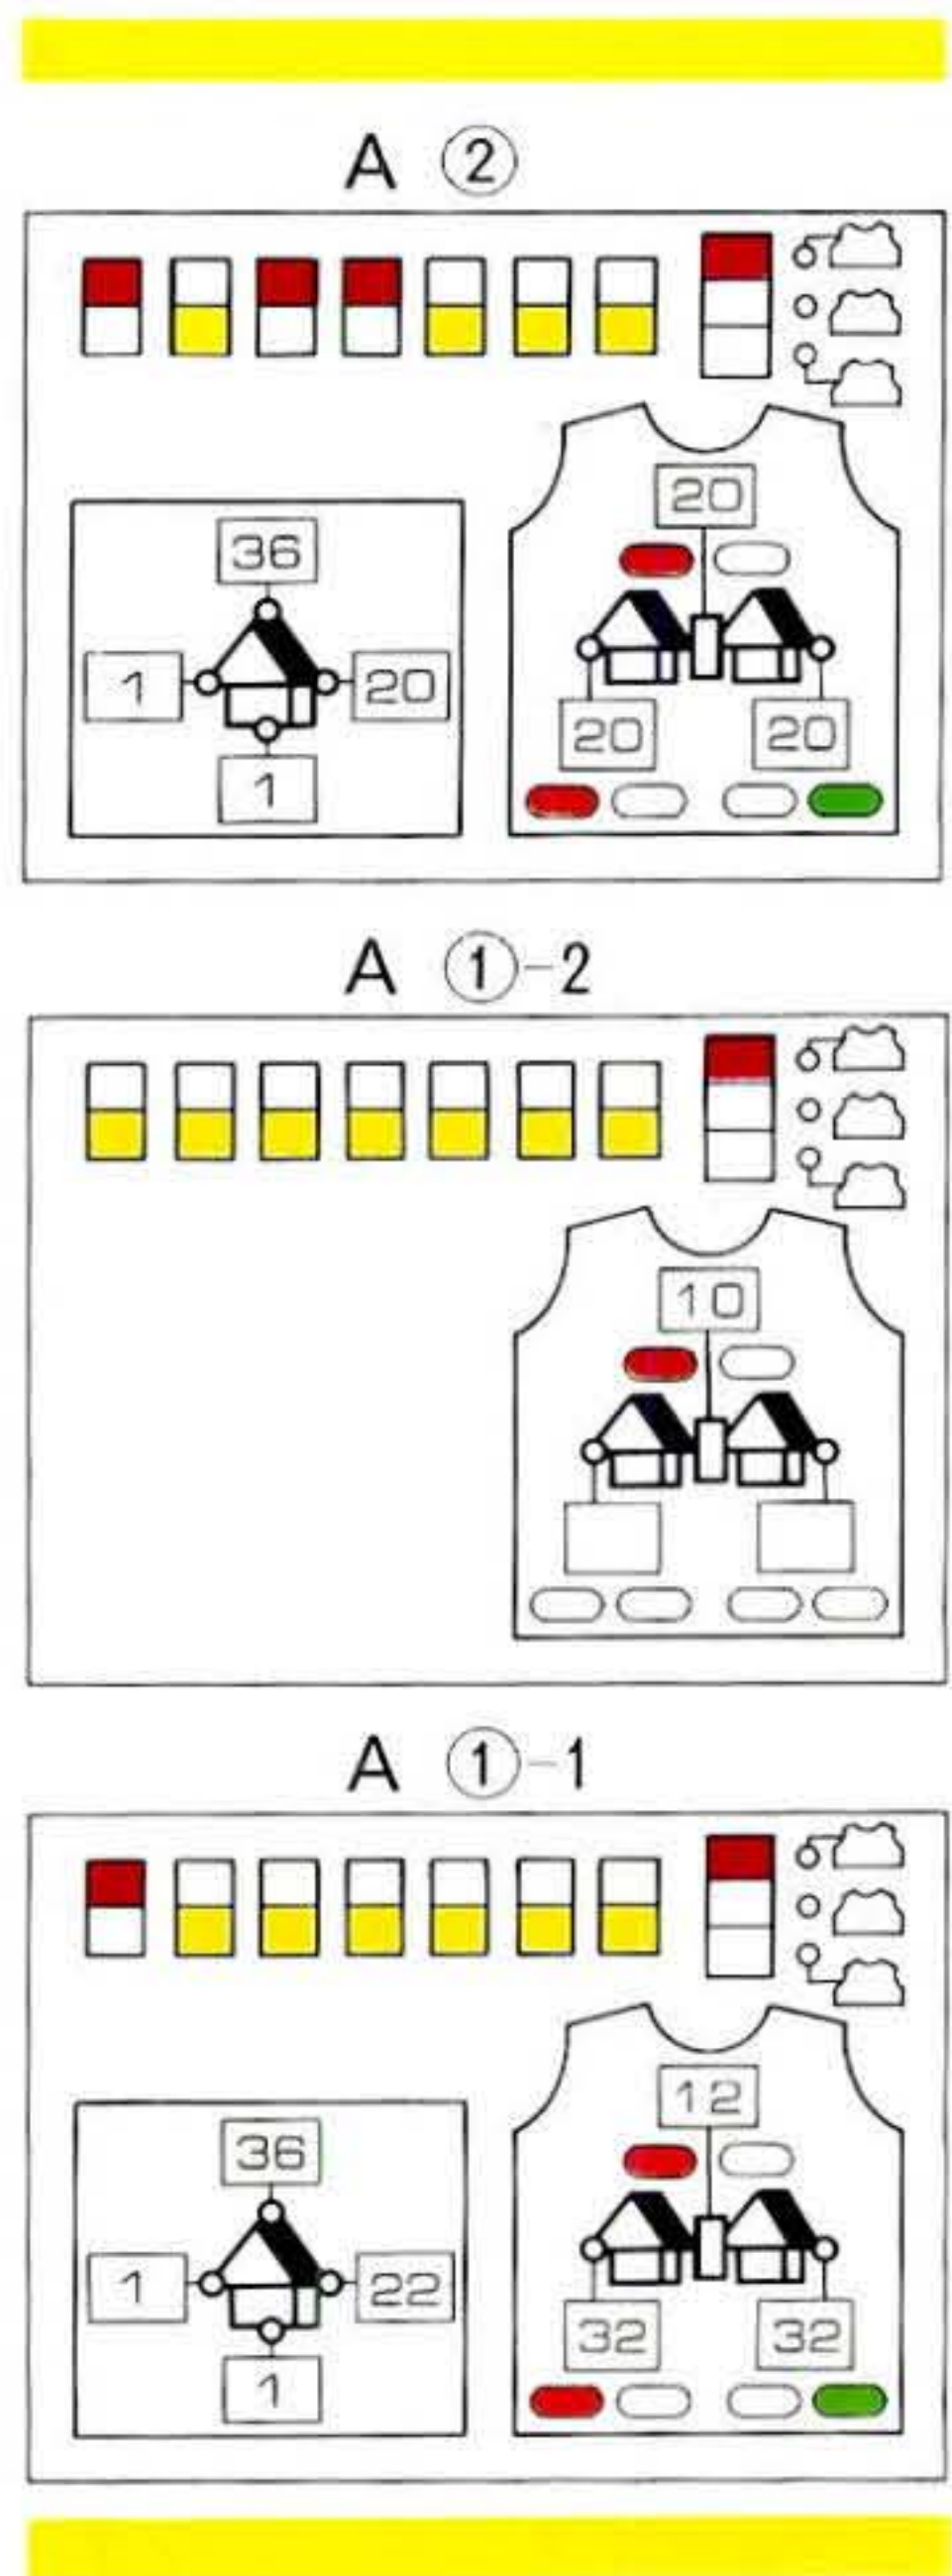


A

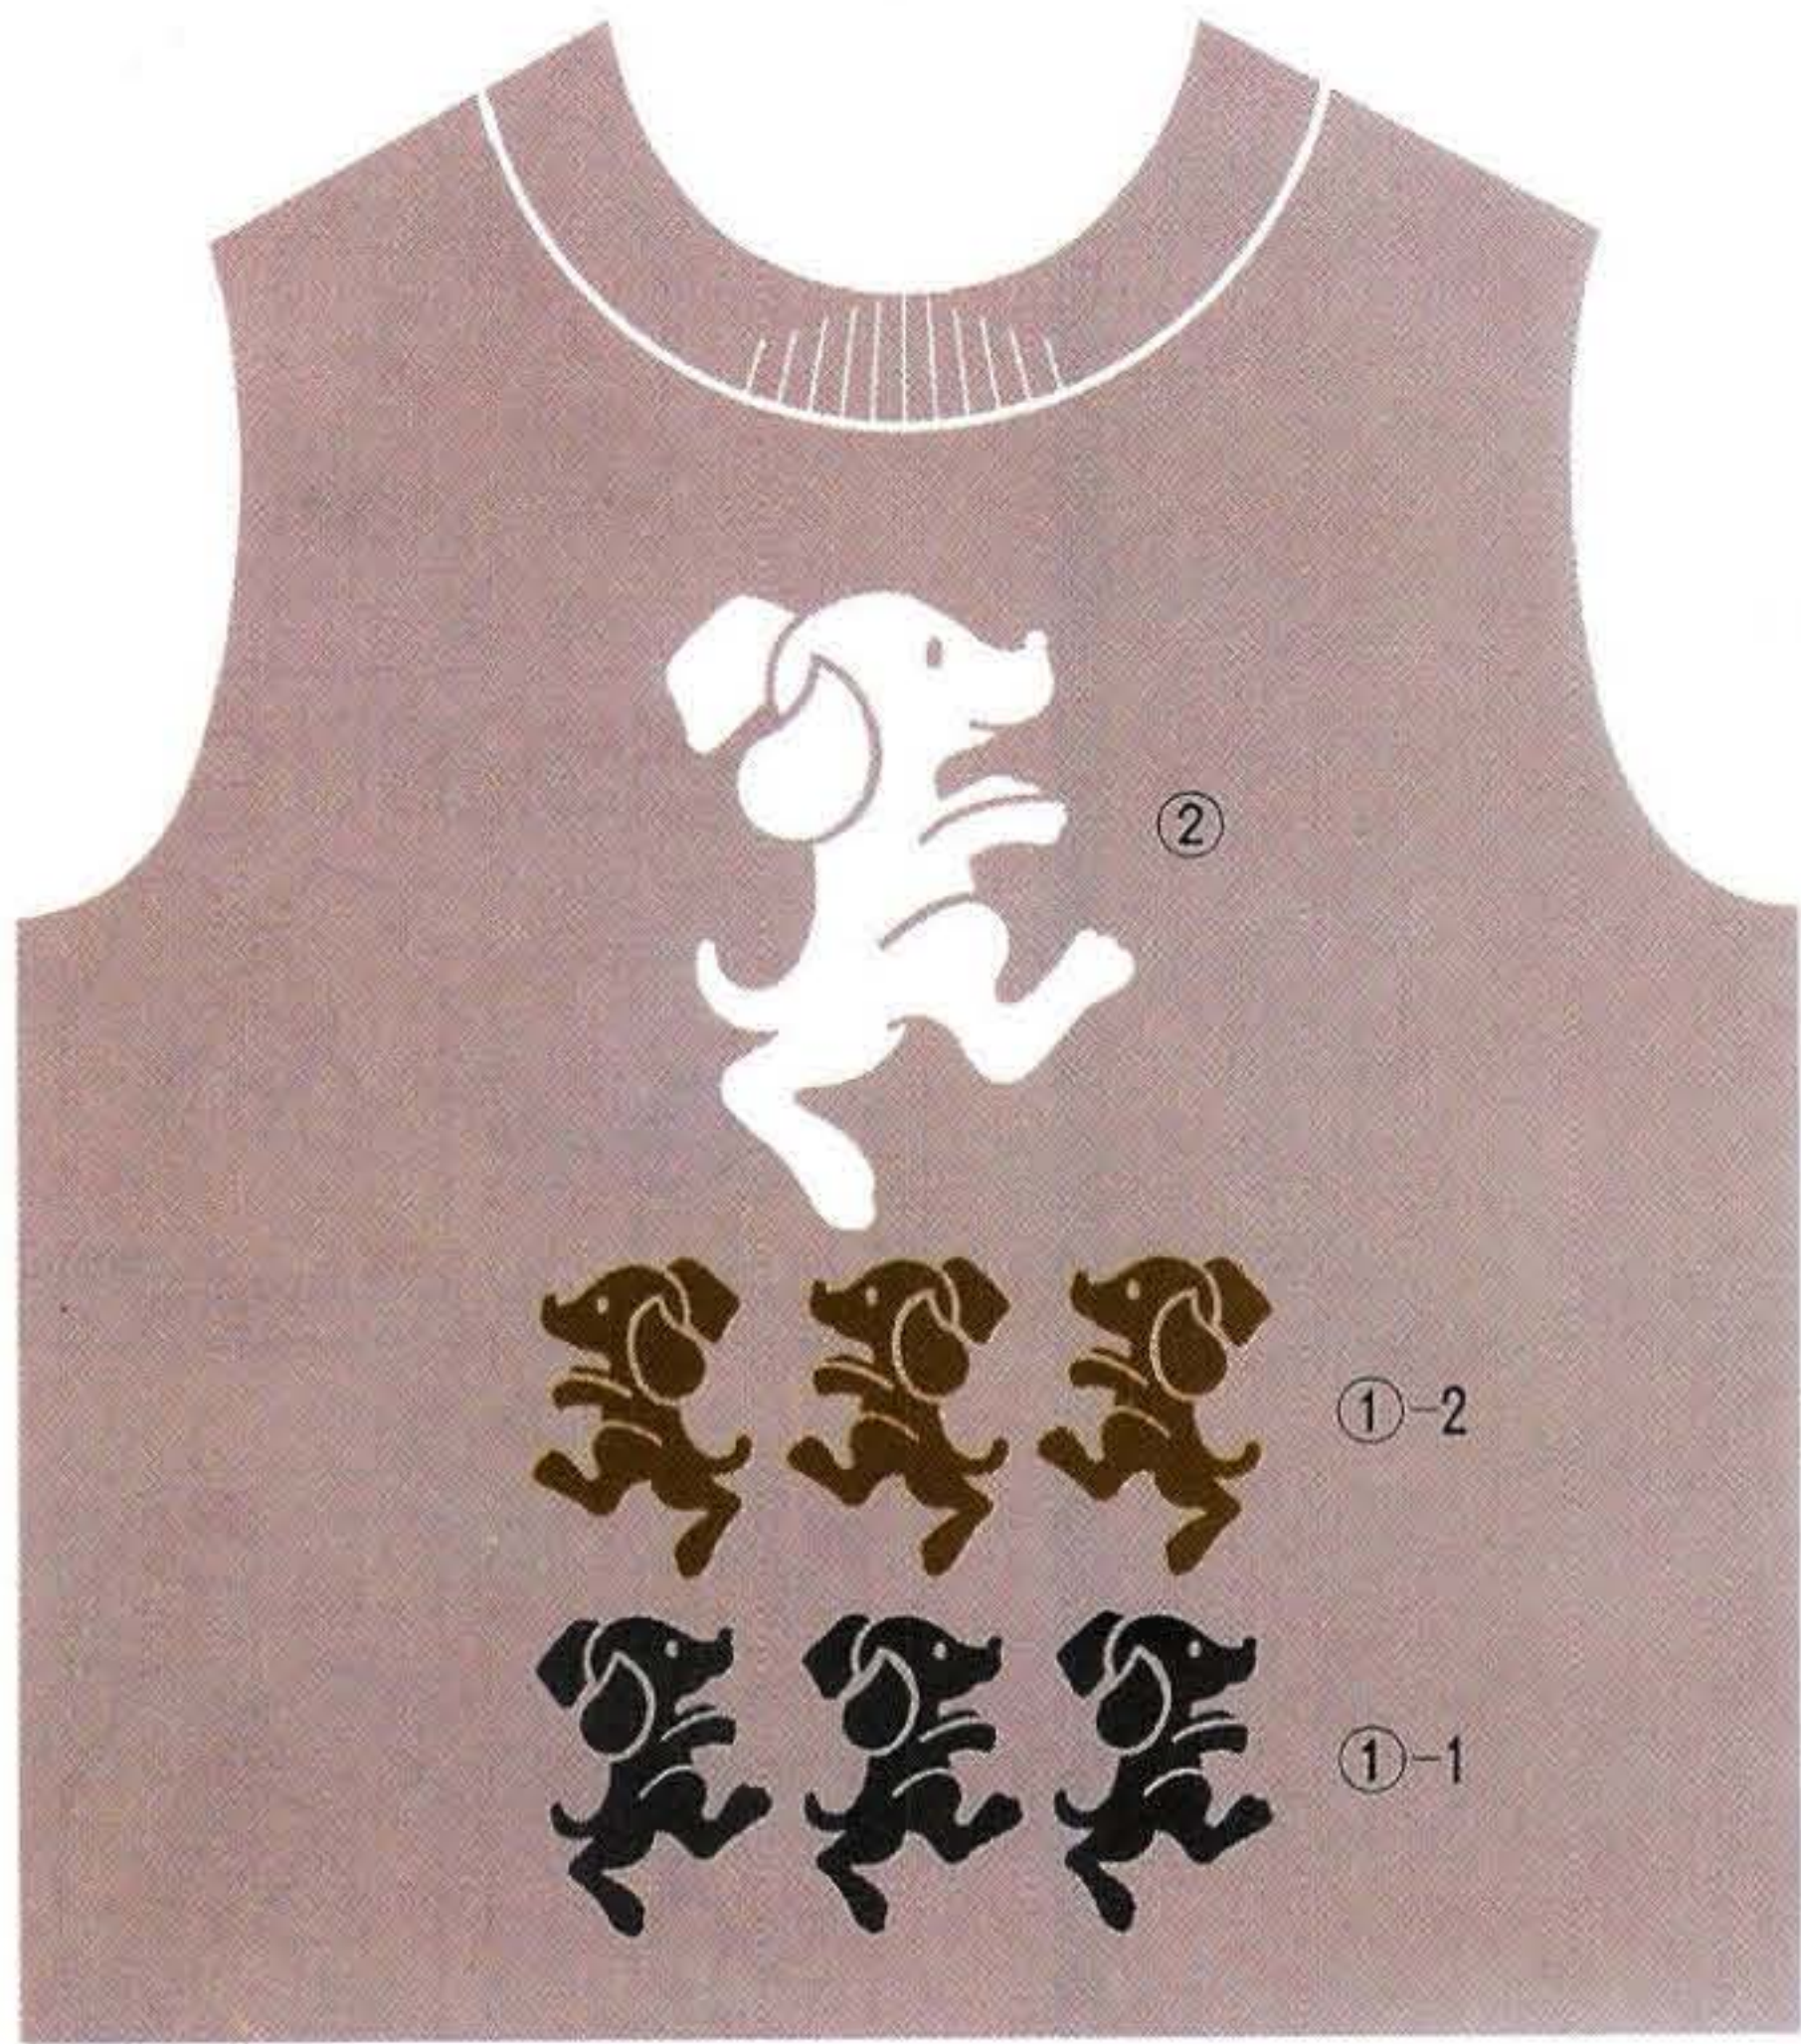 


B



 
B ③

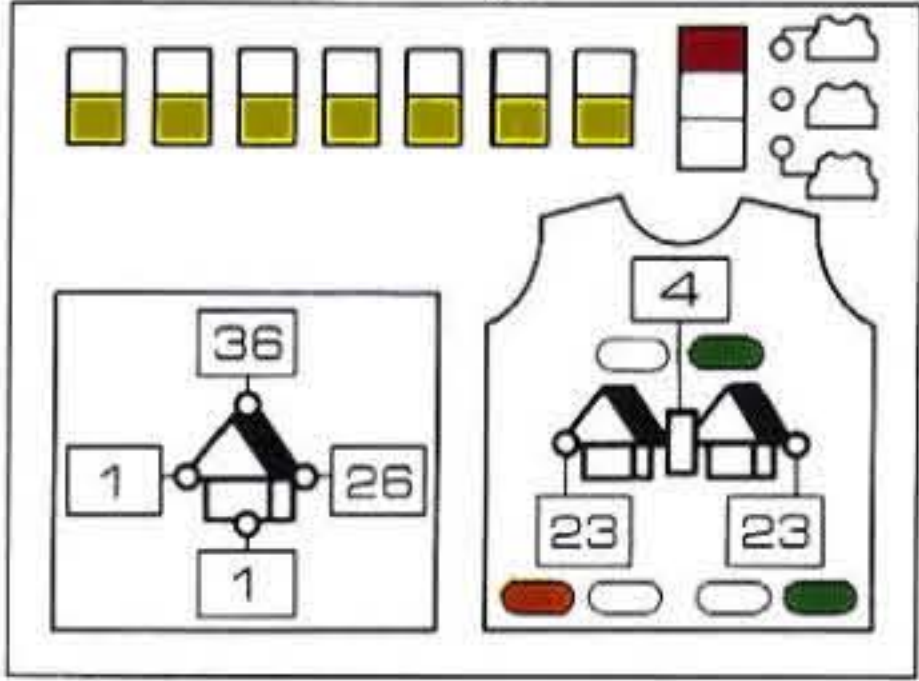

B ②








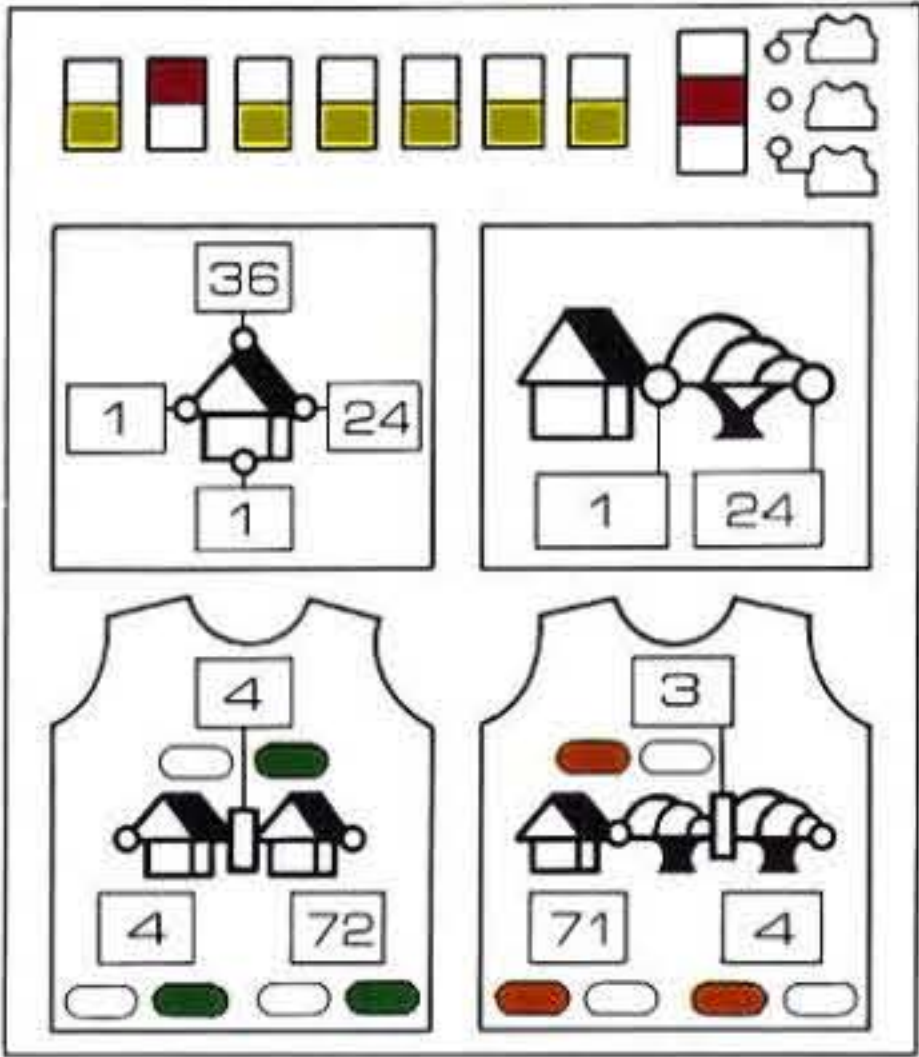 


B ①

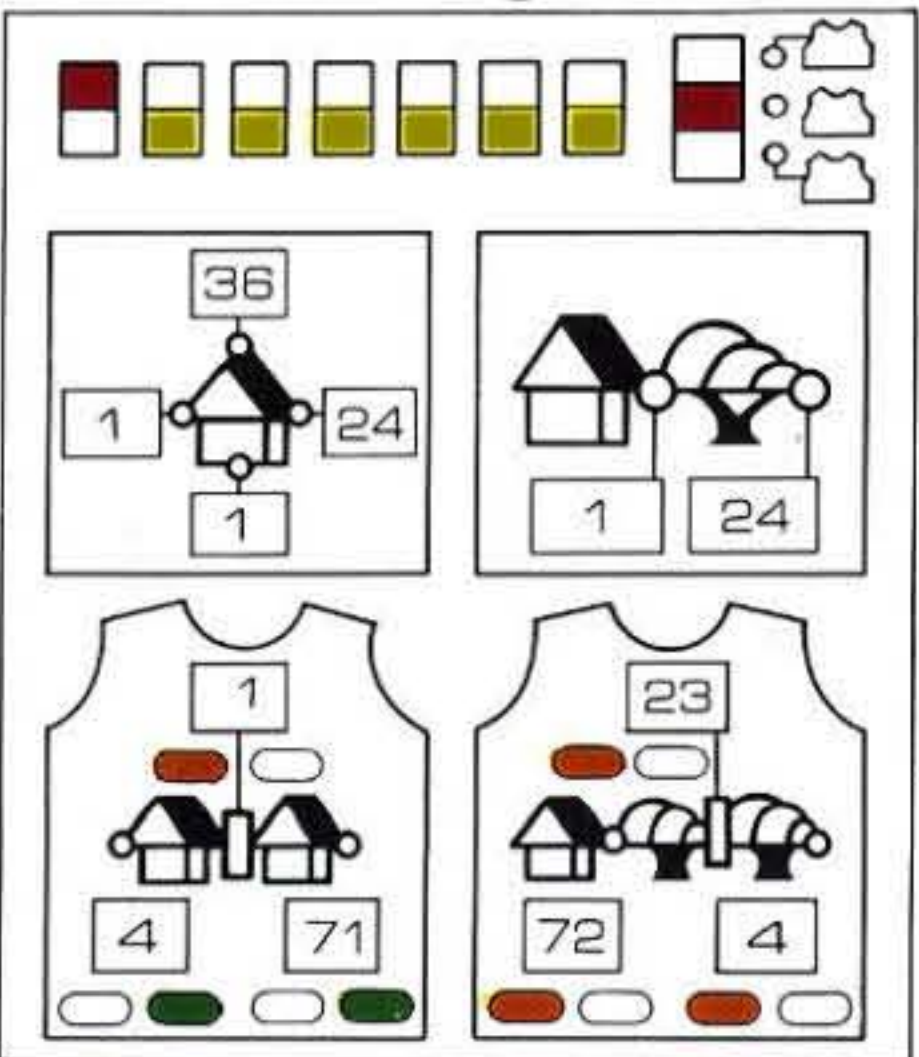 

C




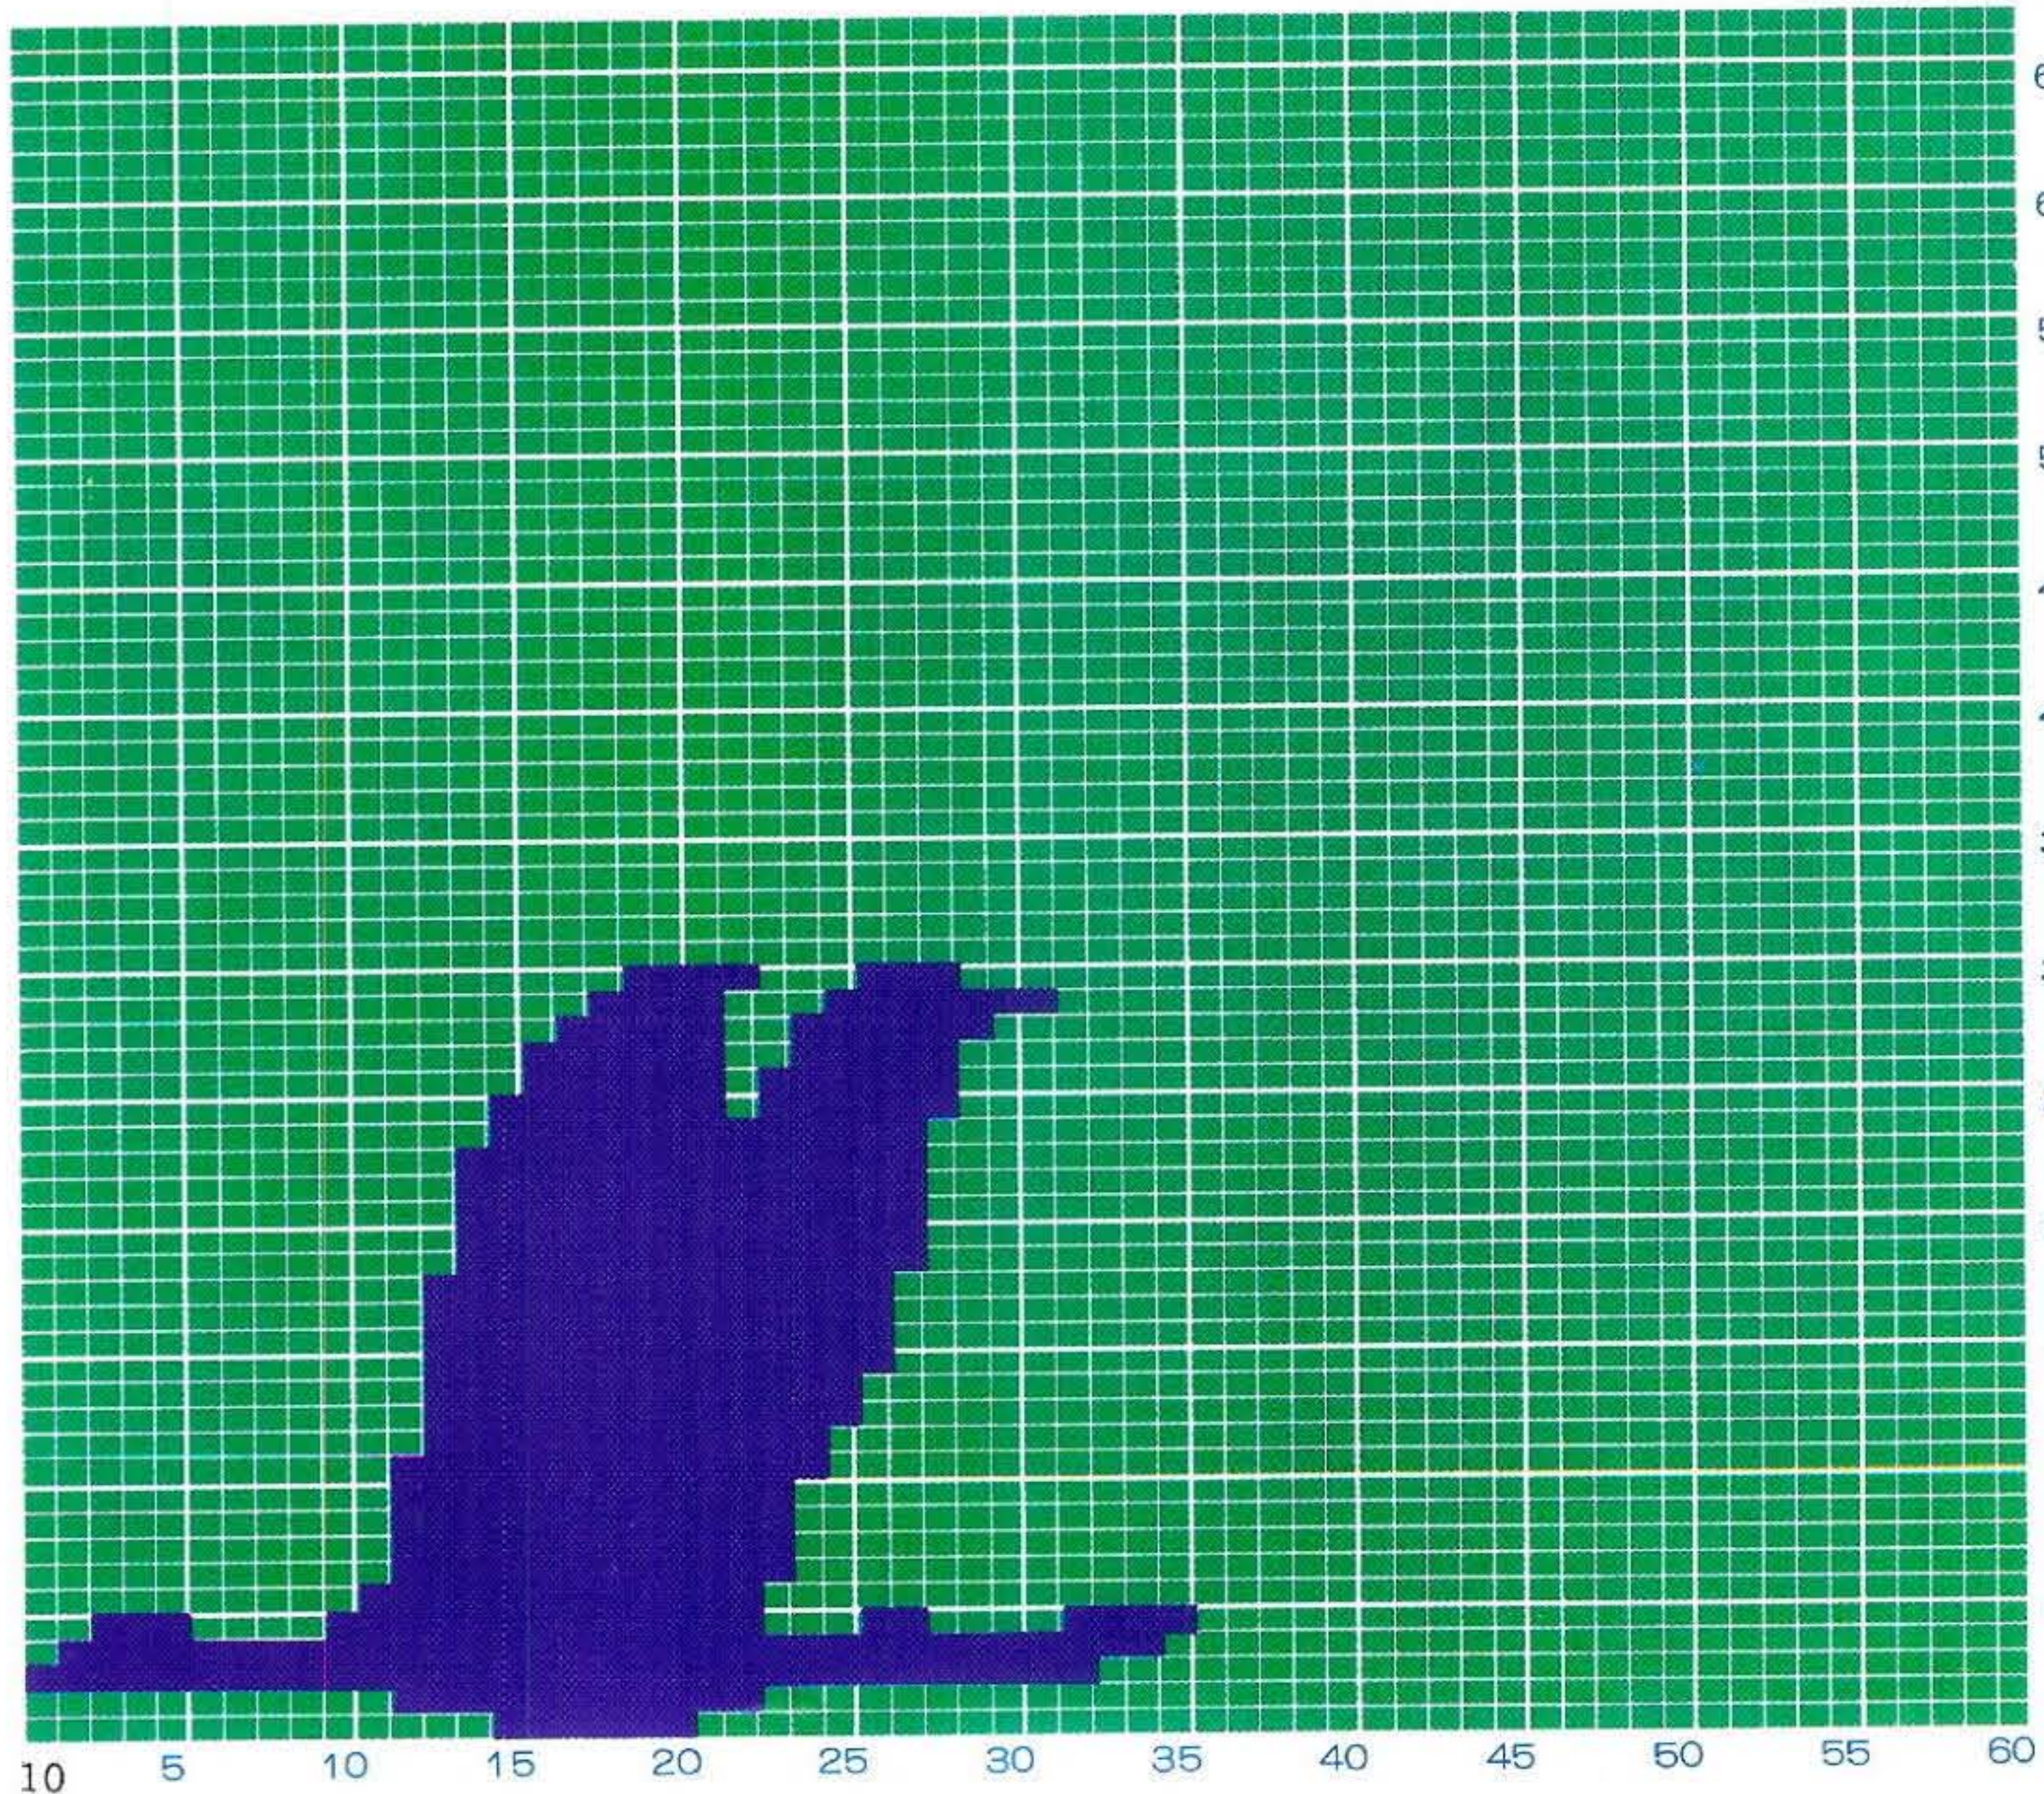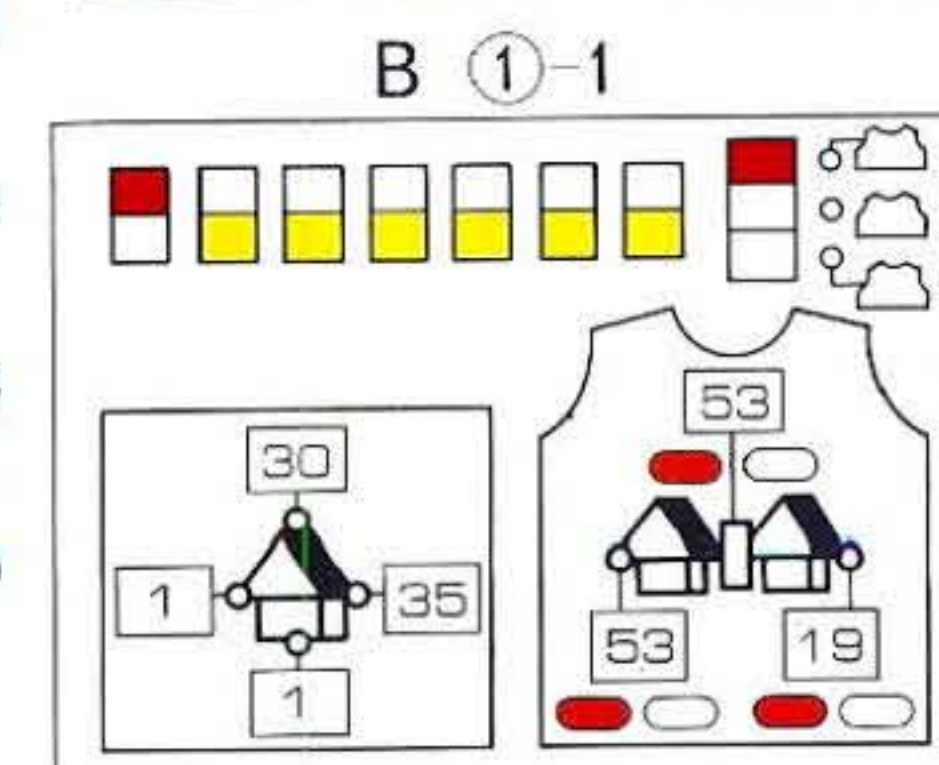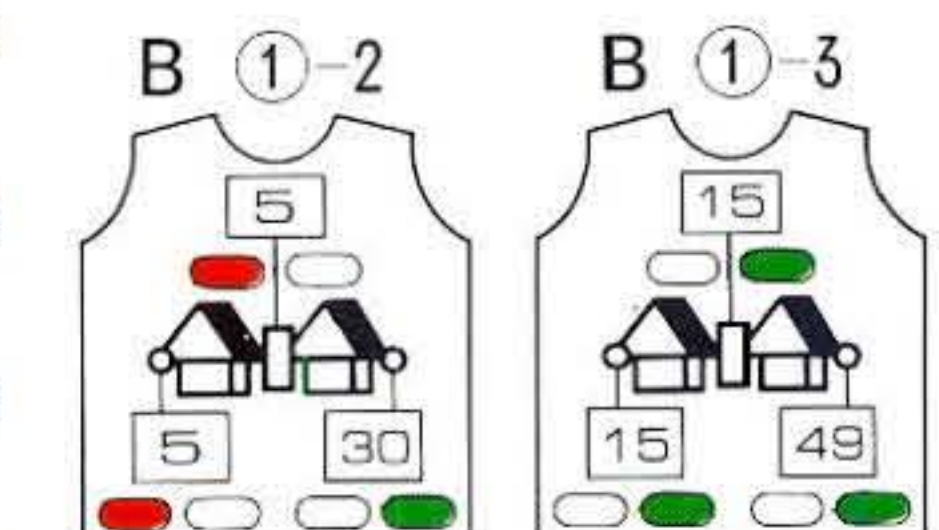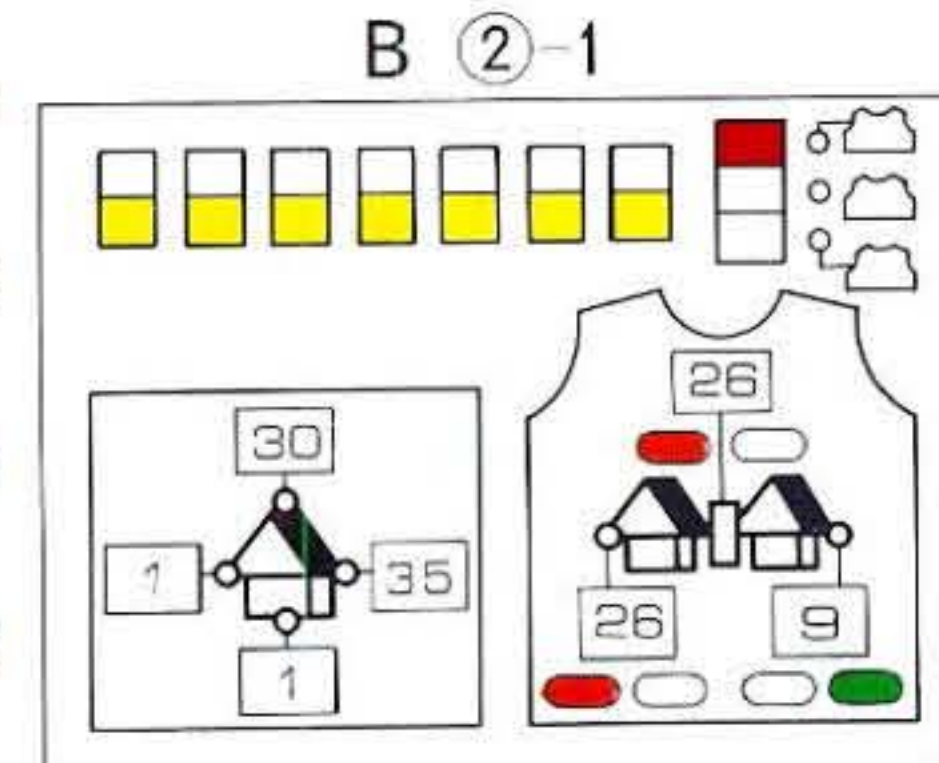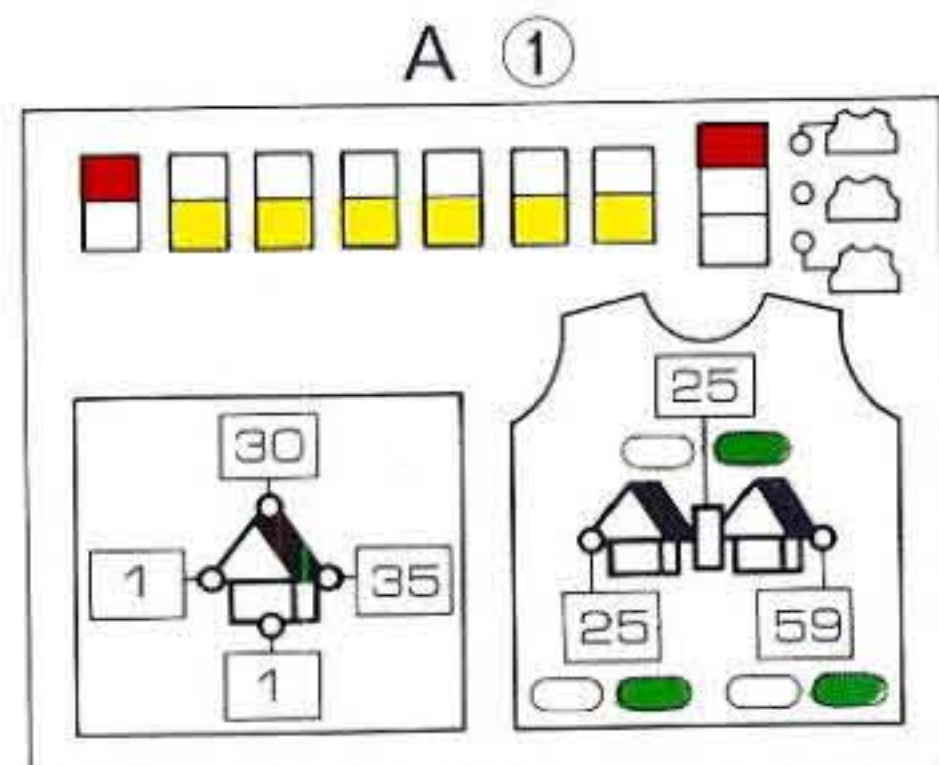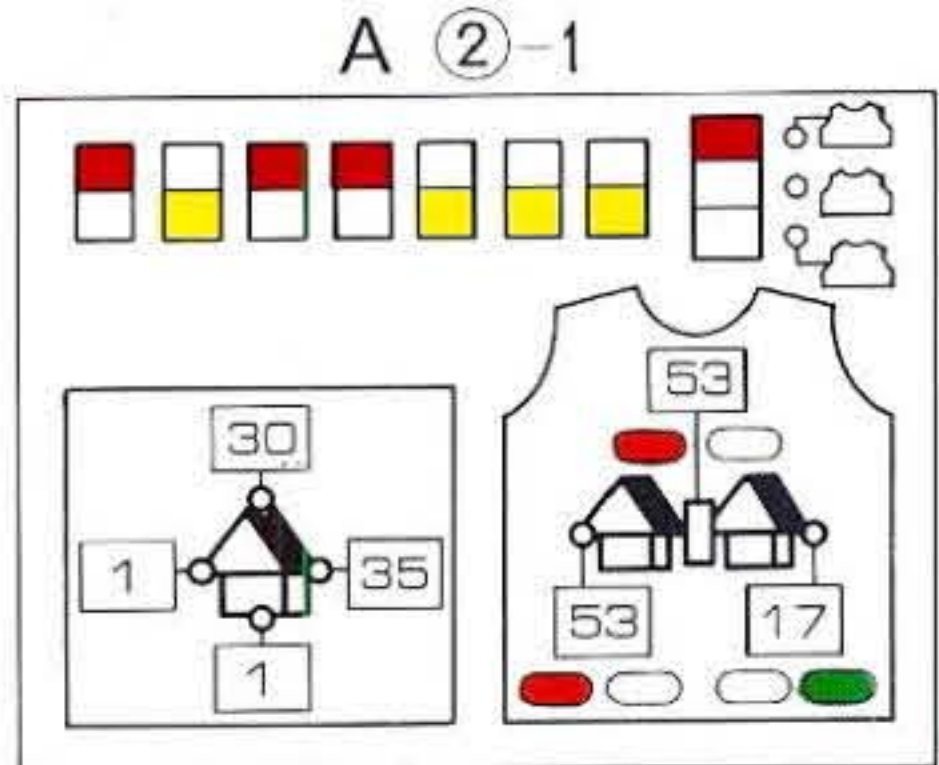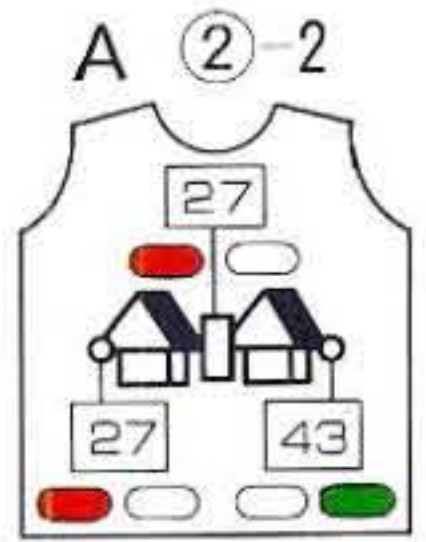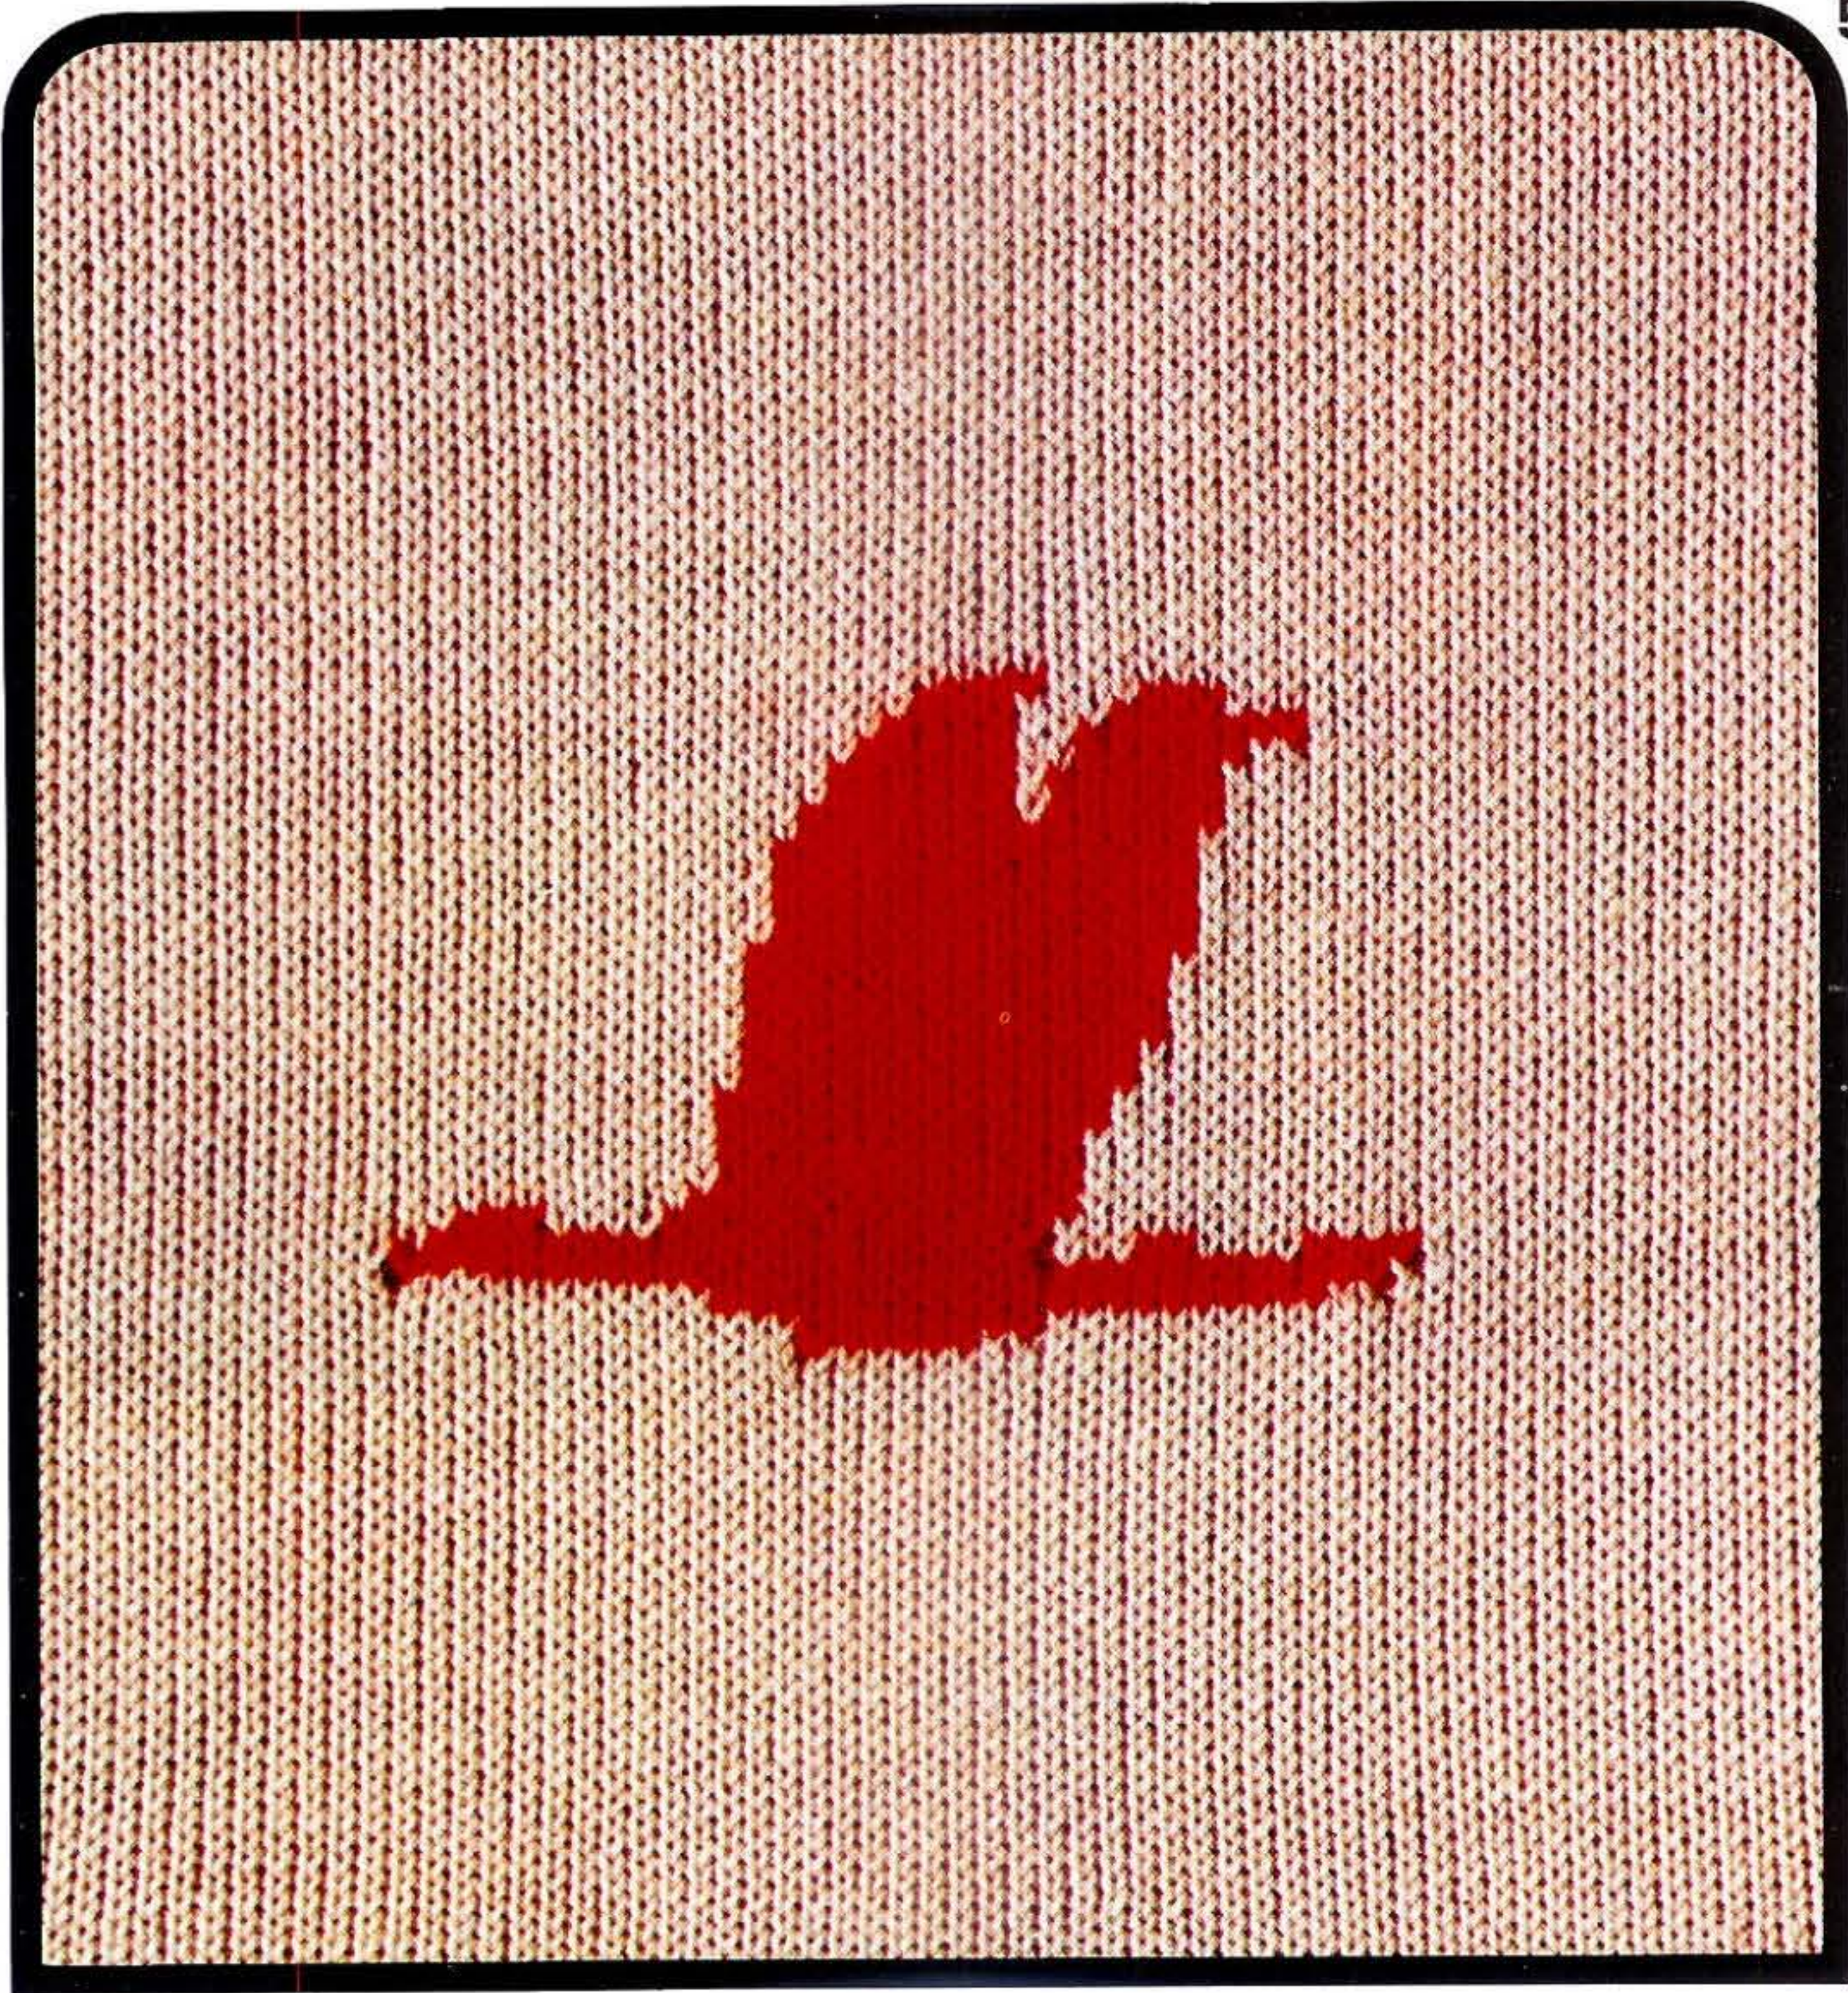        



65
60
55
50
45
40
35
30
25
20
15
10
5
1

10 5 10 15 20 25 30 35 40 45 50 55 60

 
A




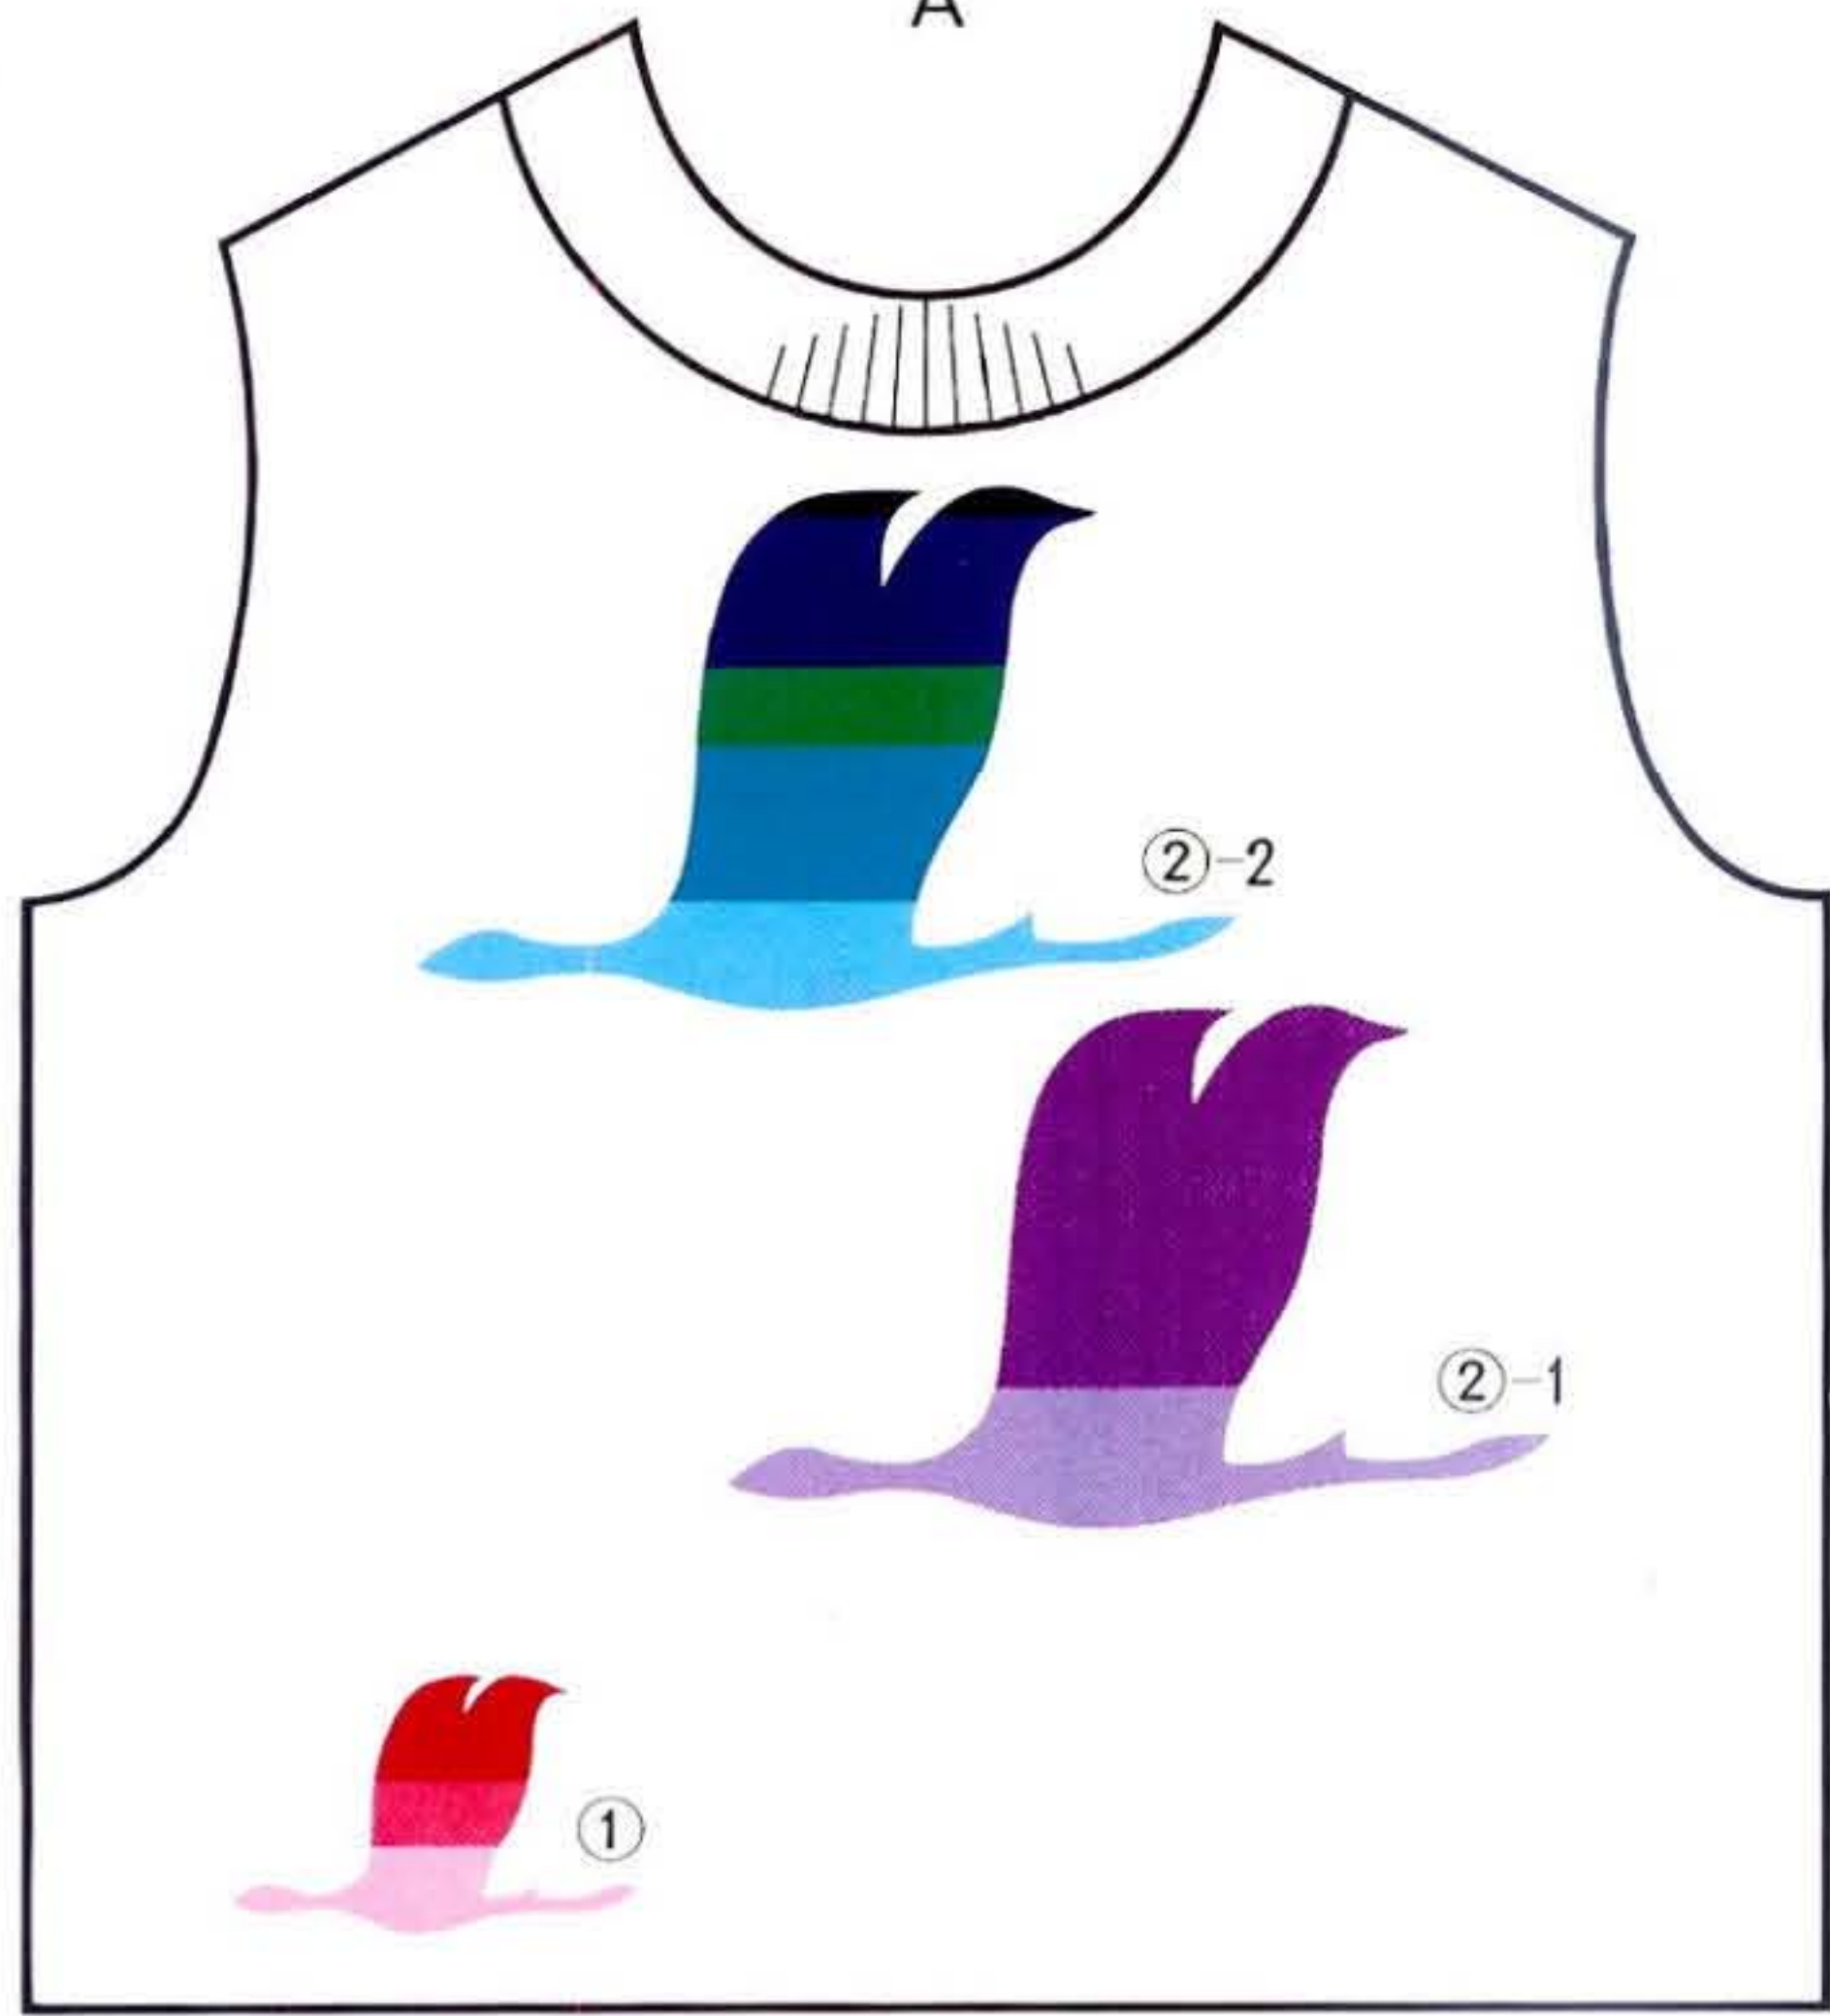


B

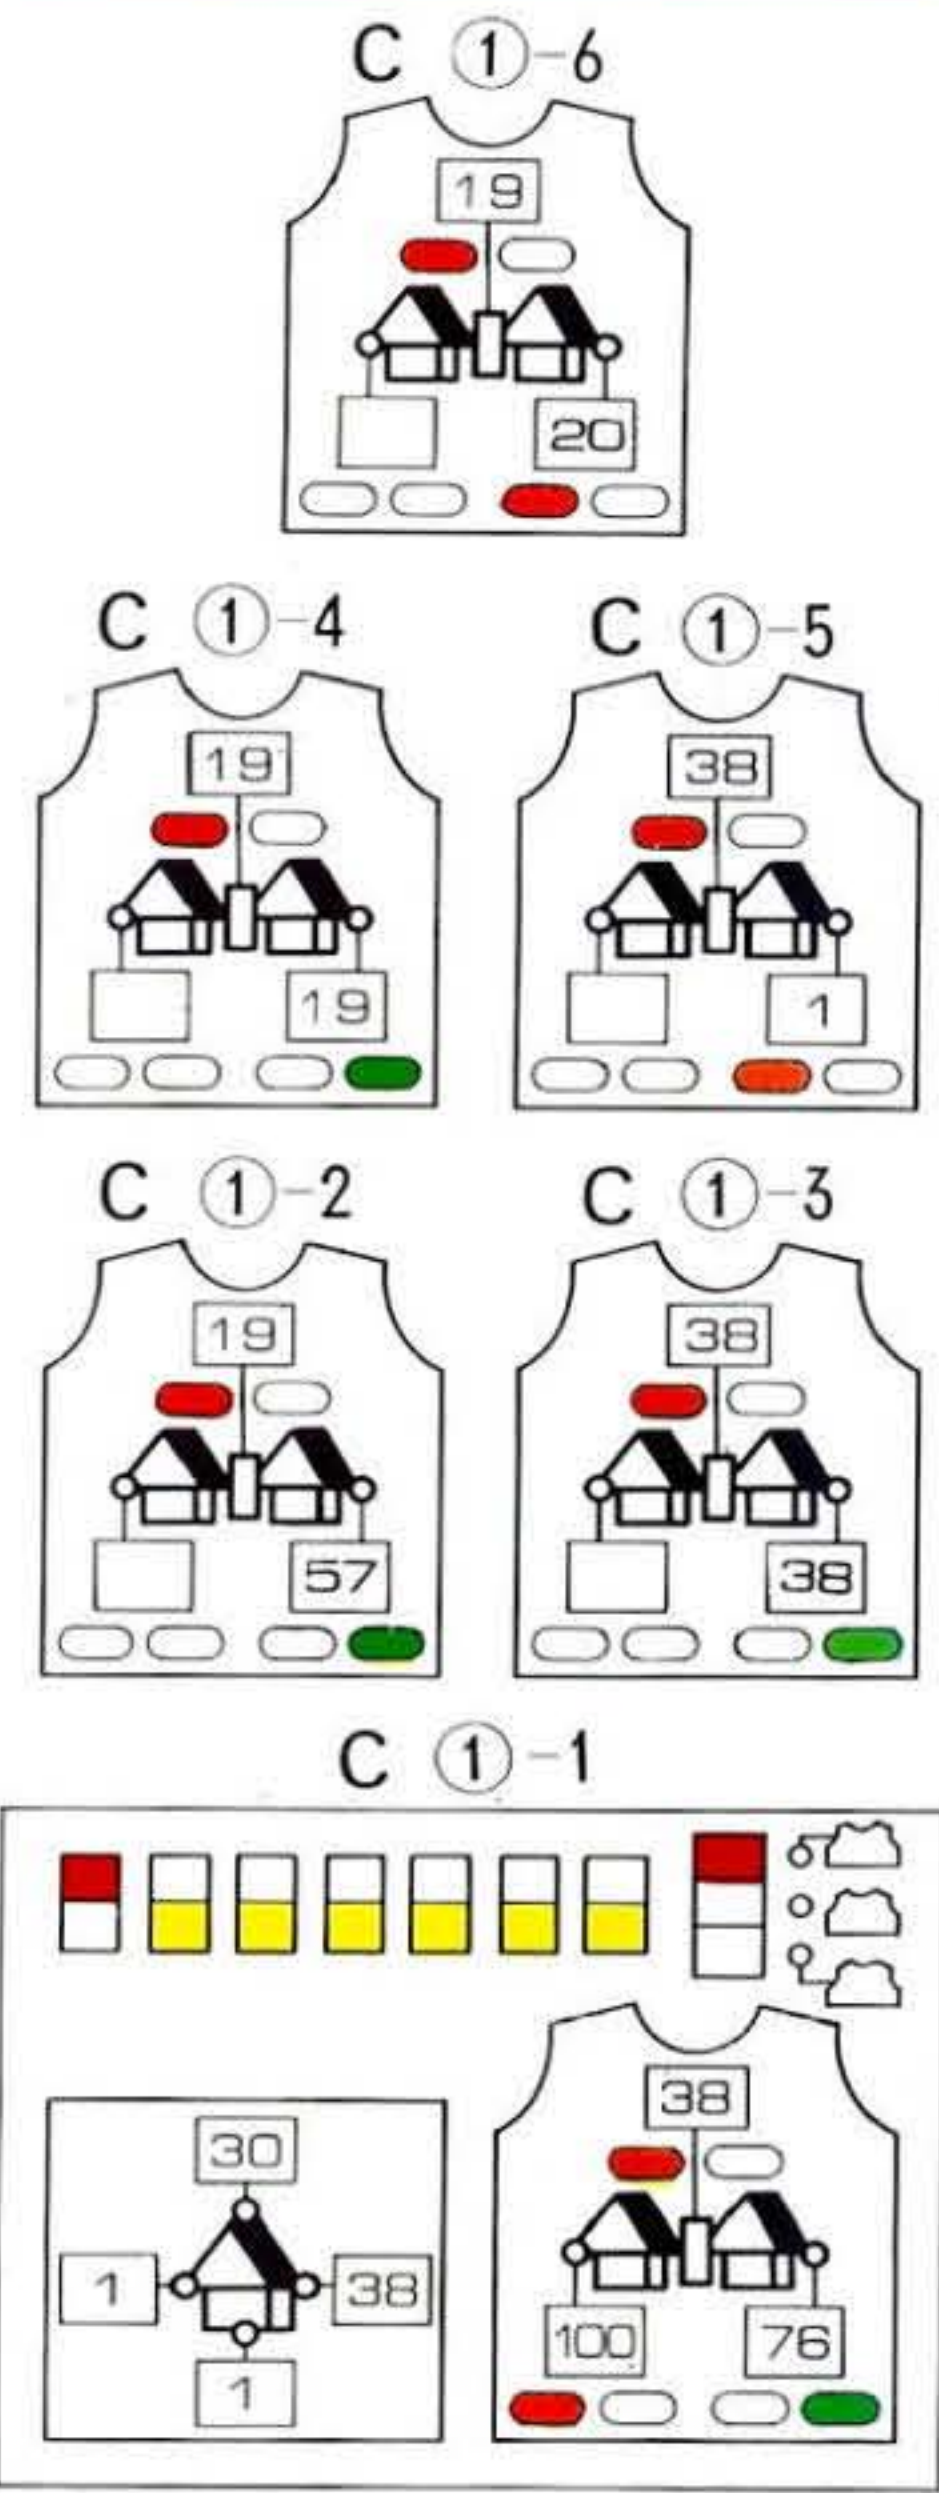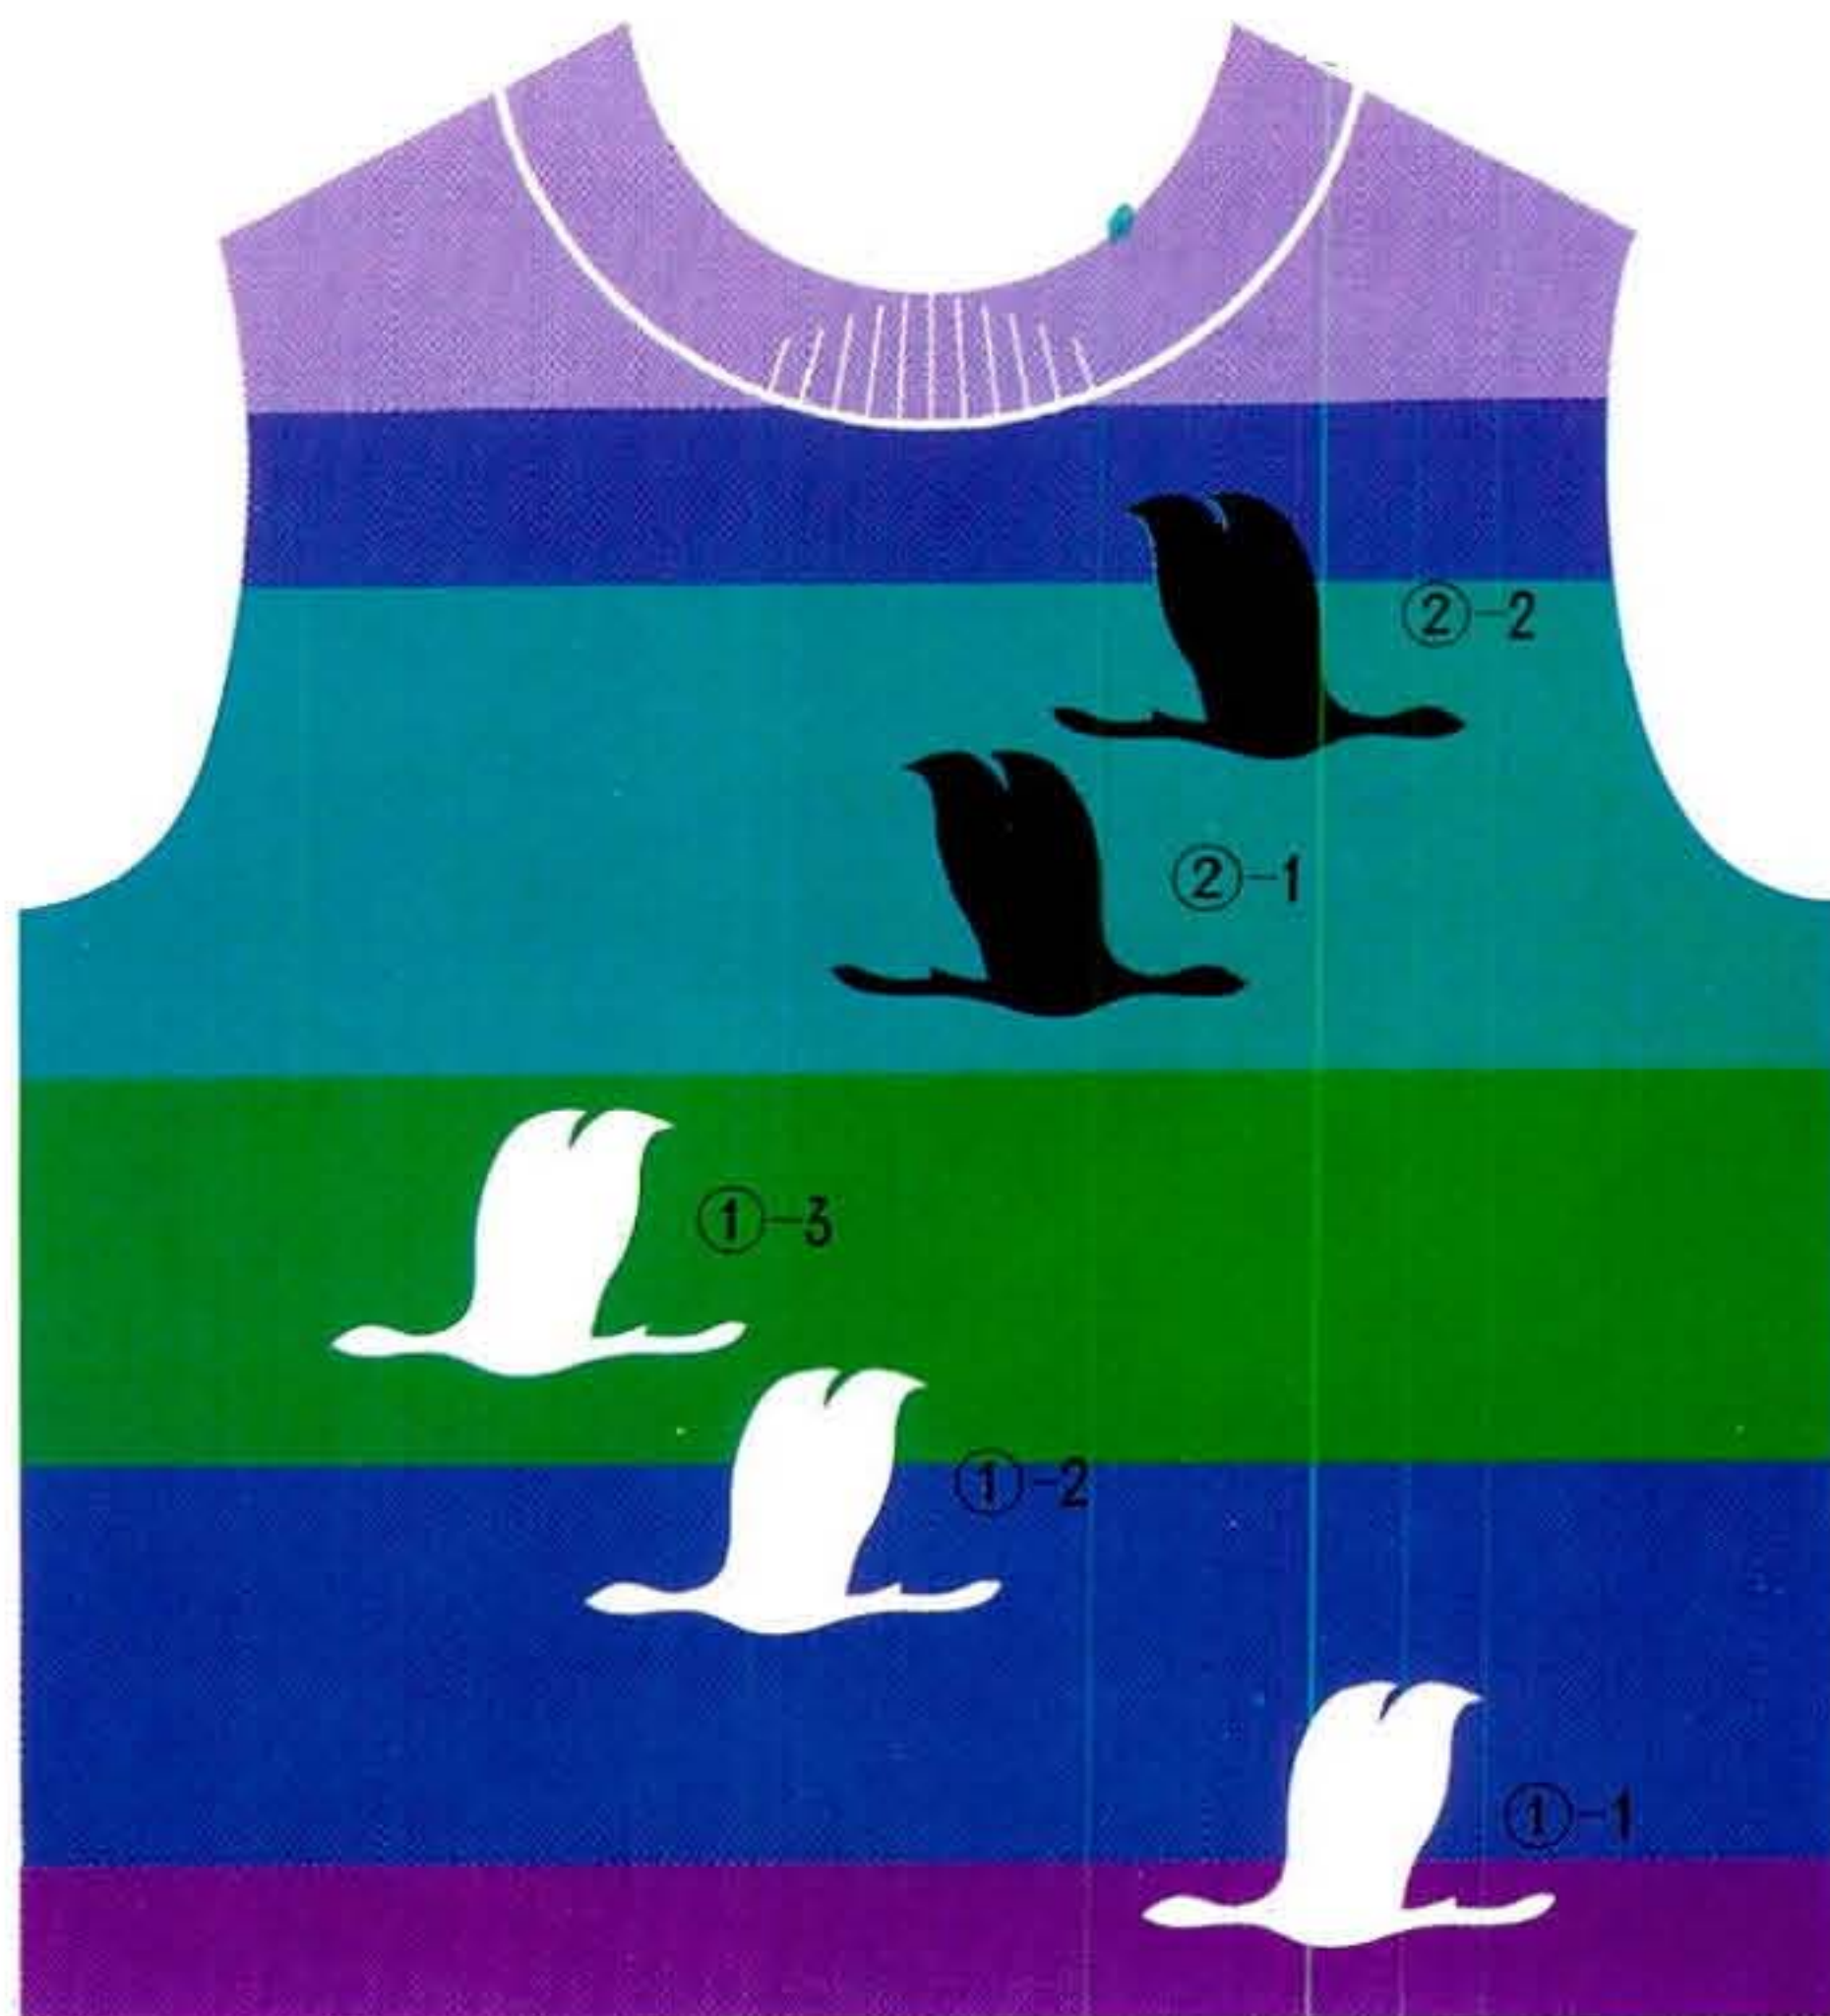  

C


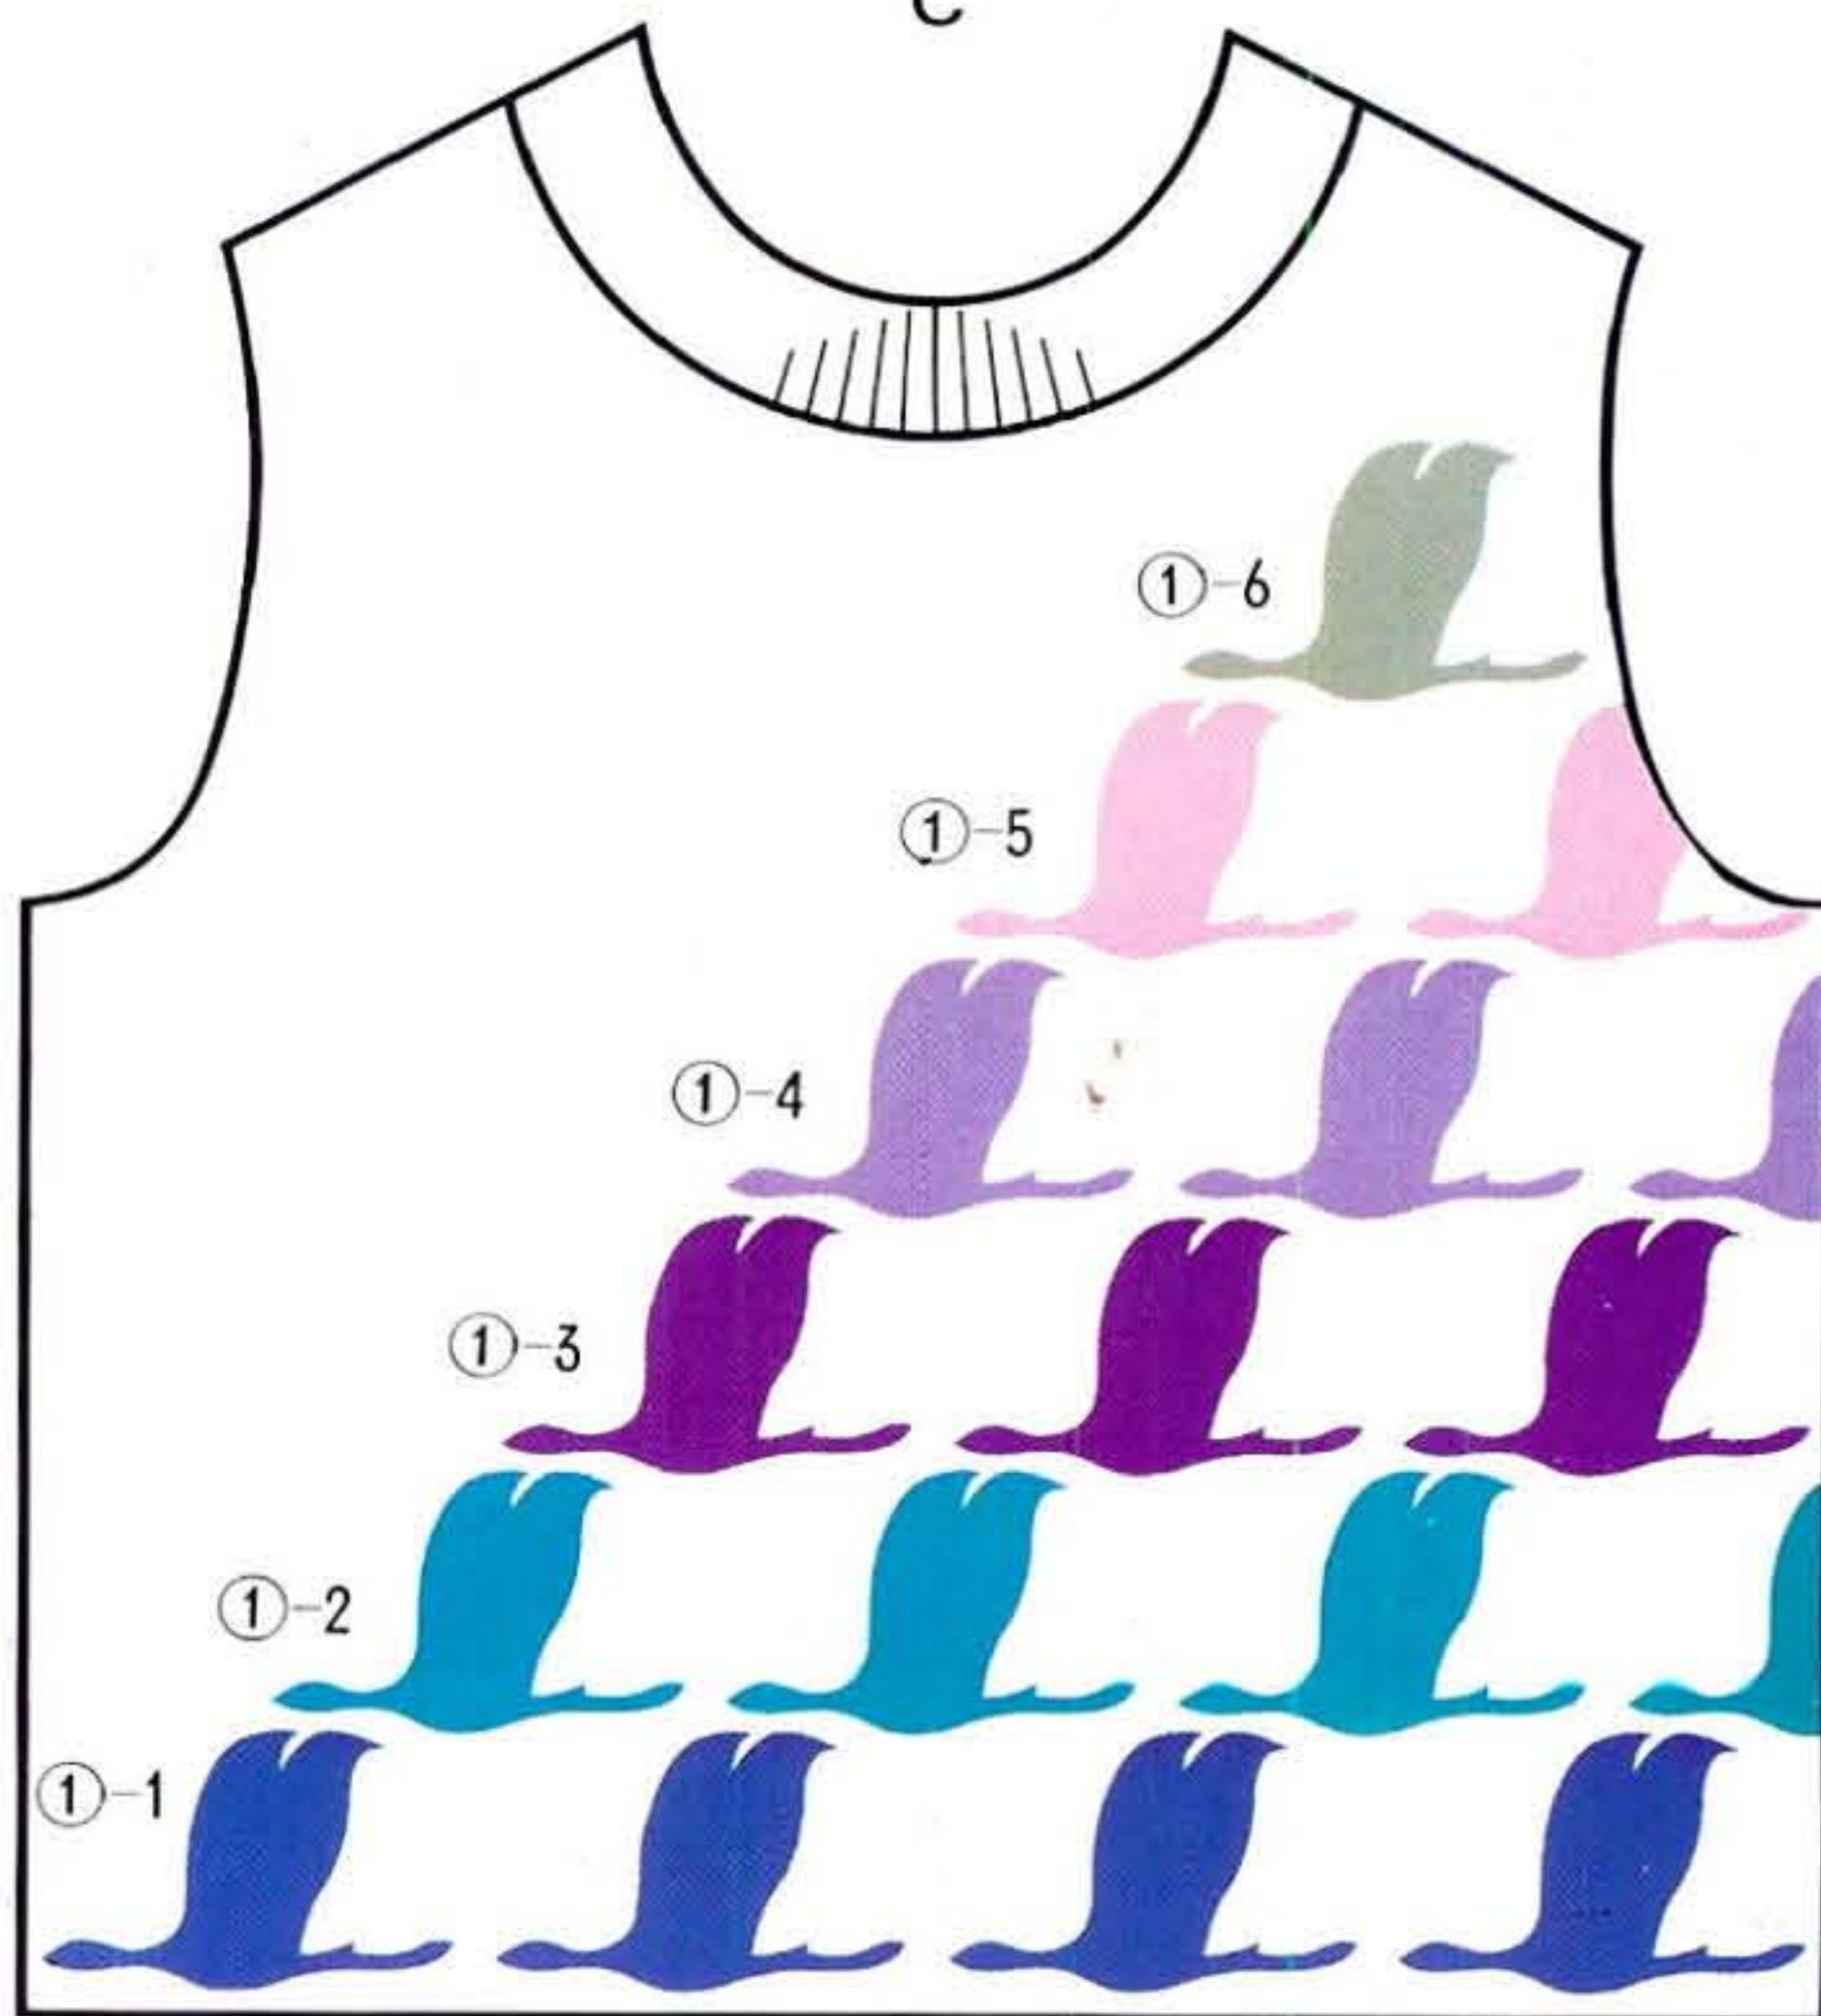 


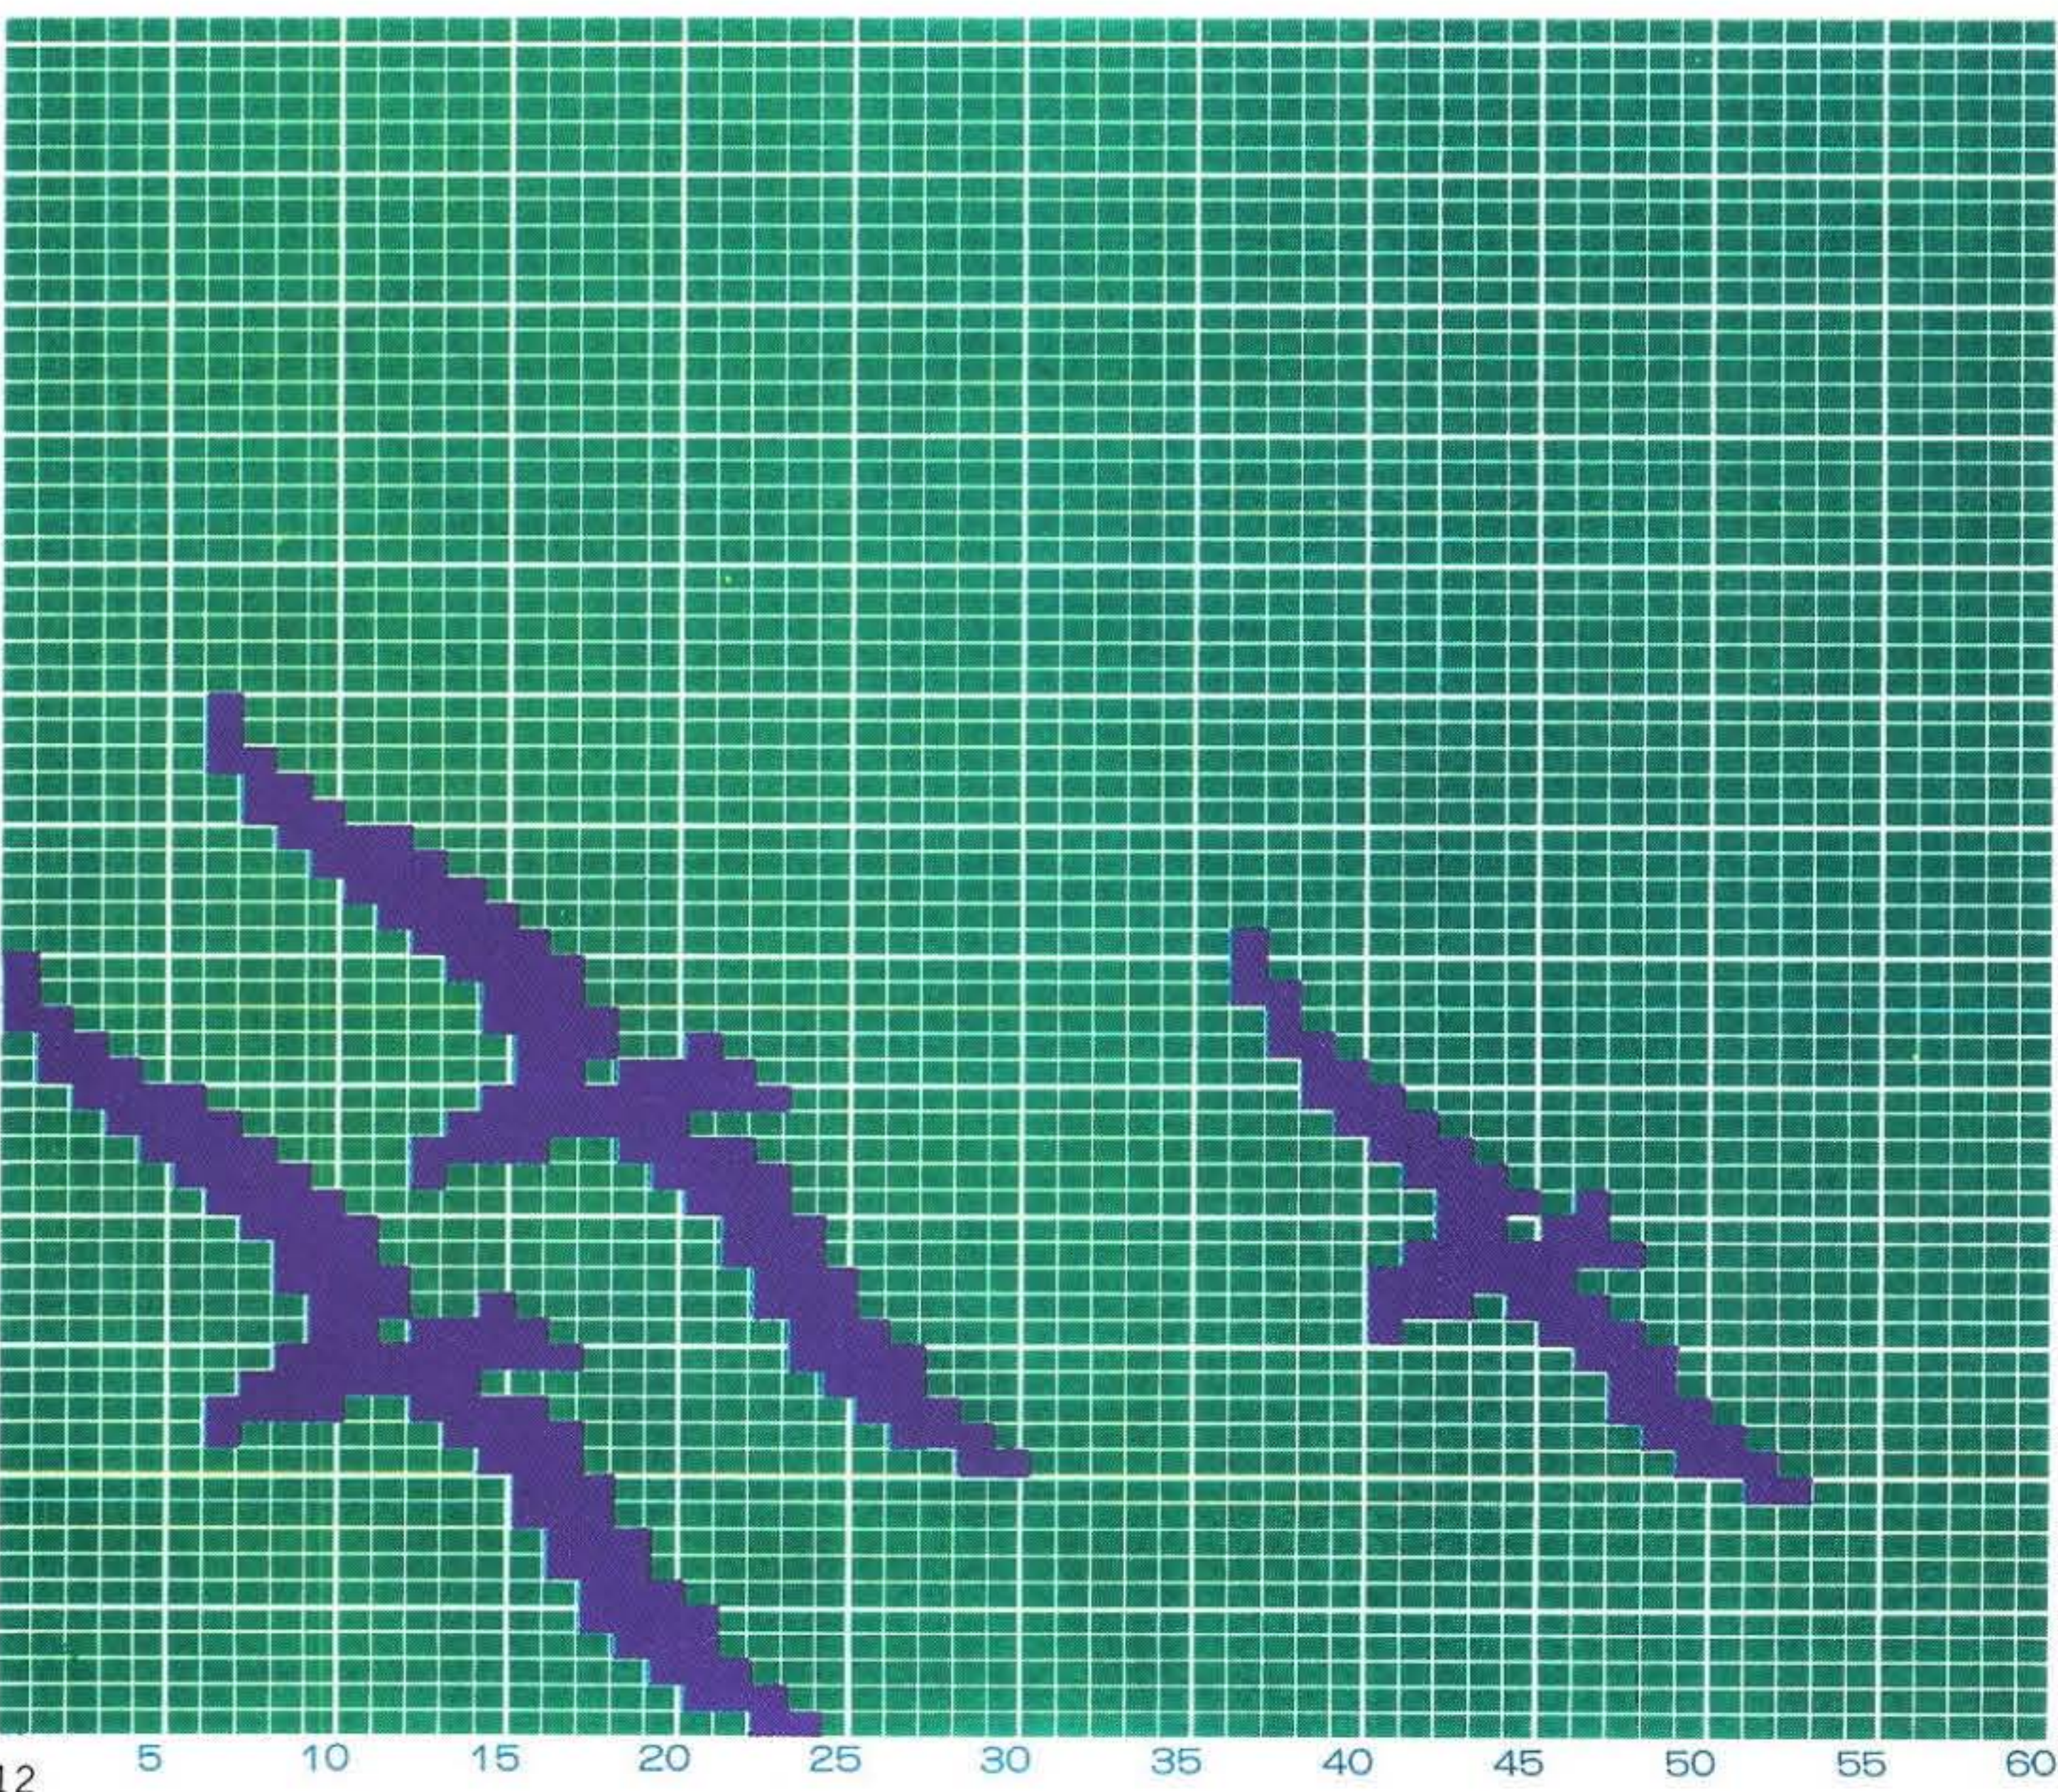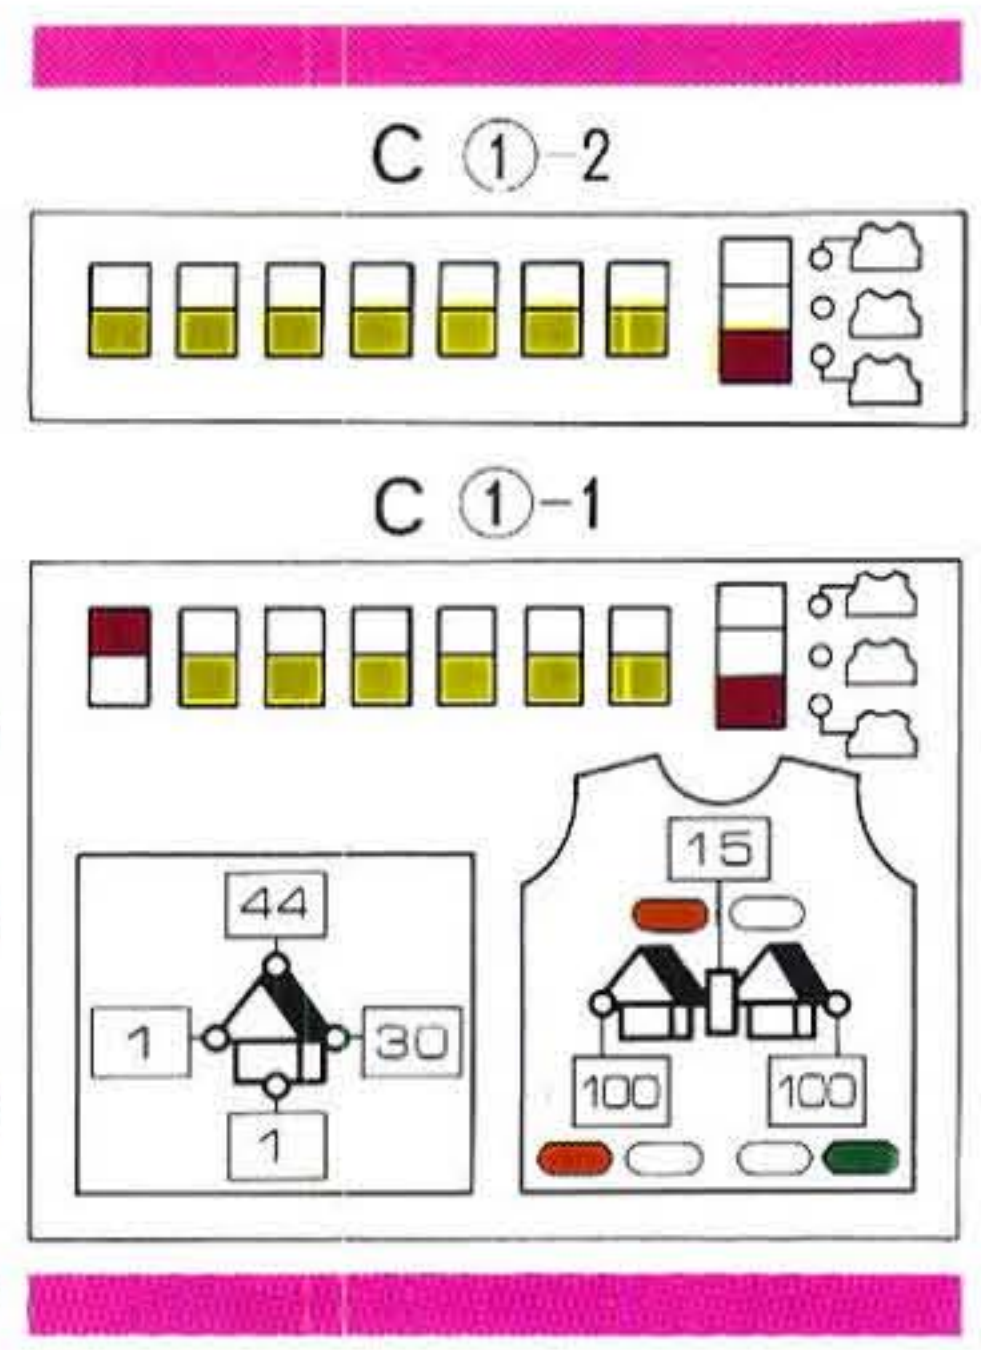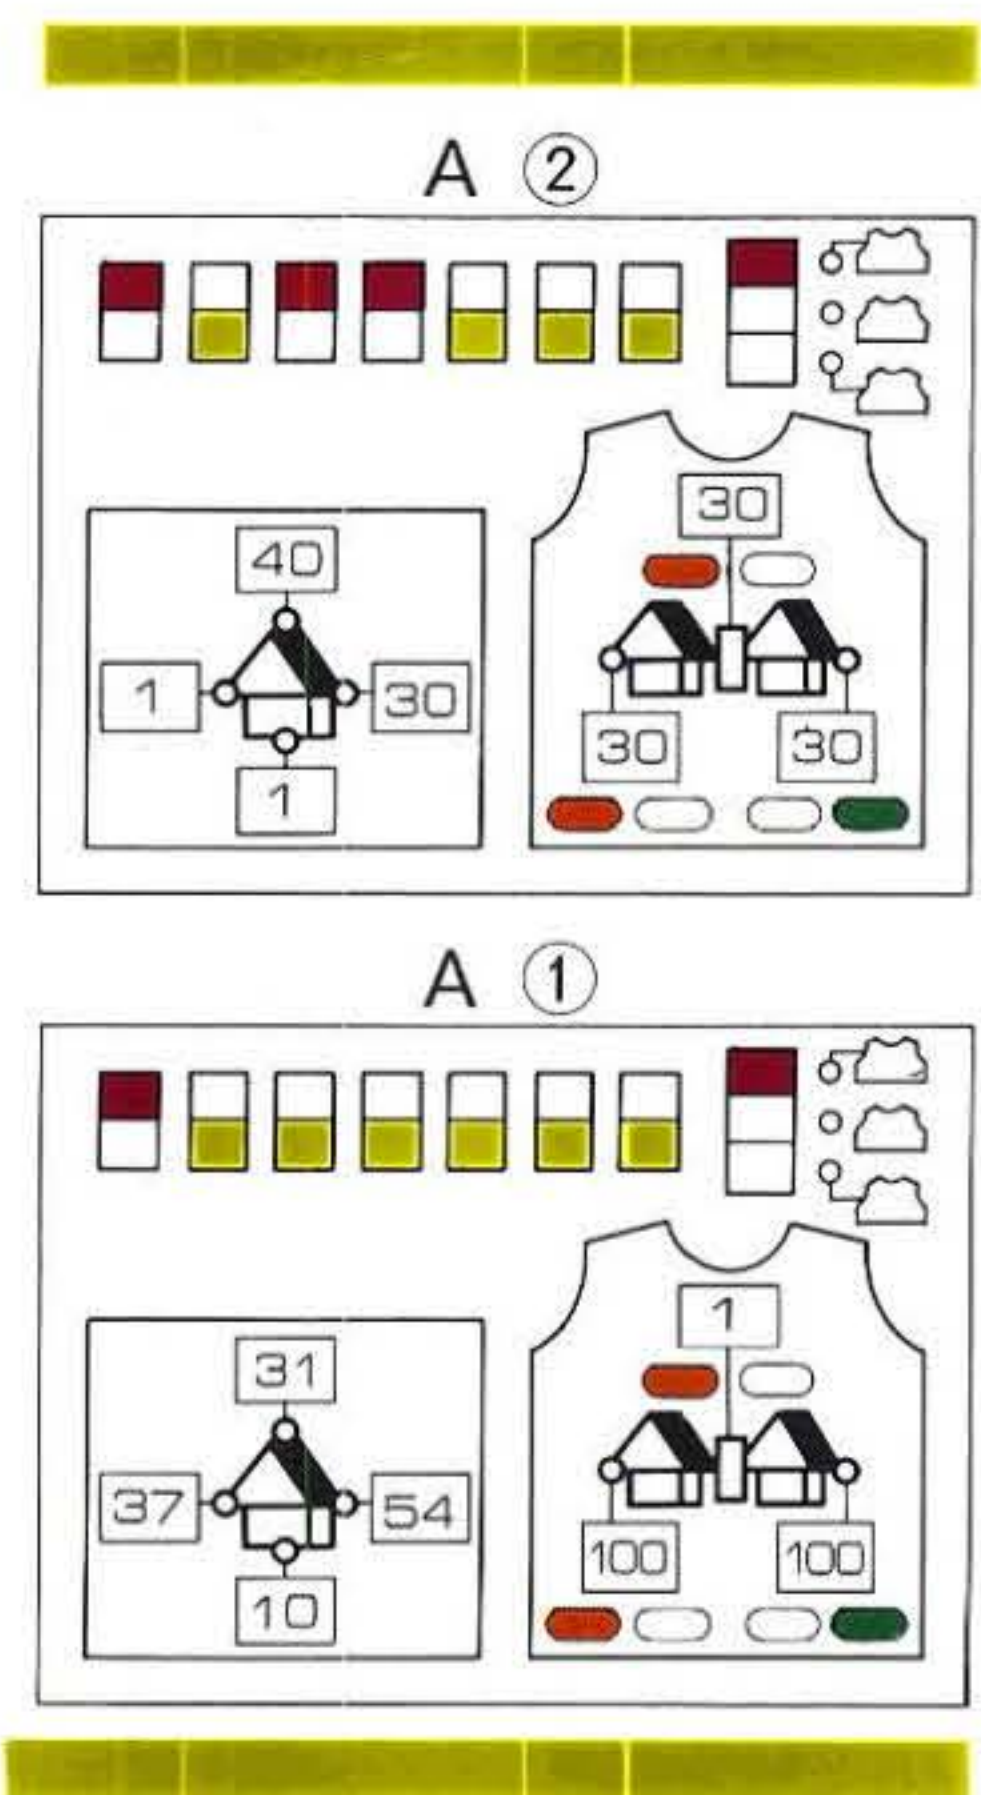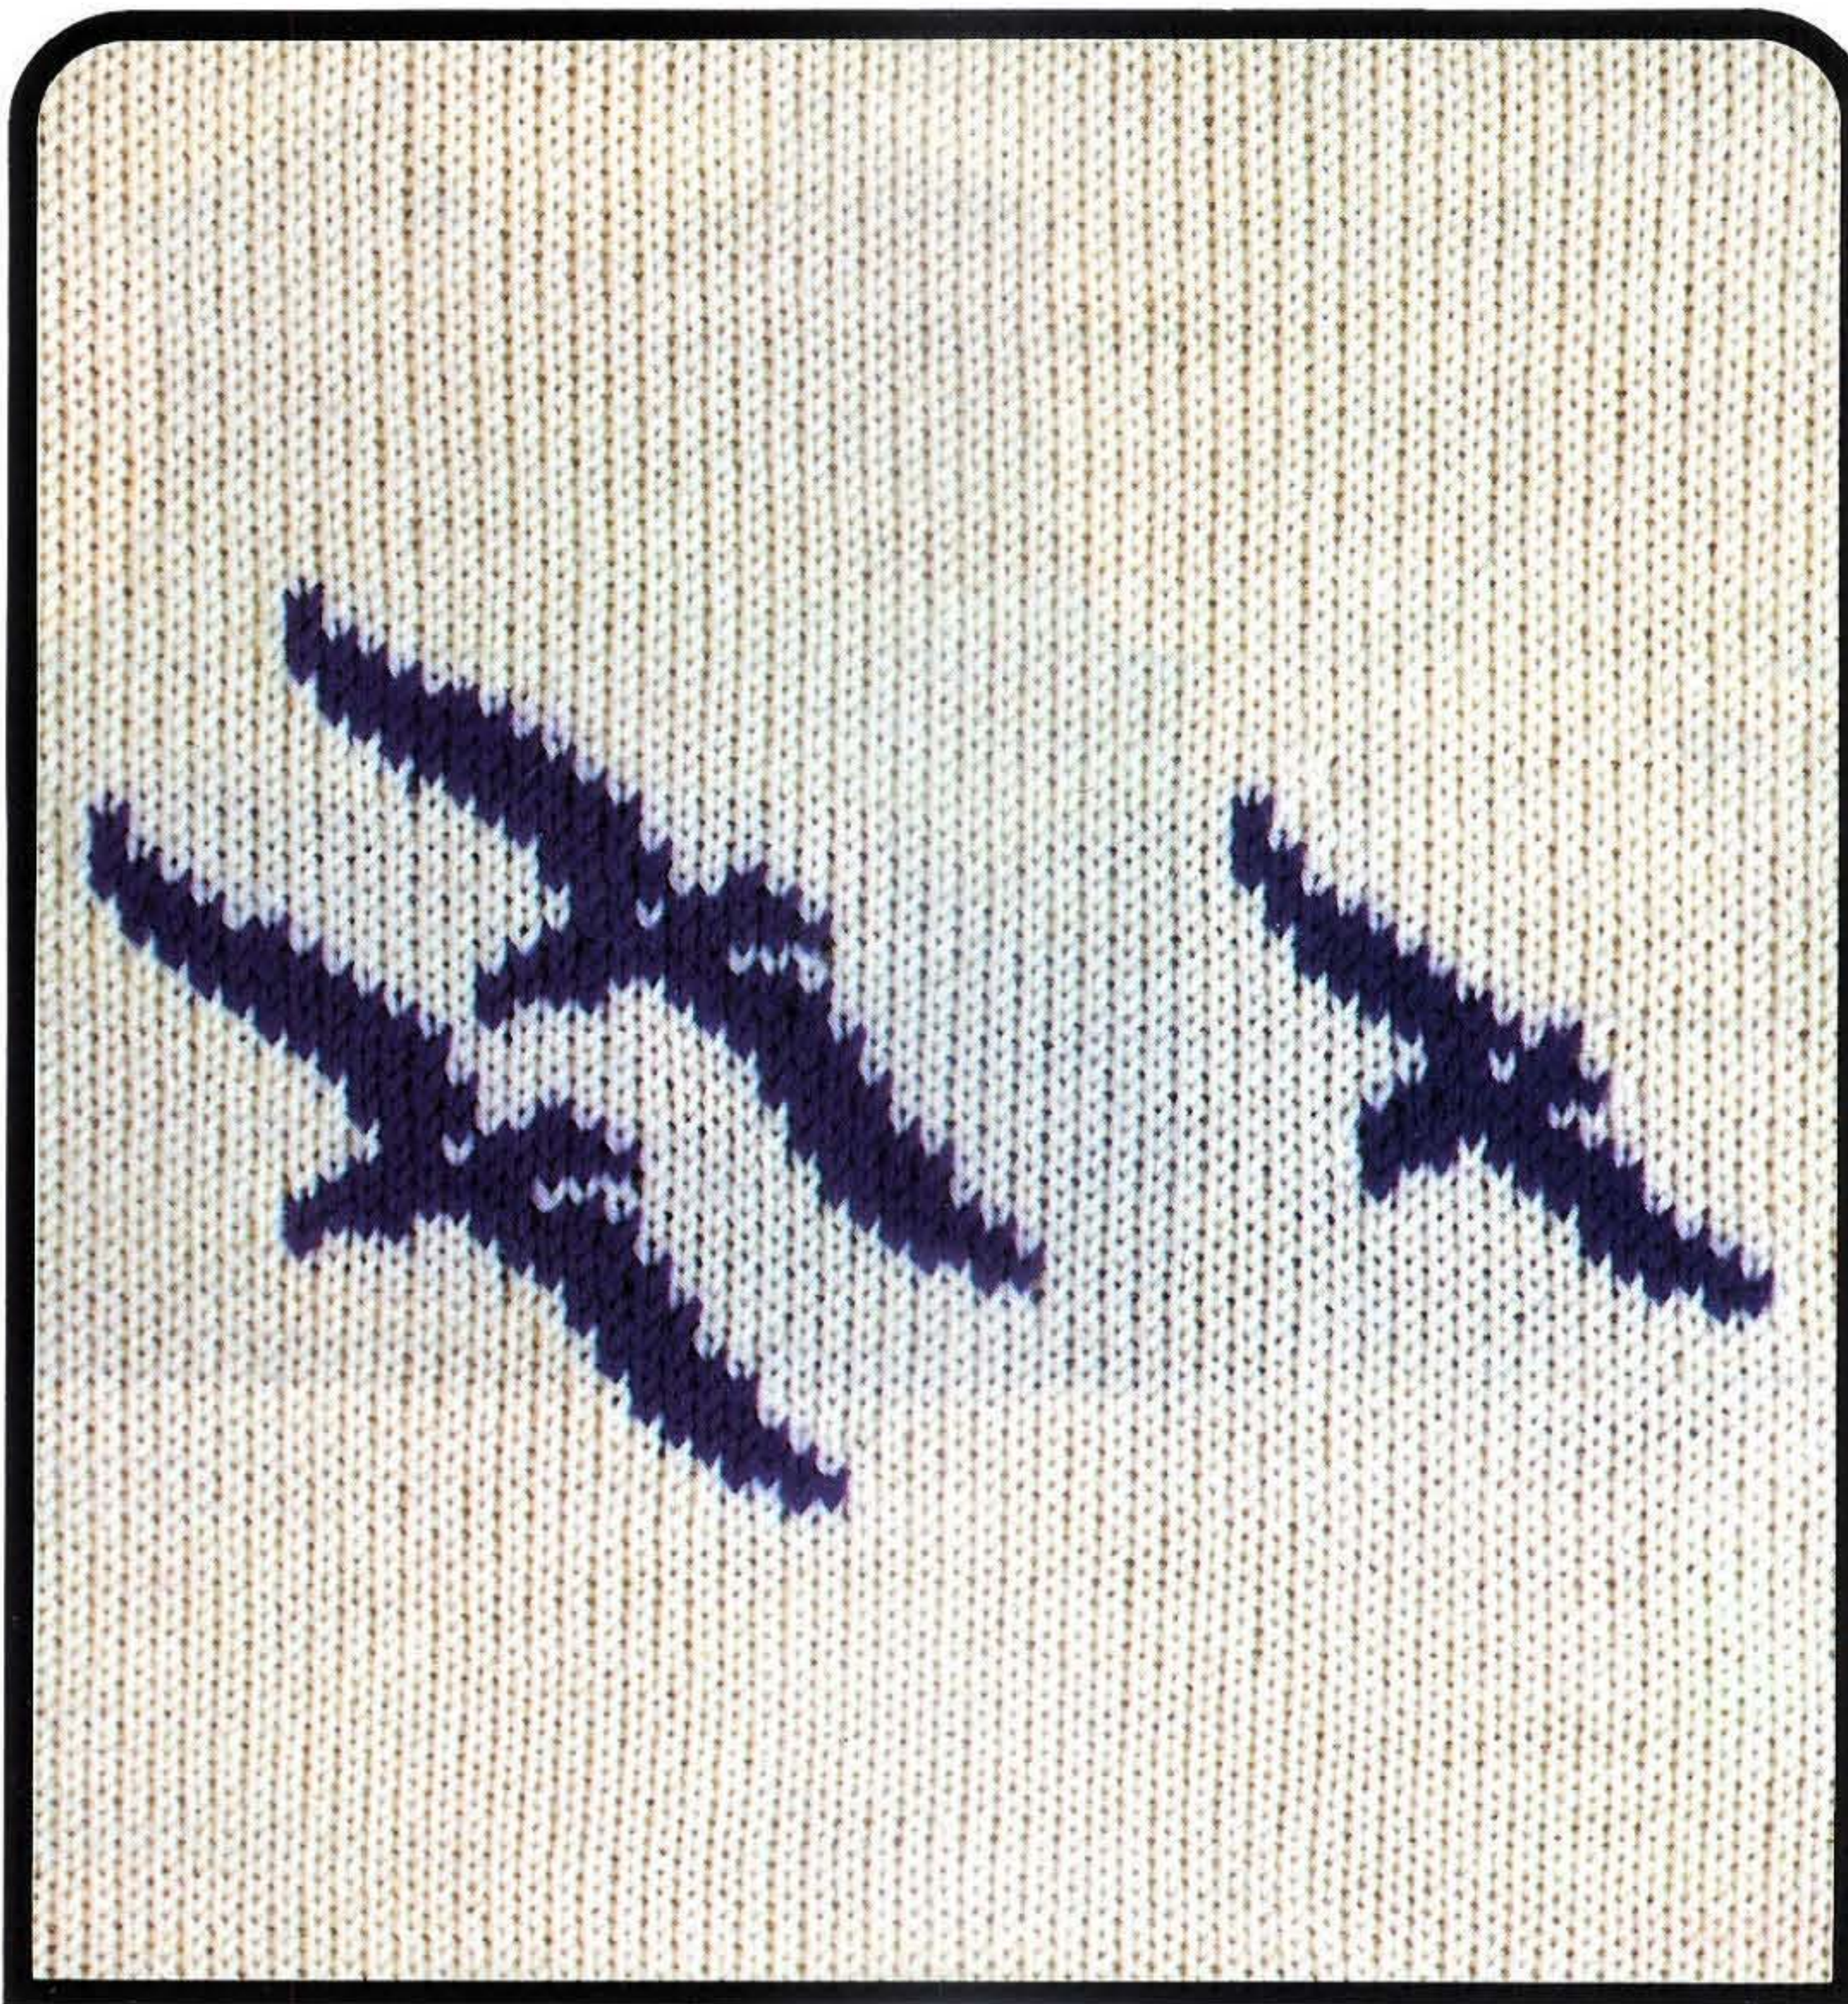    

A






  B

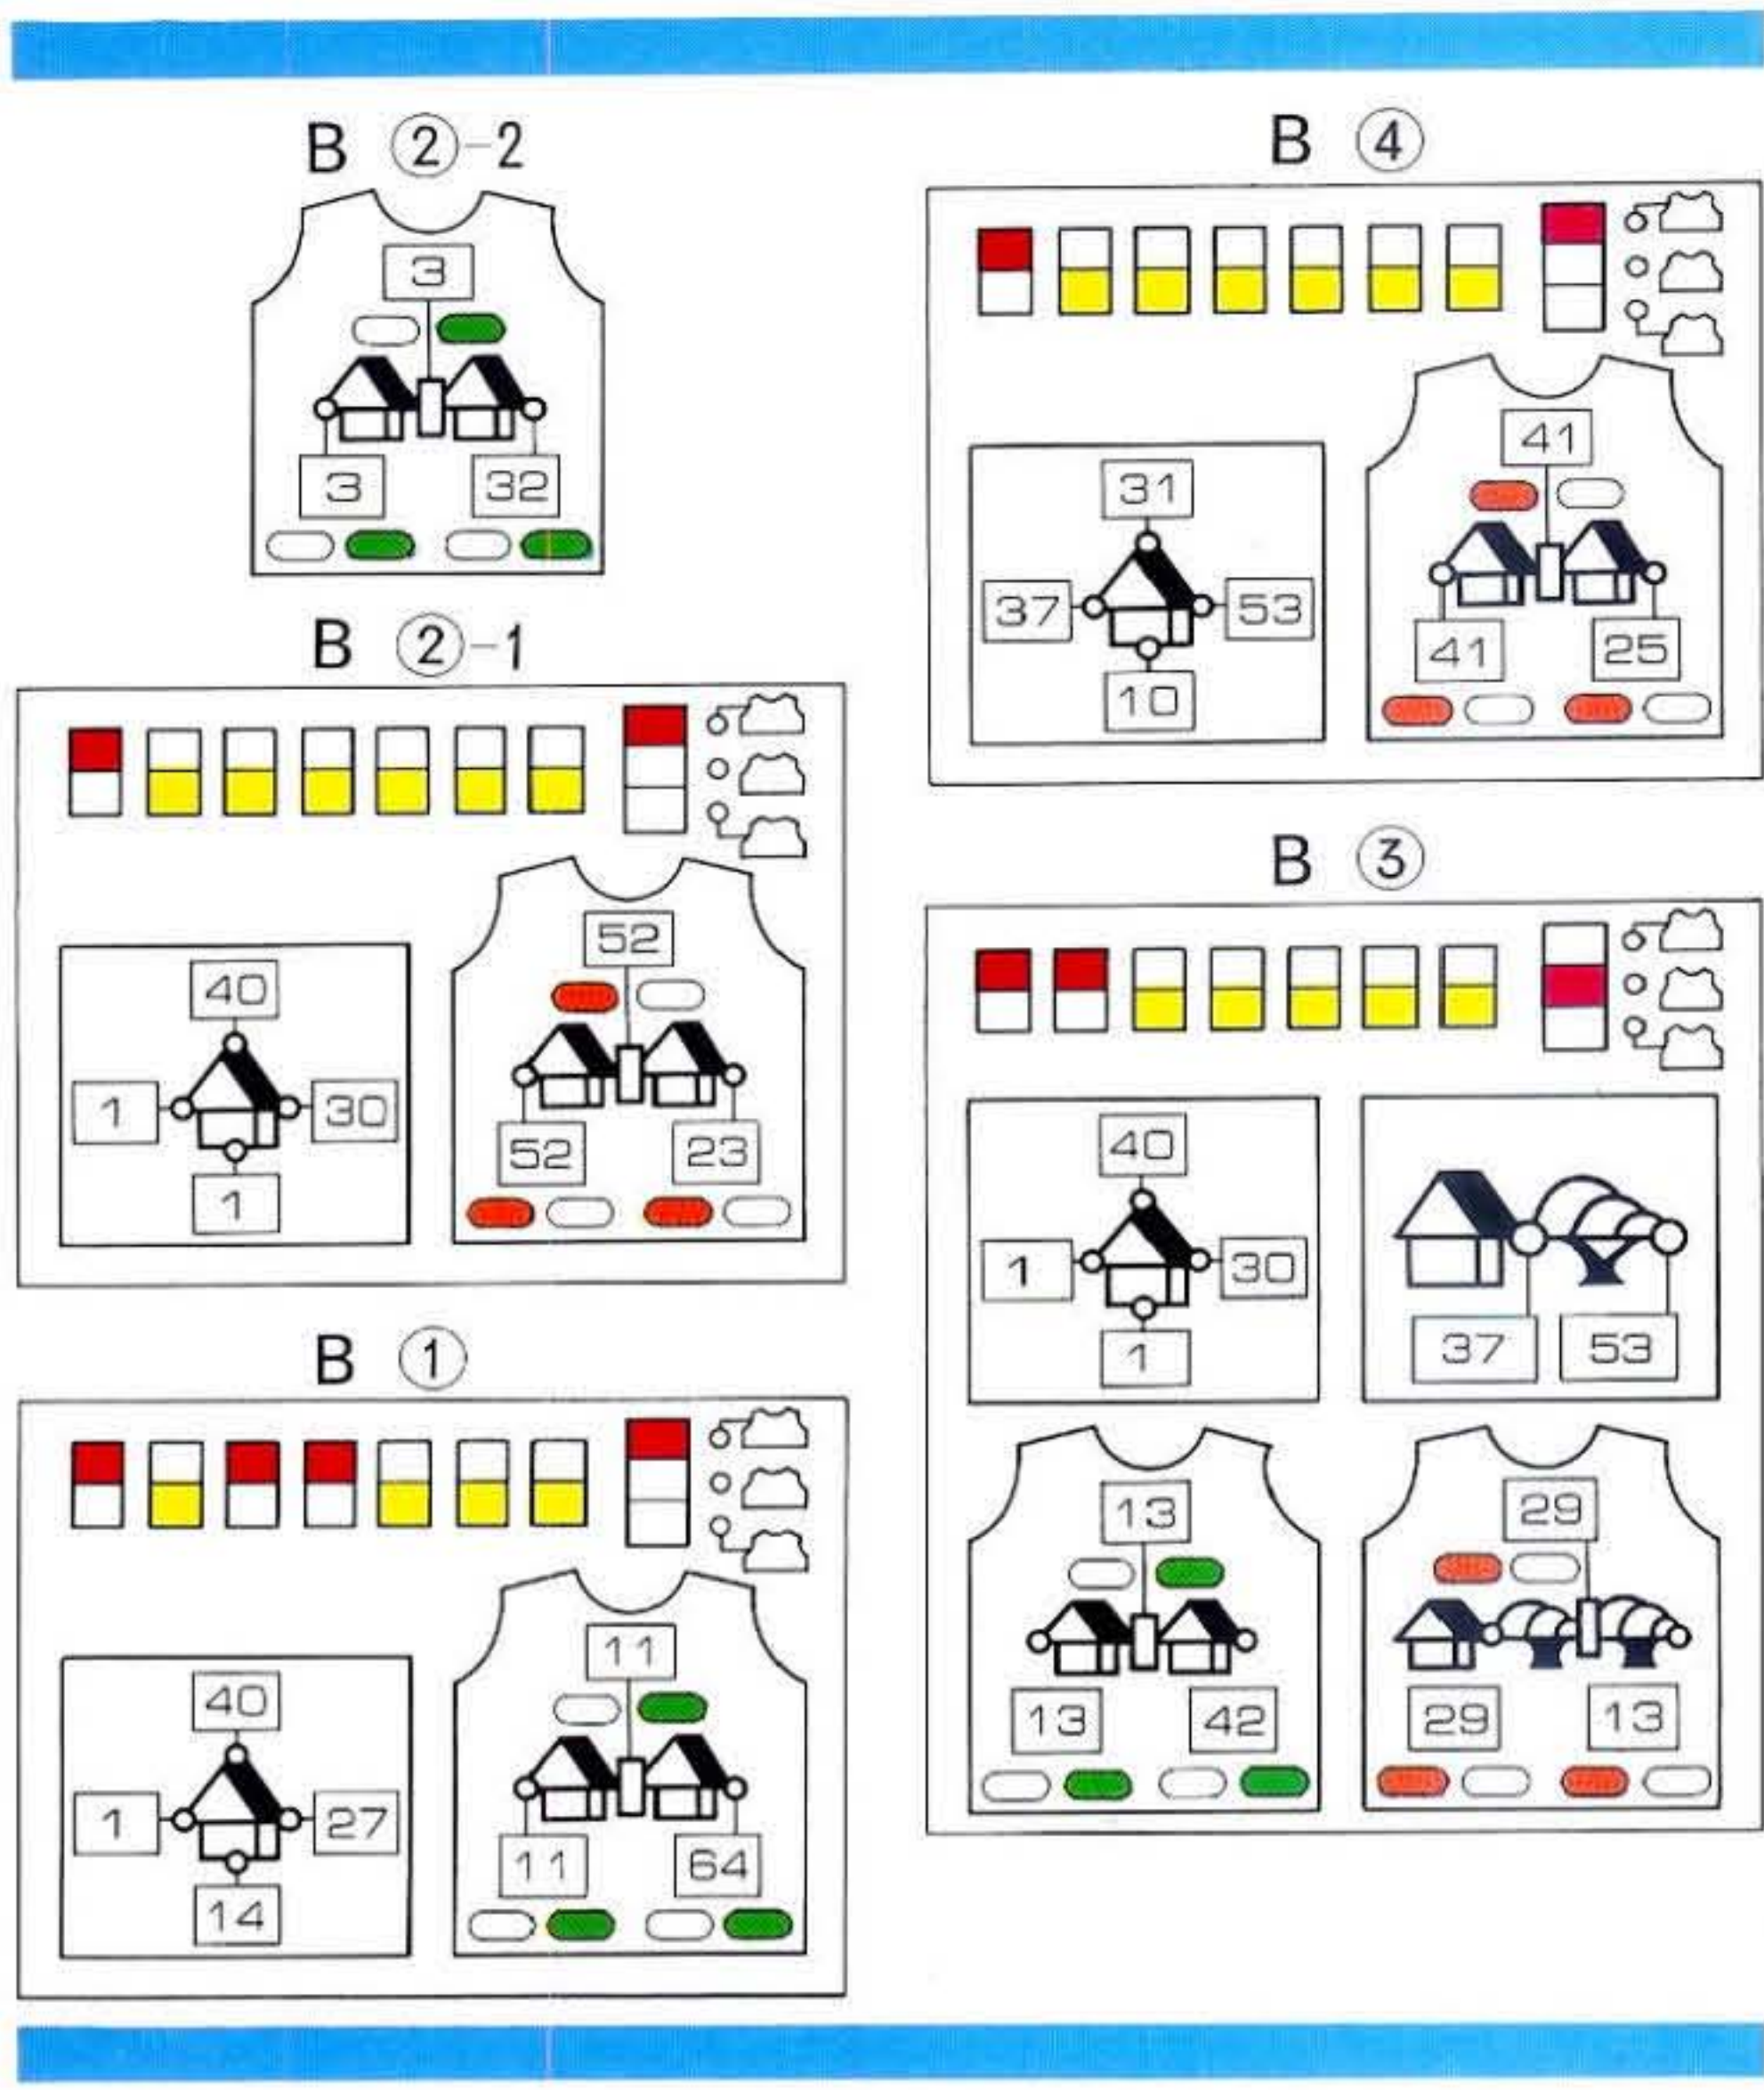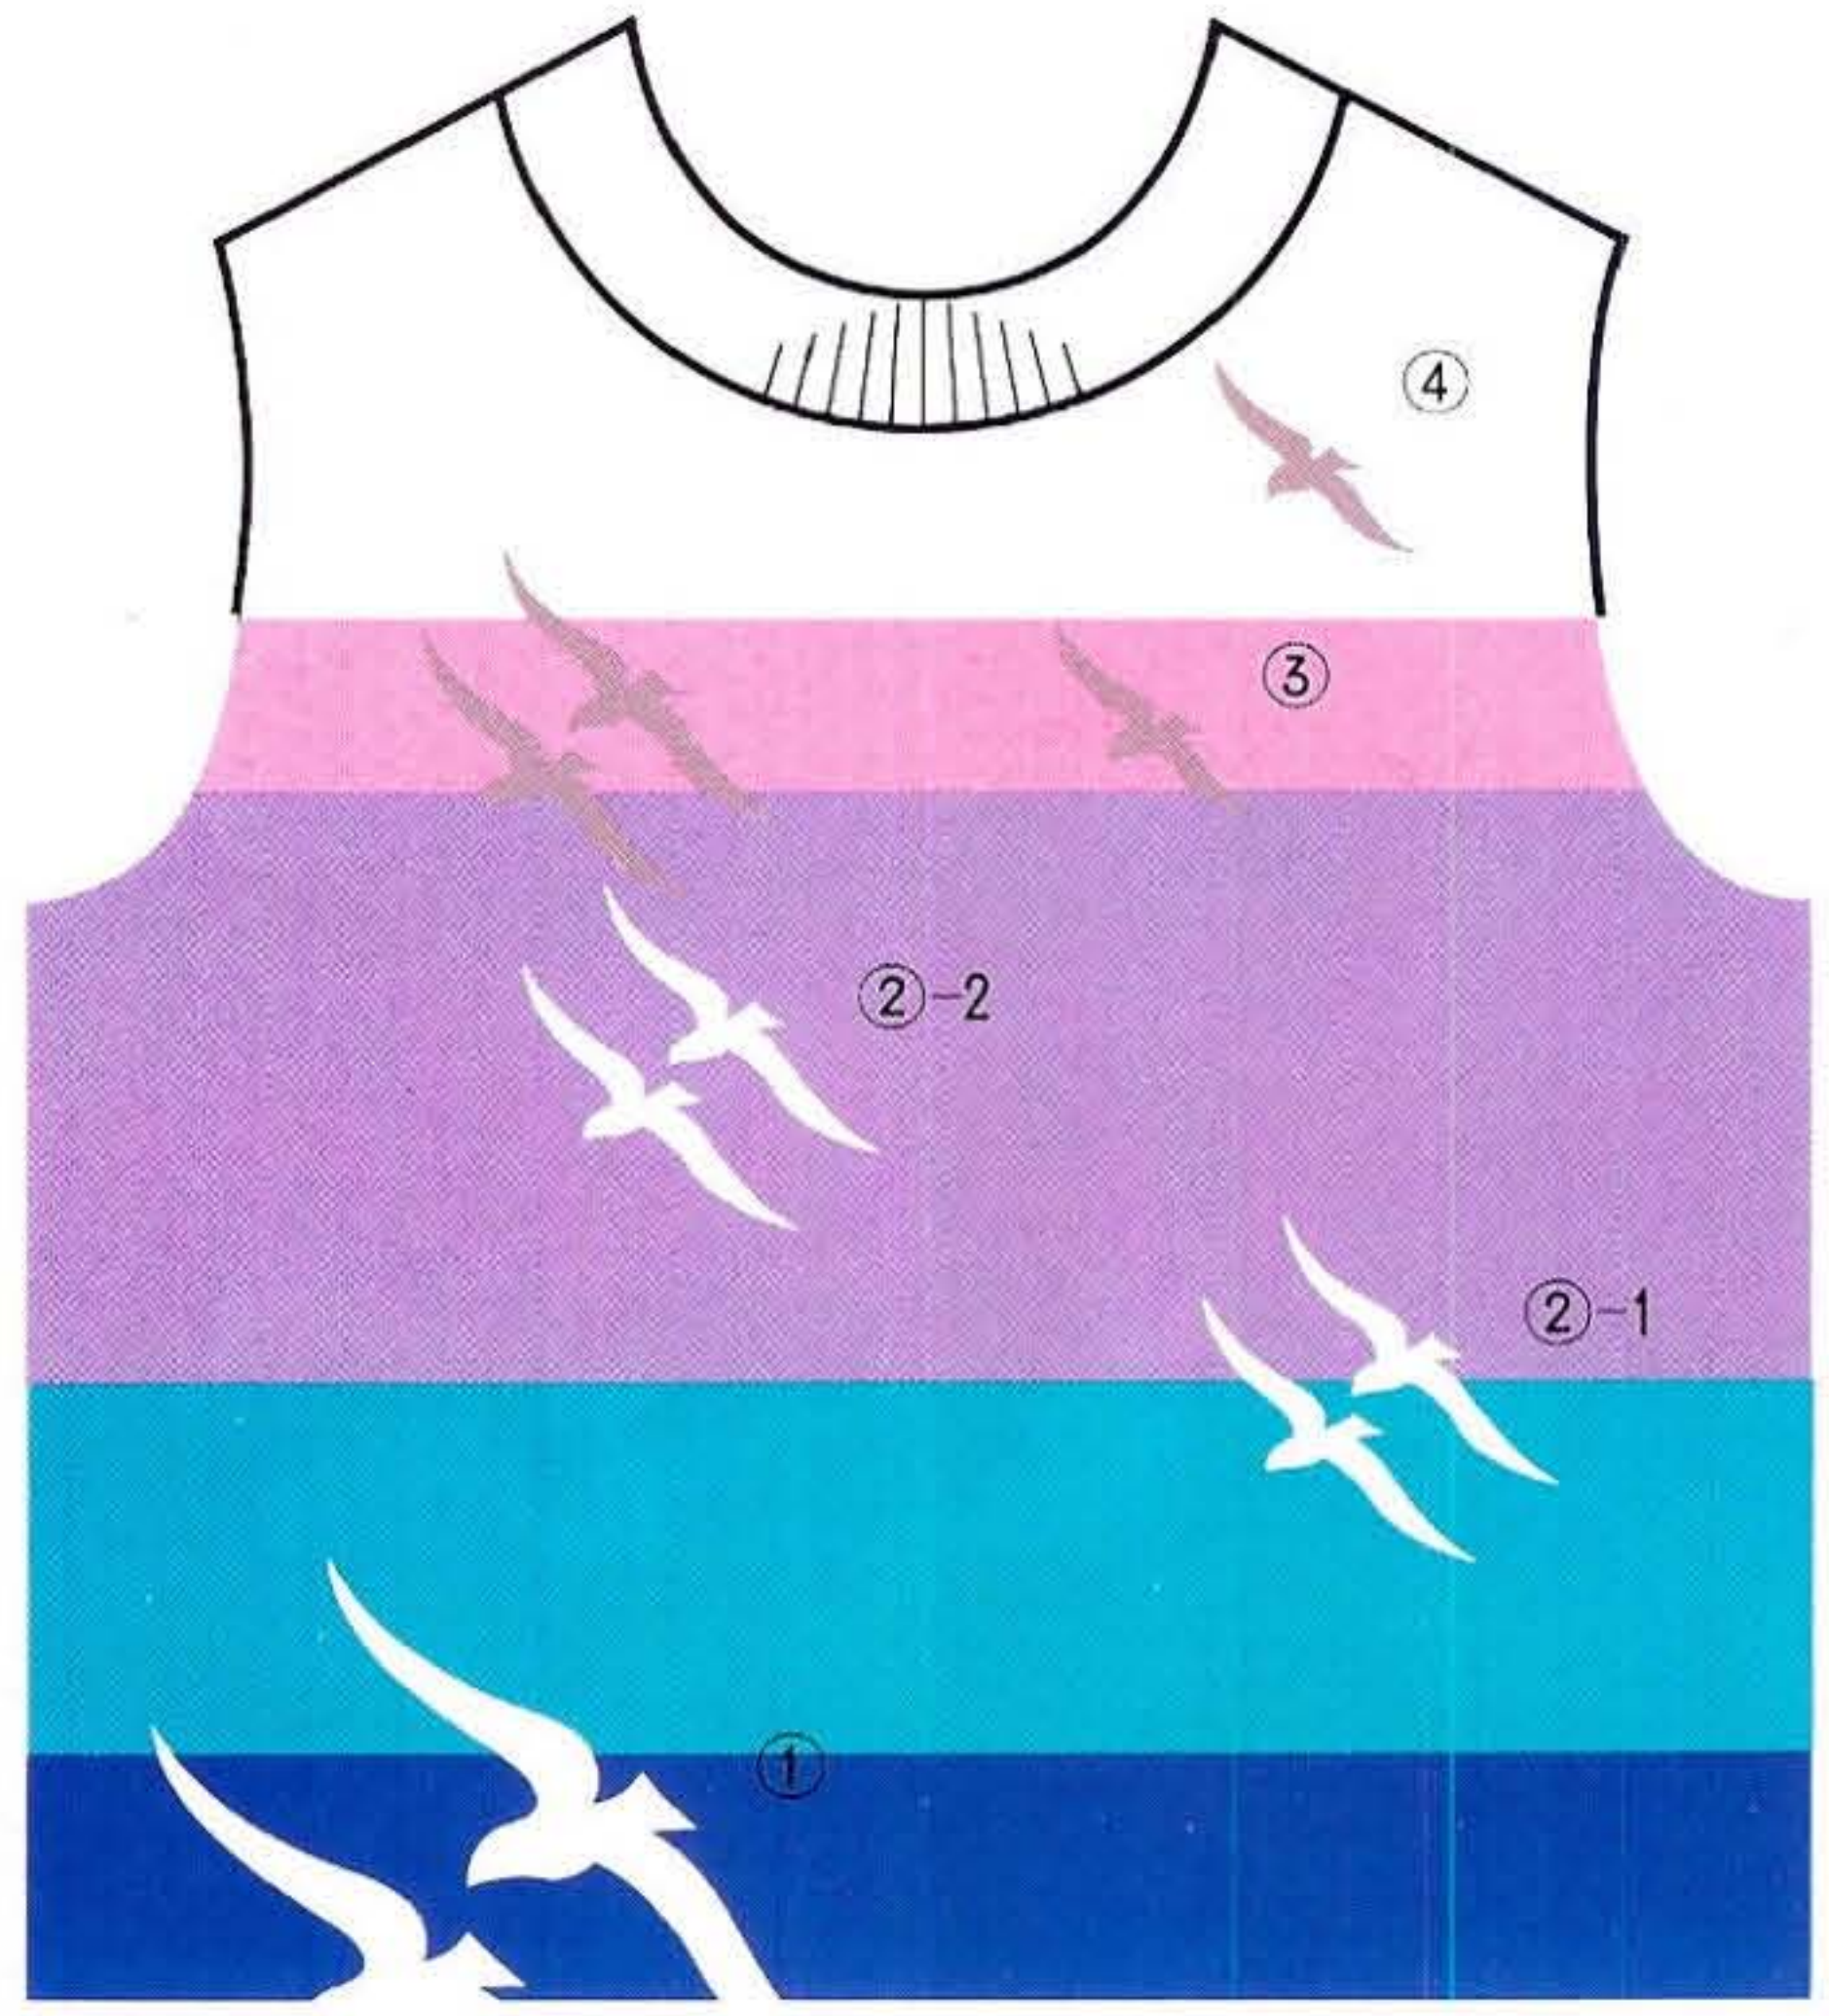

C





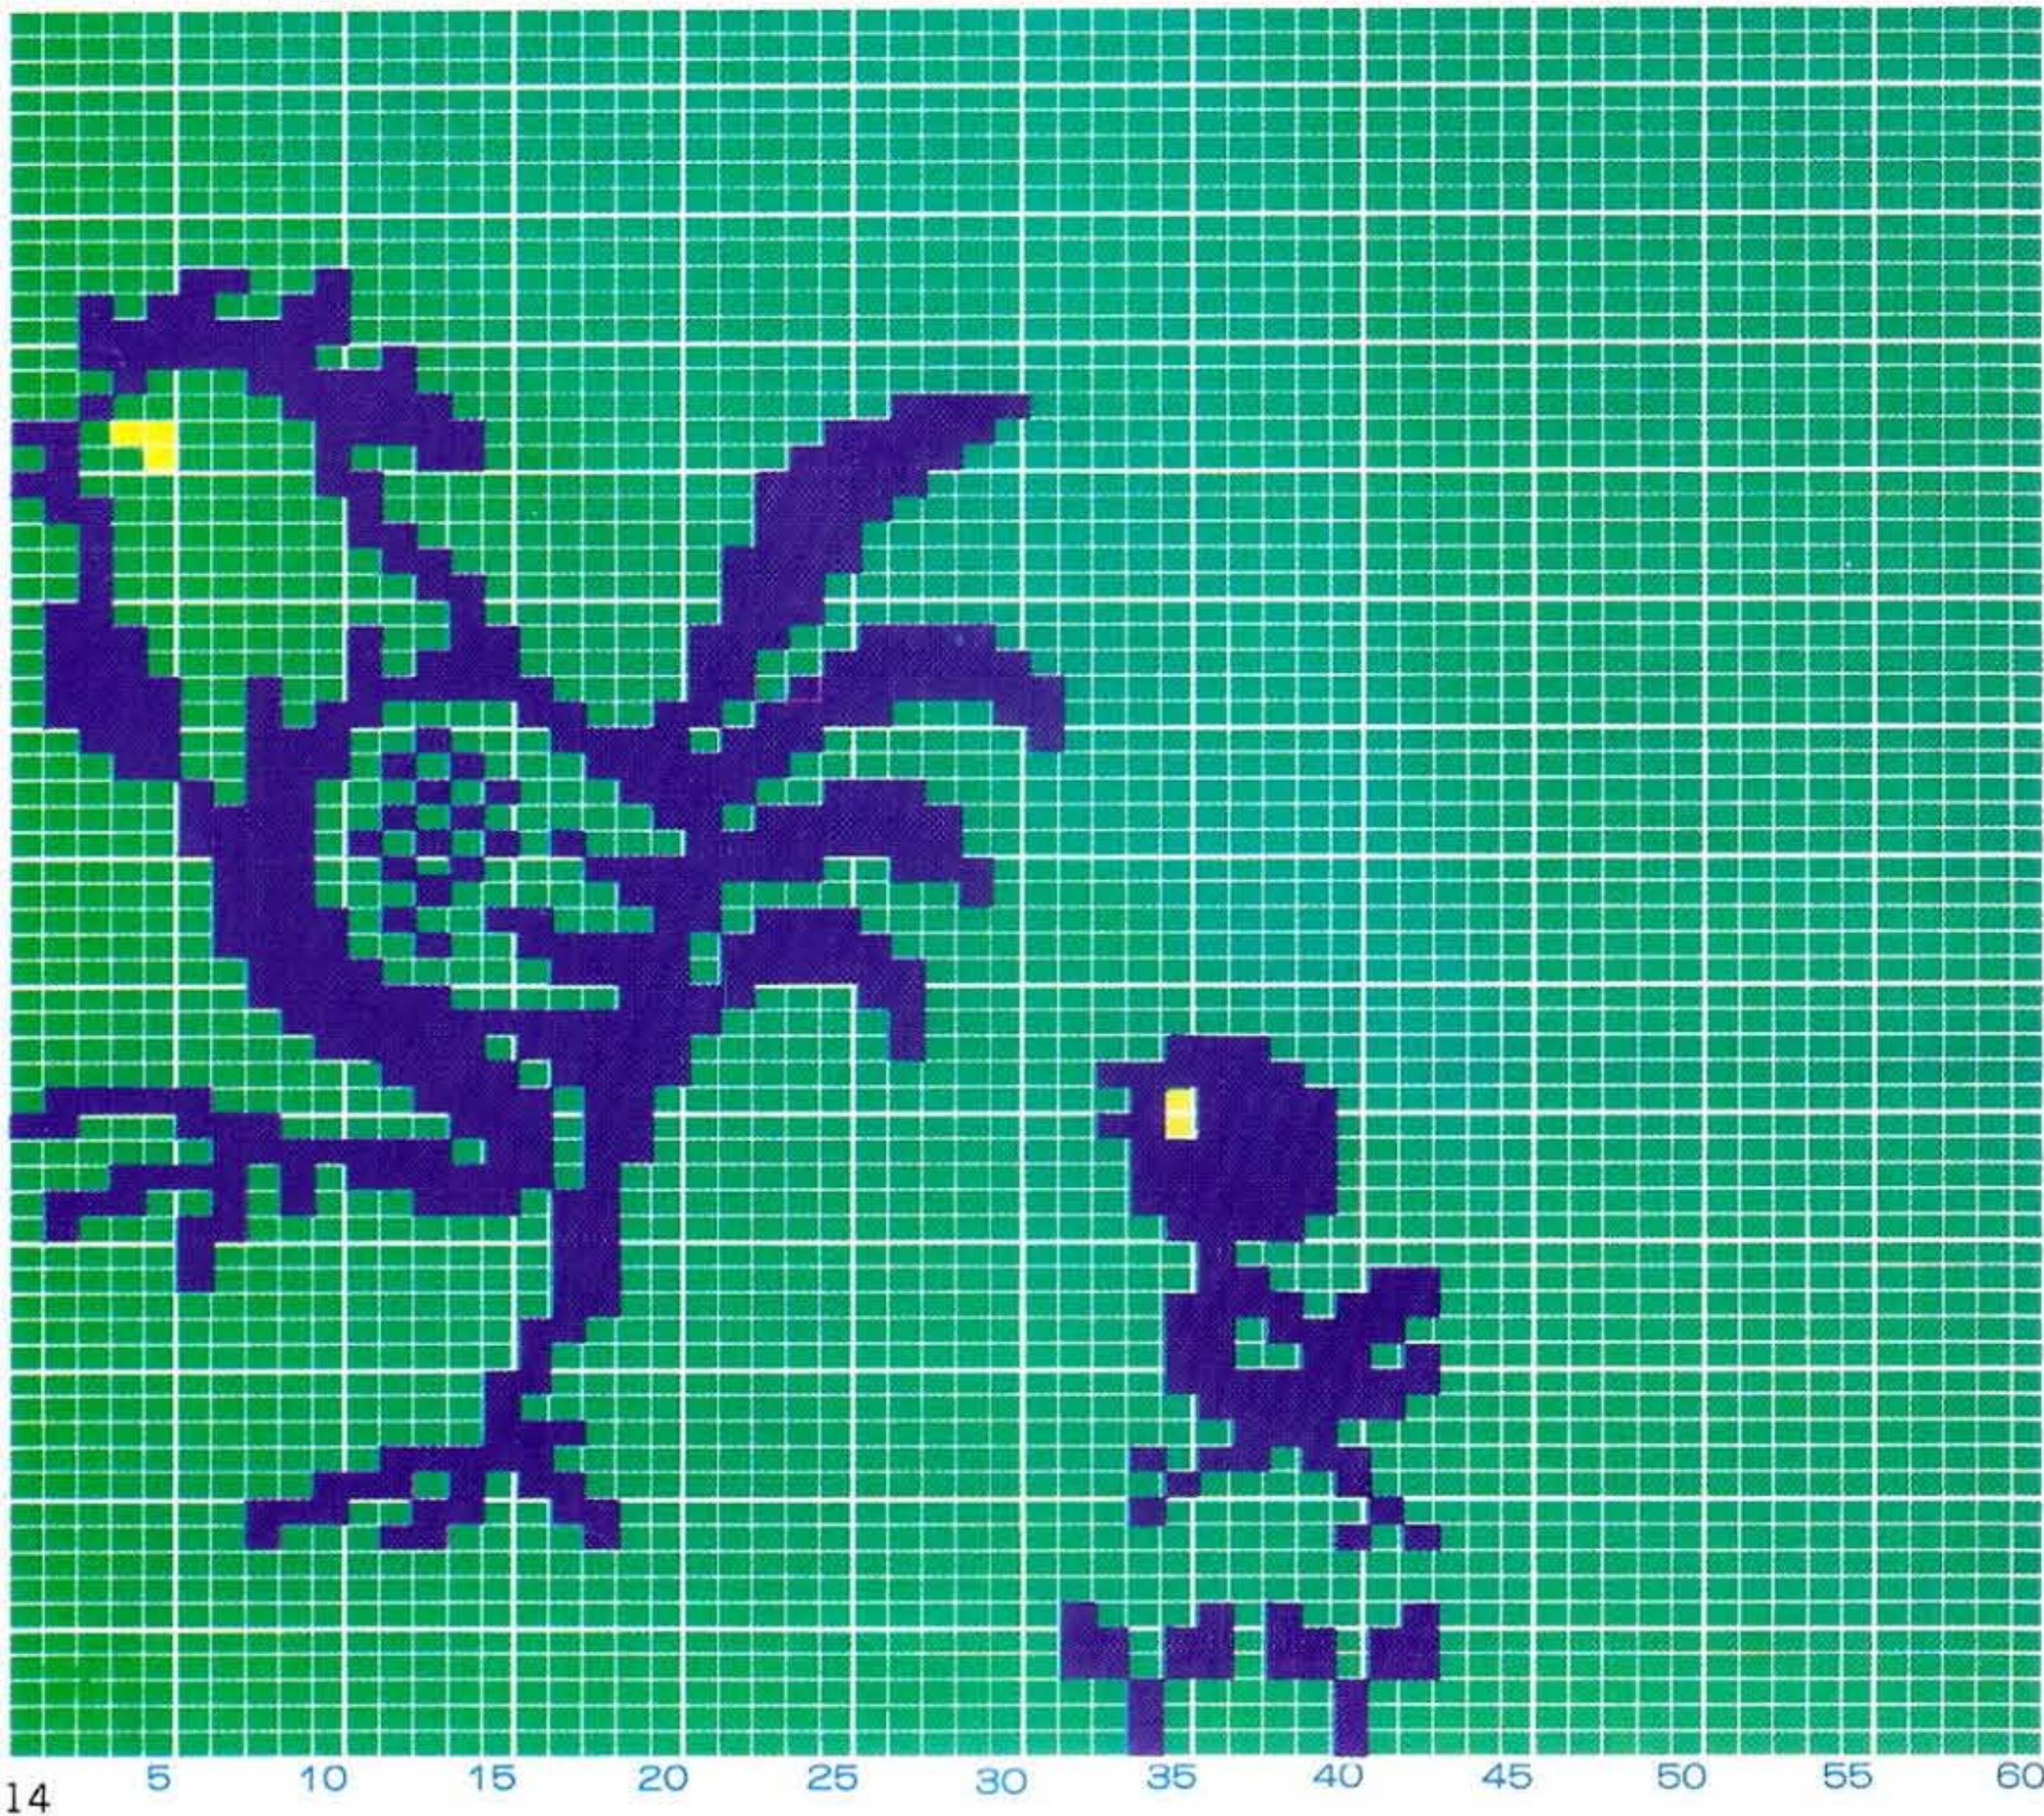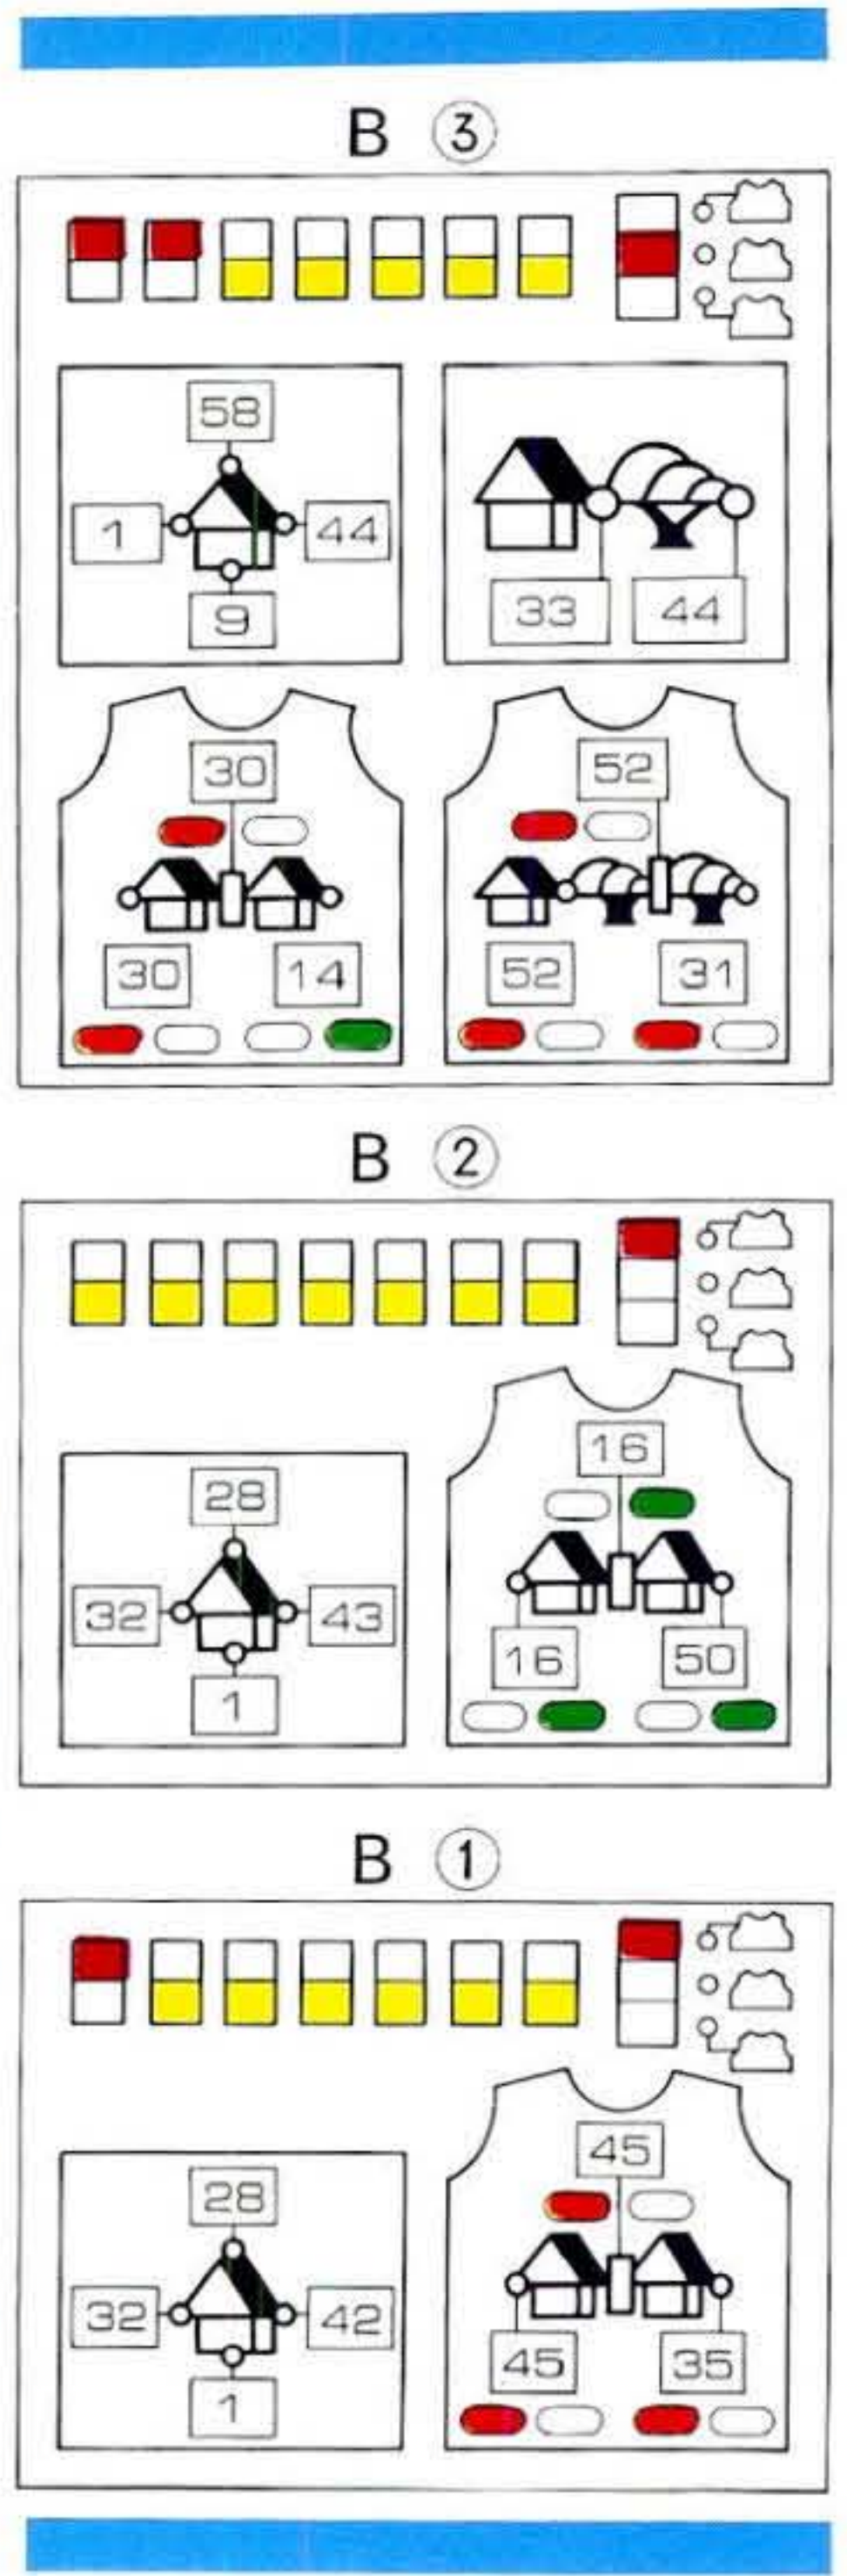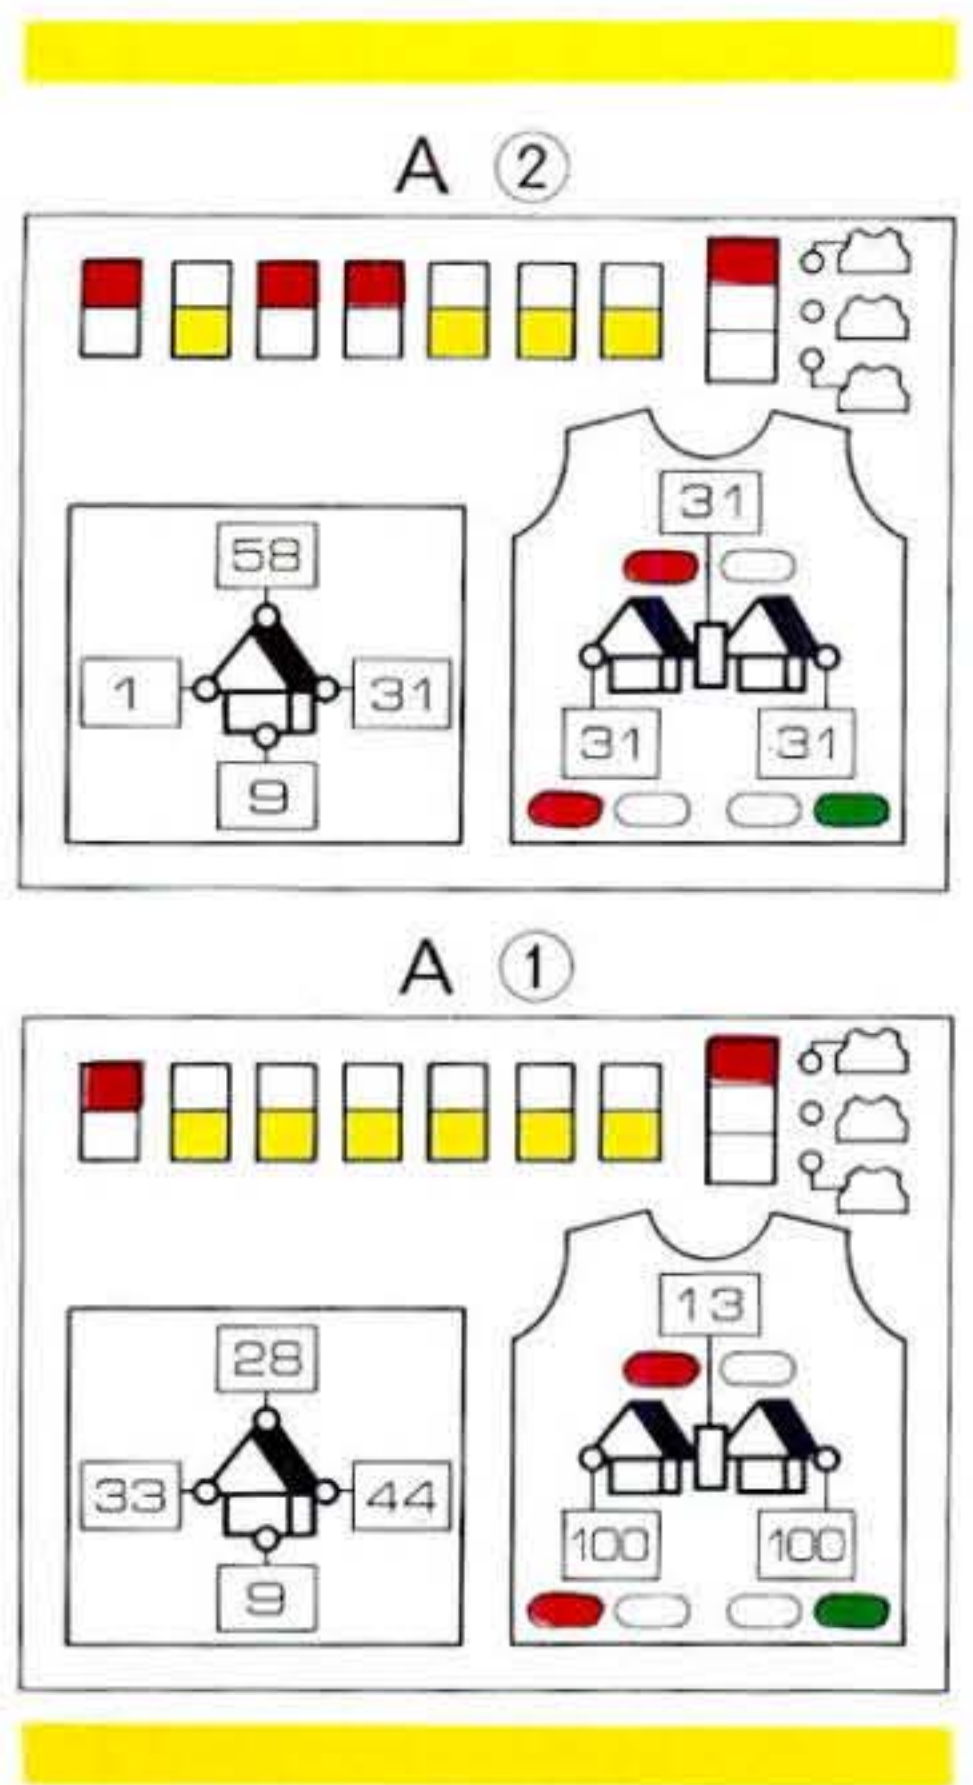   


A



















 
 
B


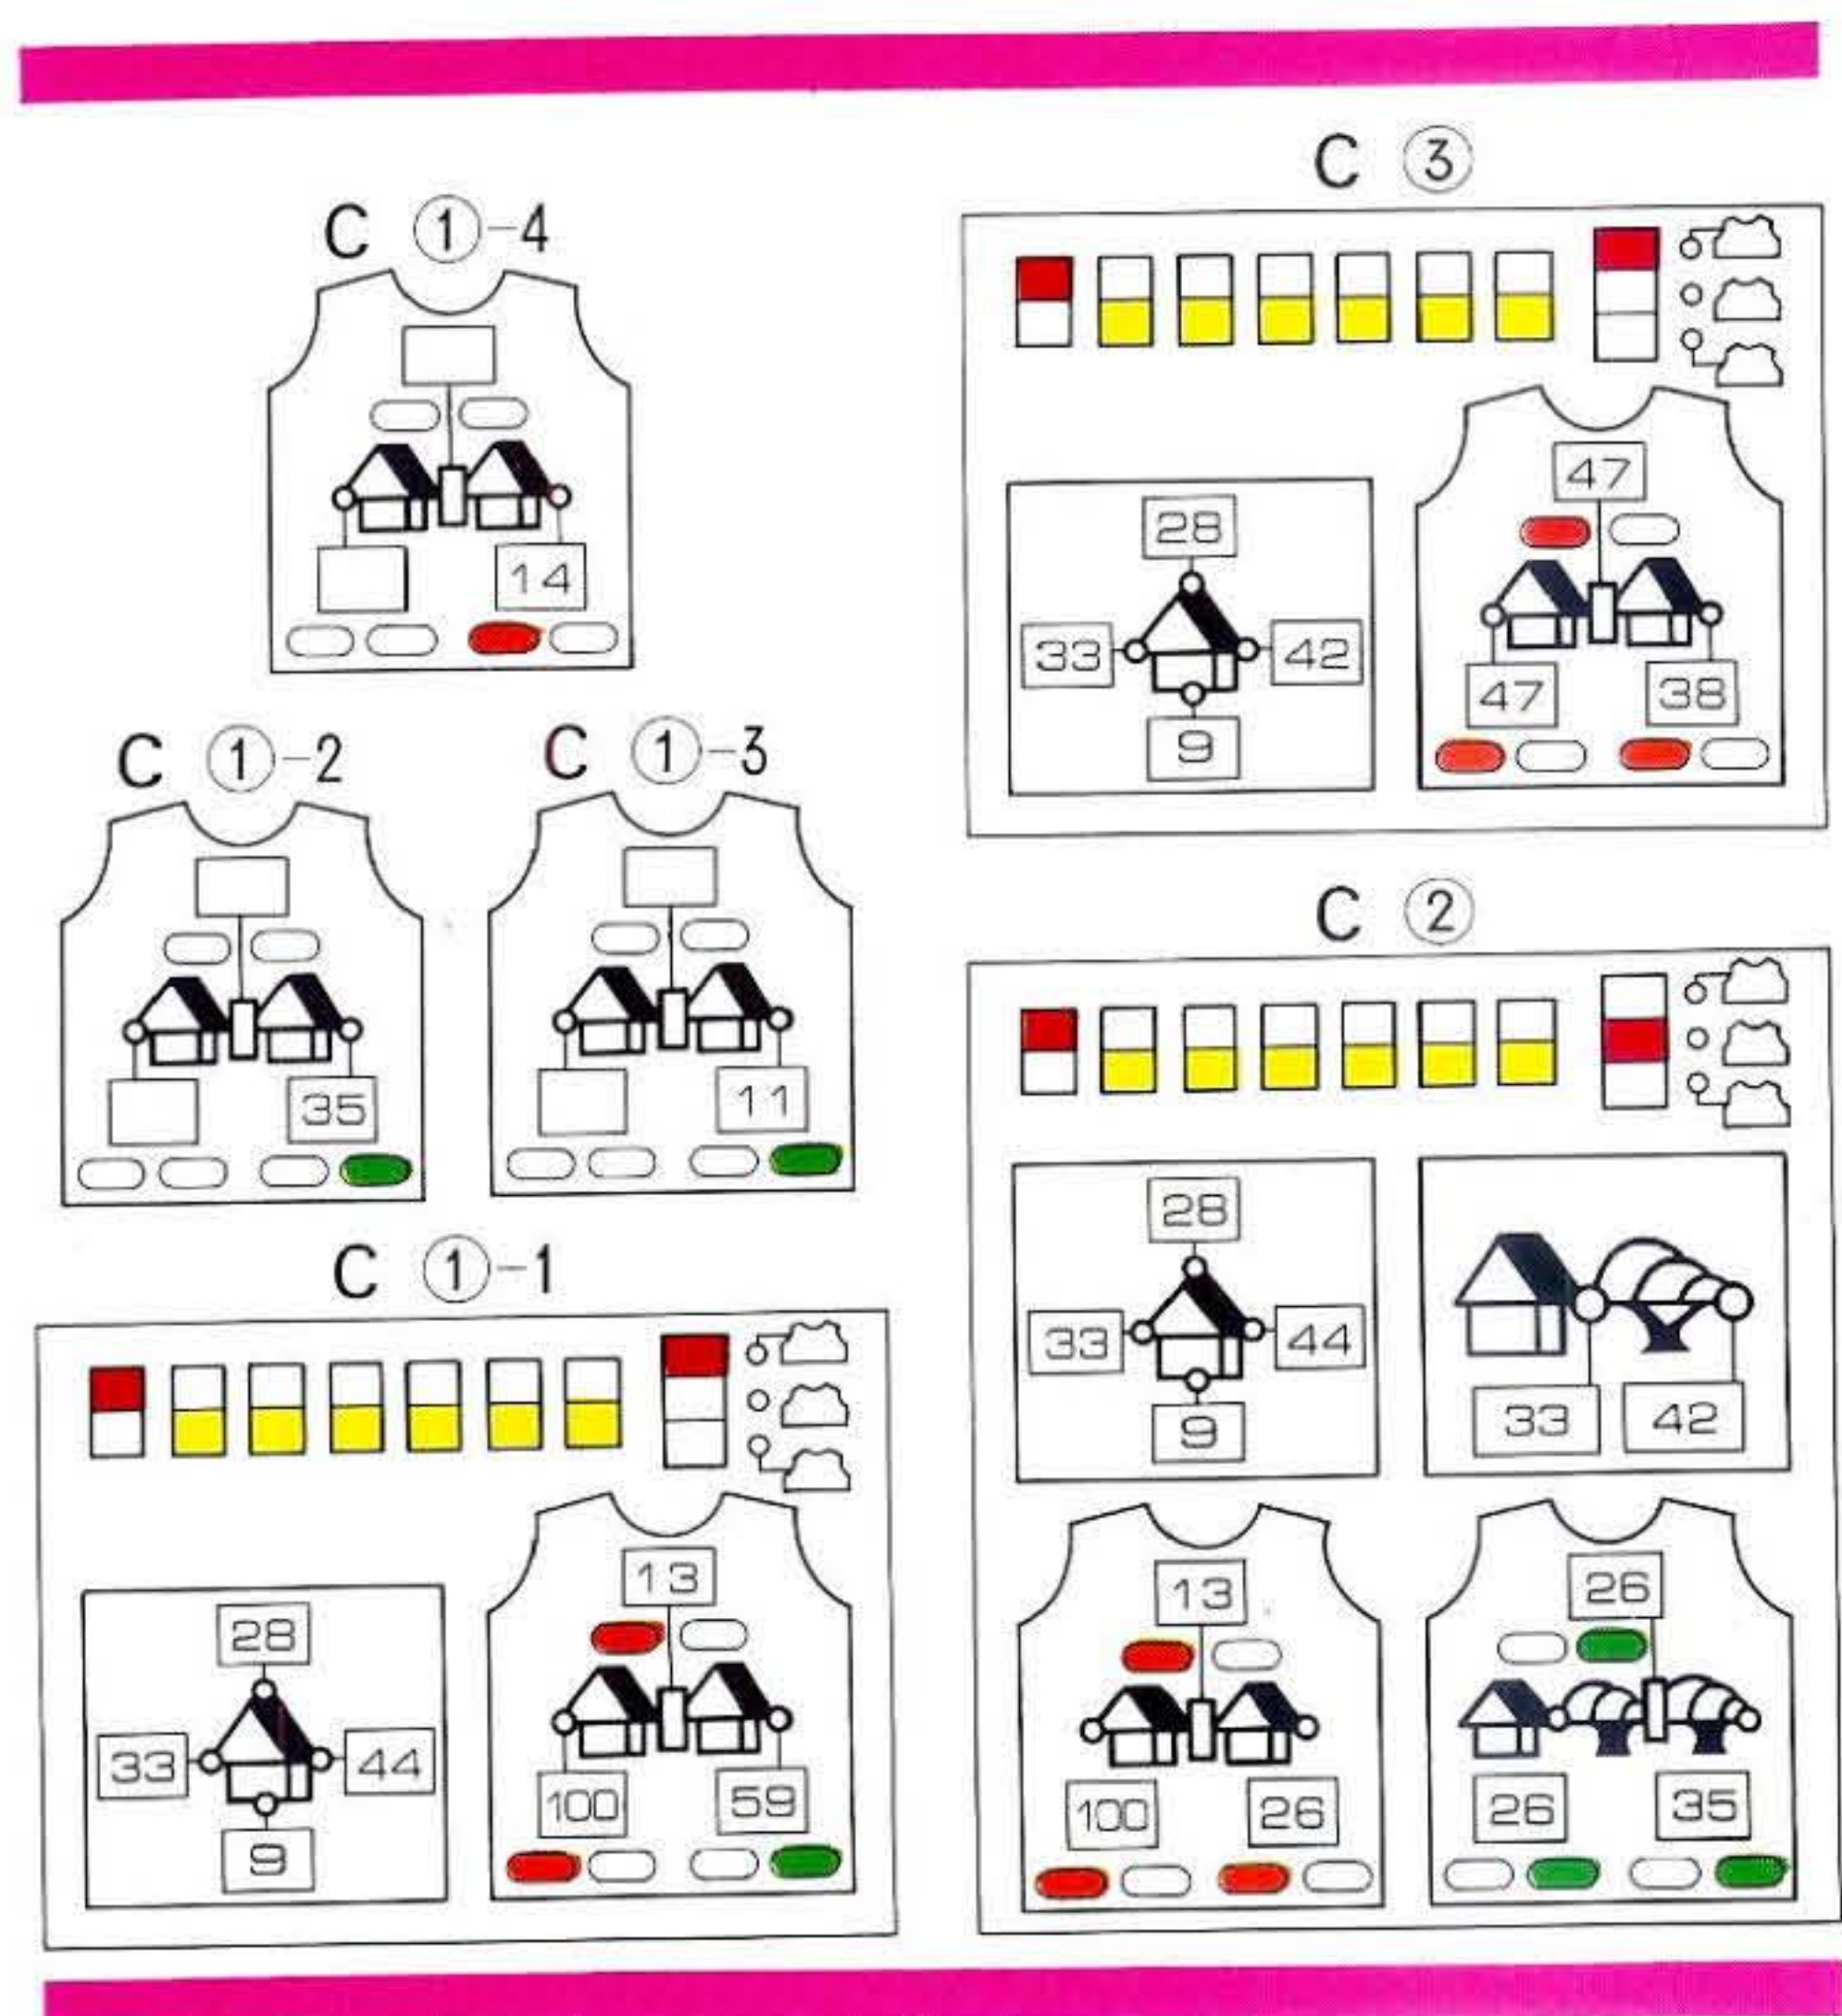
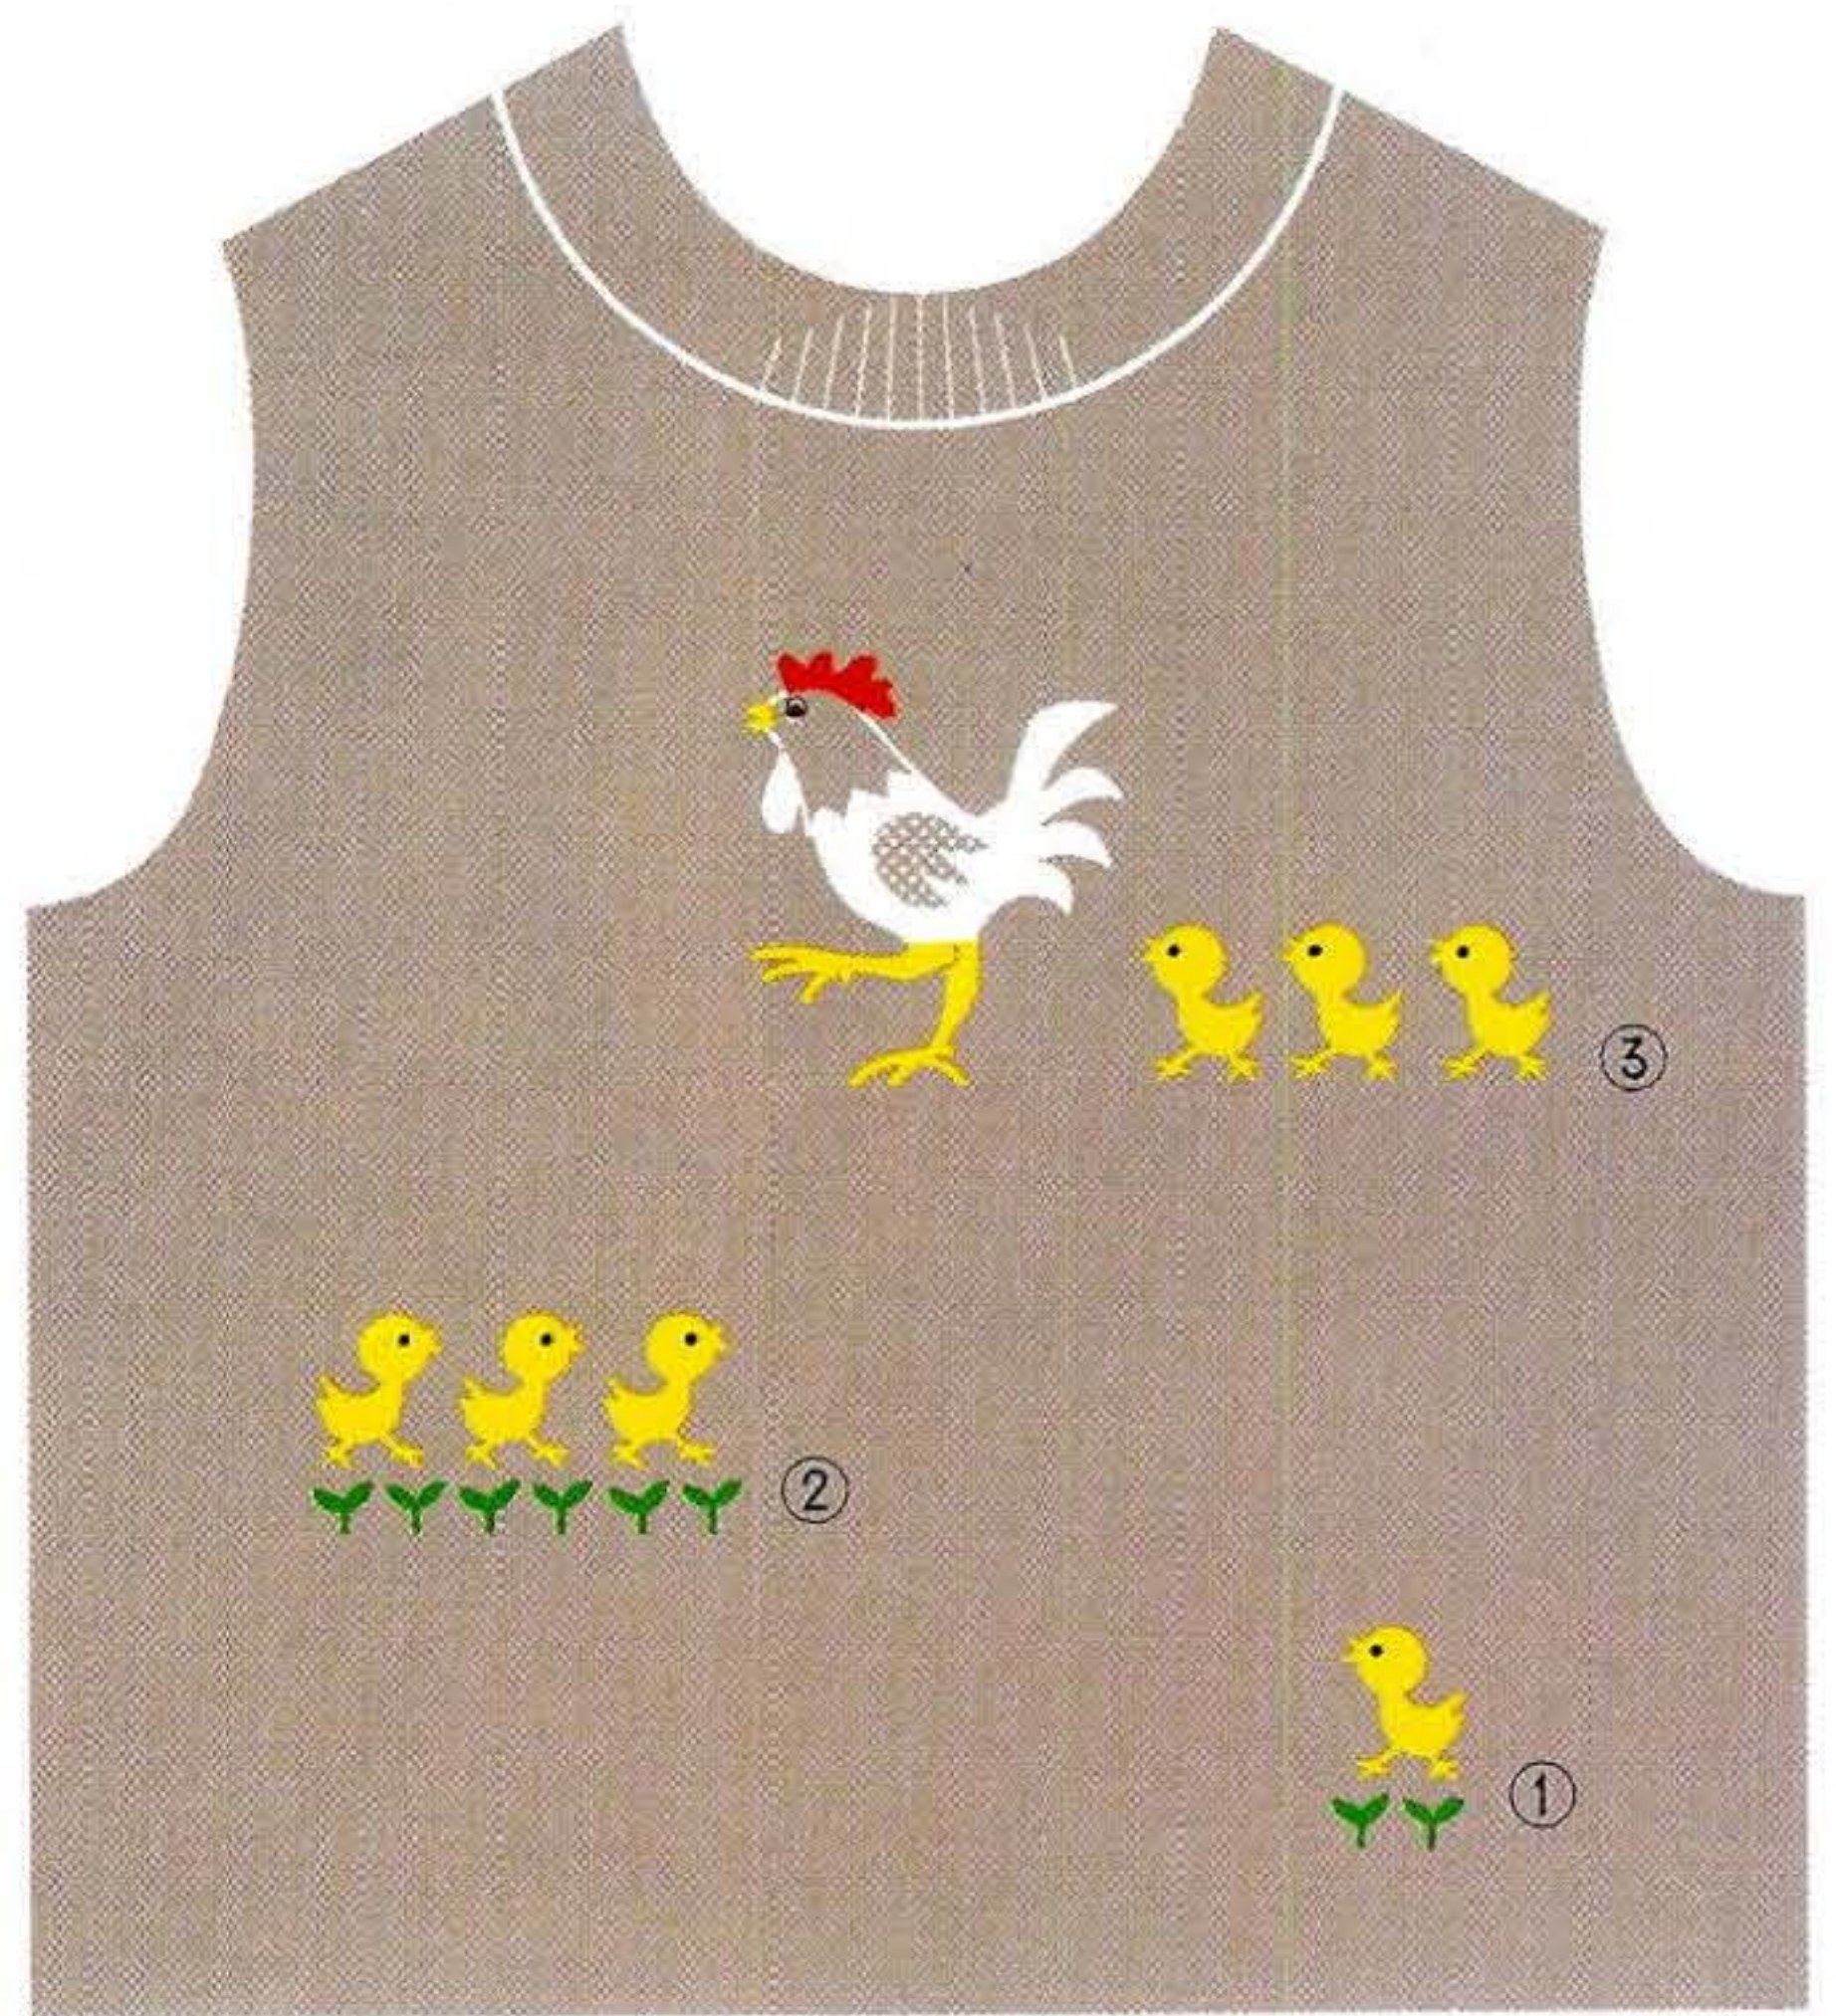


C

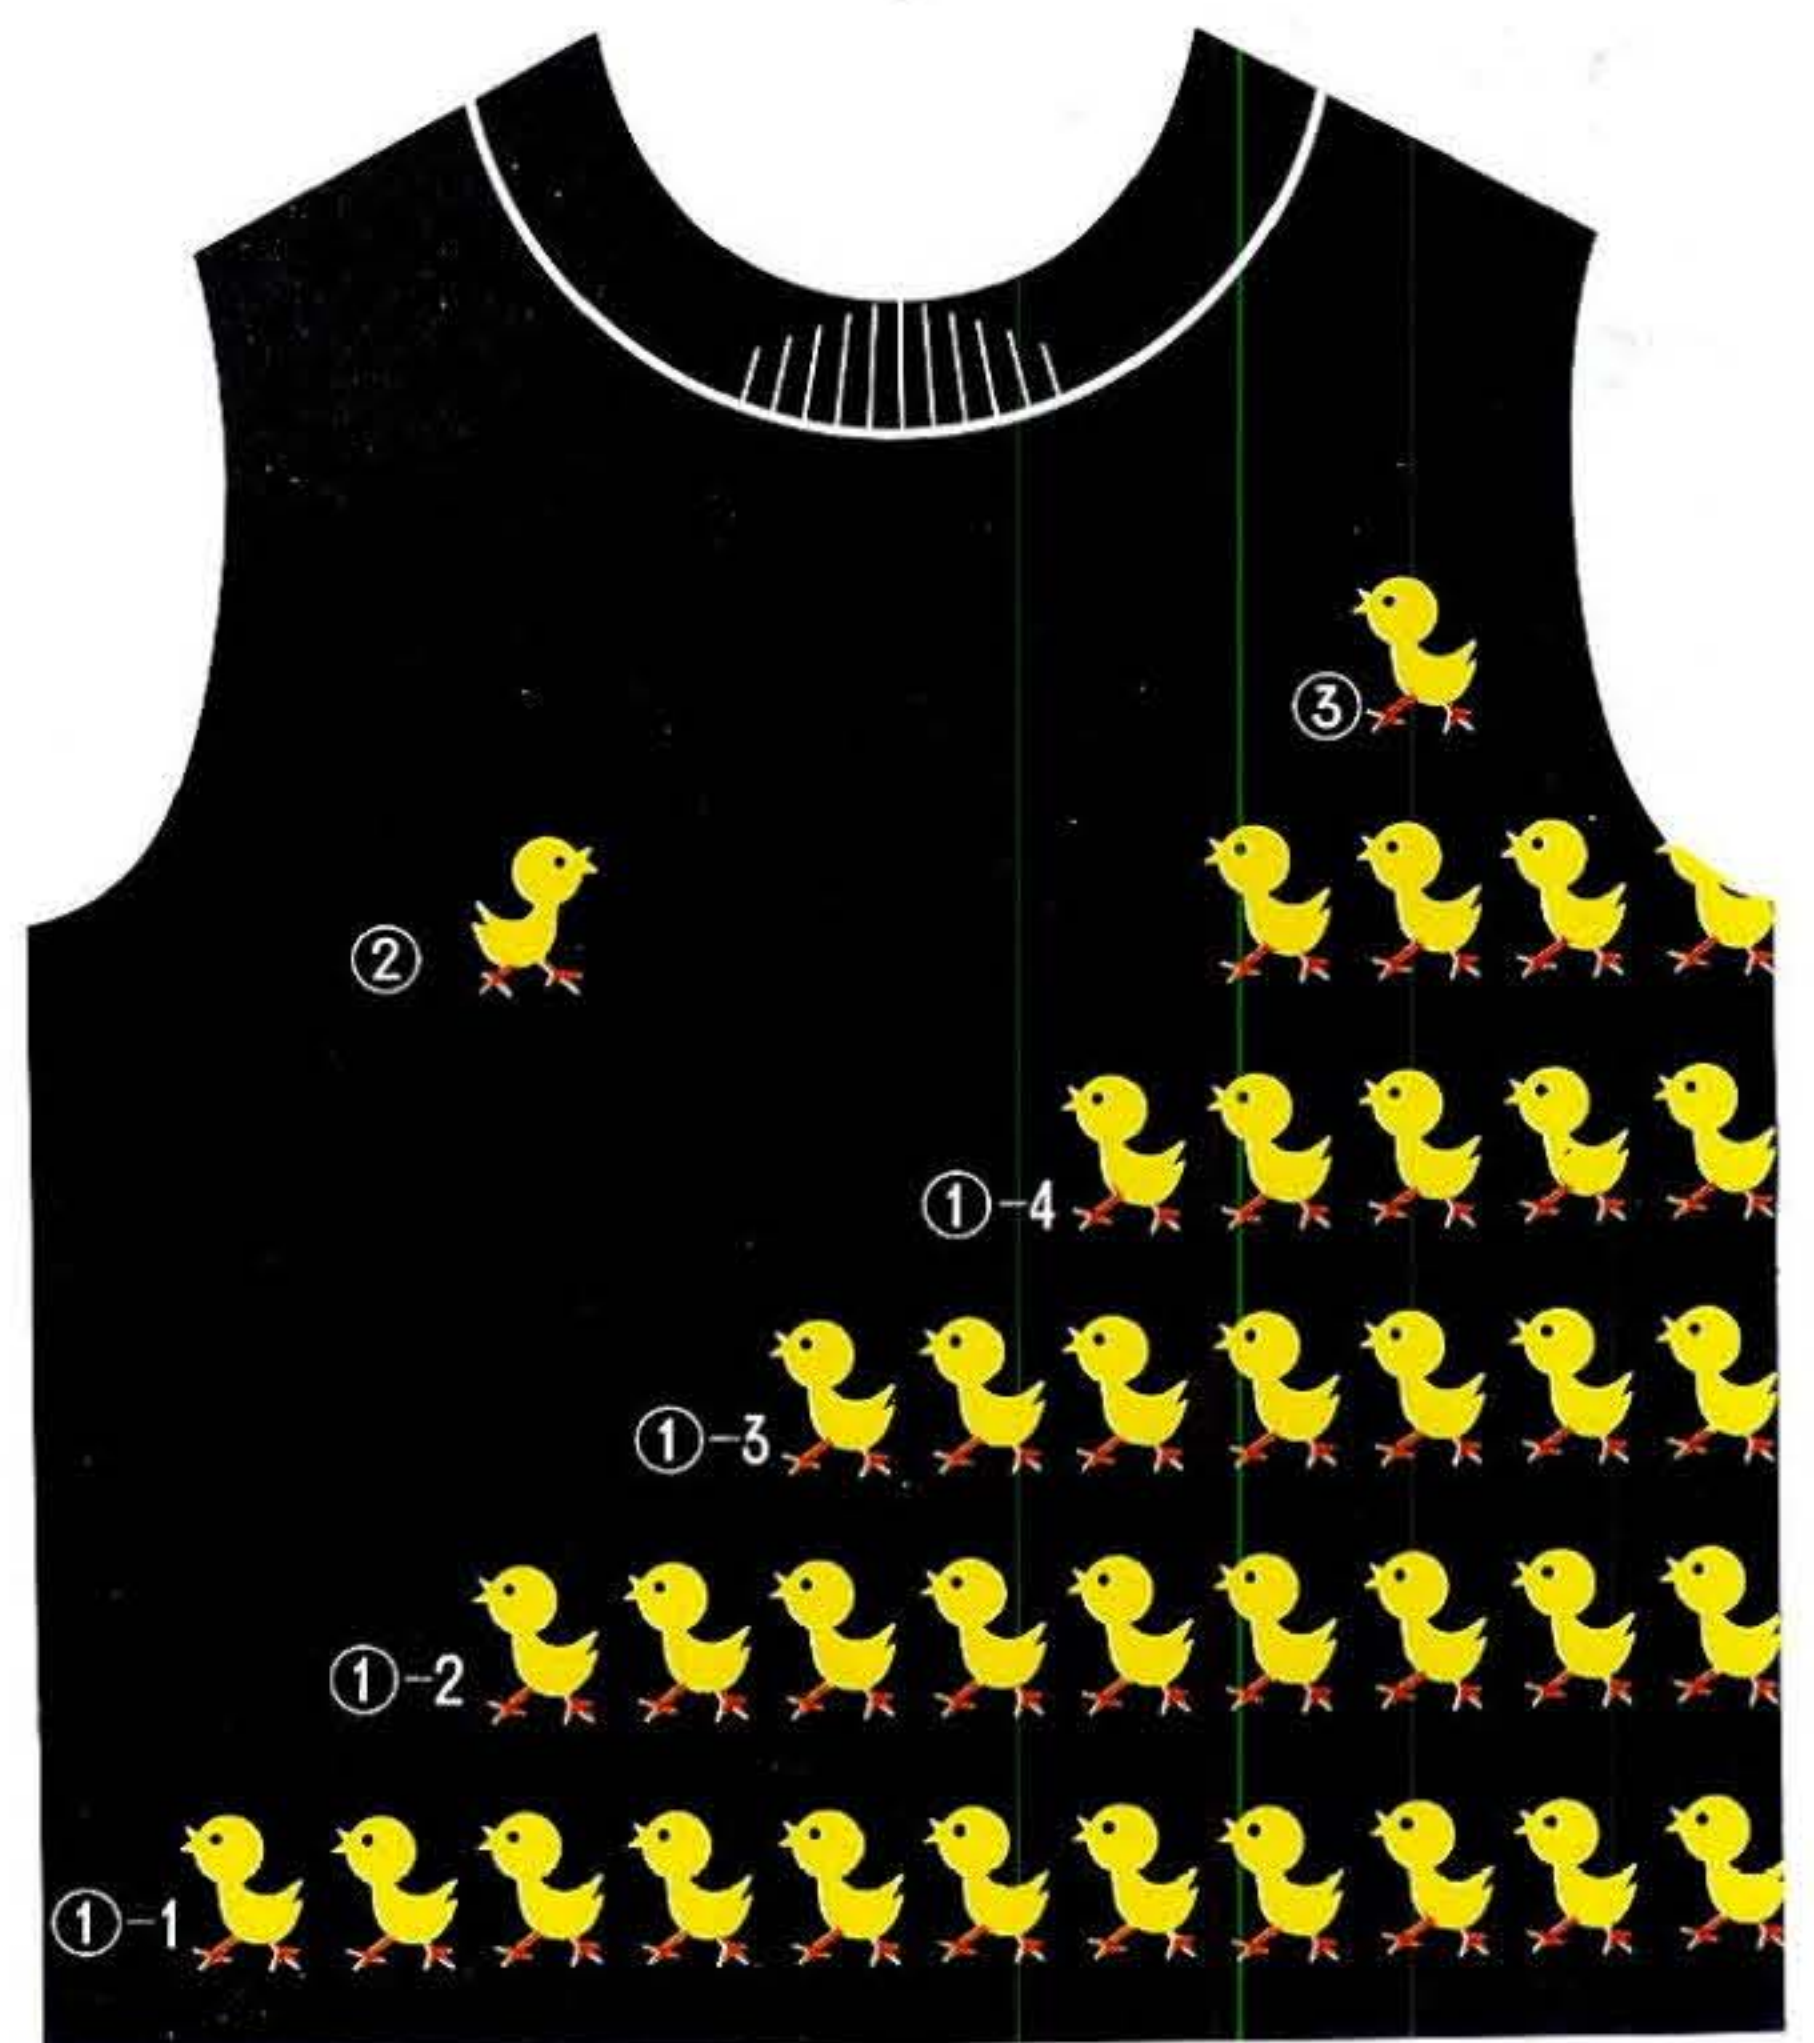 

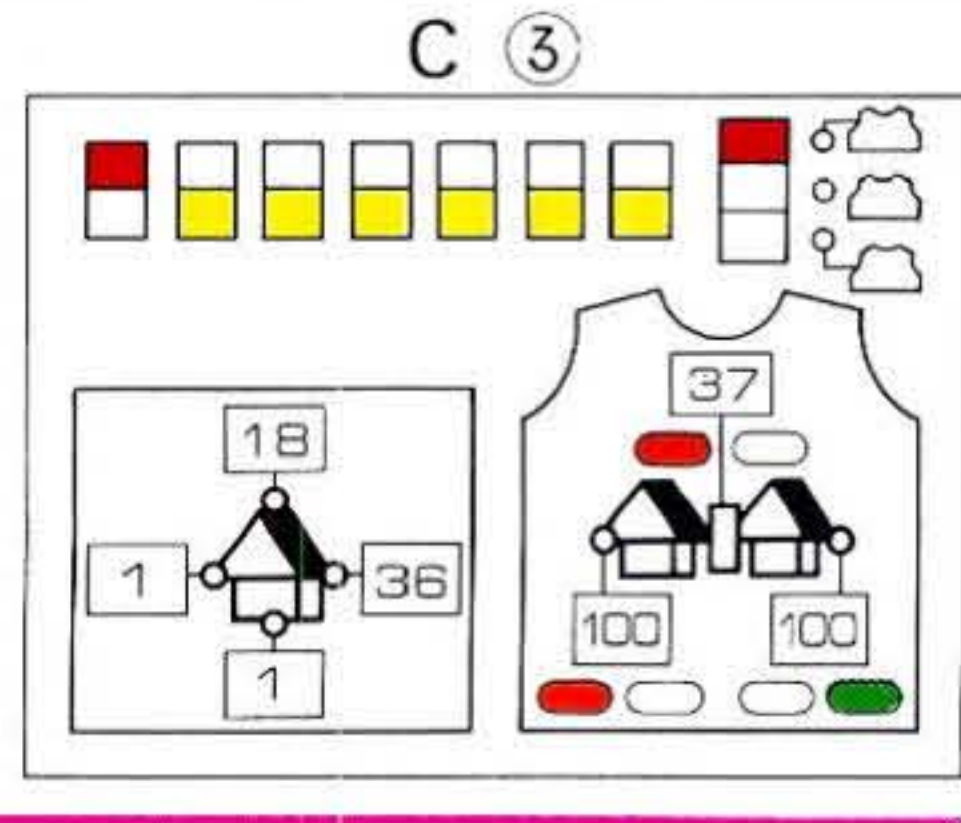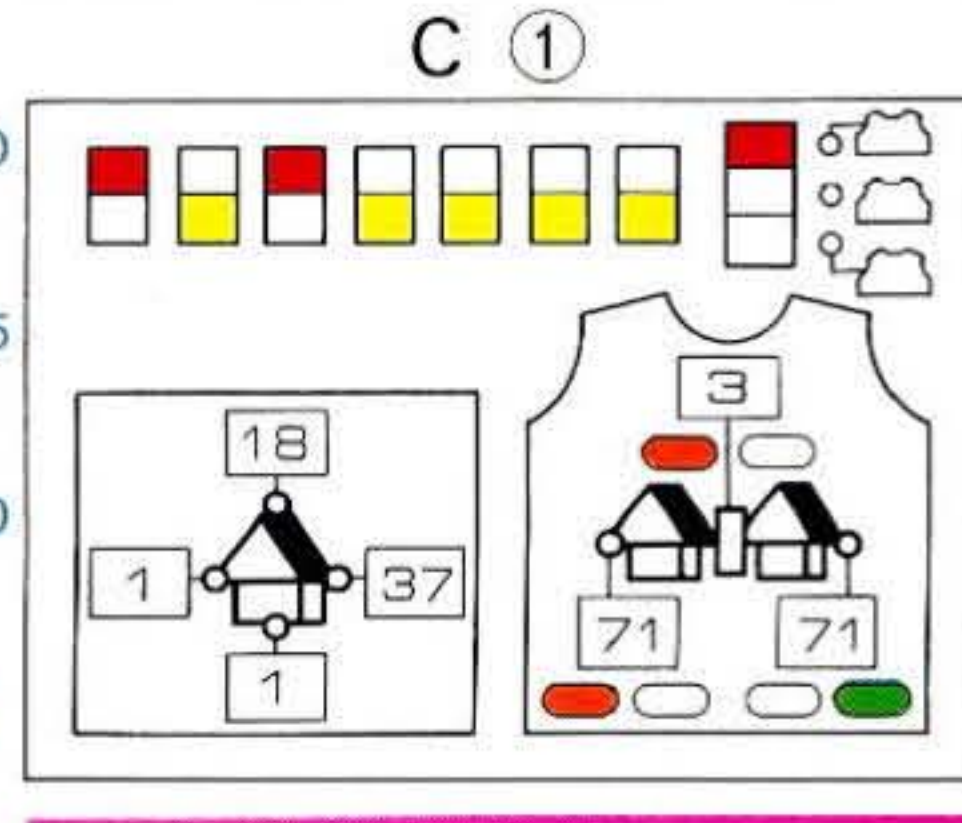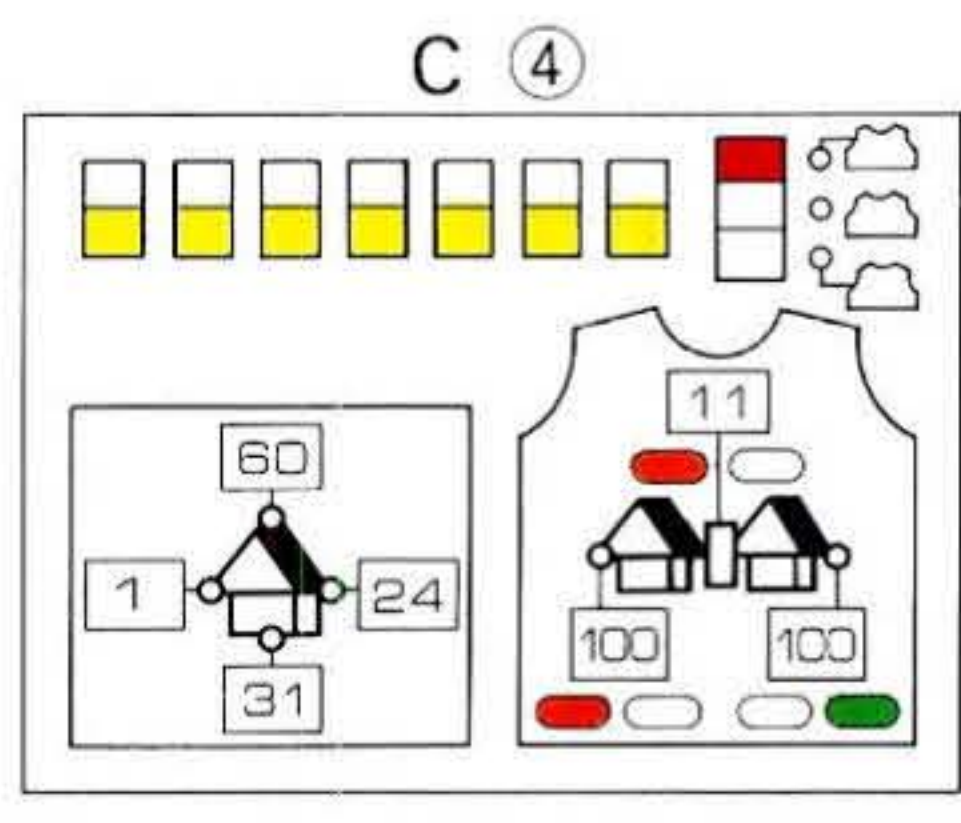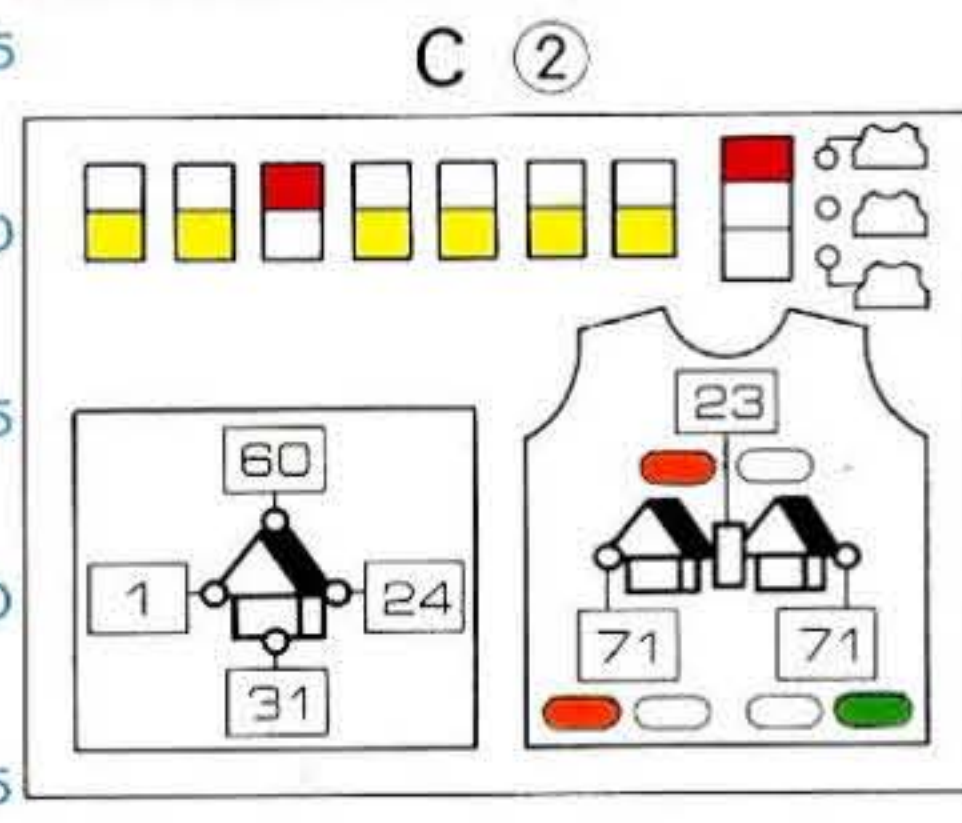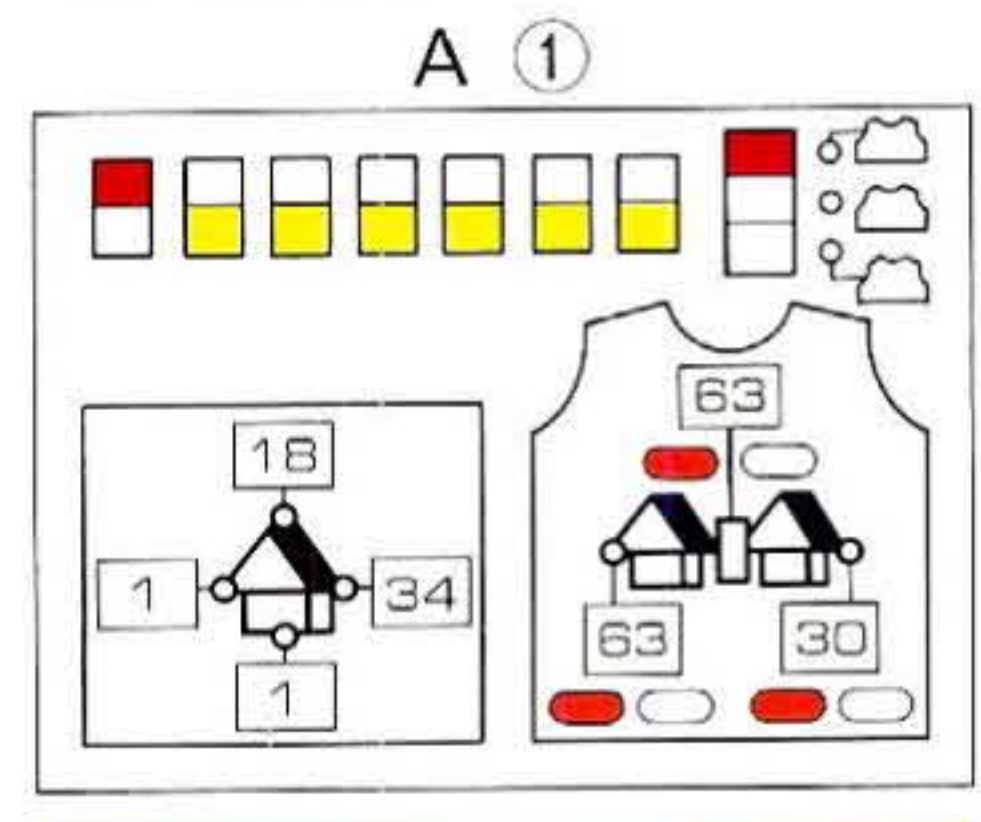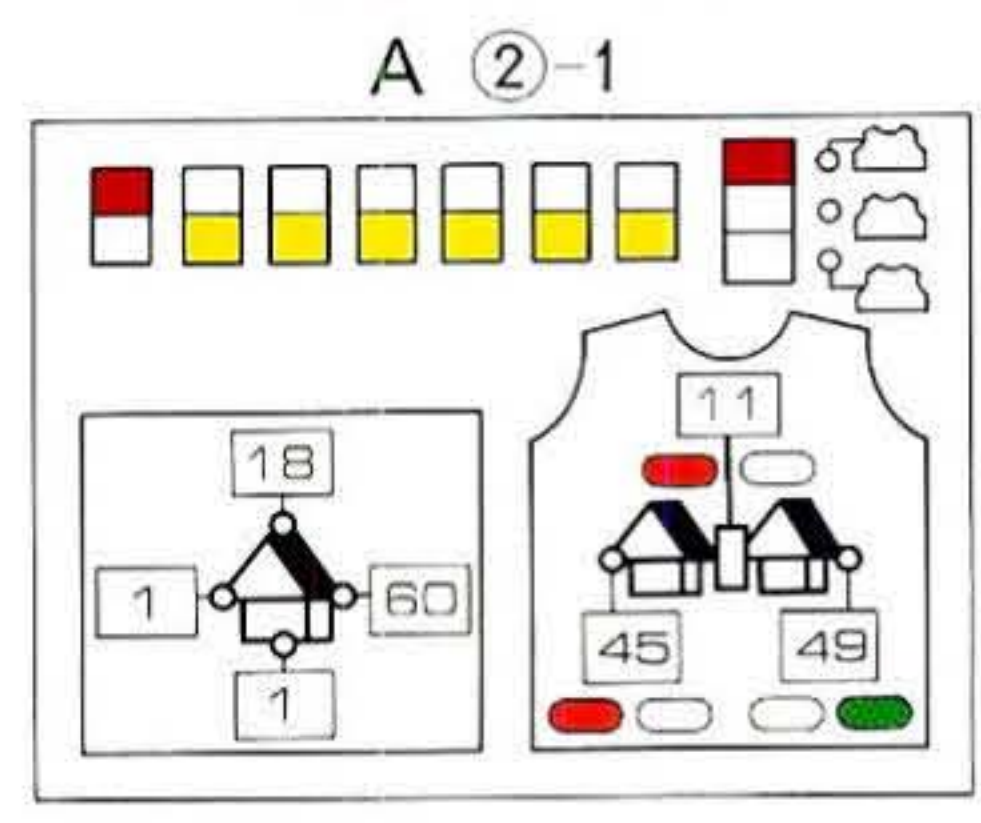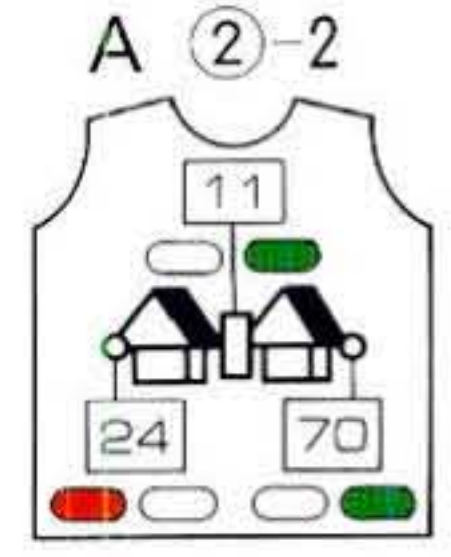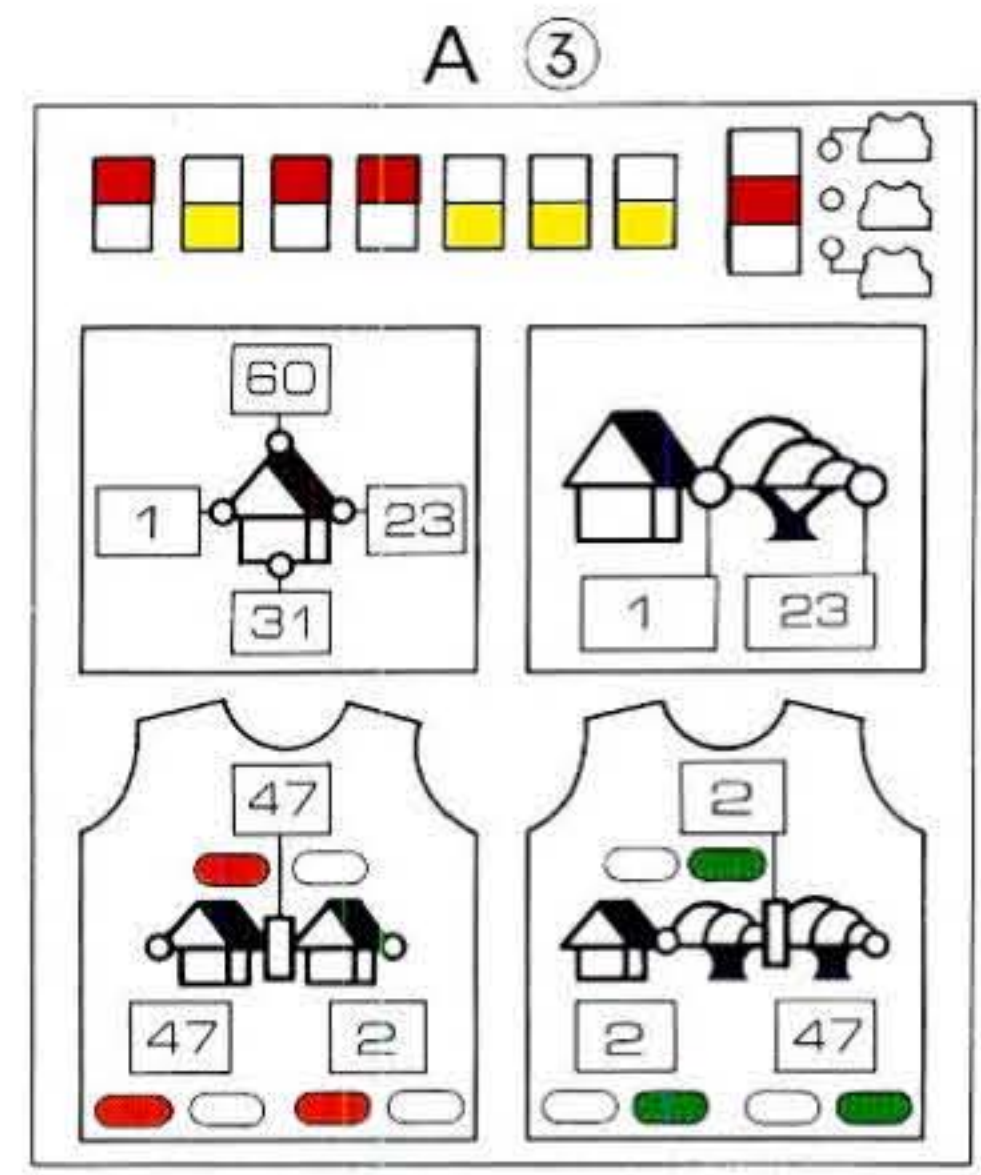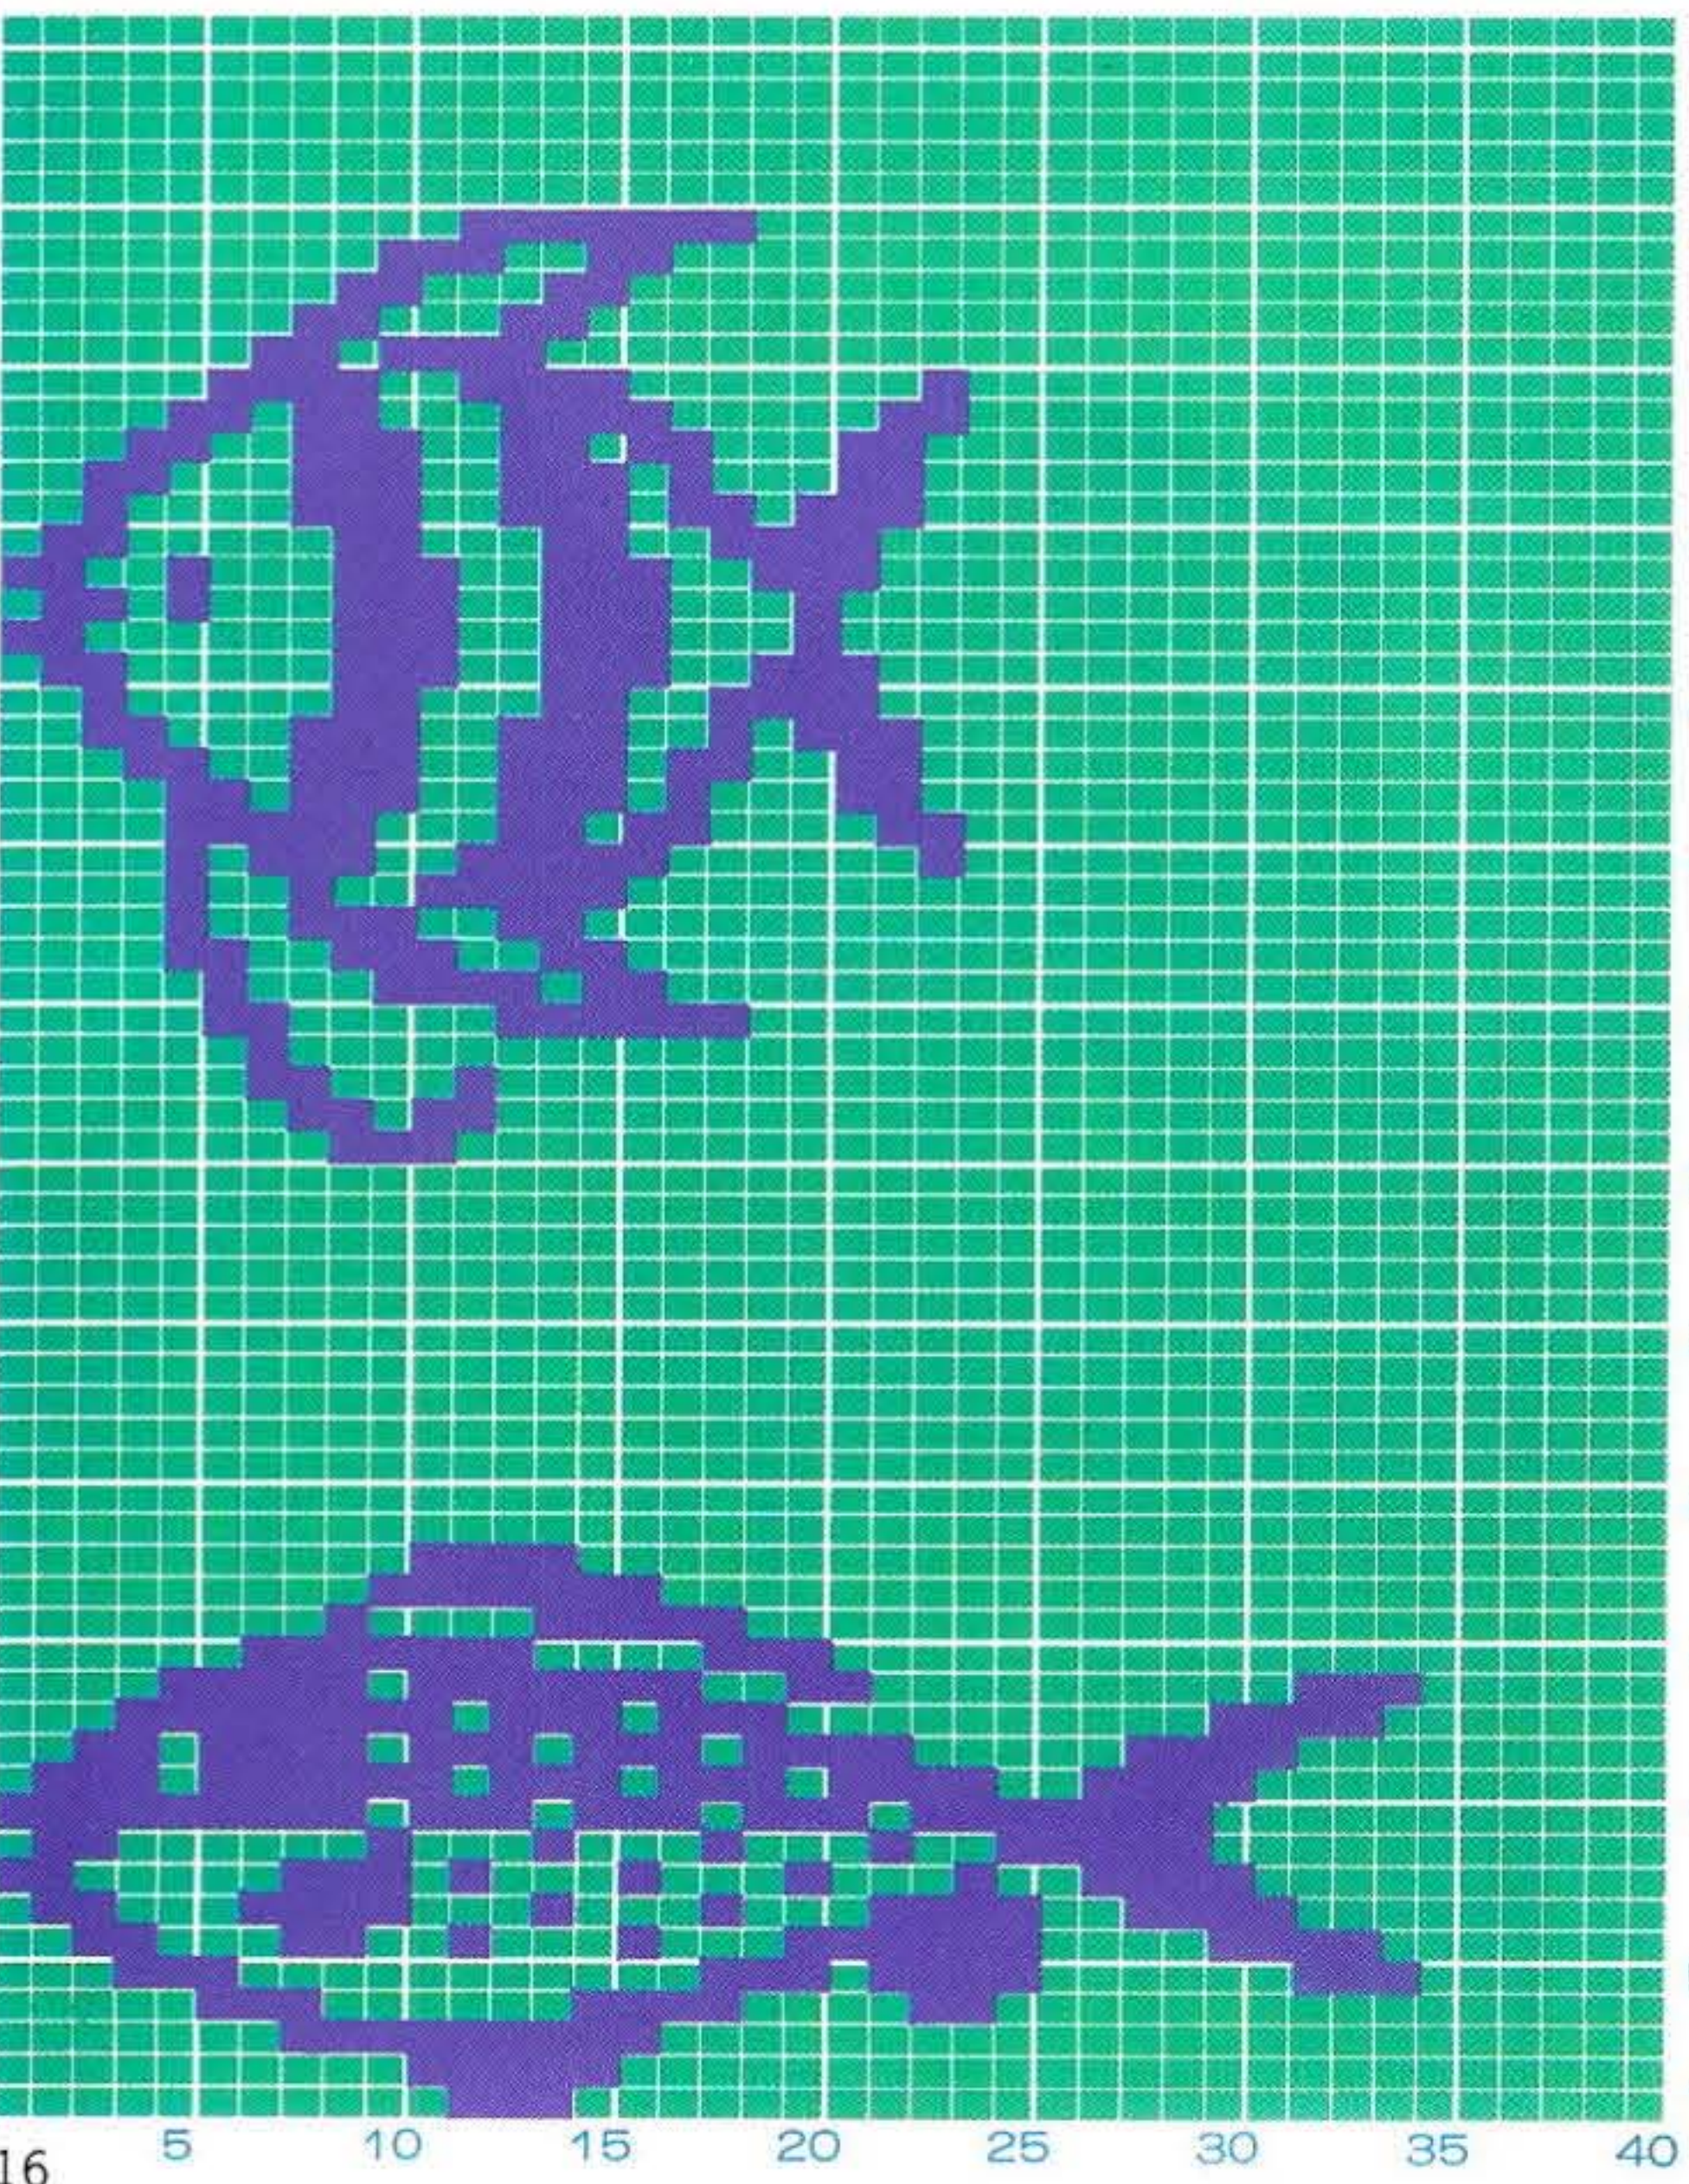         

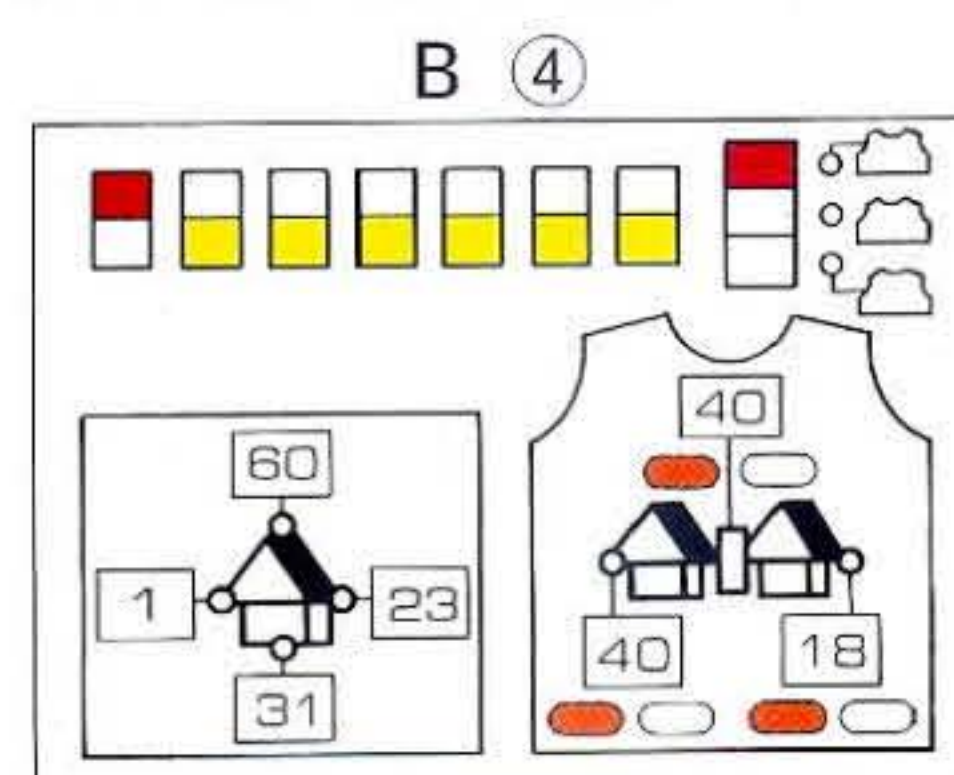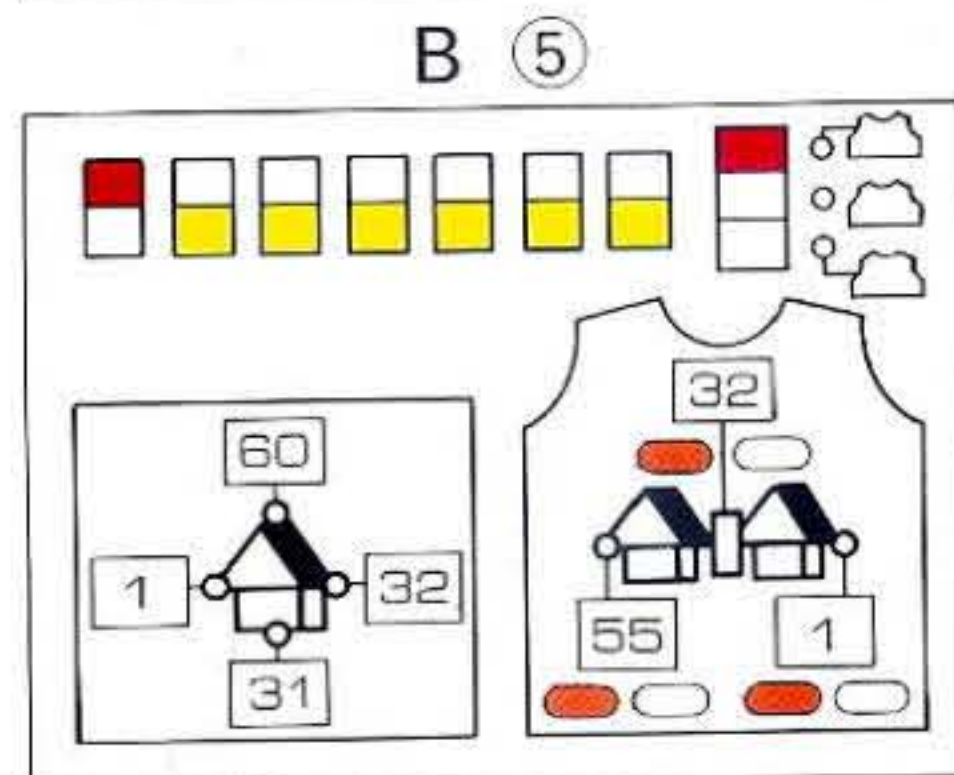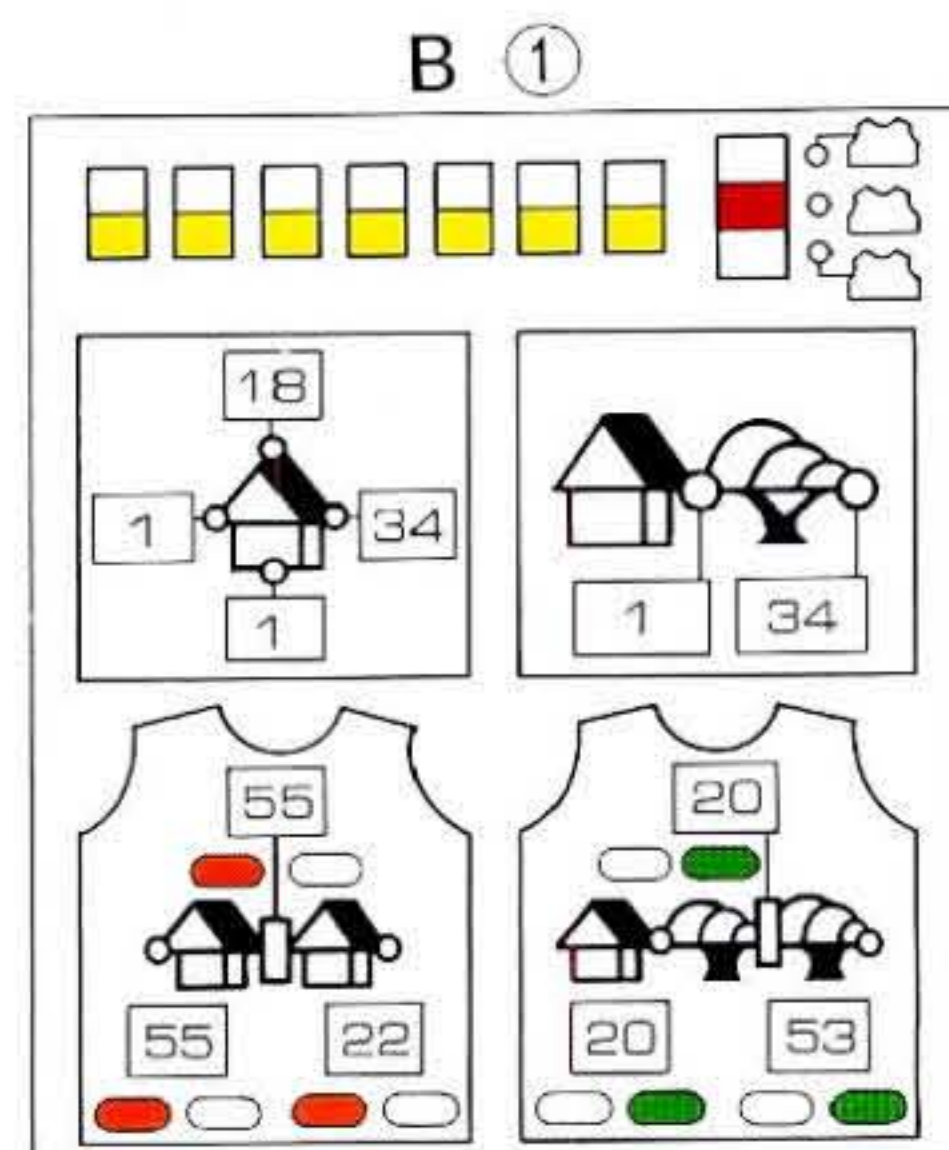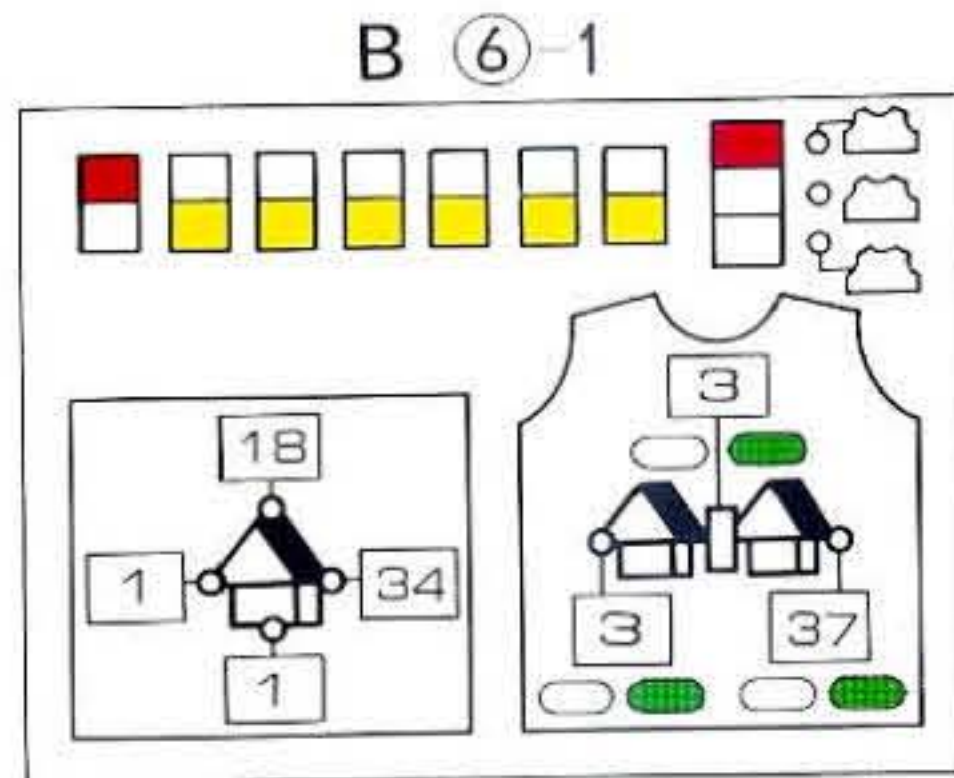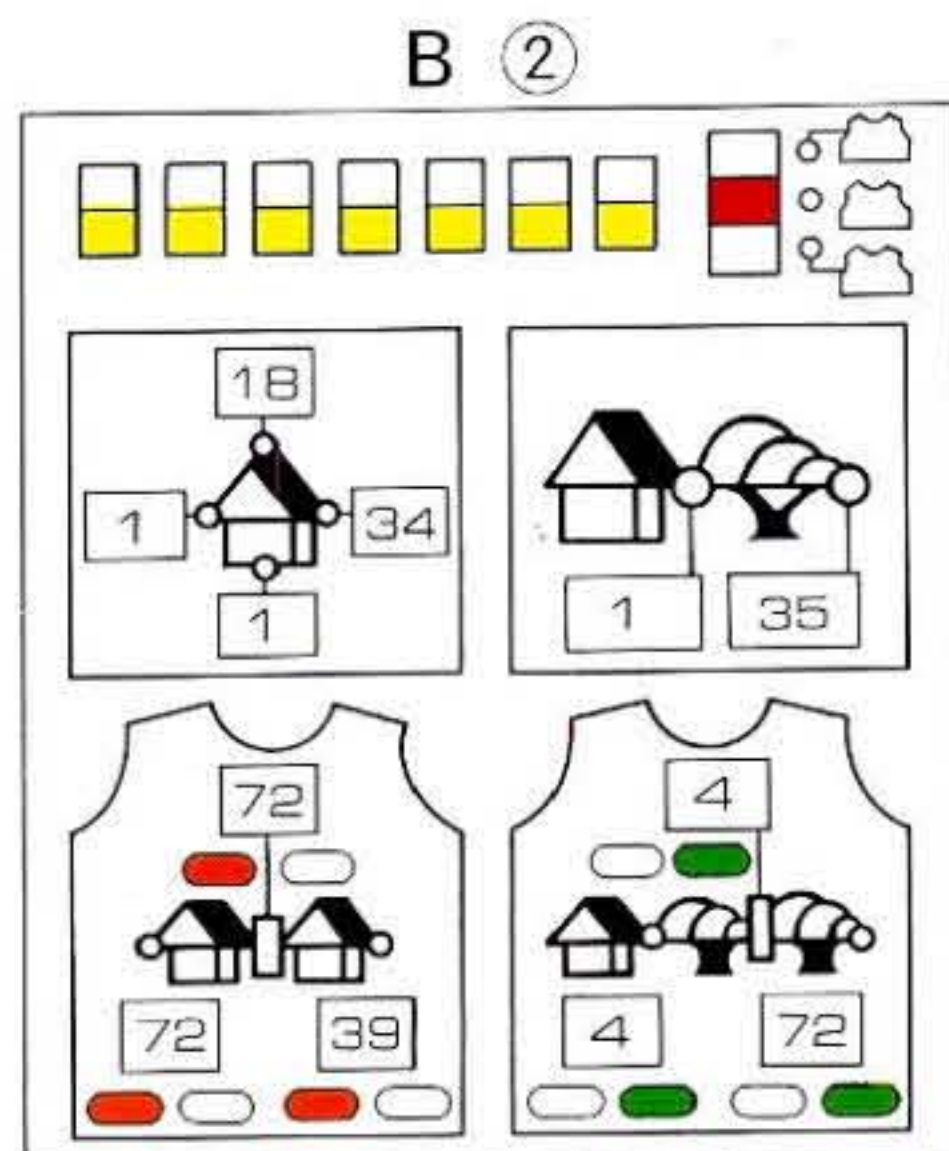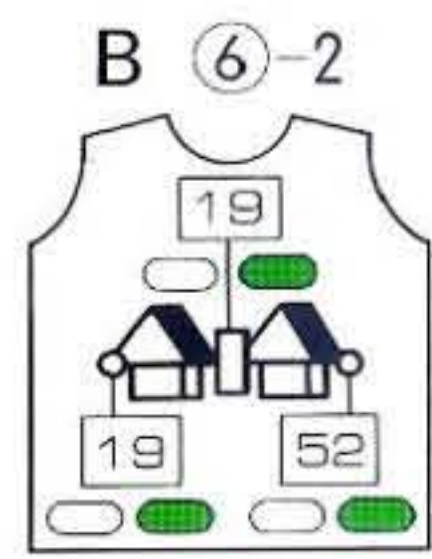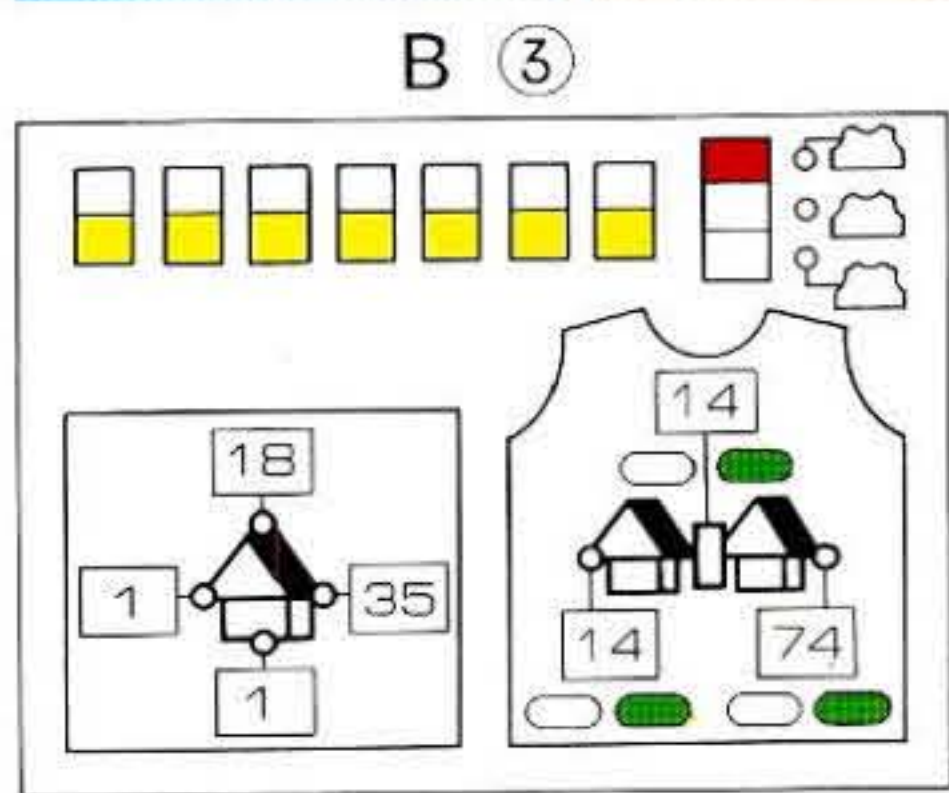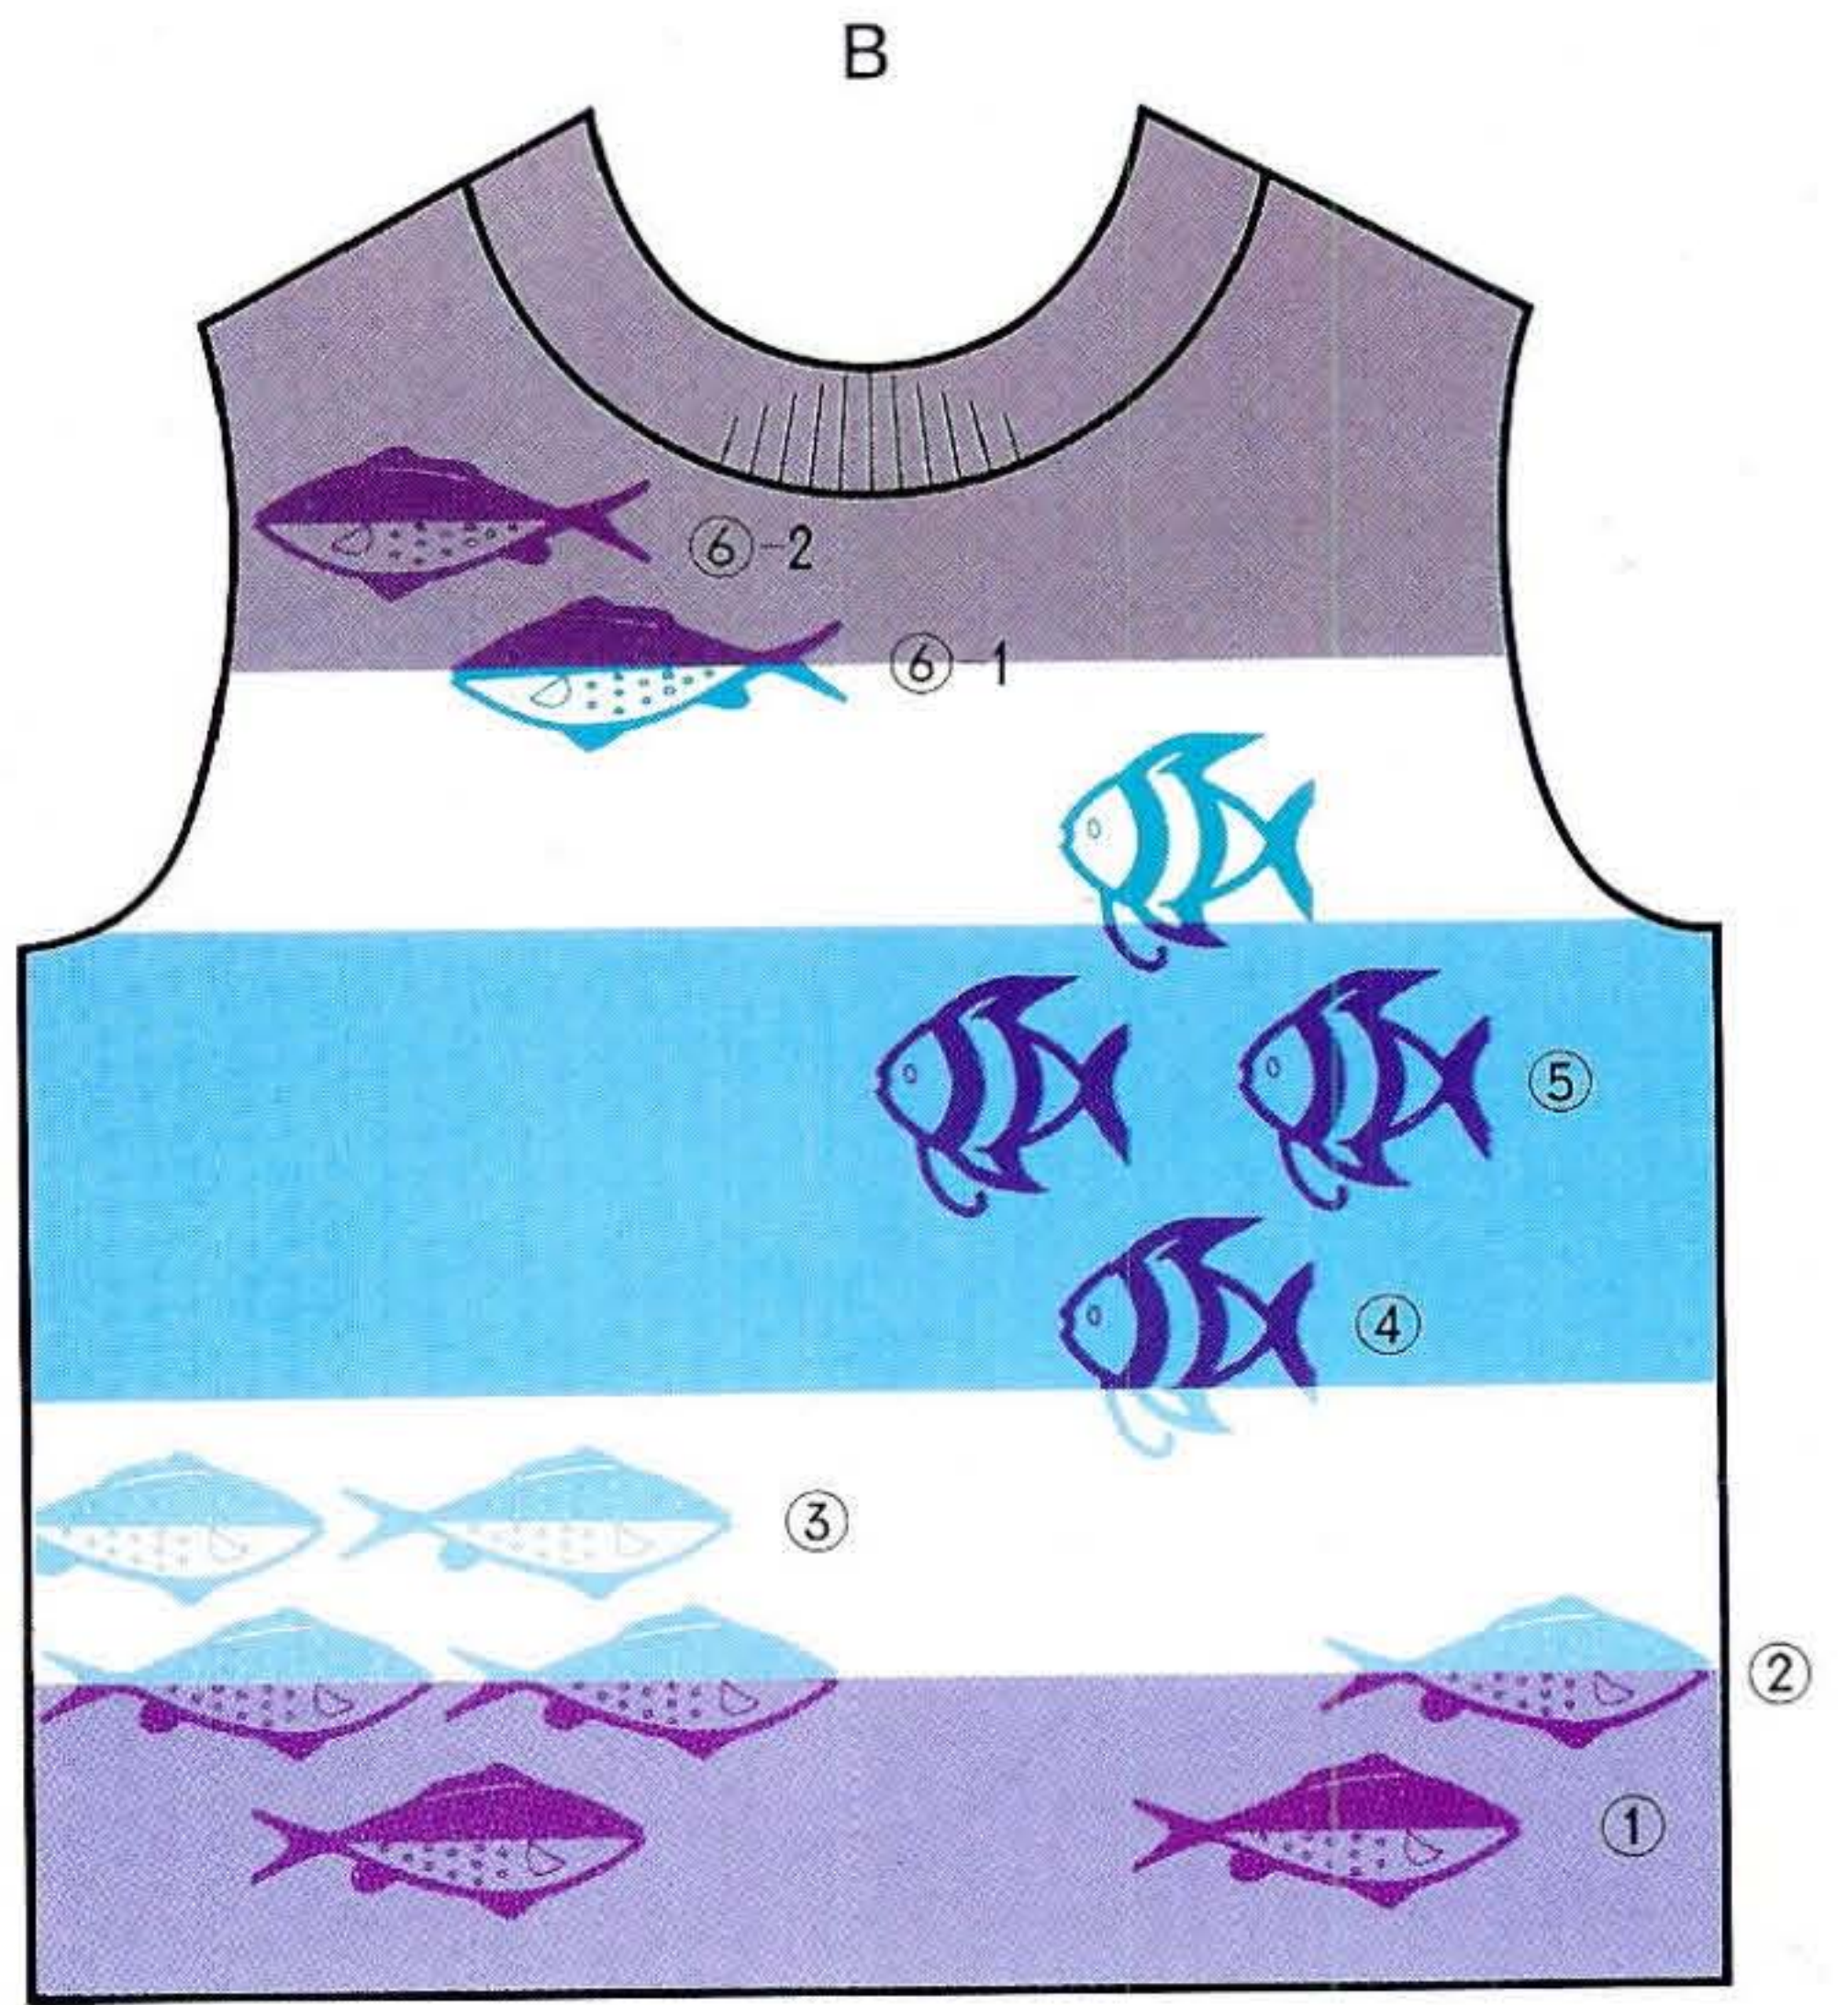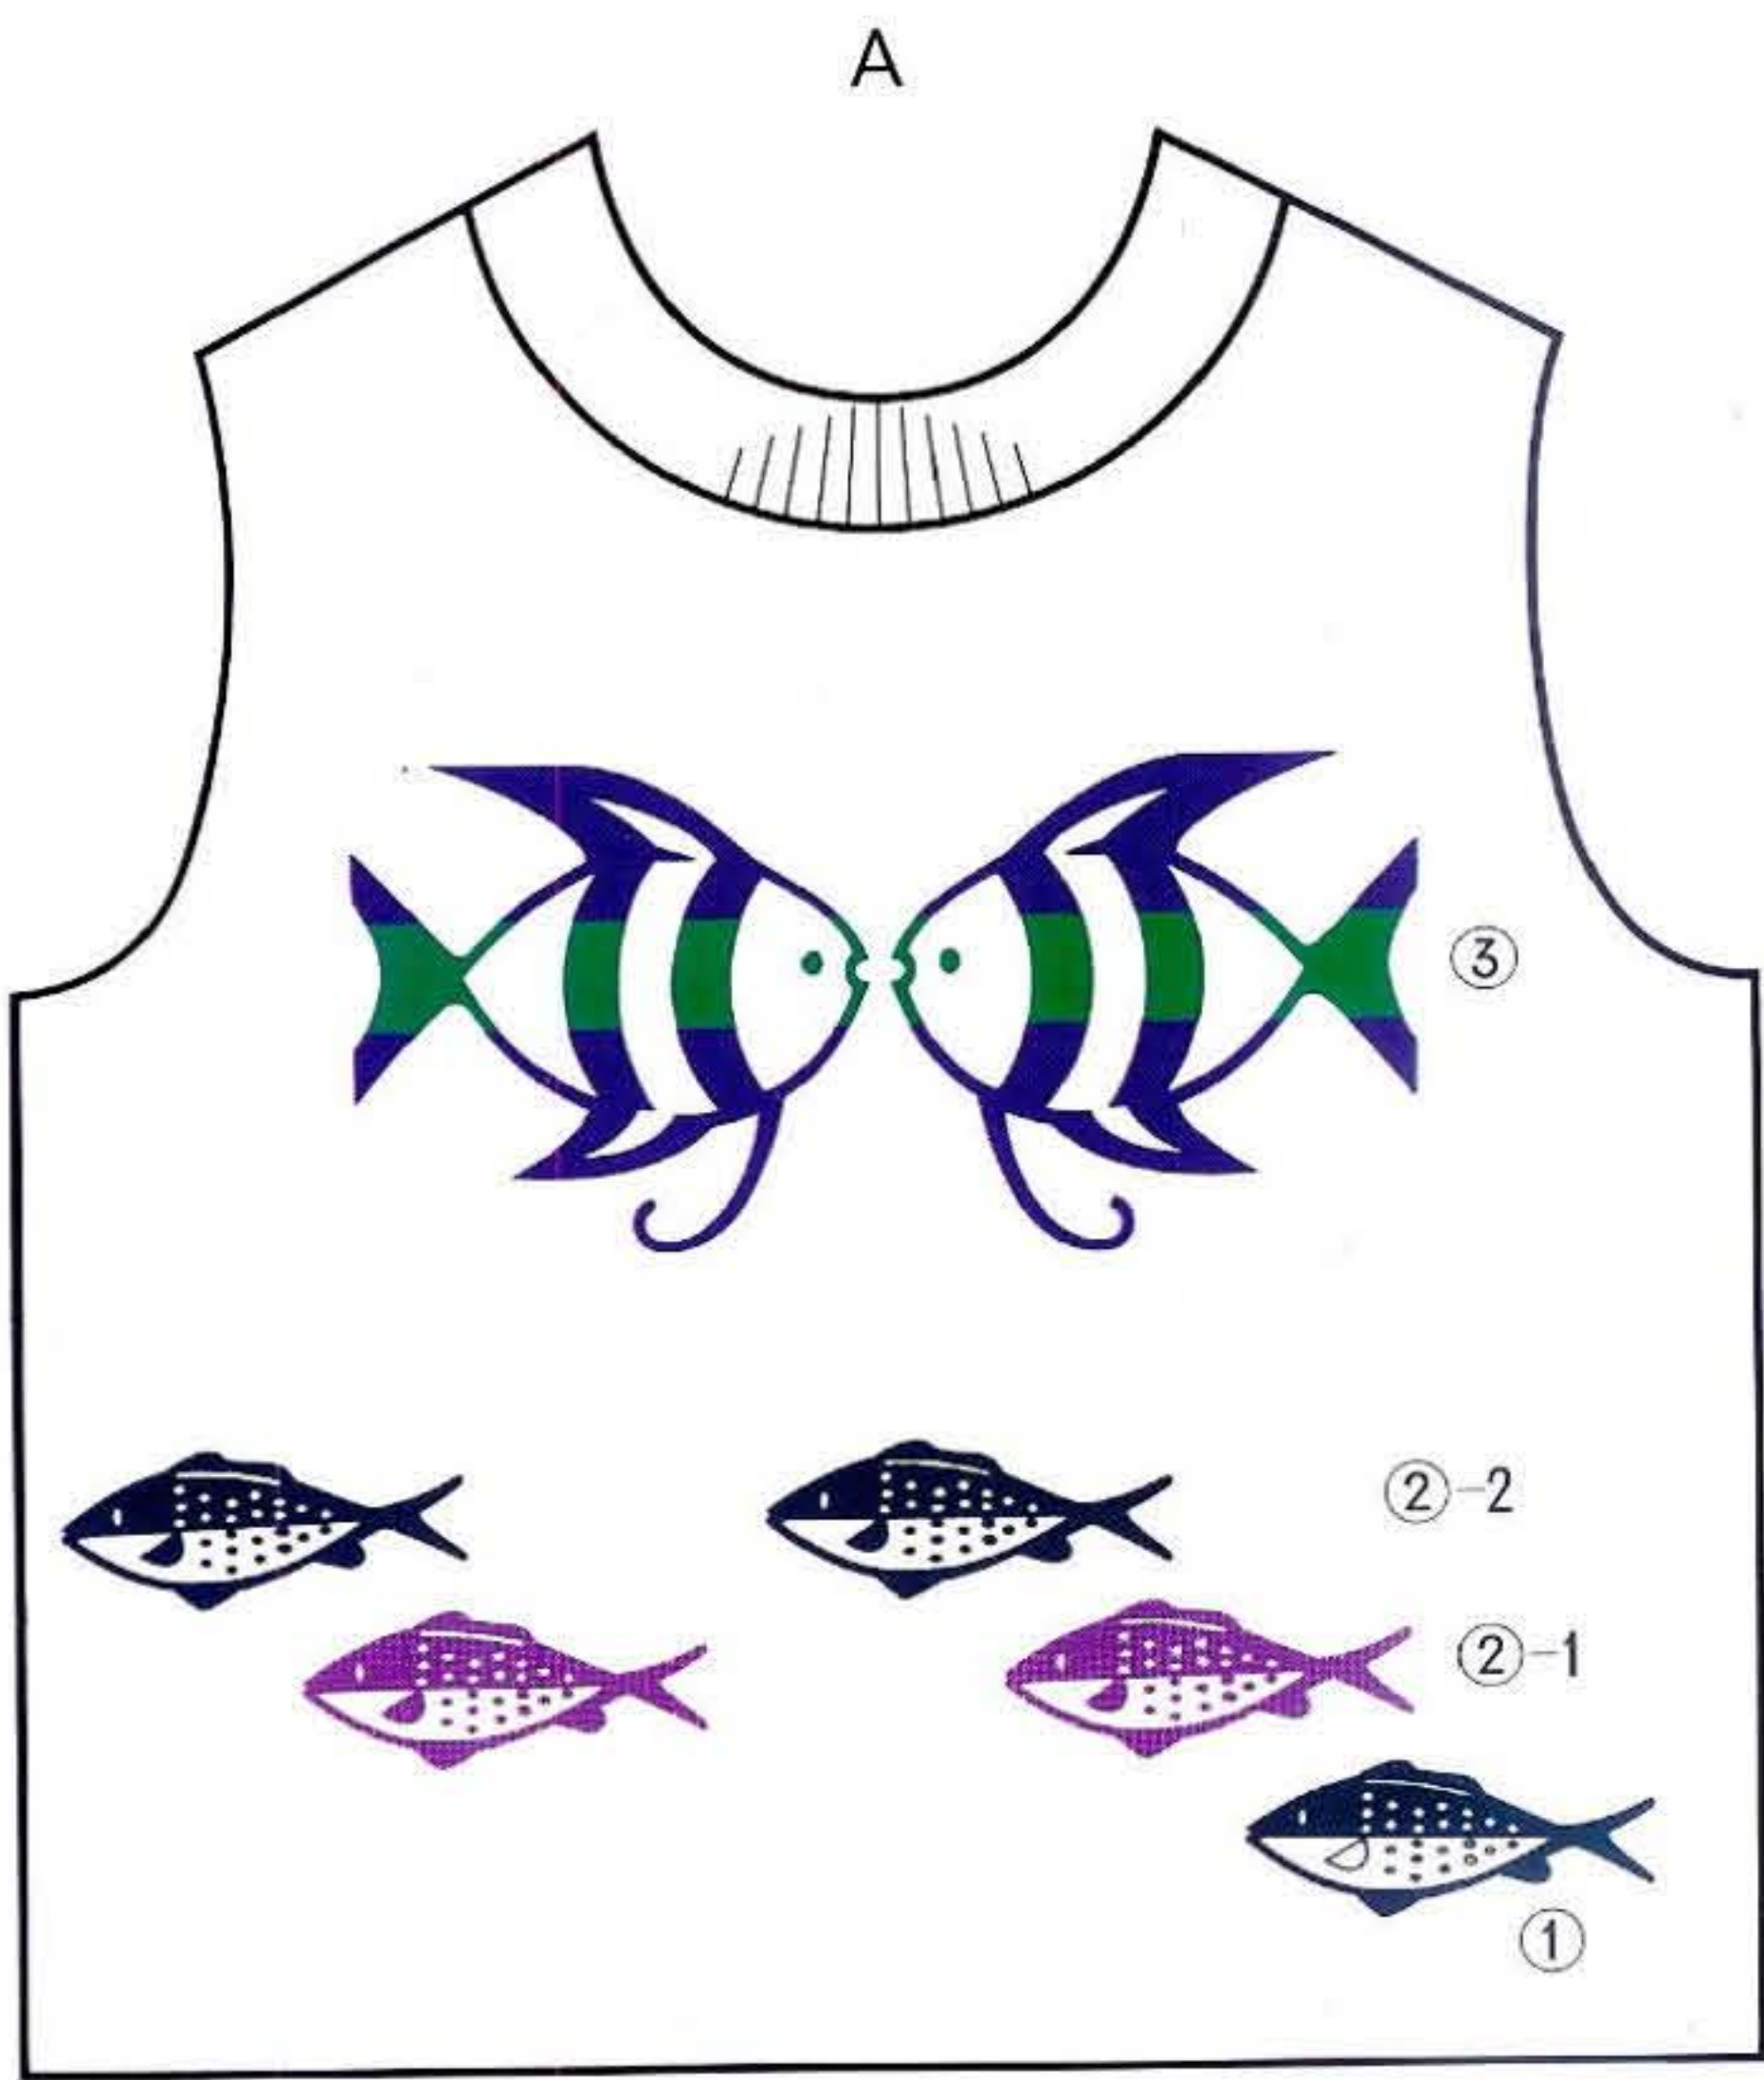         

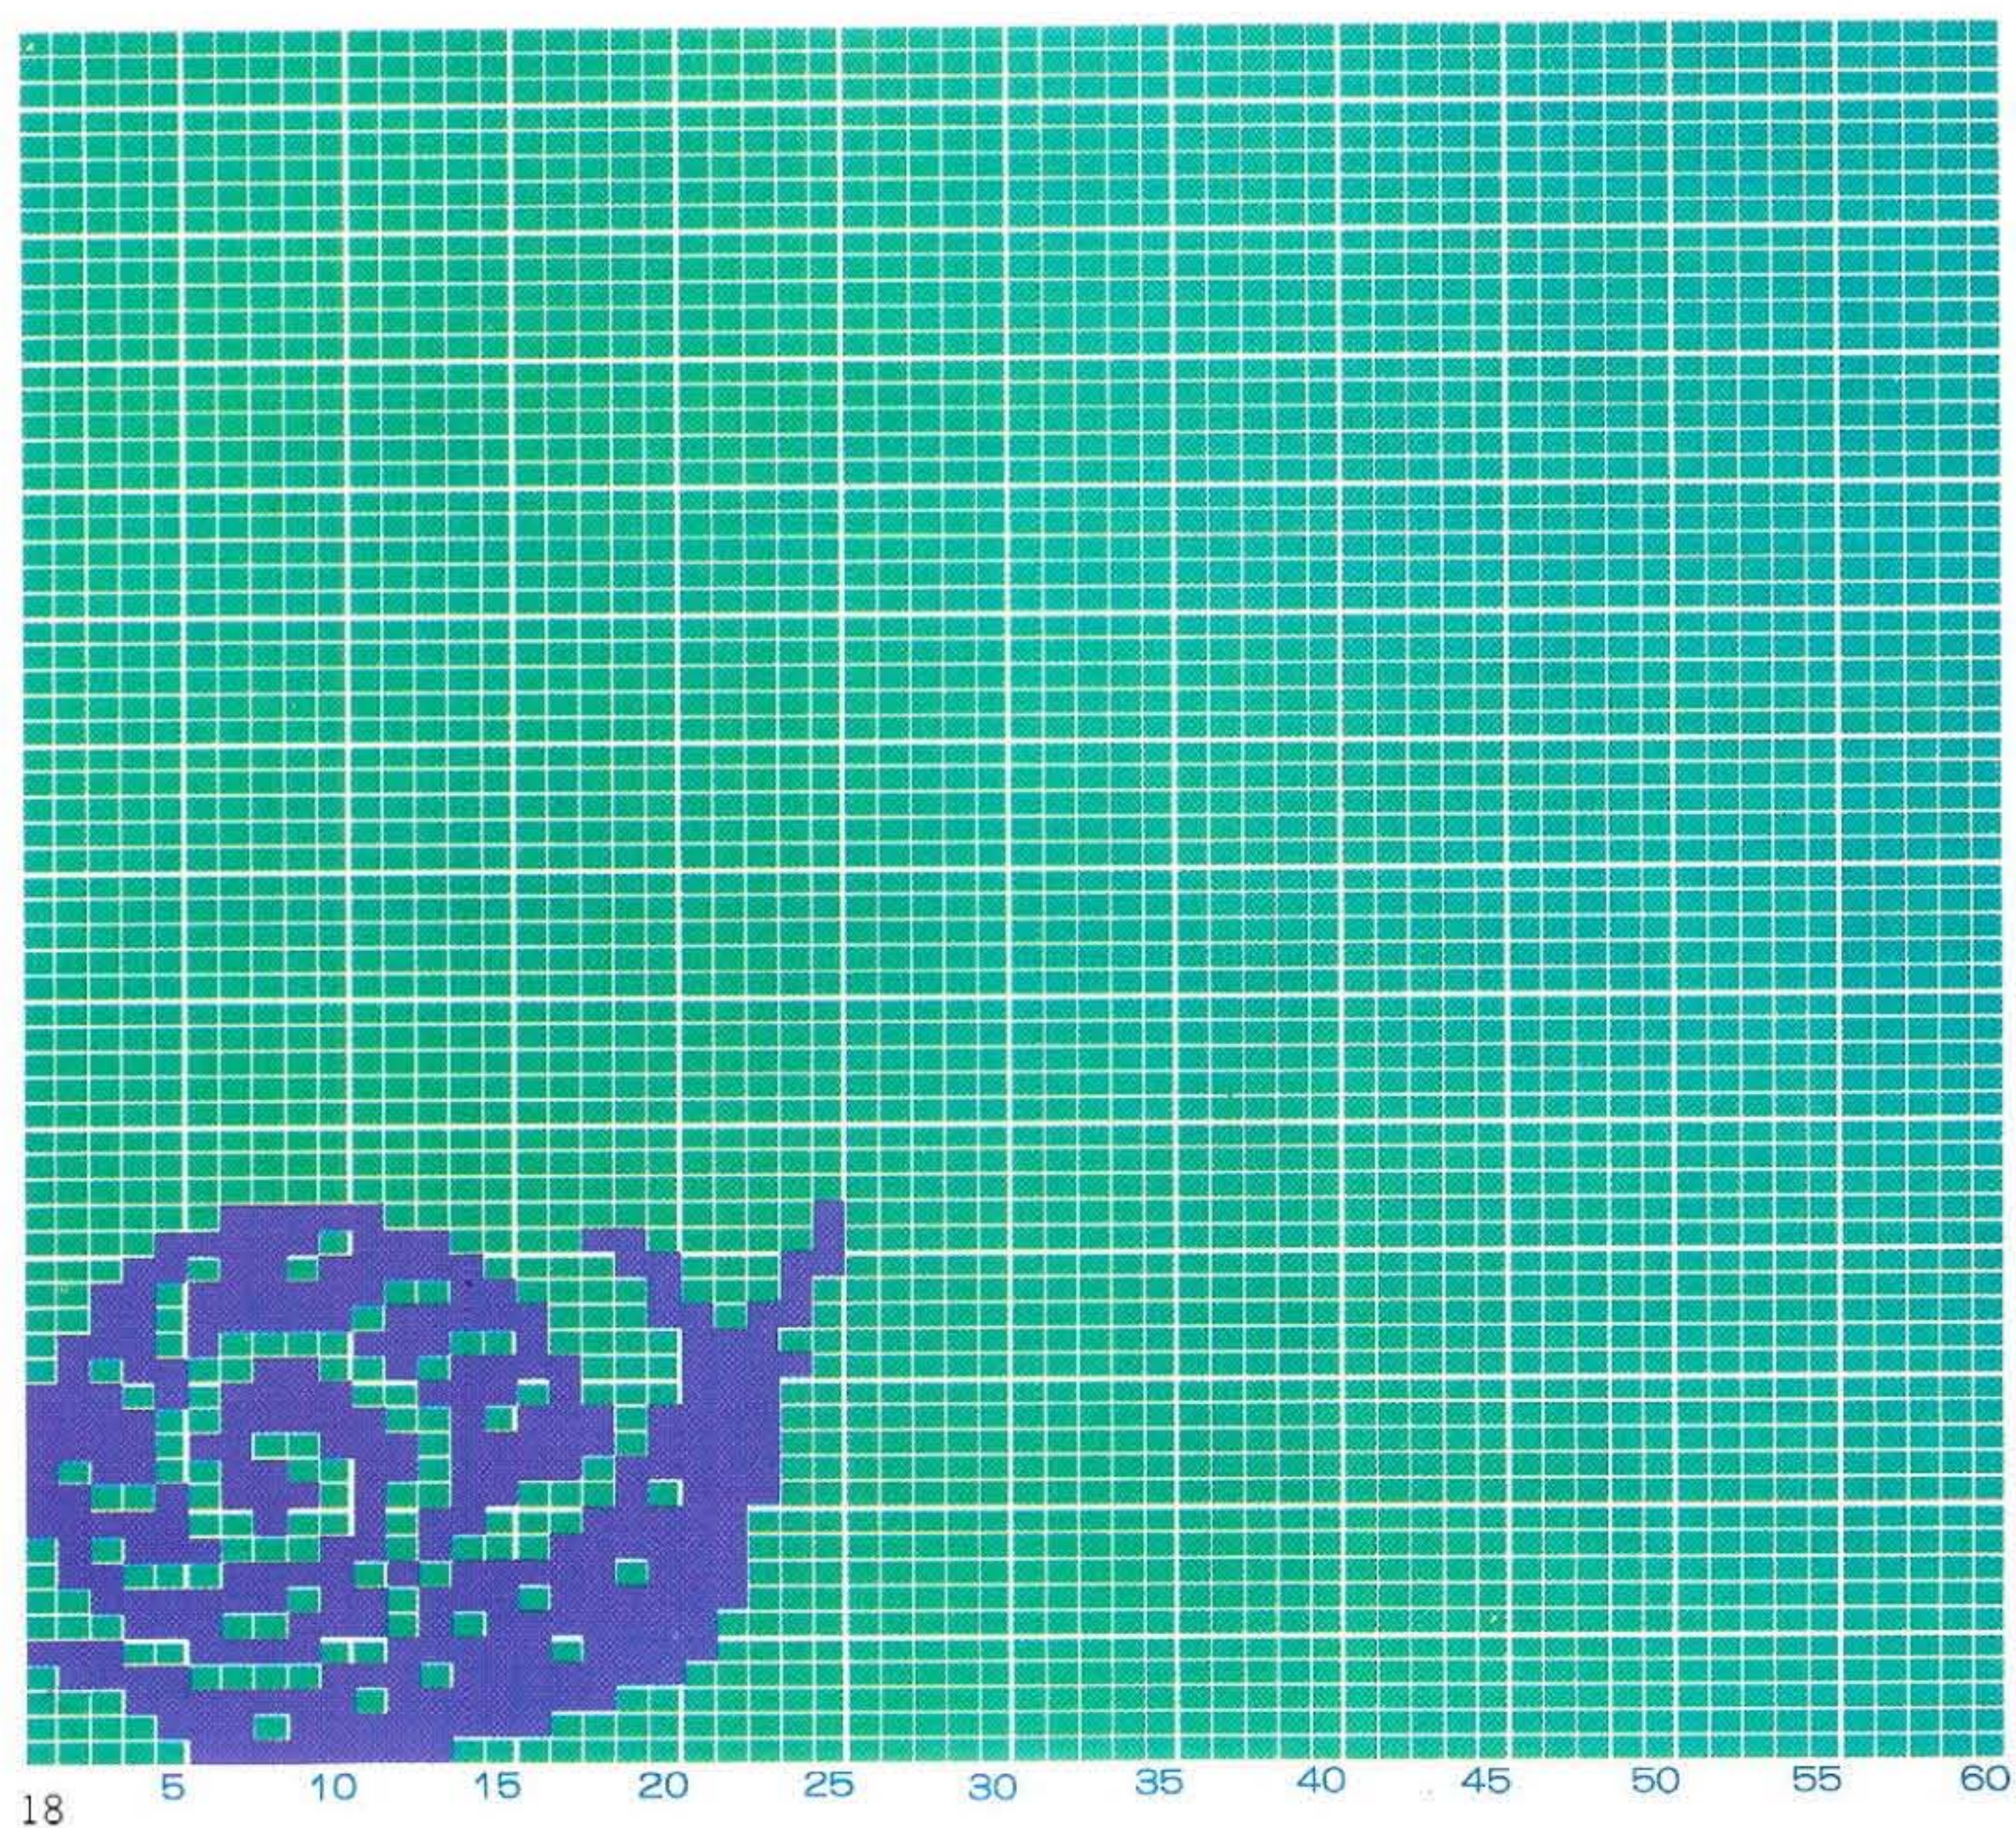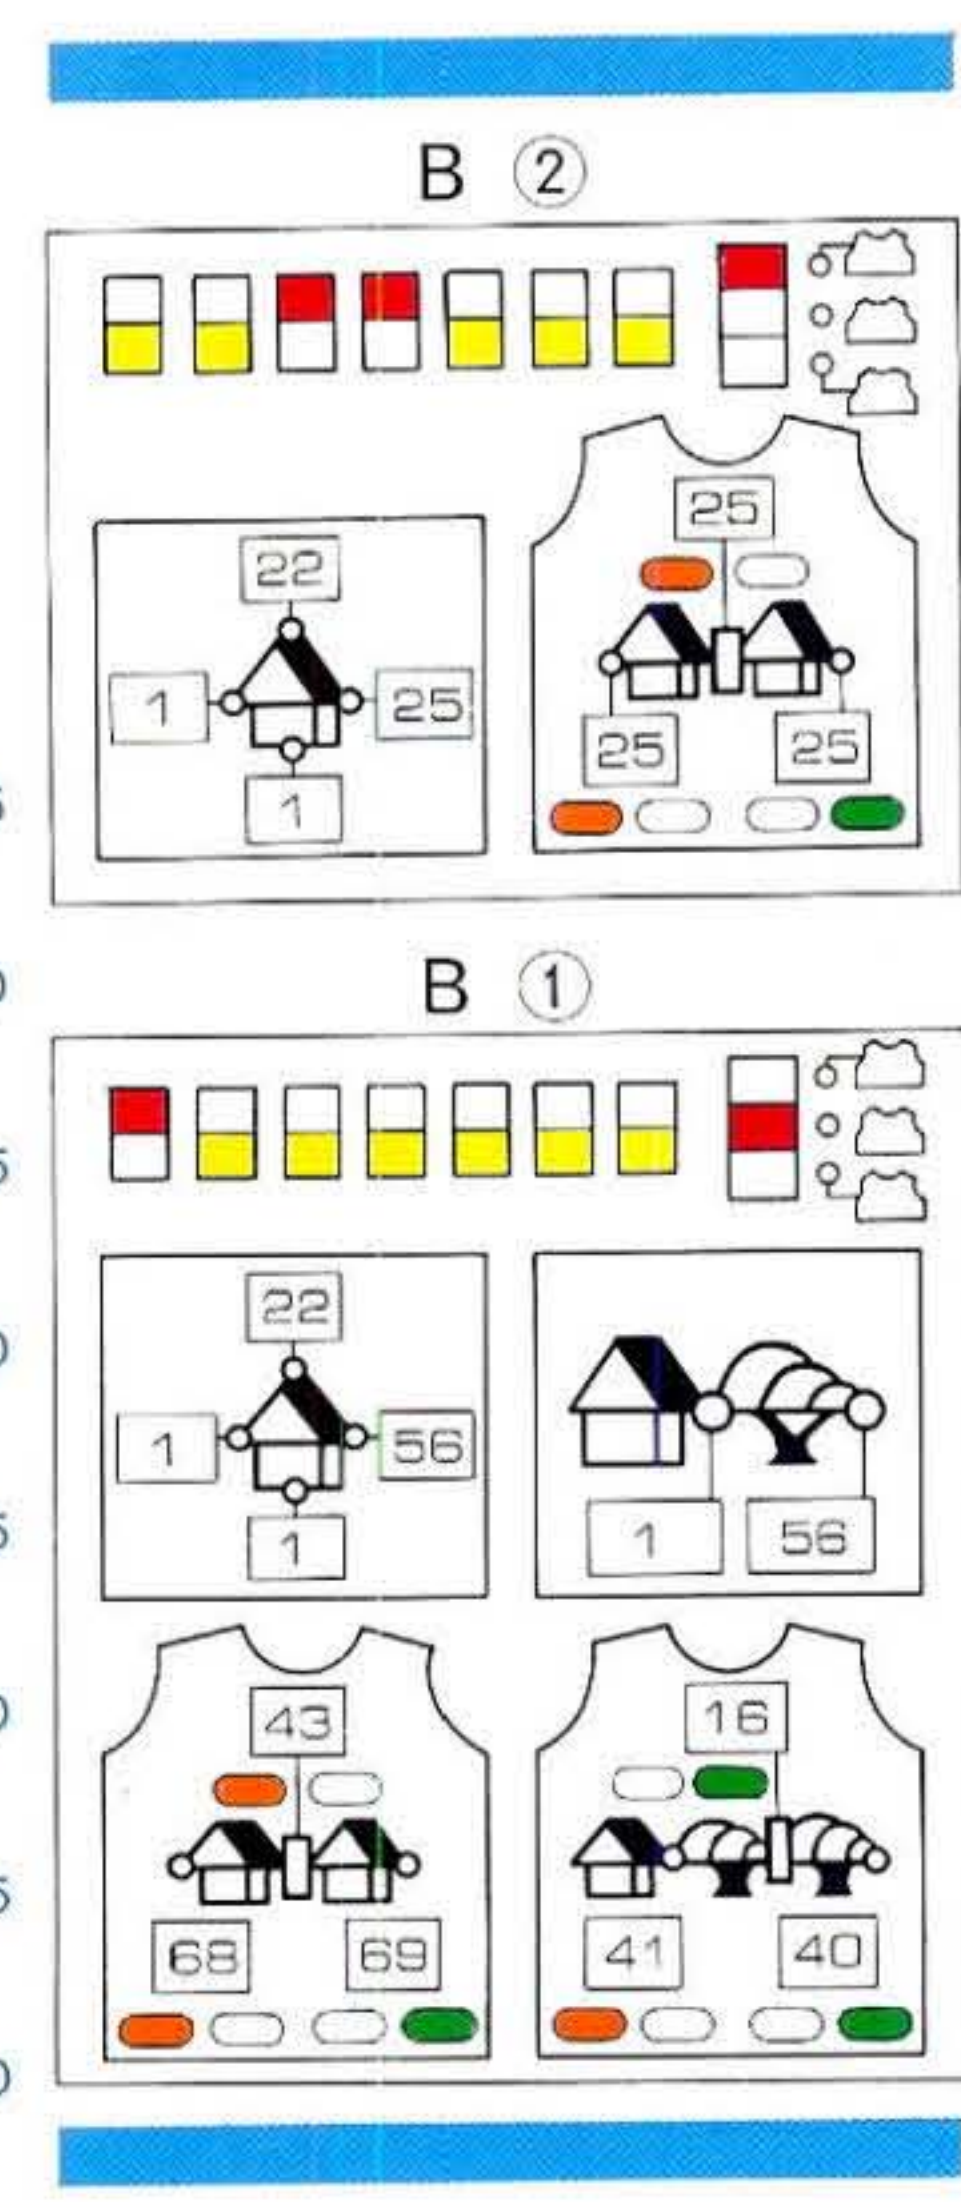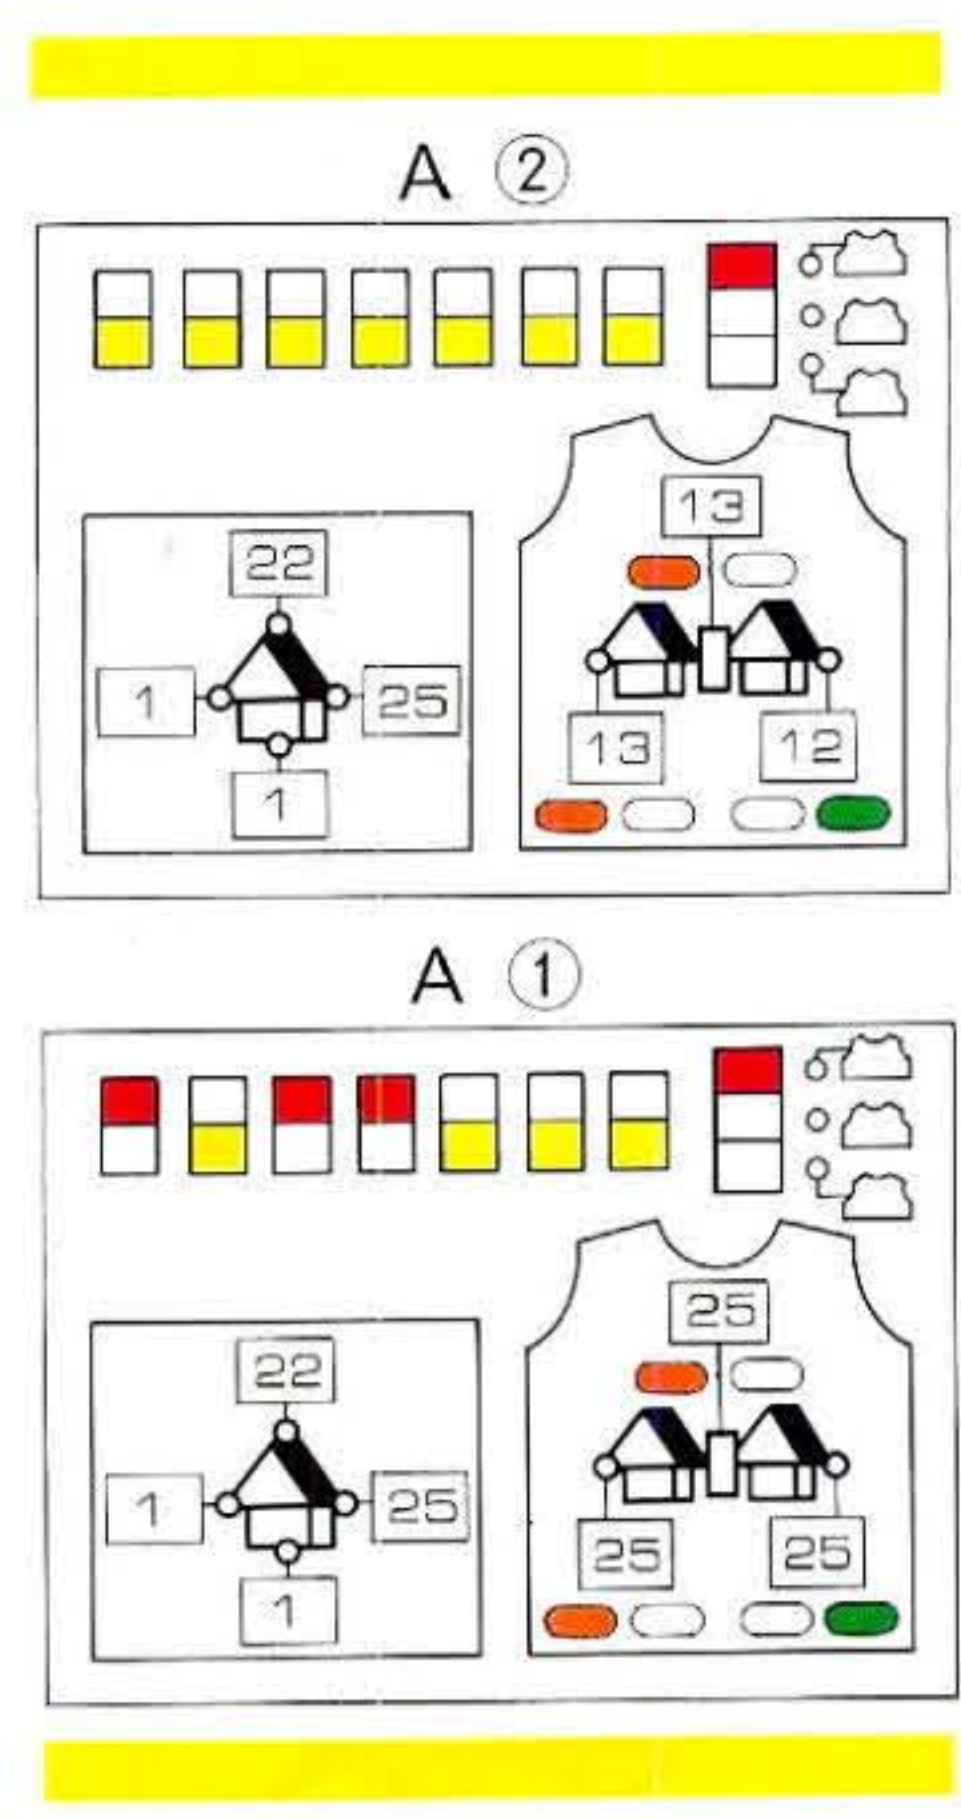   


A



B







 
C

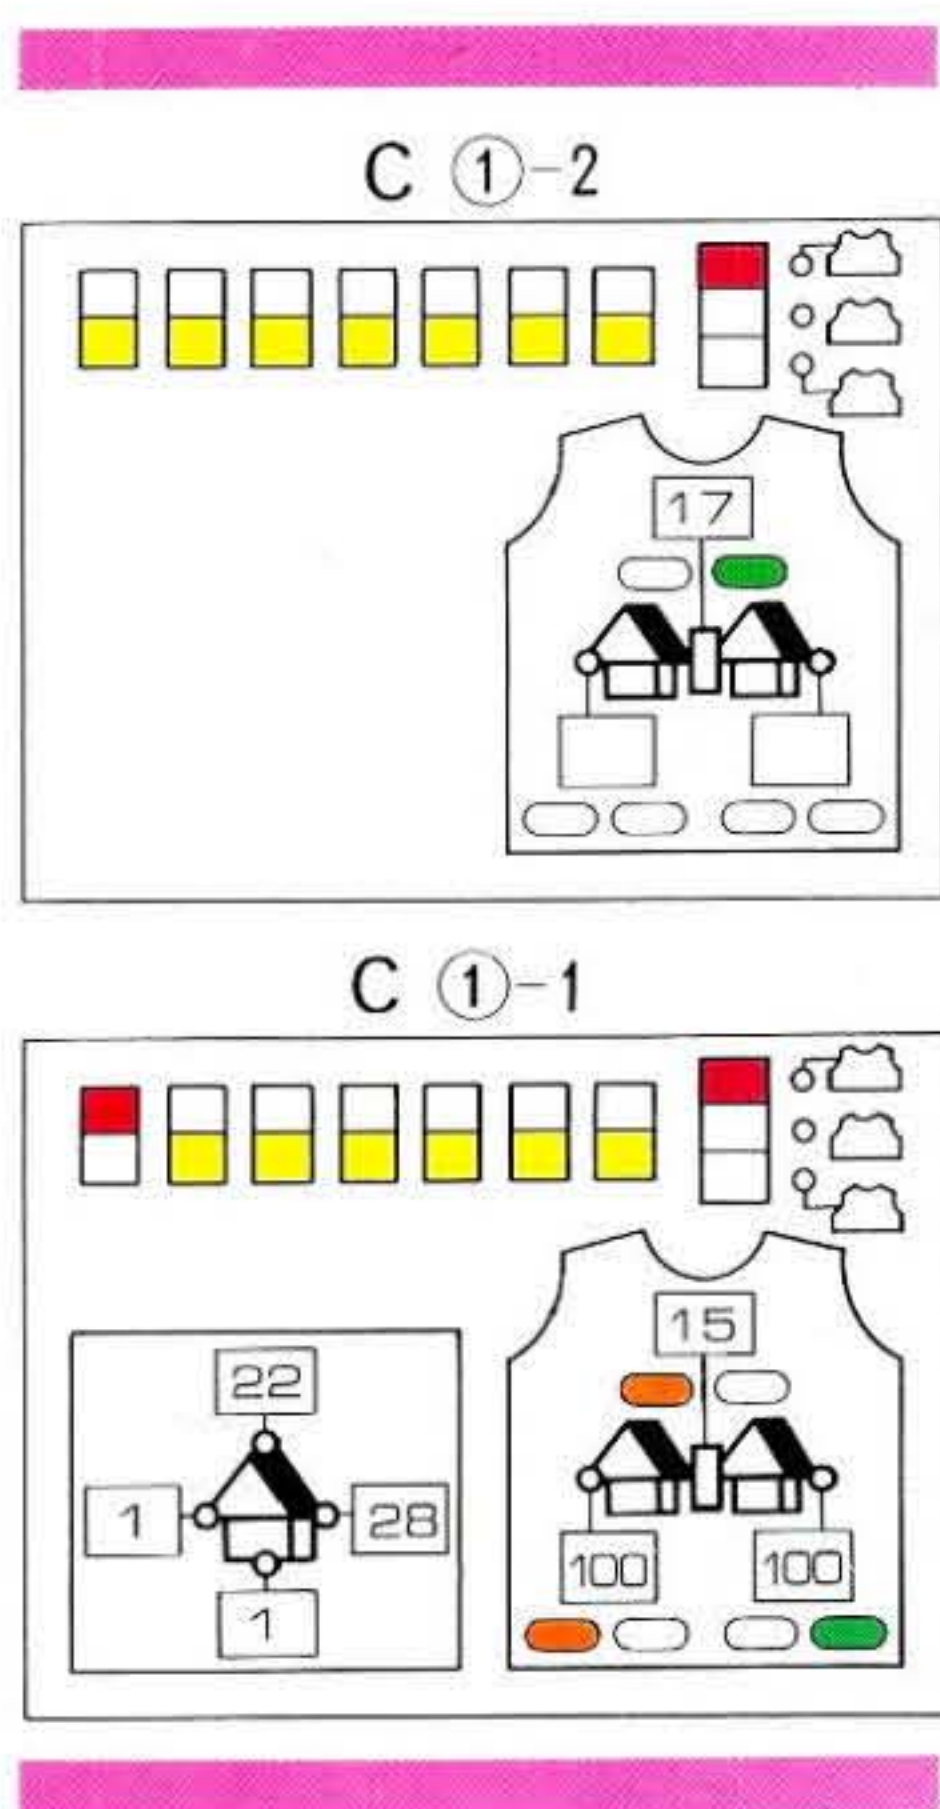


①-2

     
 
①-1

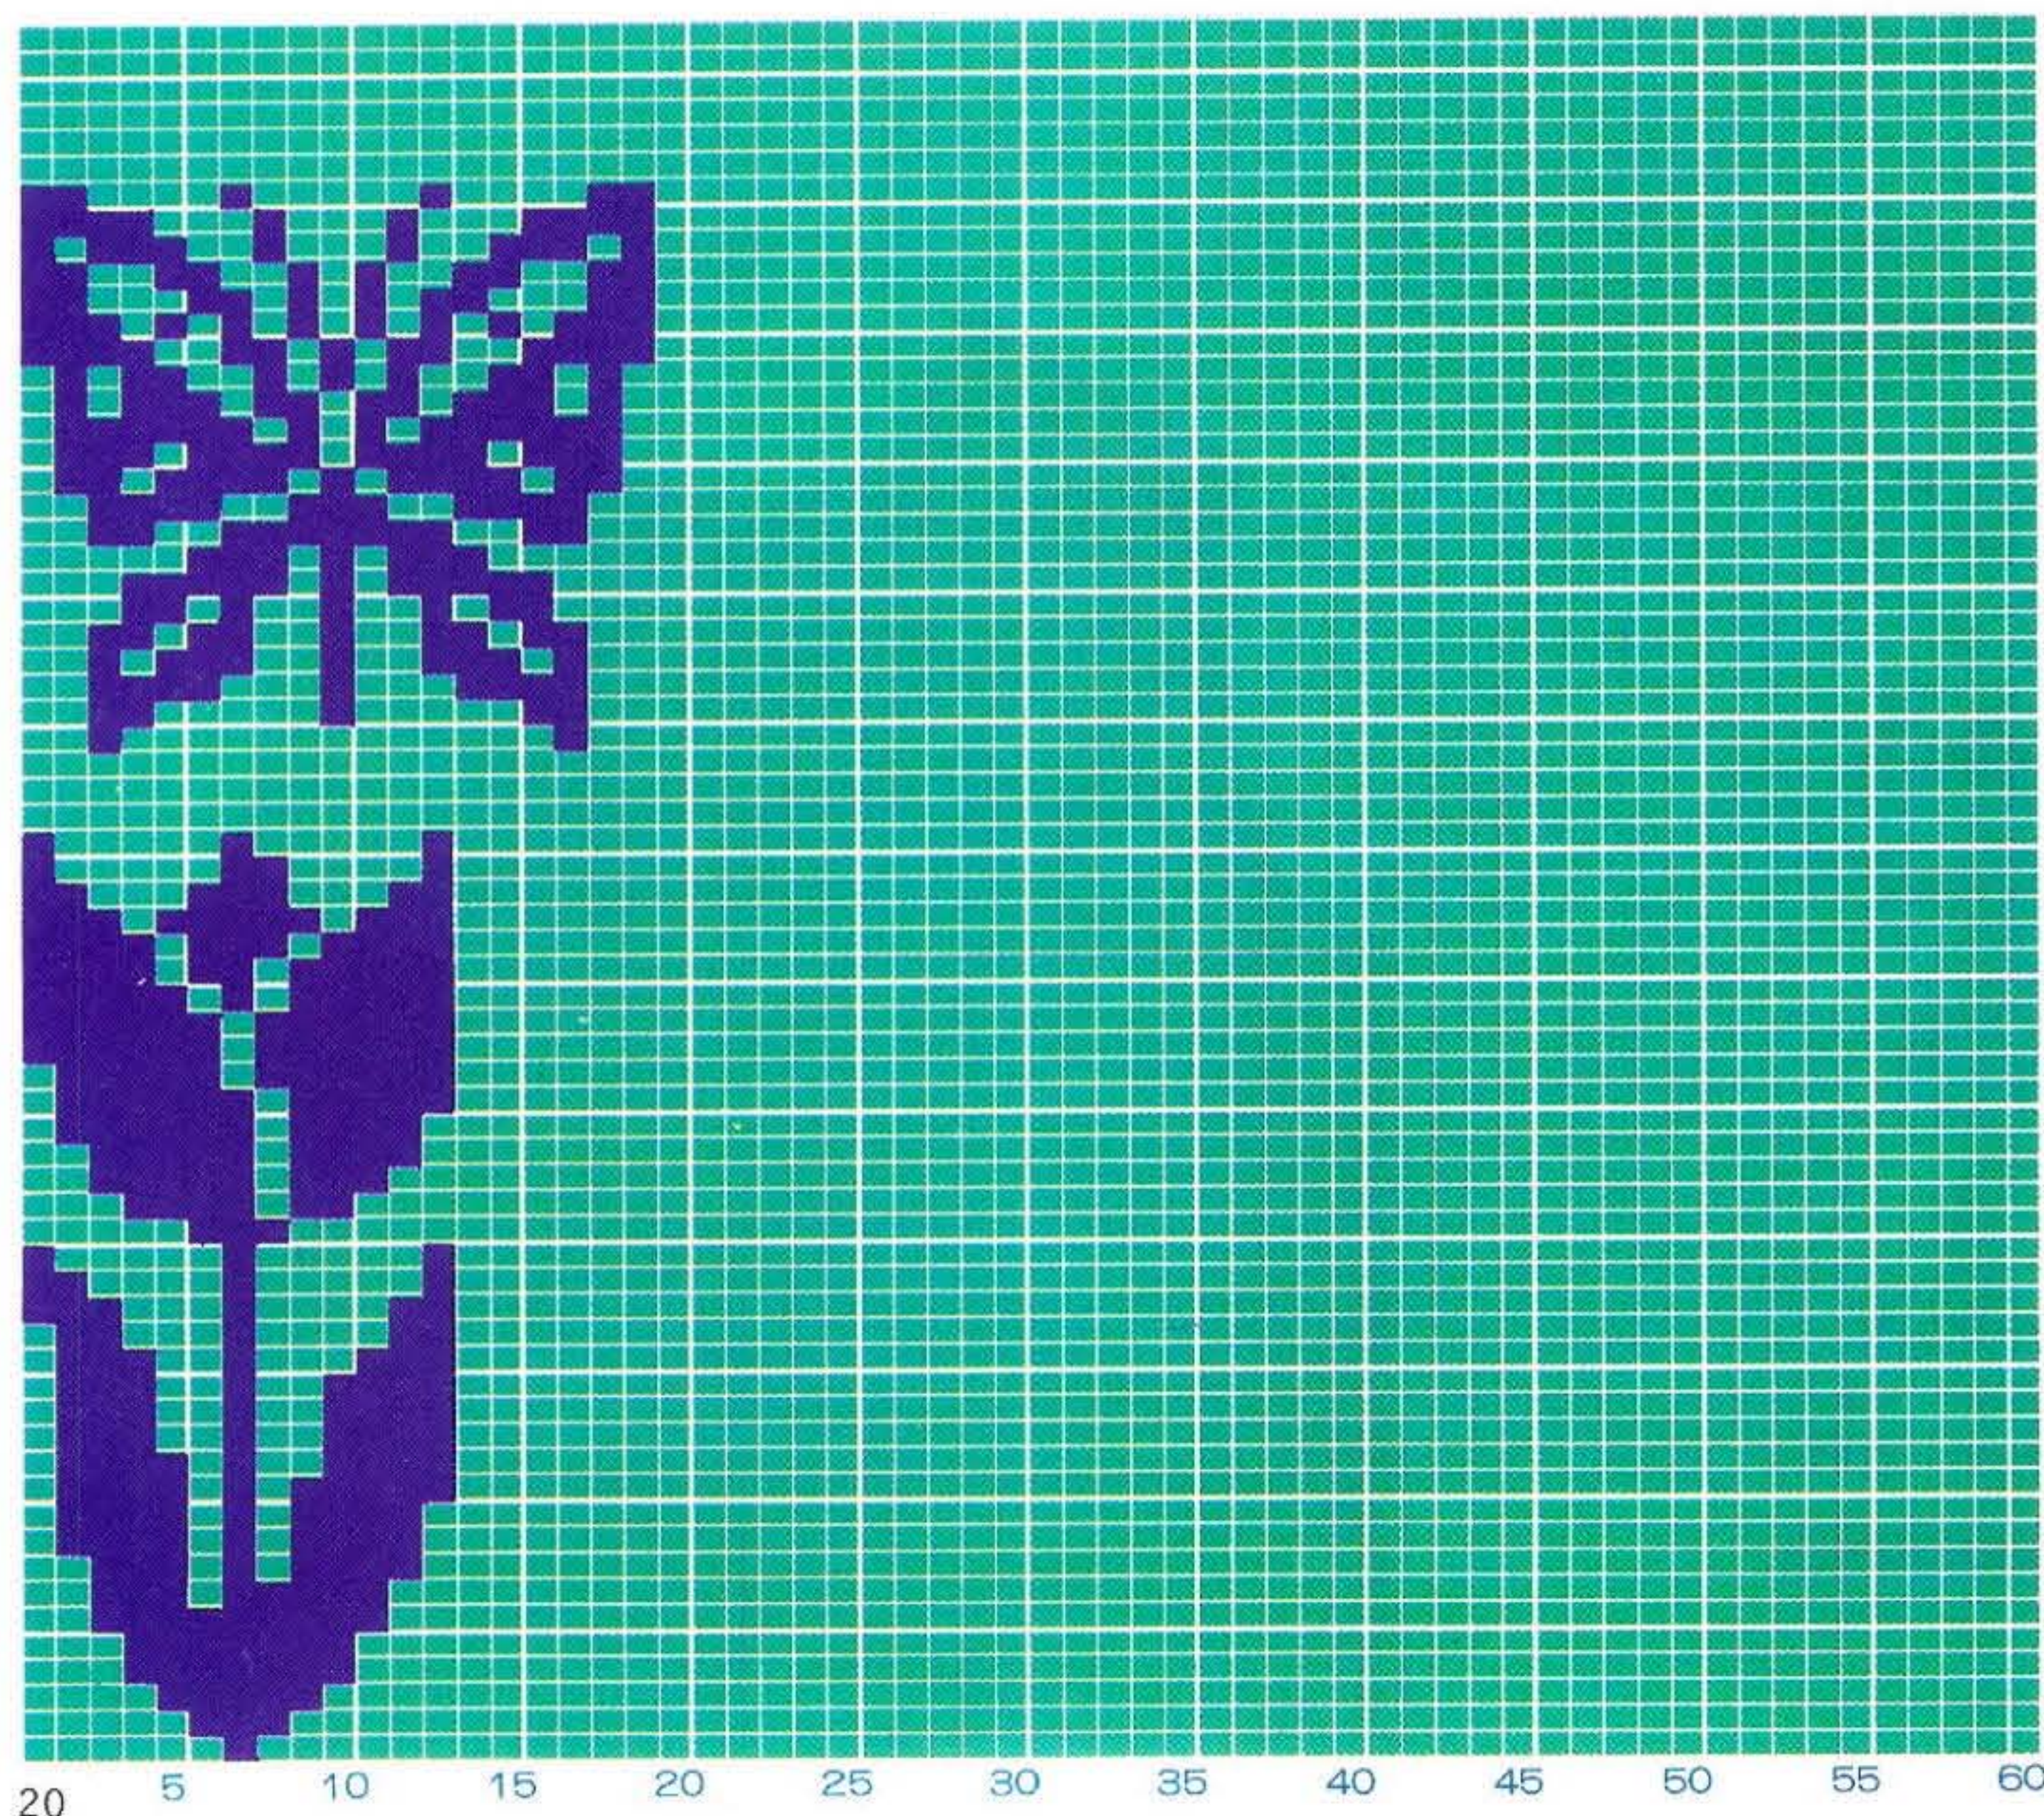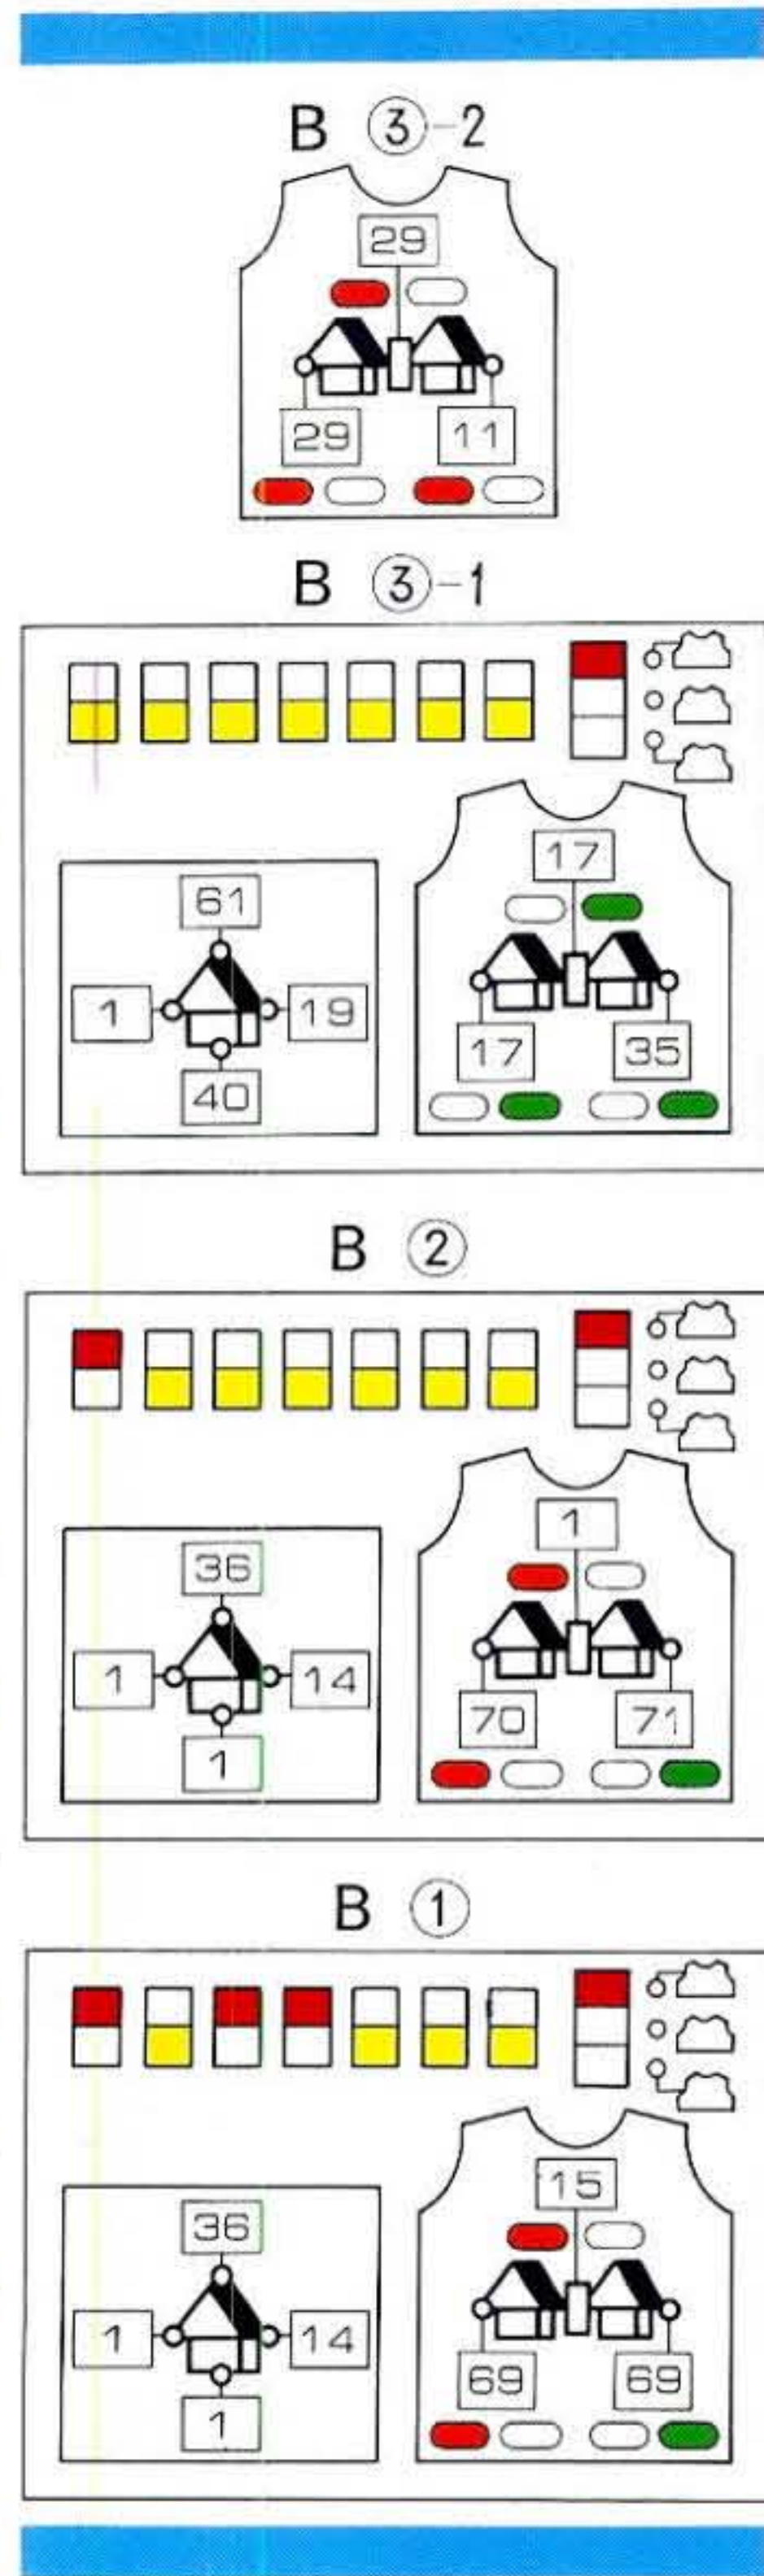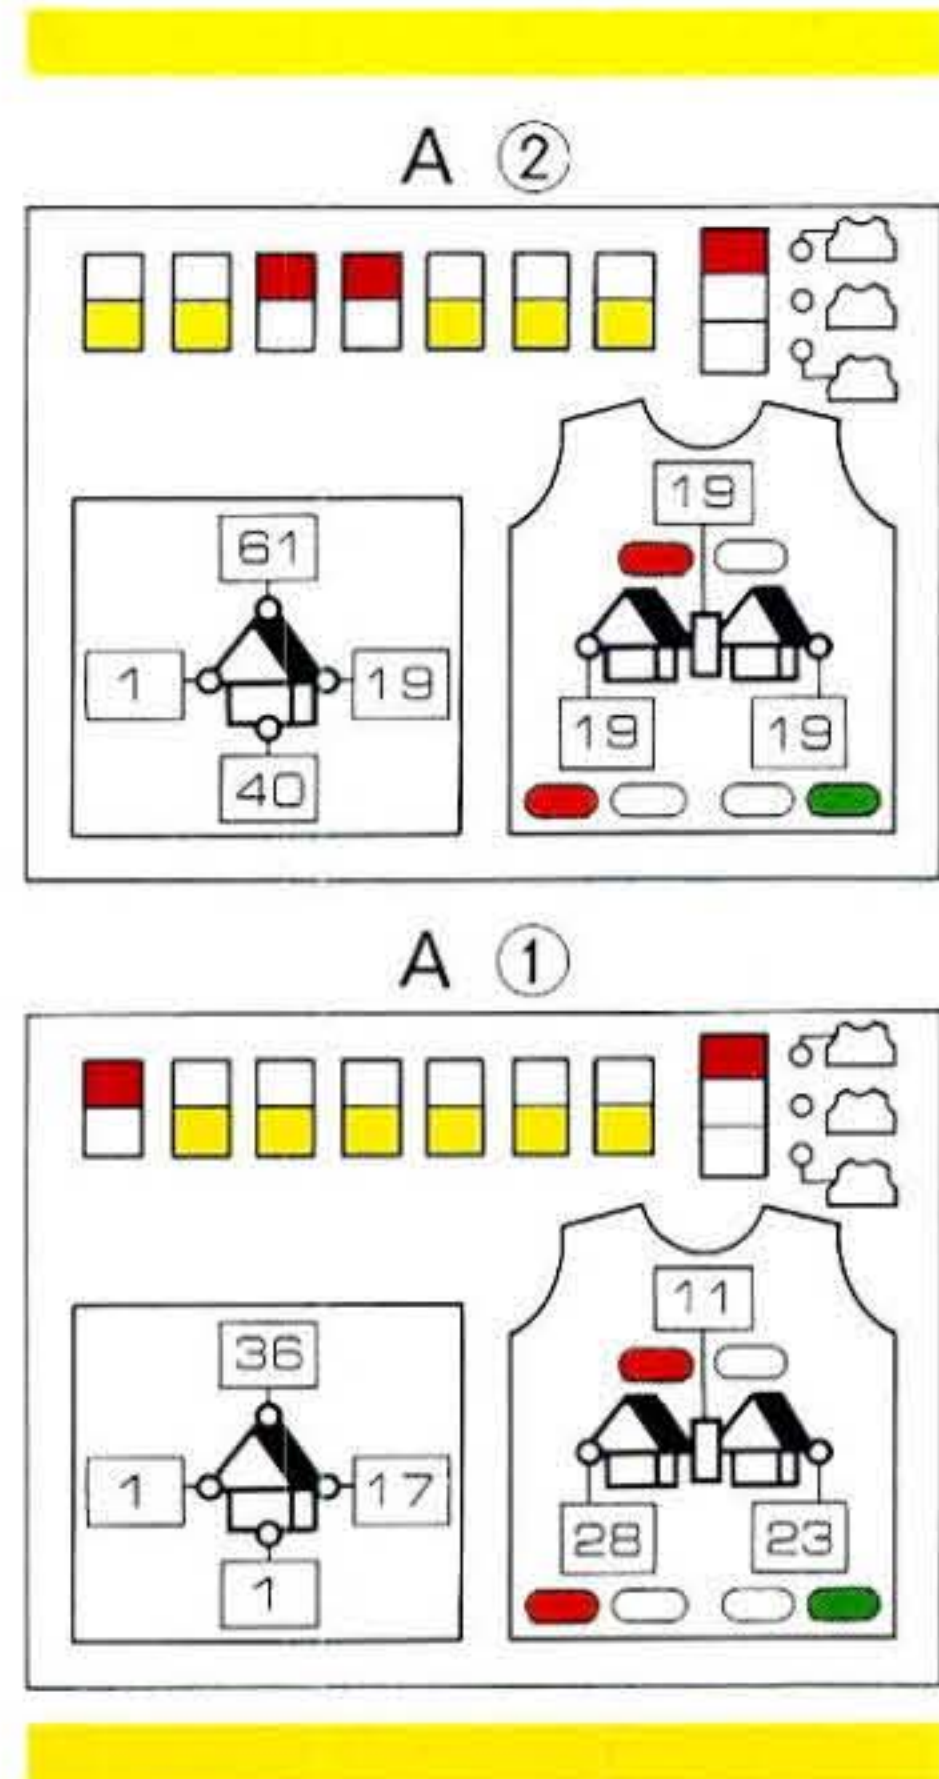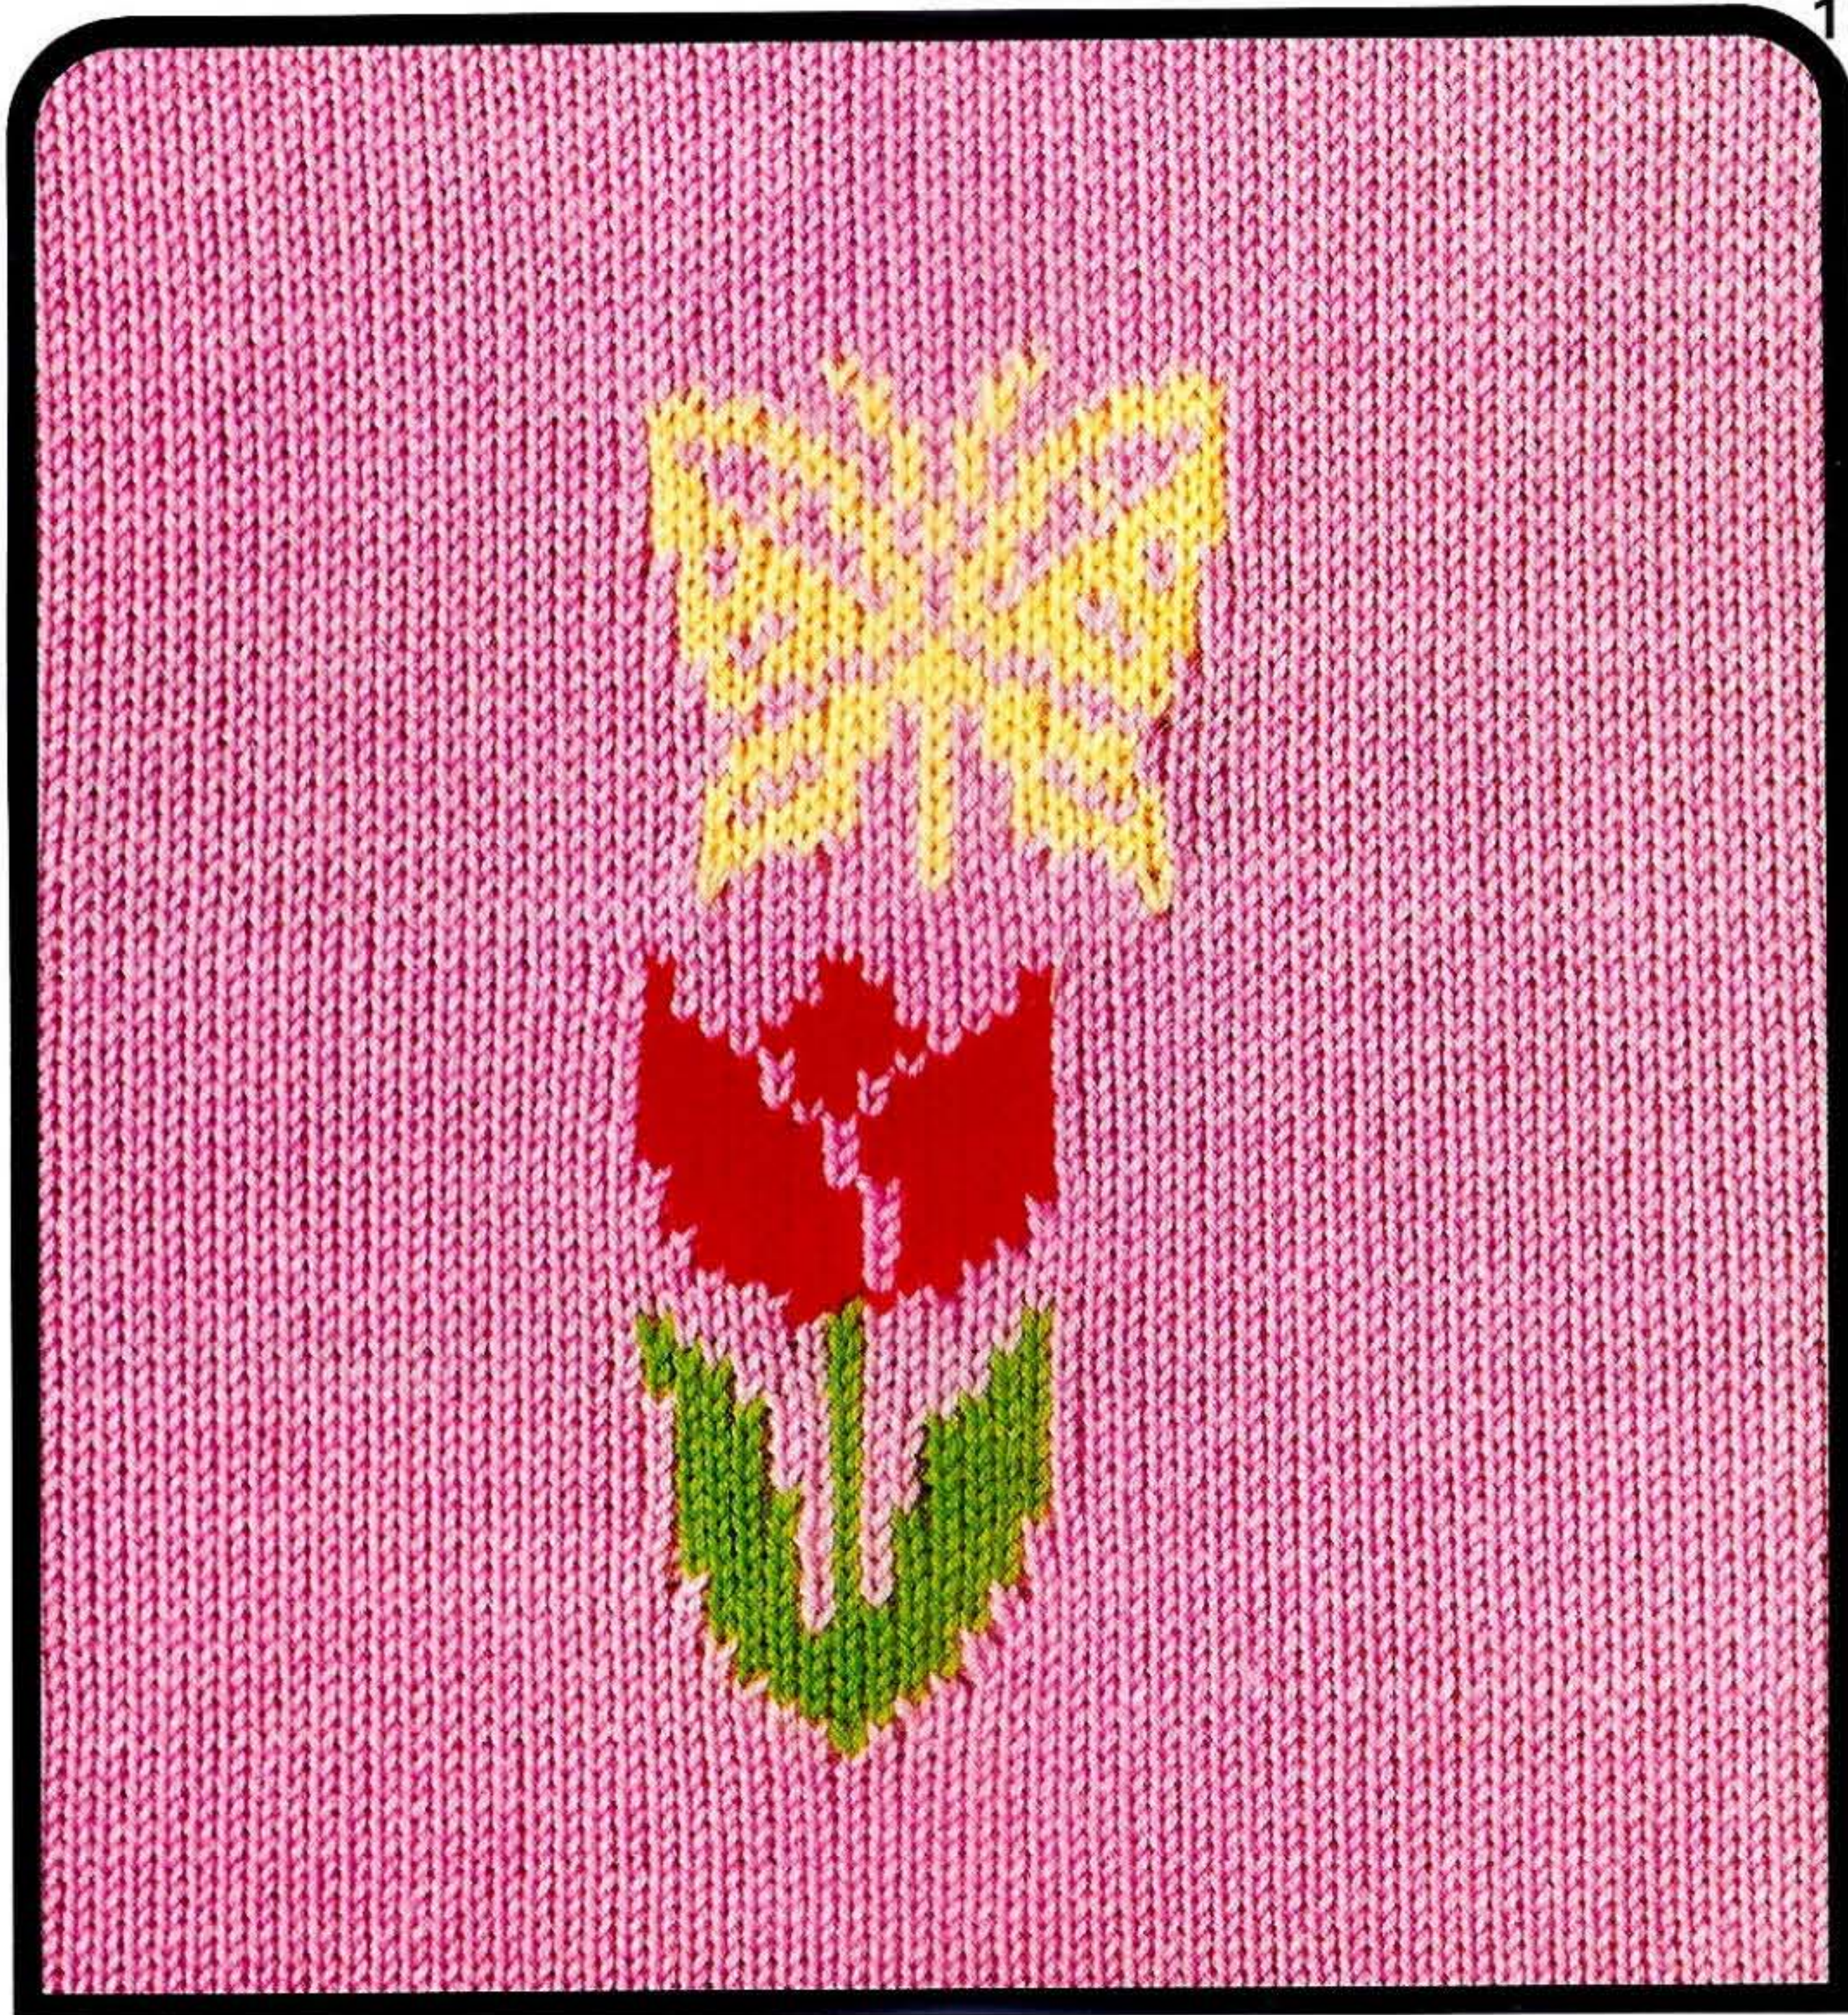

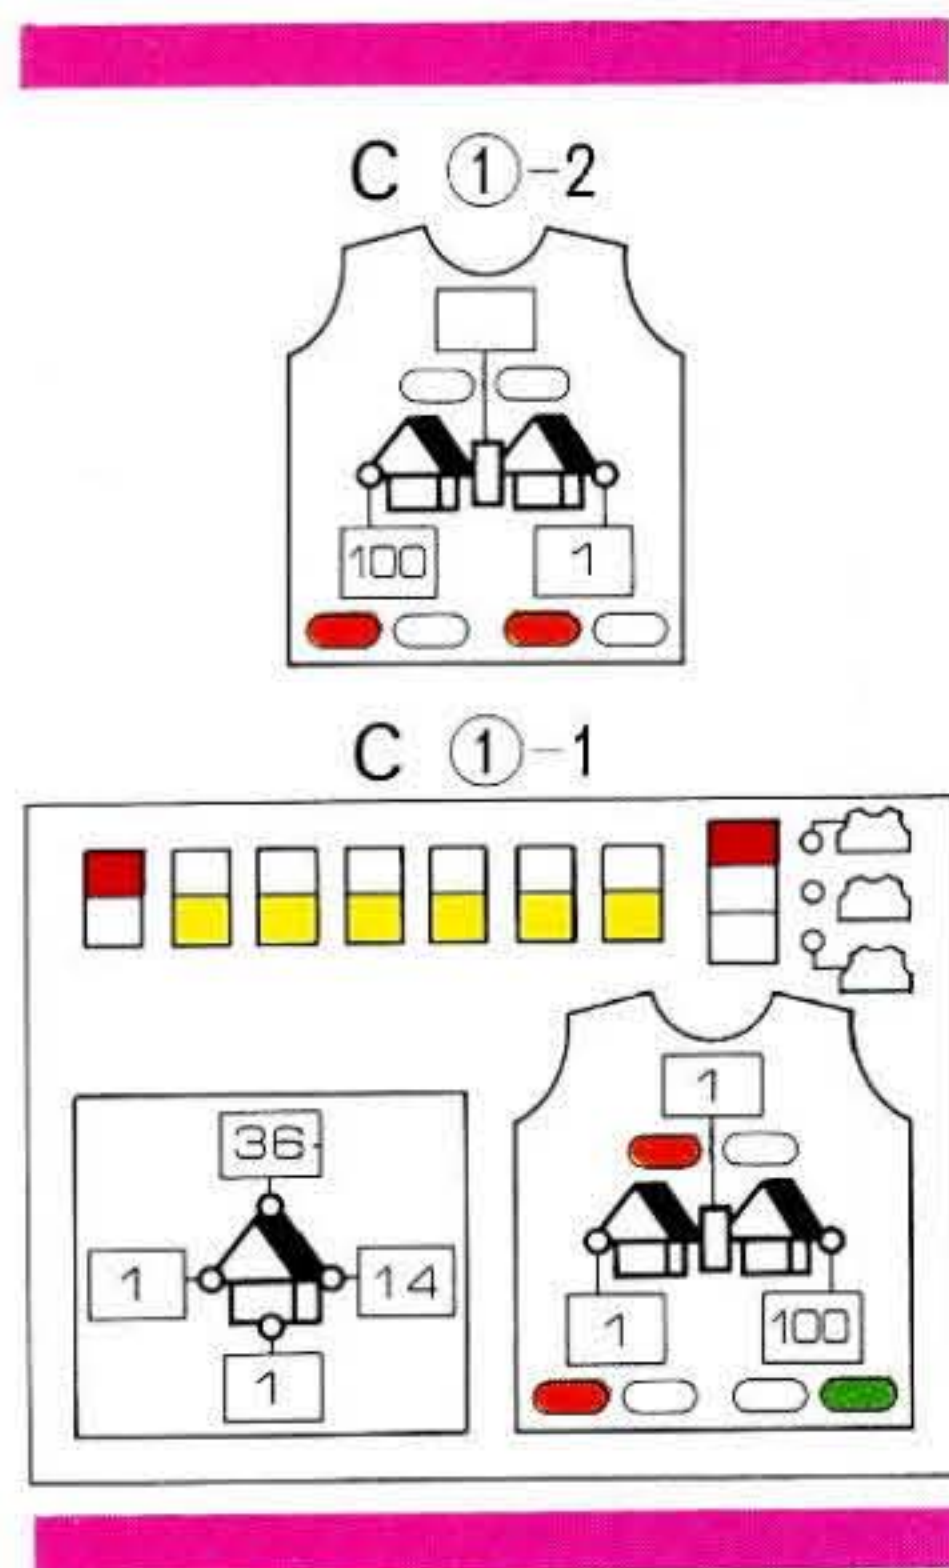

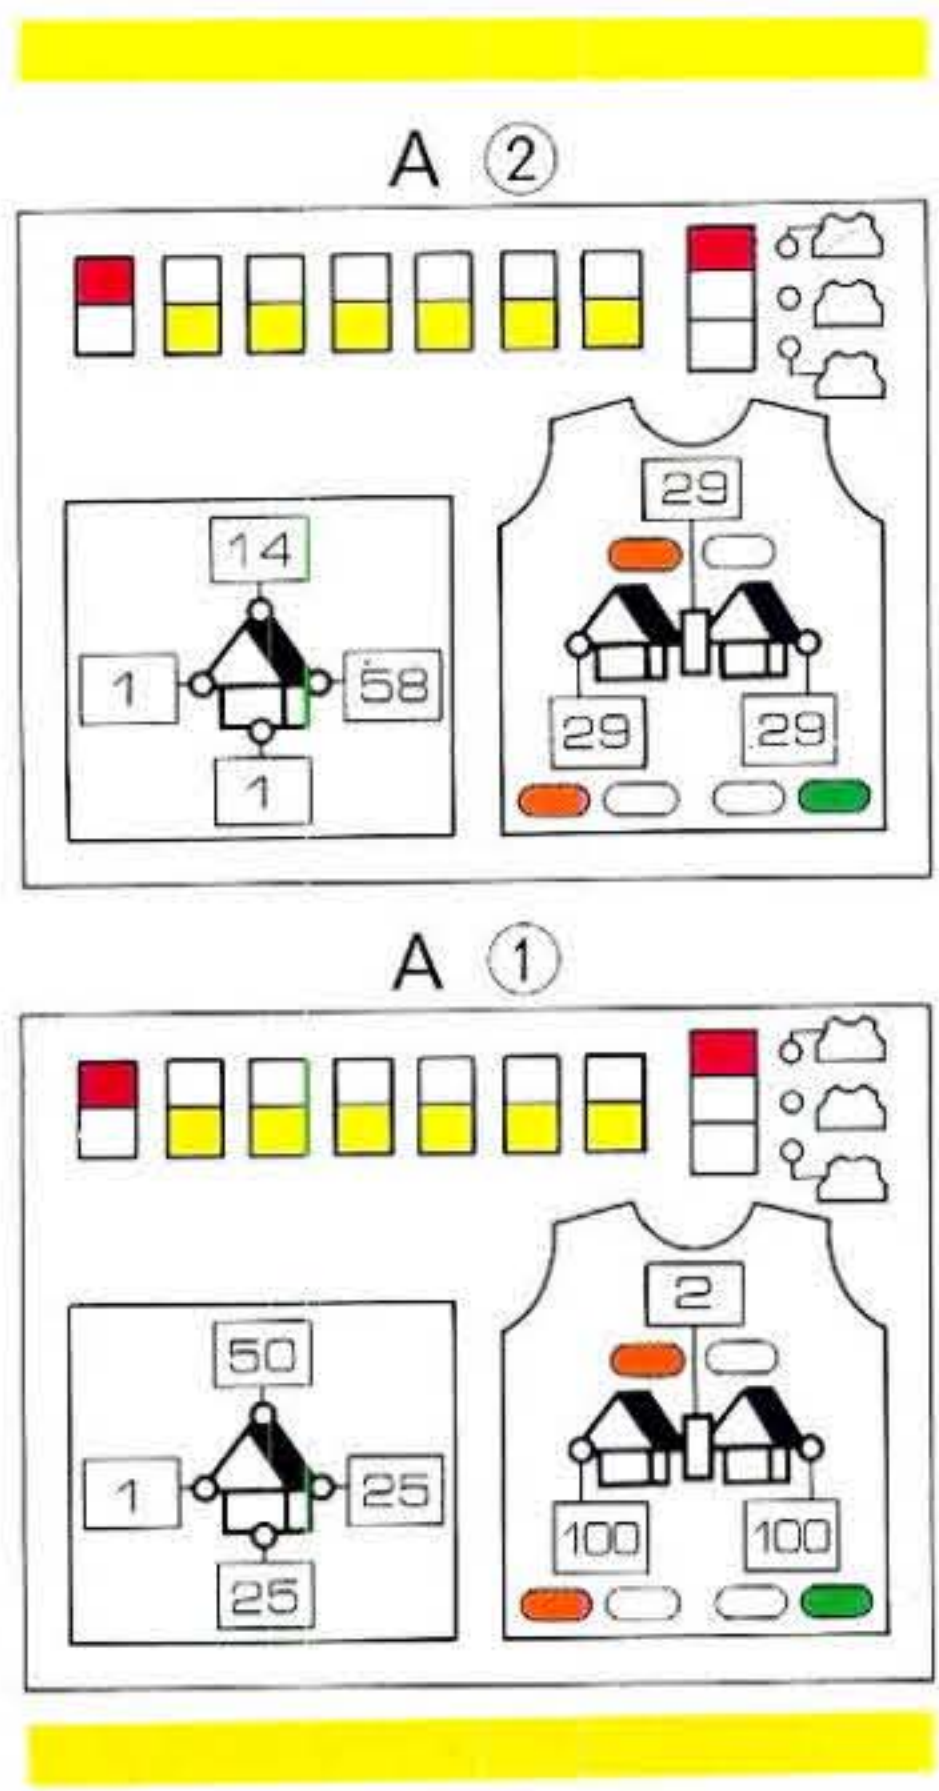

  - B ①-7 (4) (9) → (CF)
- B ①-6 (4) (5) → (CF)
- B ①-5 (4) (1) → (CF)
- B ①-4 (3) (7) → (CF)
- B ①-3 (3) (3) → (CF)
- B ①-2 (2) (9) → (CF)

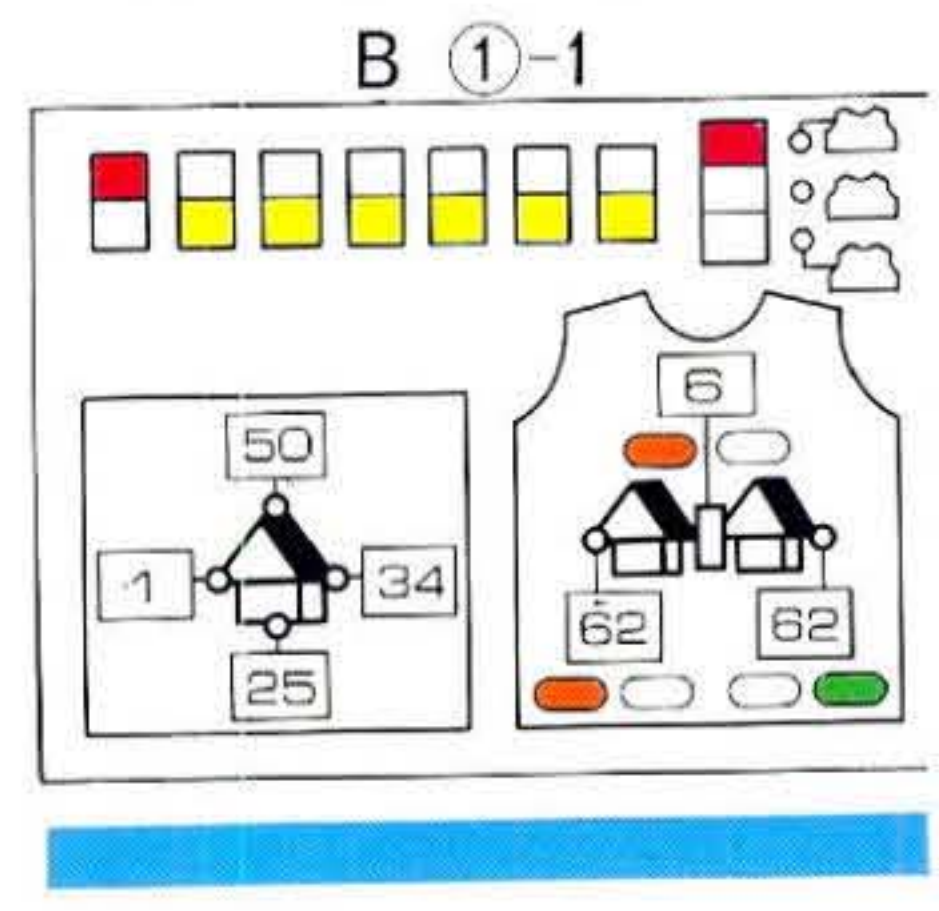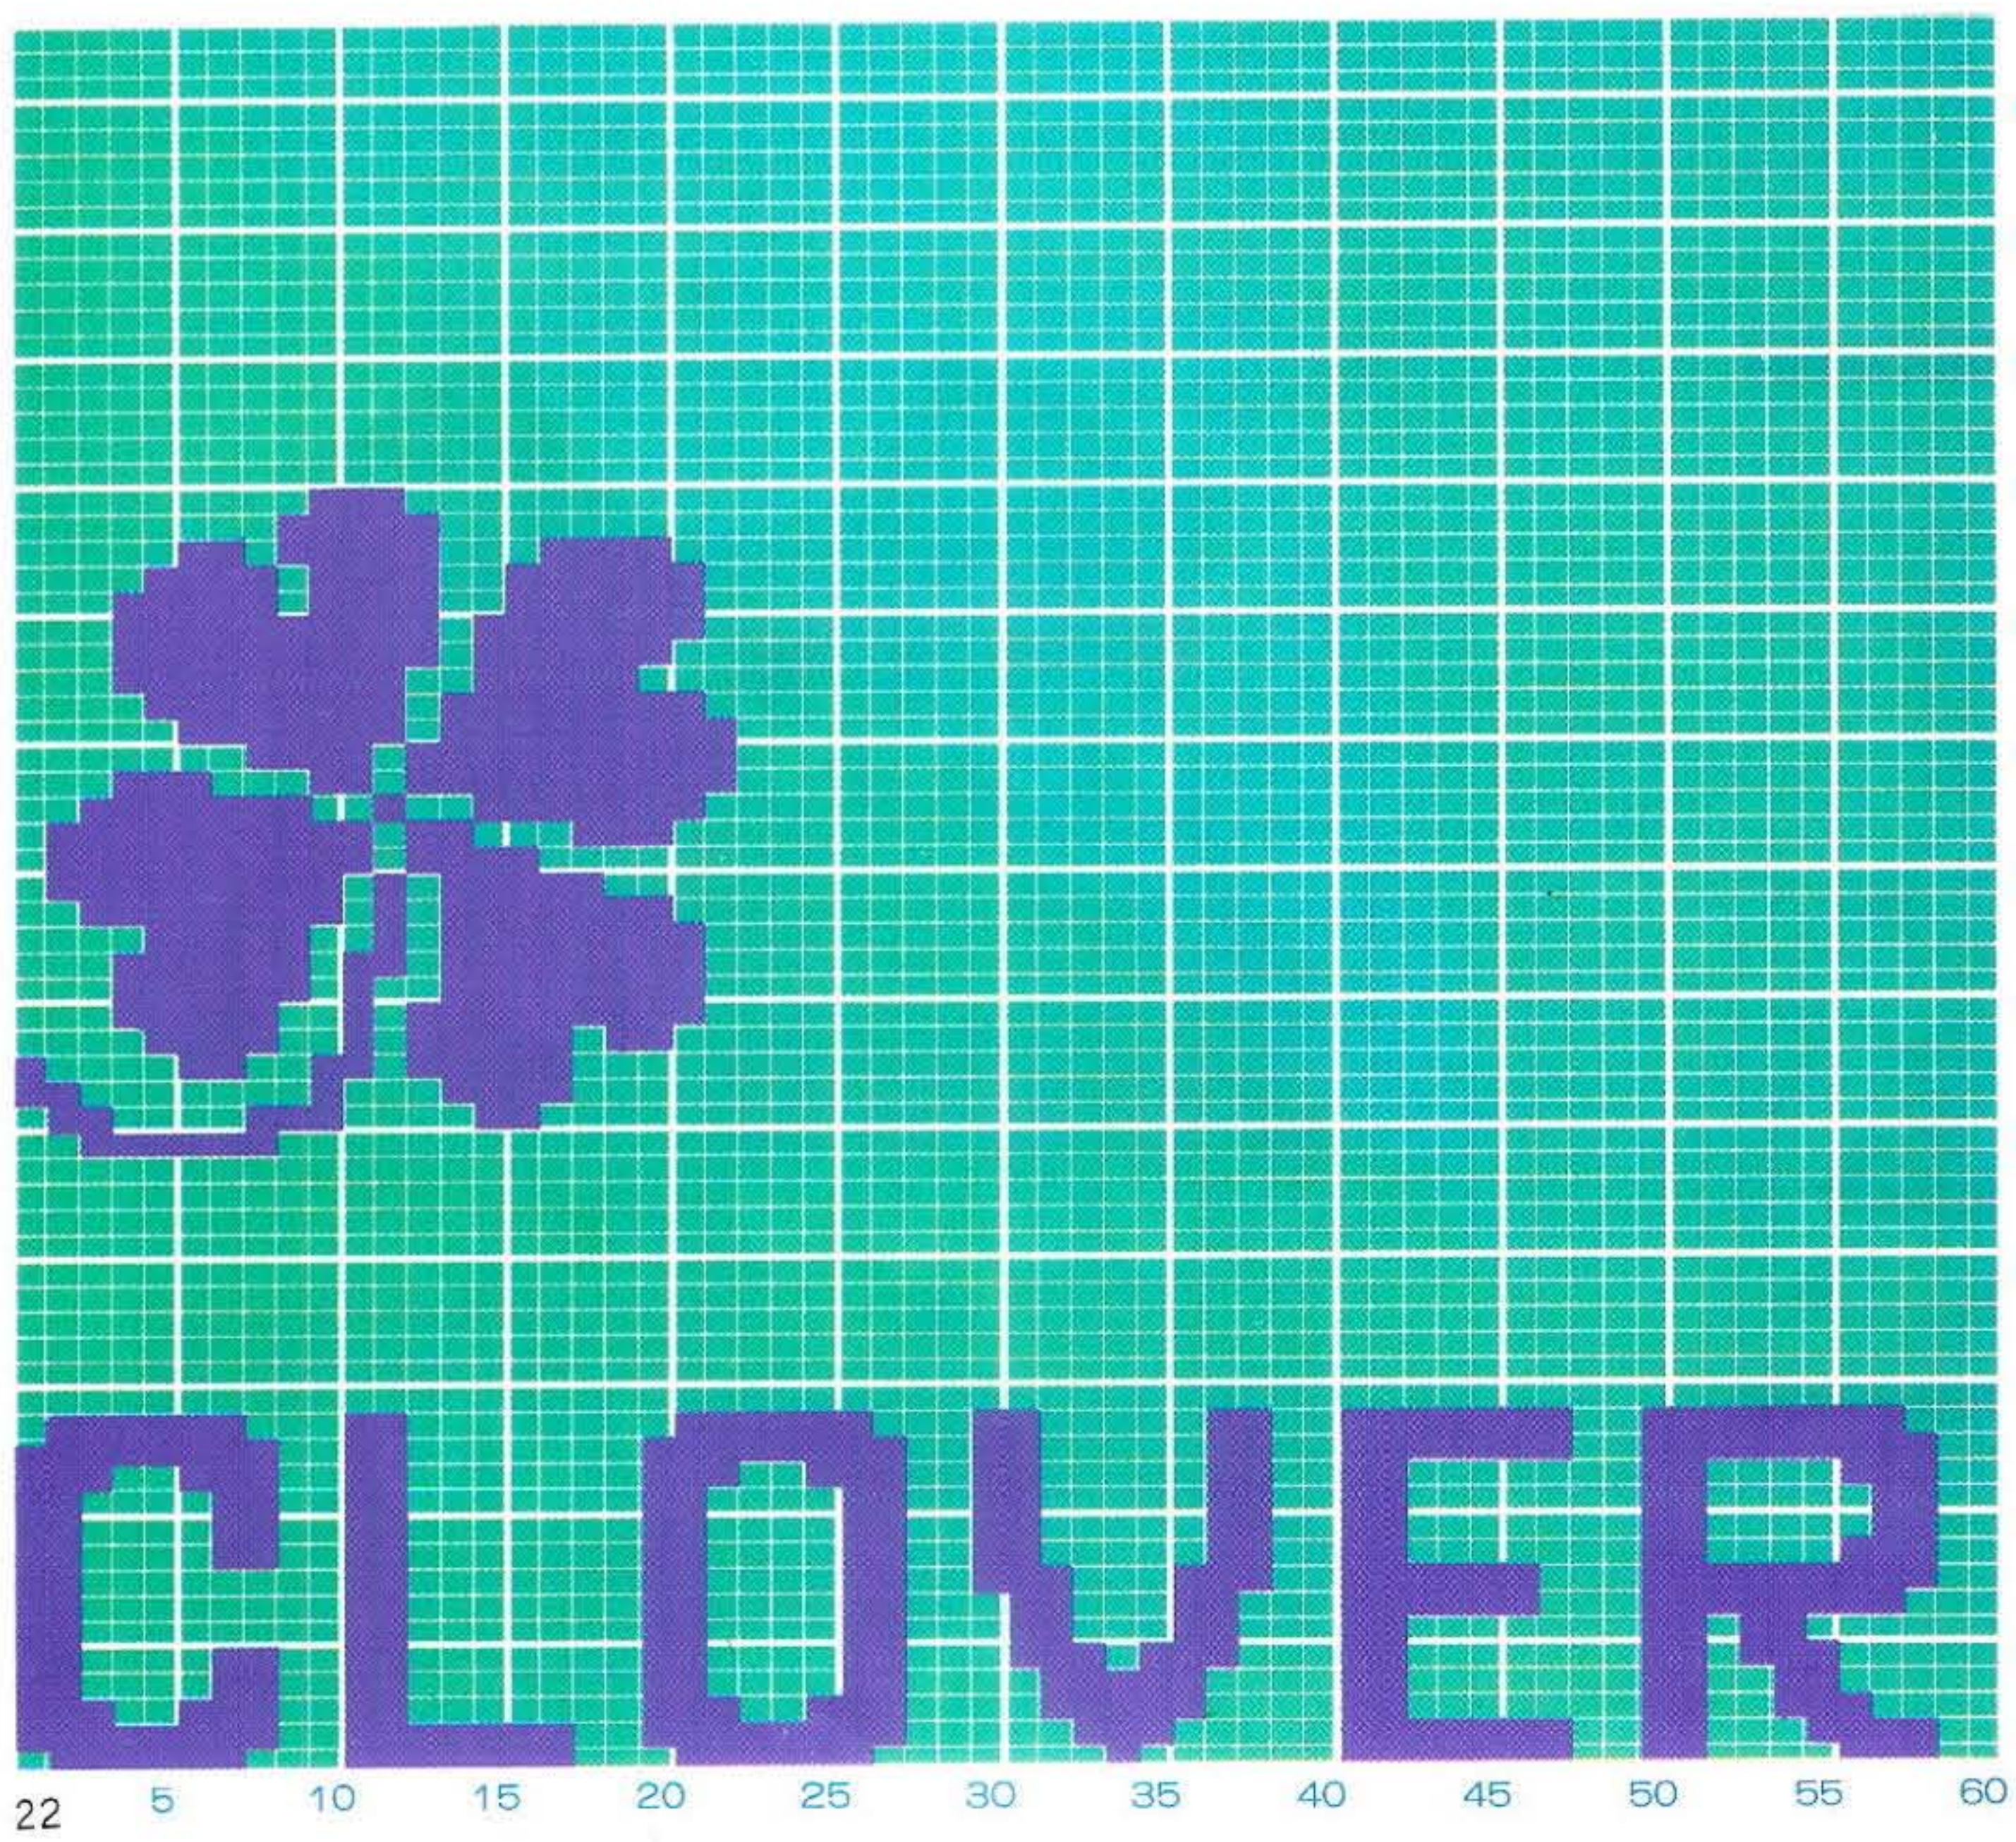

A



 
B

 
 
 


 
 
- 49をインプットし (はじめ) キーを押します。
- 45をインプットし (はじめ) キーを押します。
- 41をインプットし (はじめ) キーを押します。
- 37をインプットし (はじめ) キーを押します。
- 33をインプットし (はじめ) キーを押します。
- 29をインプットし (はじめ) キーを押します。

 
 
 
 
 
 
C①の操作表はA②と同じです。
C ① Programming : same as for A②

C

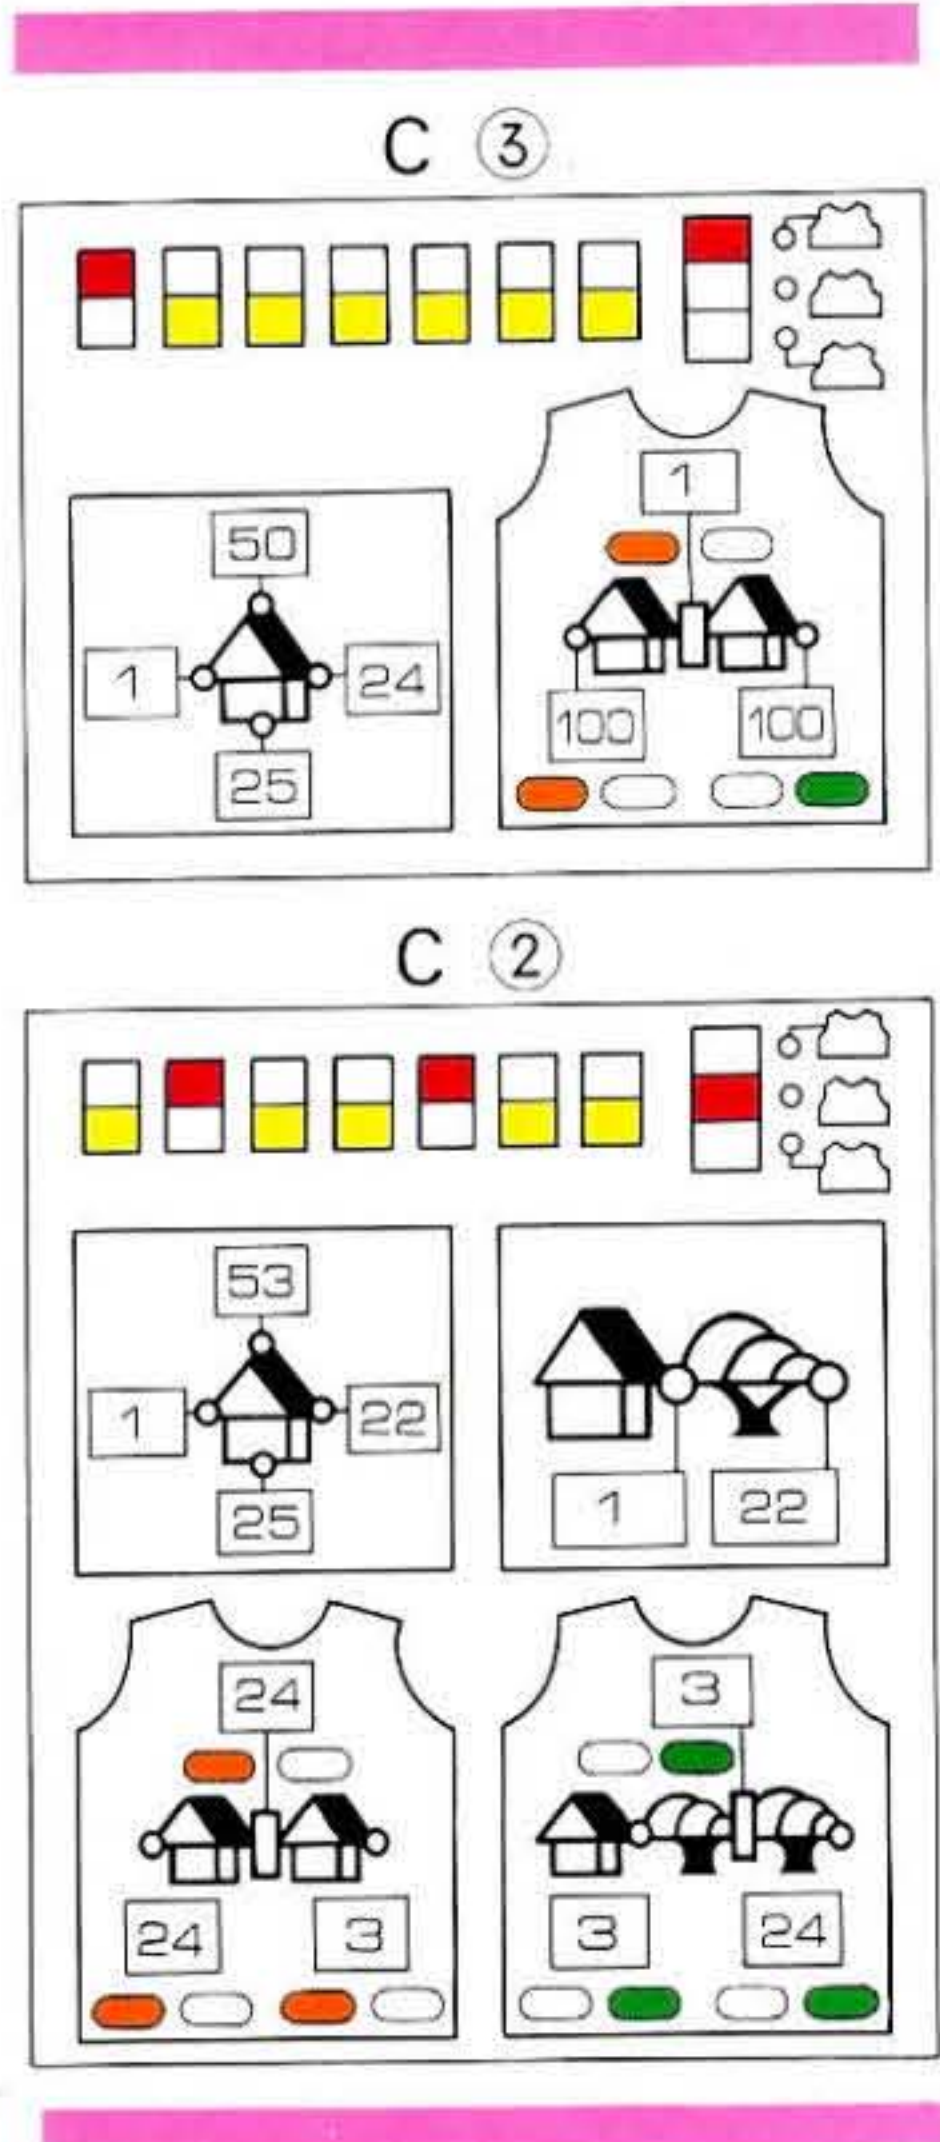

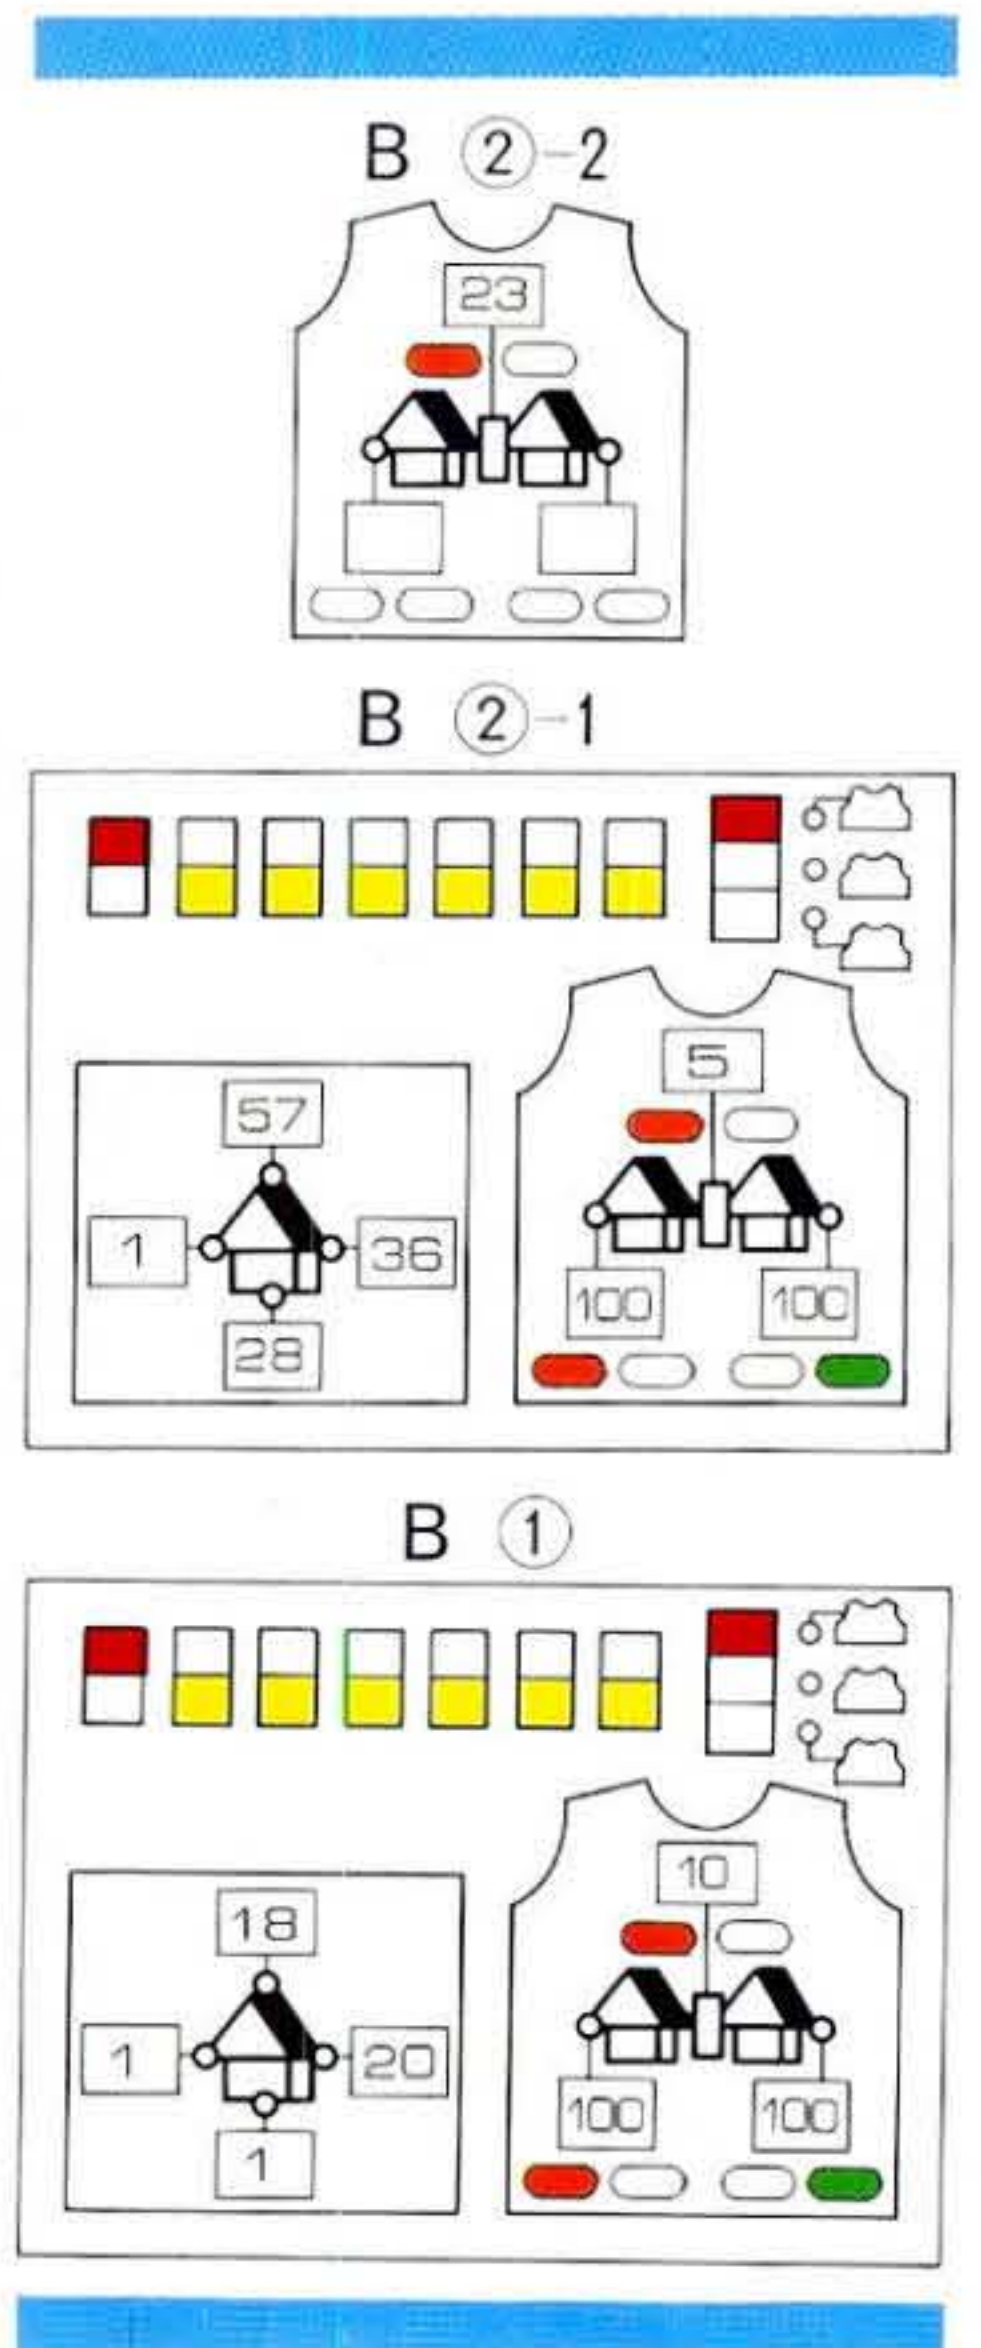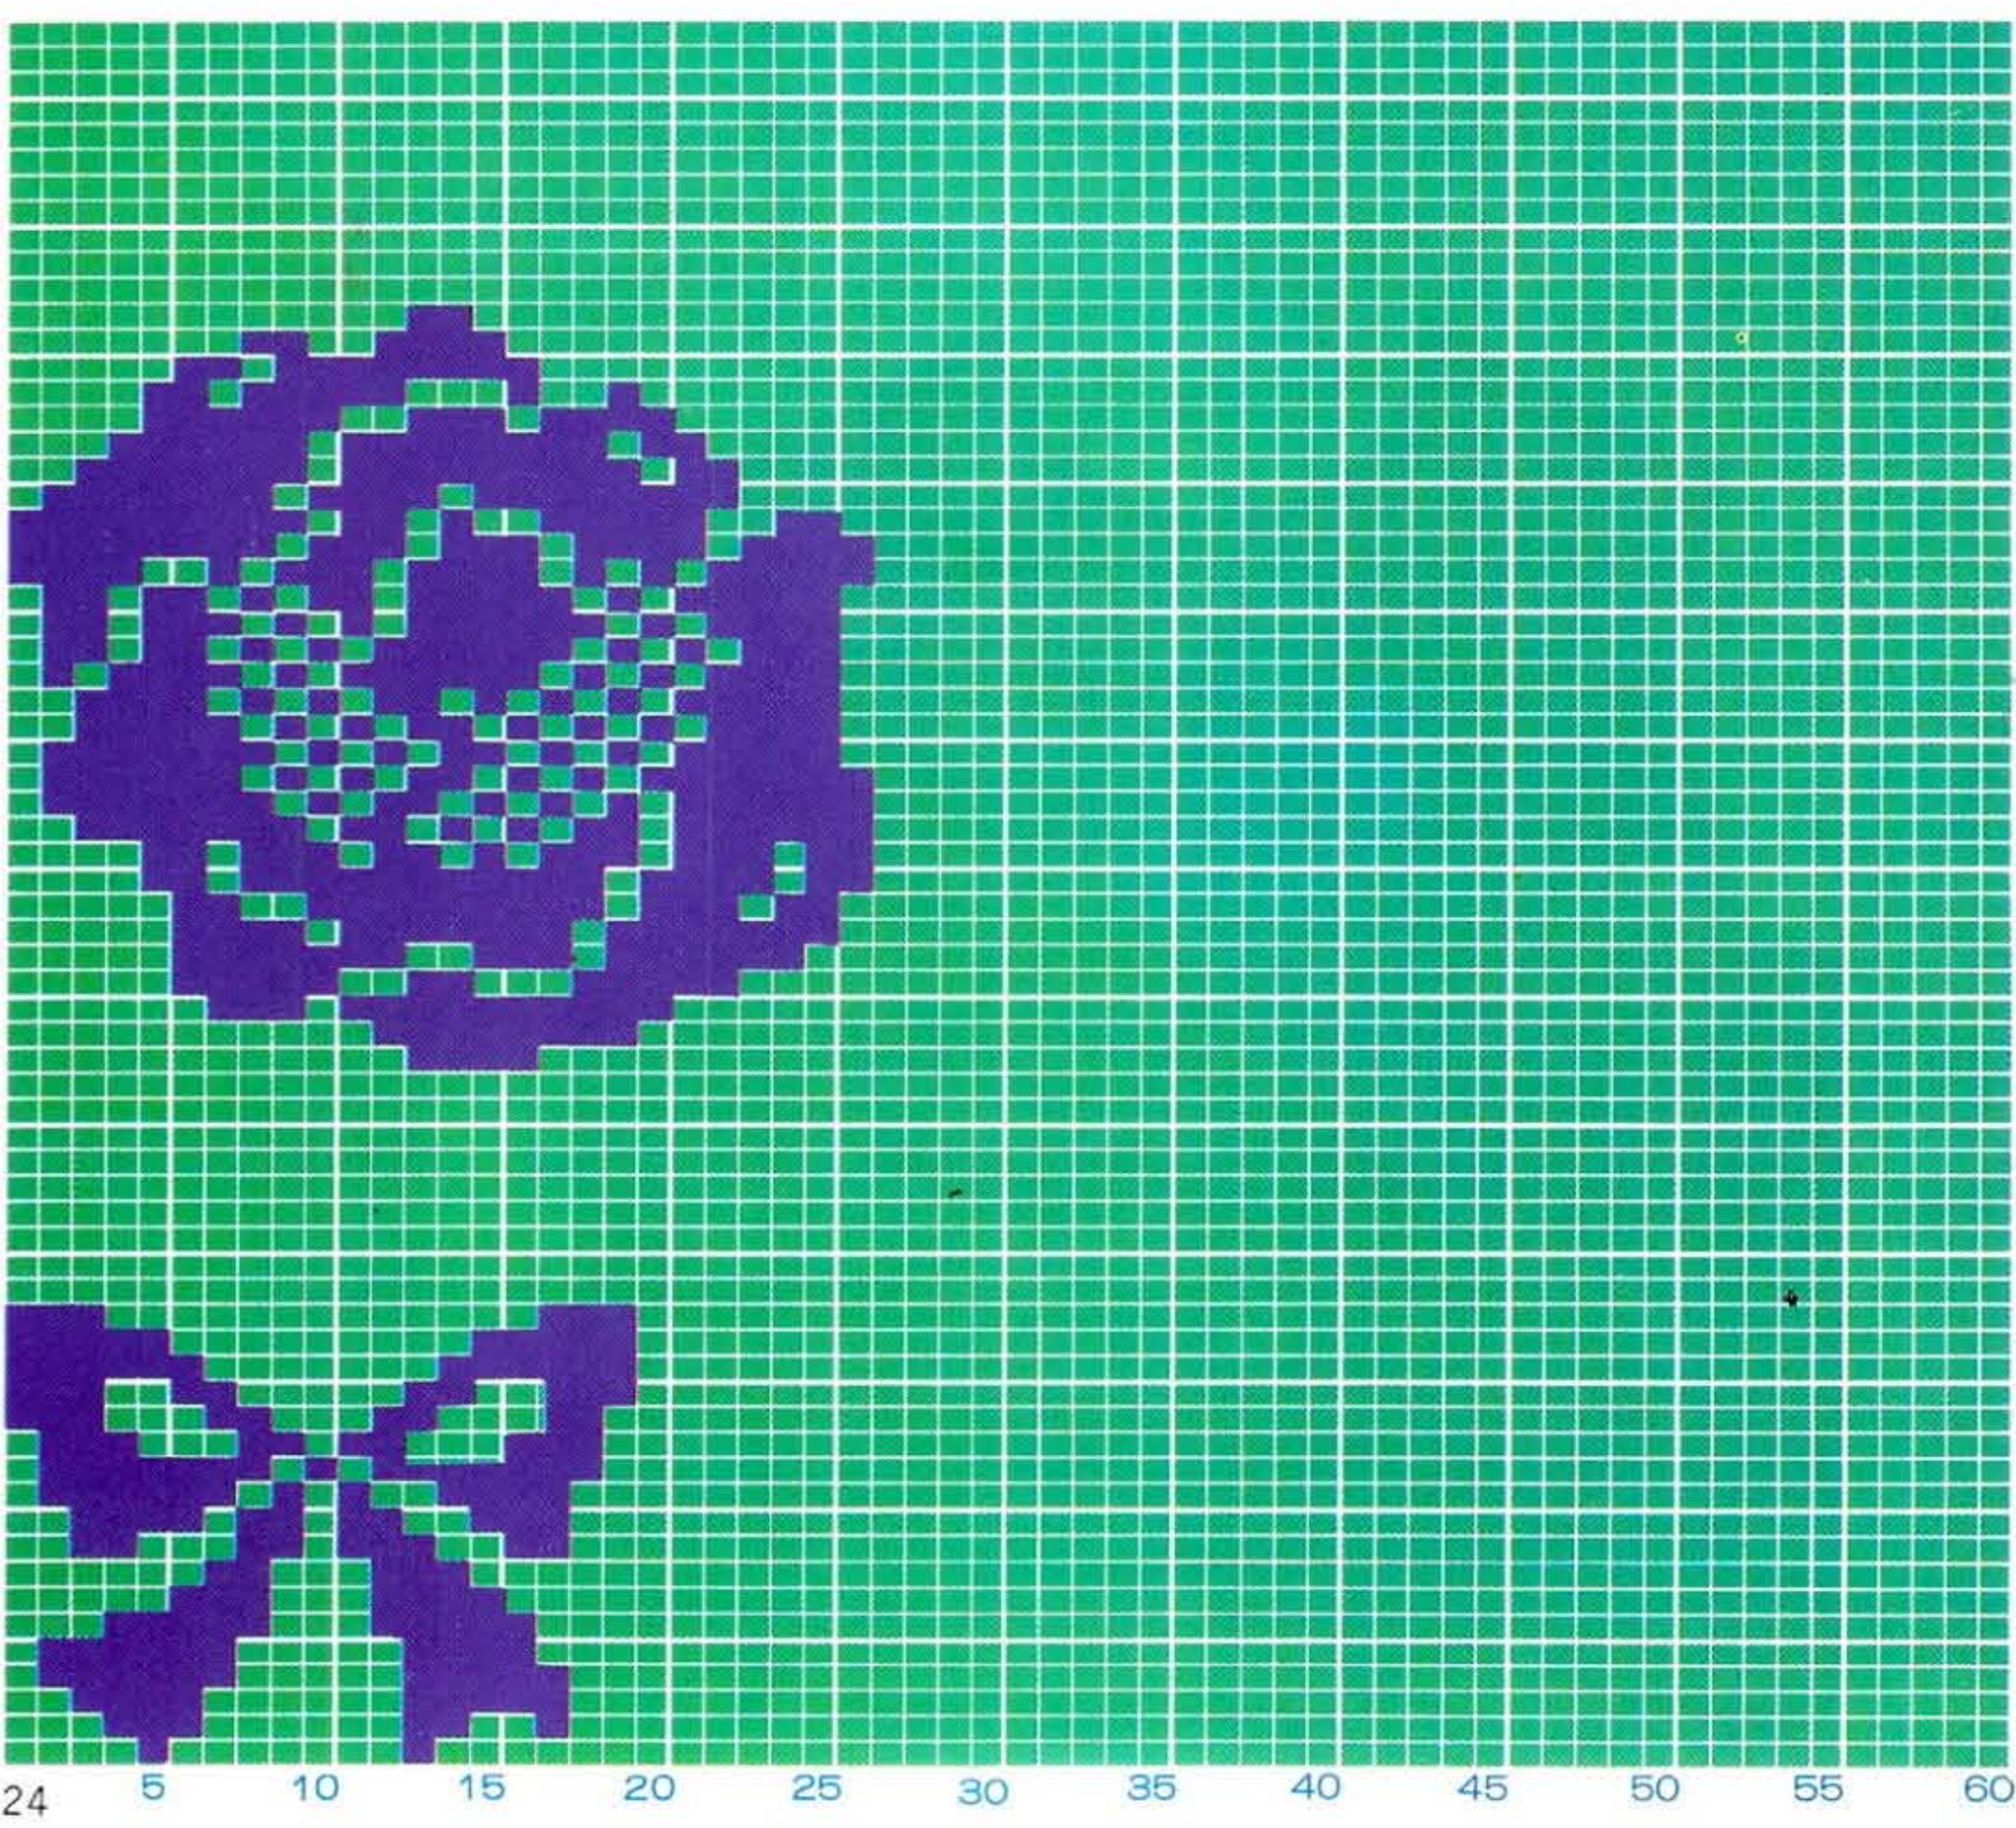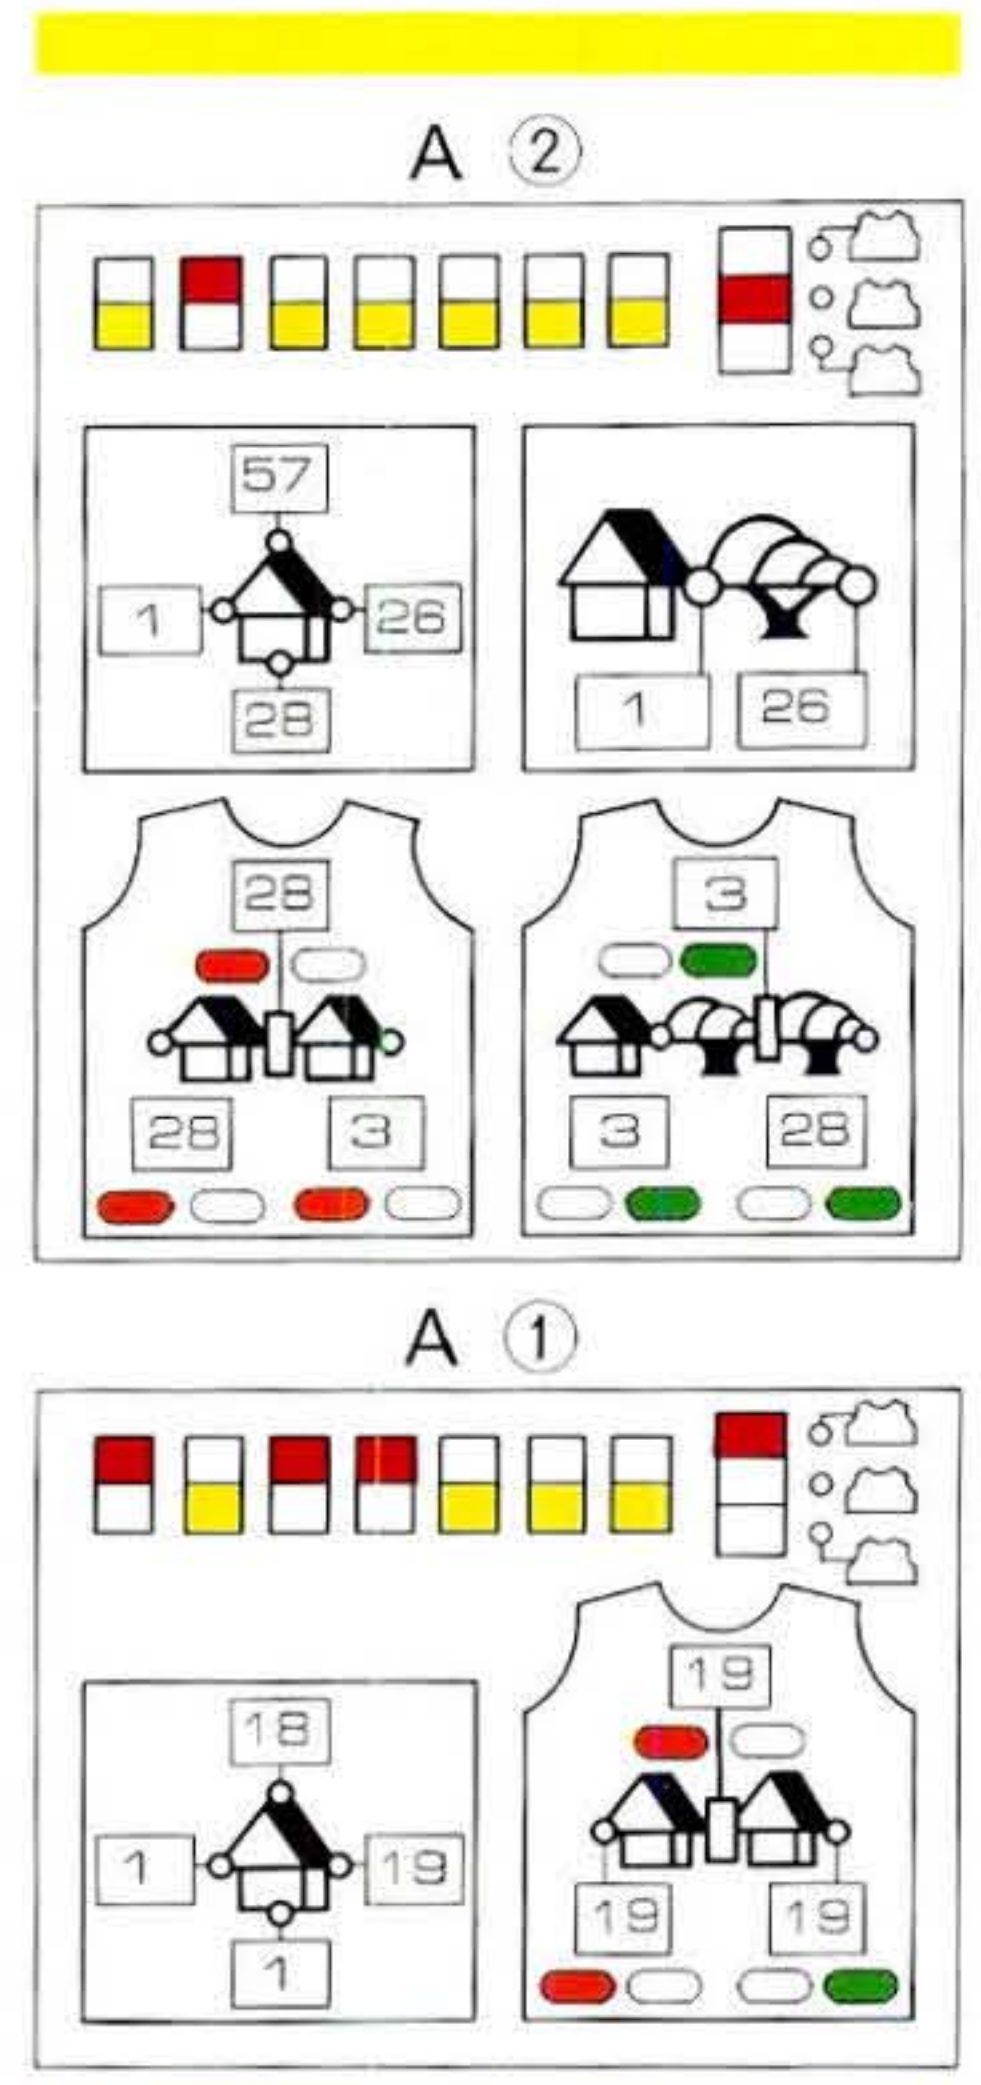

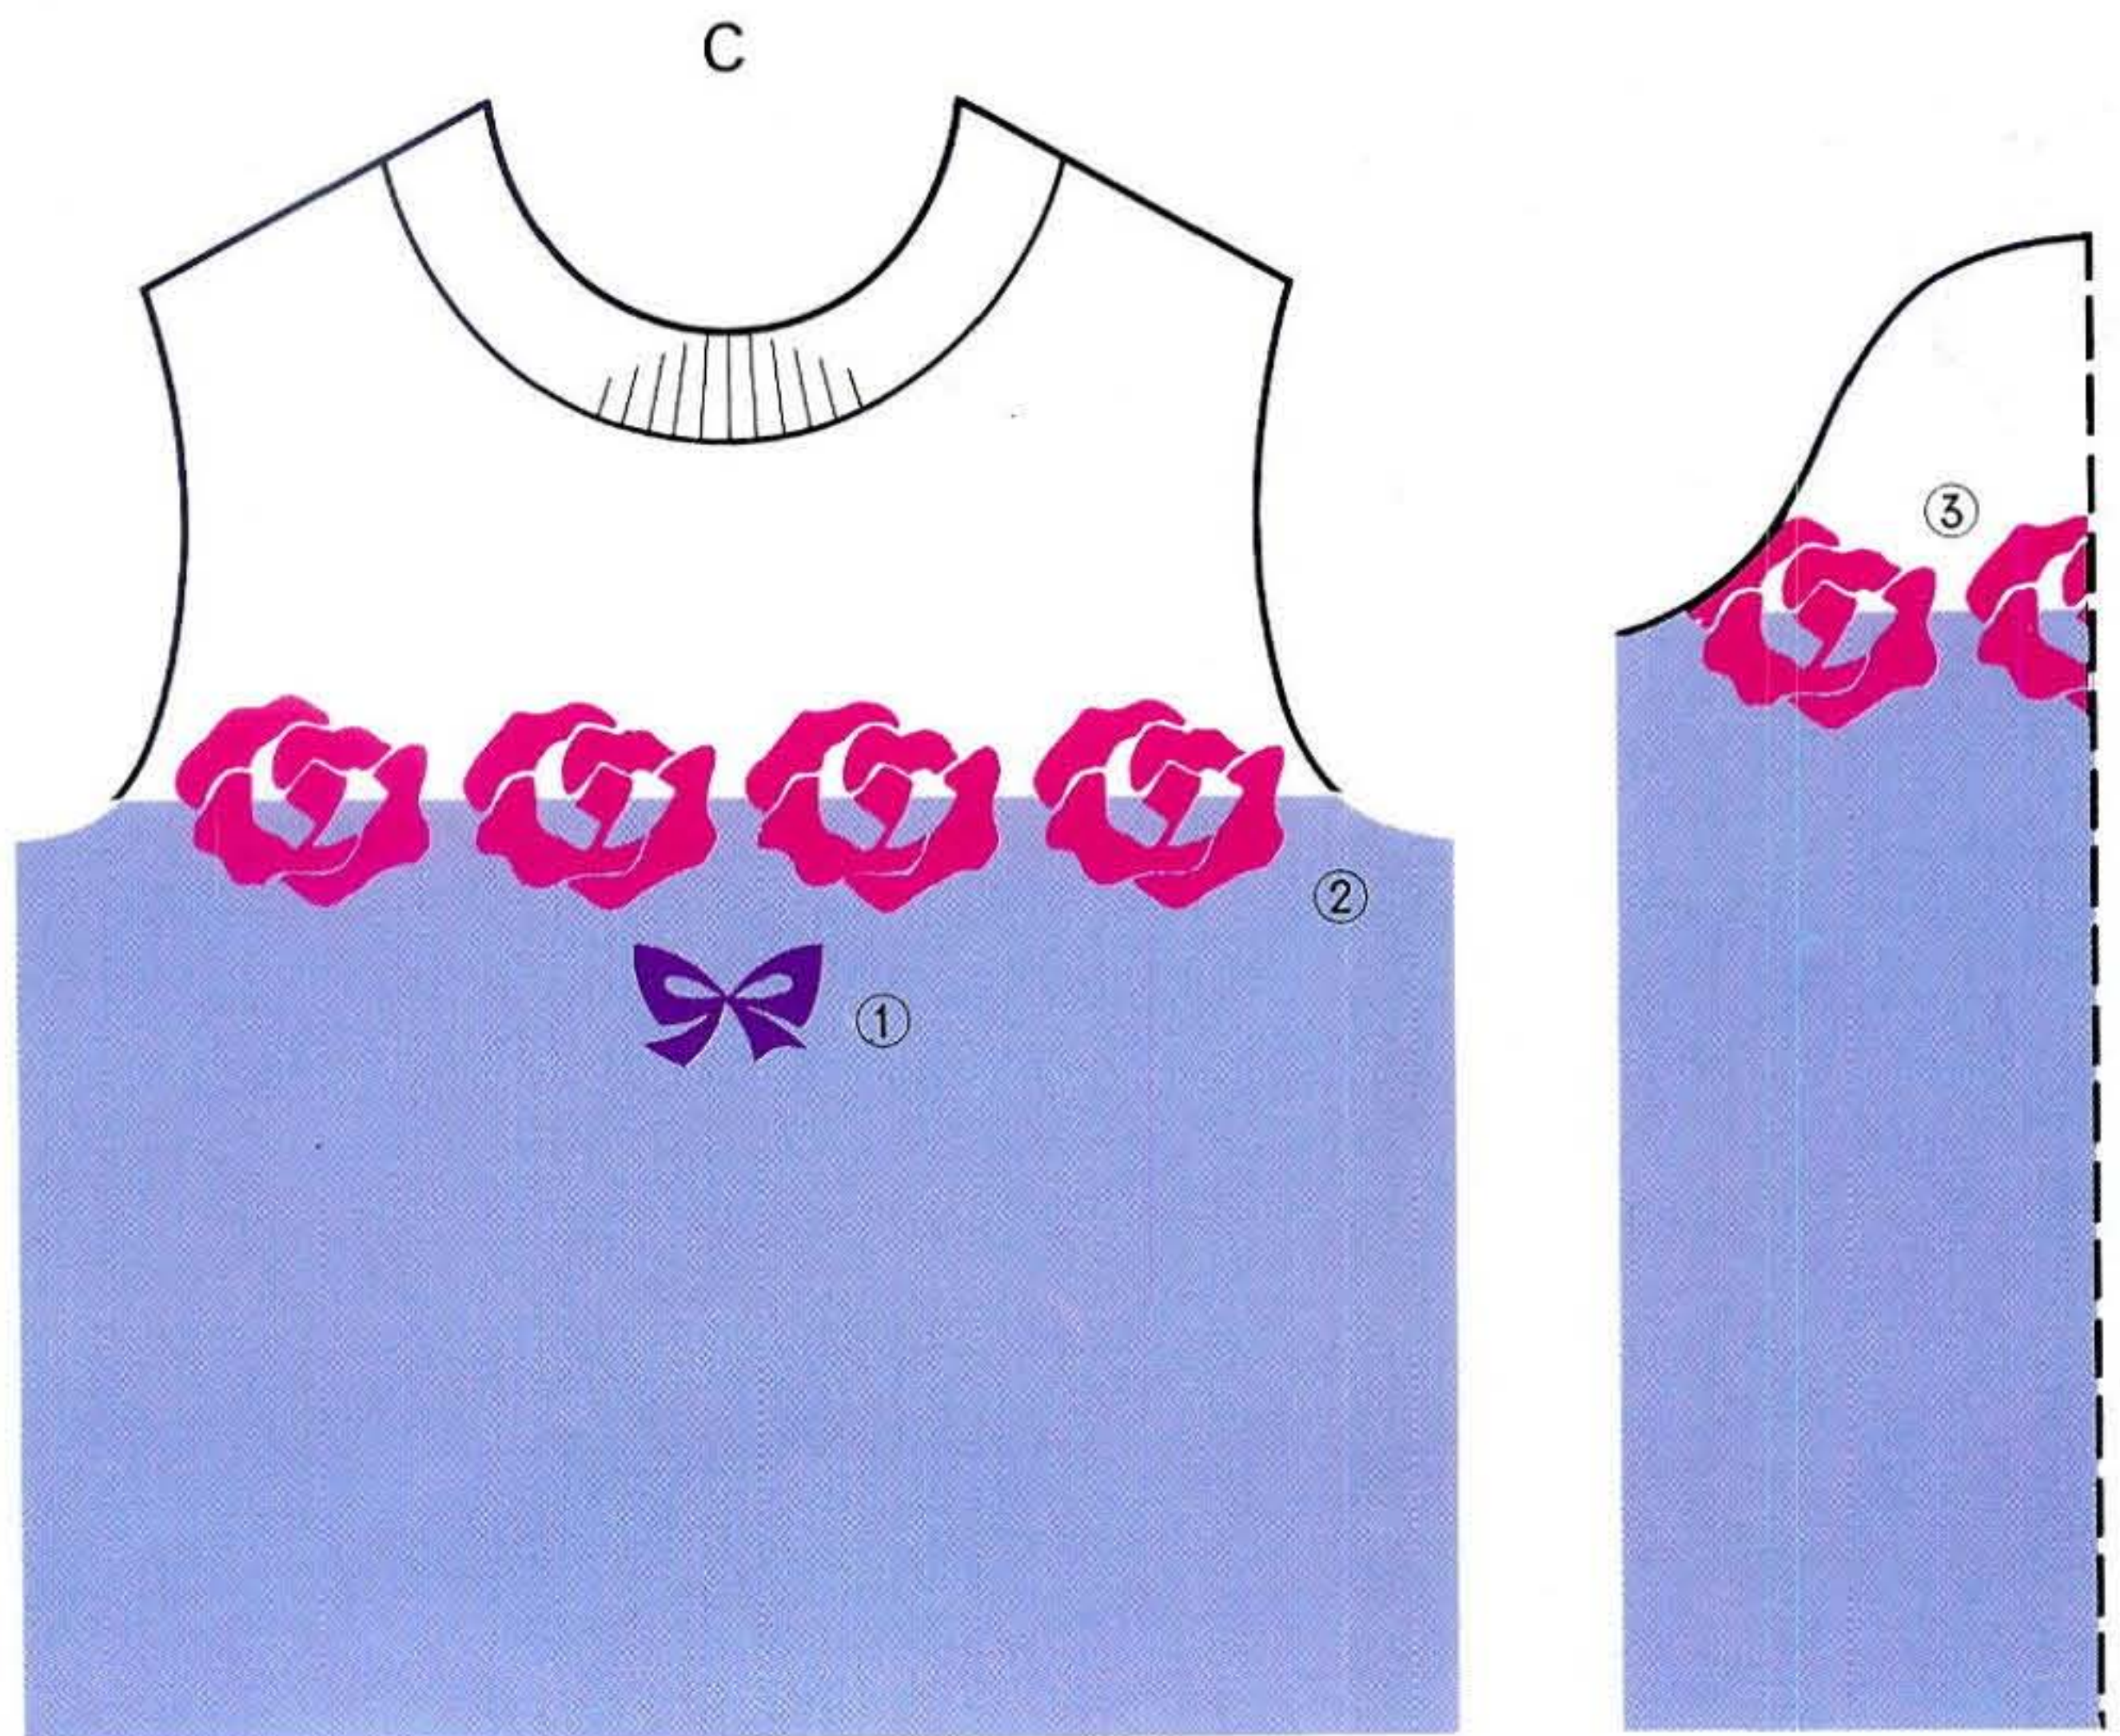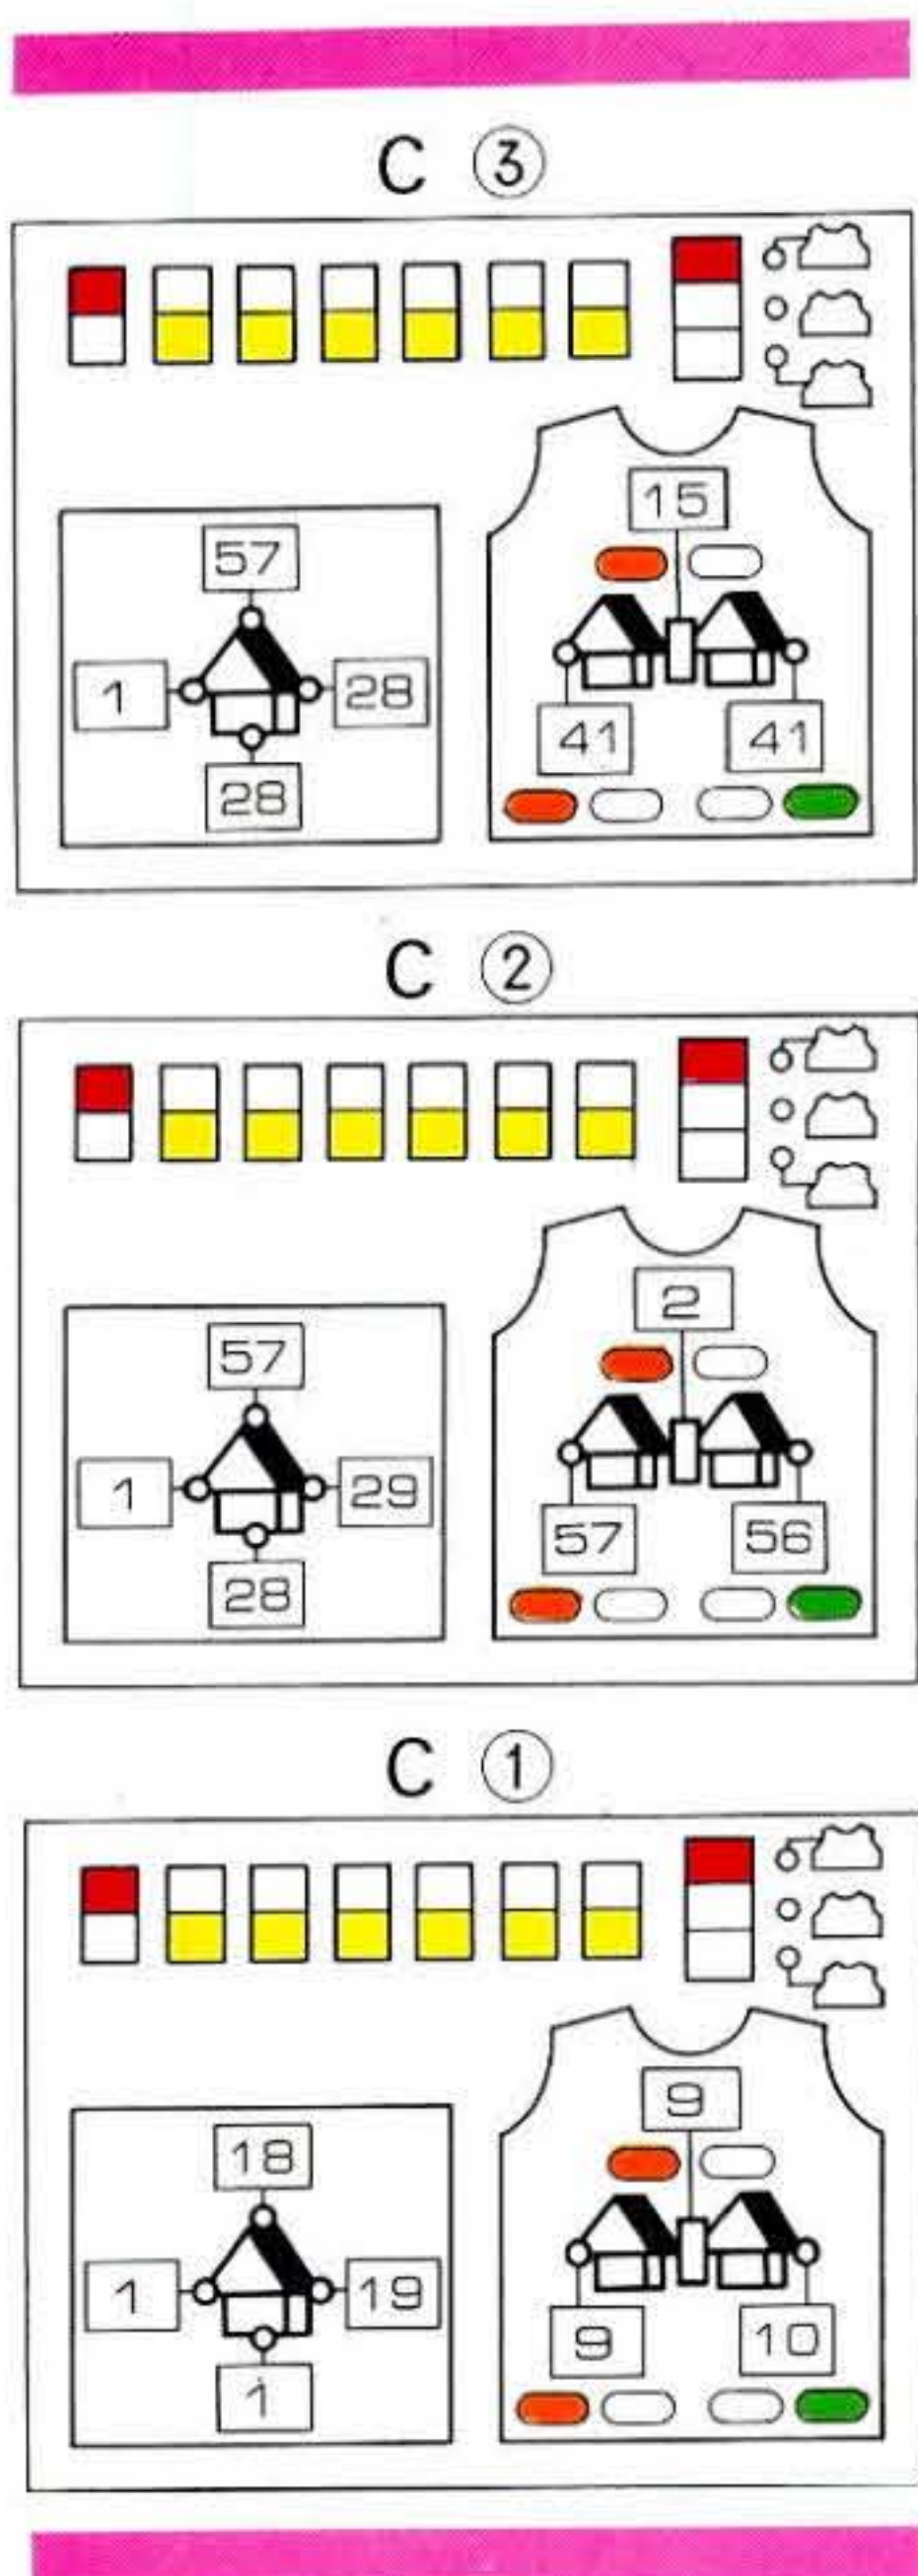


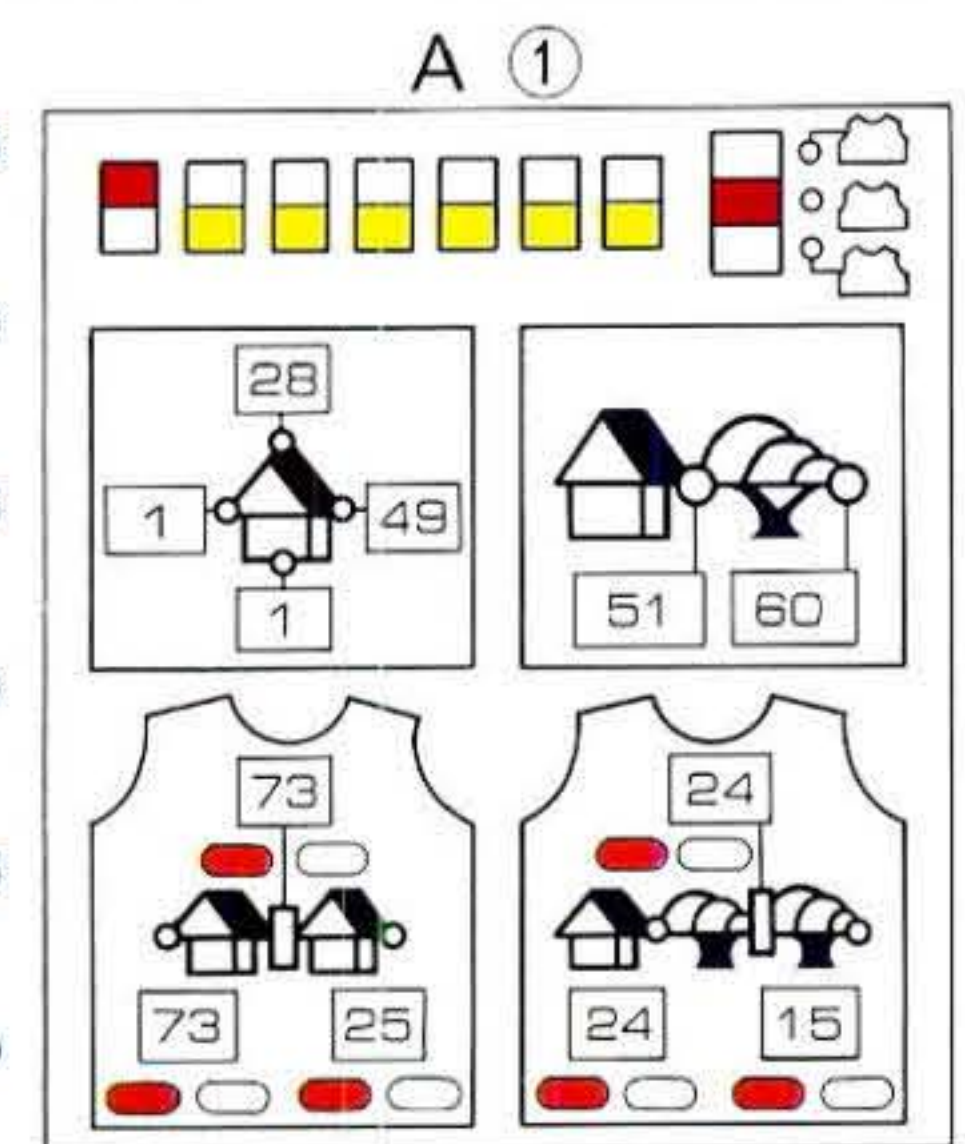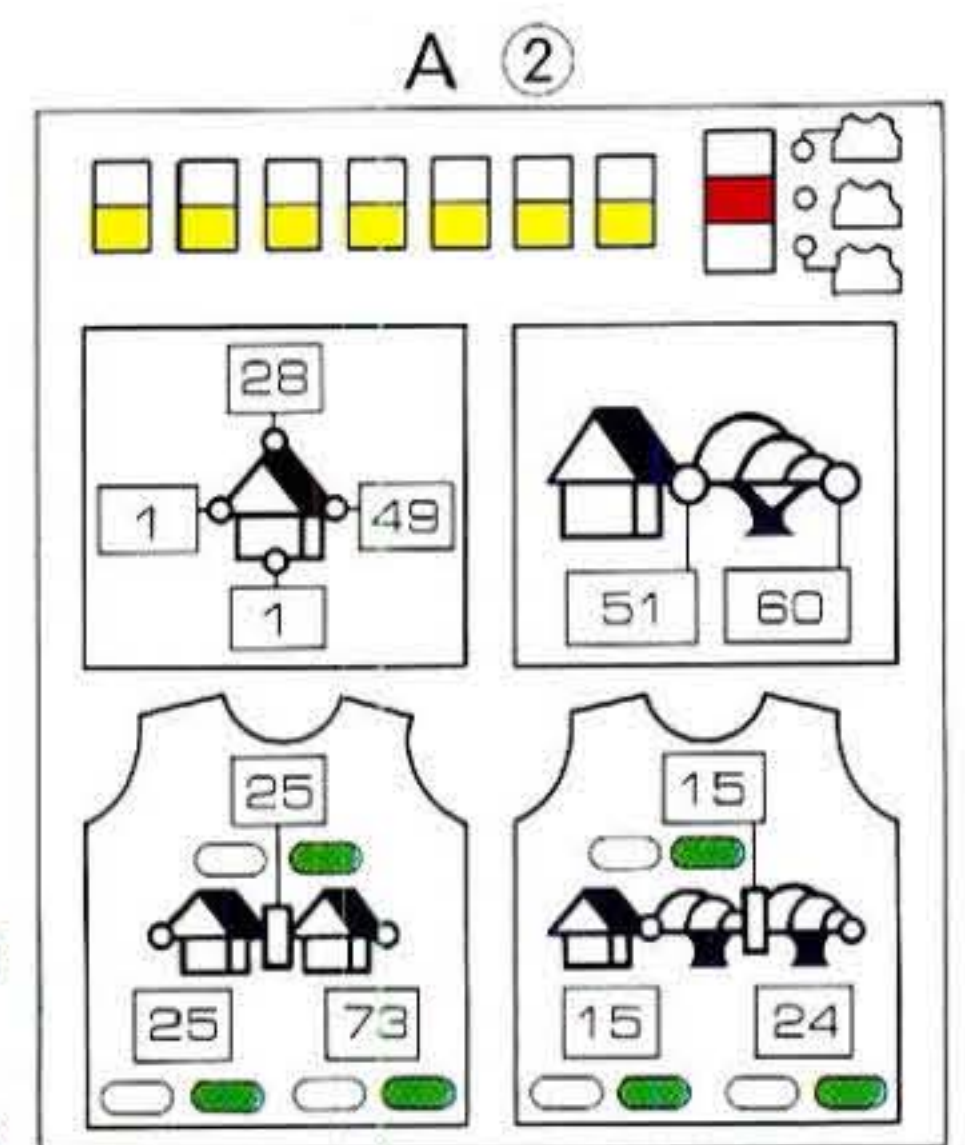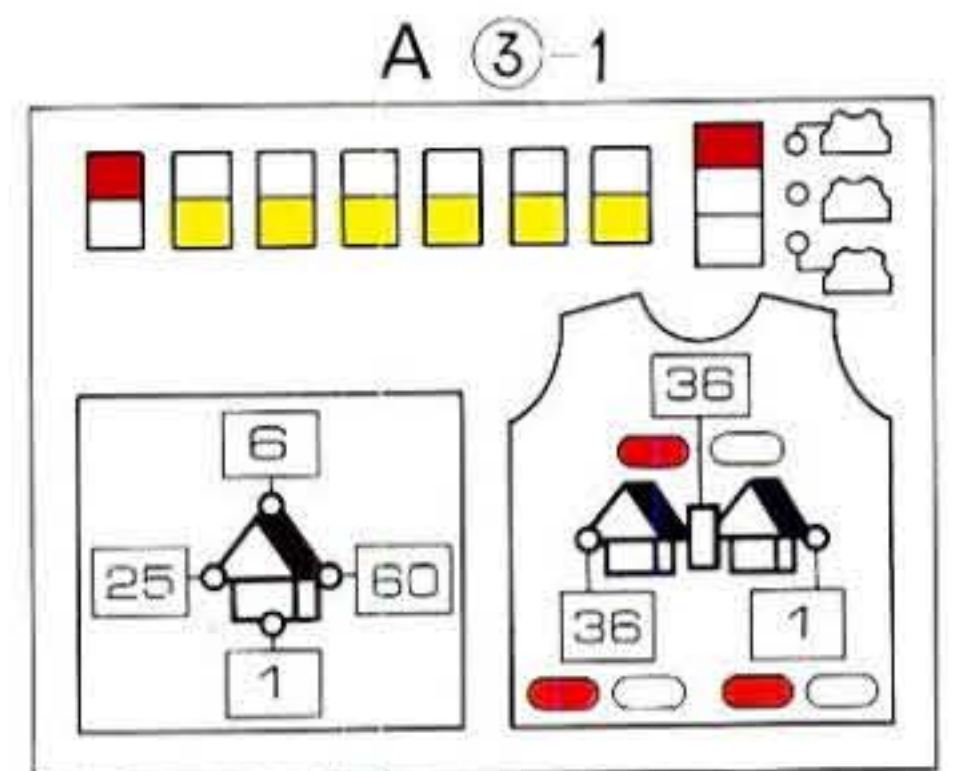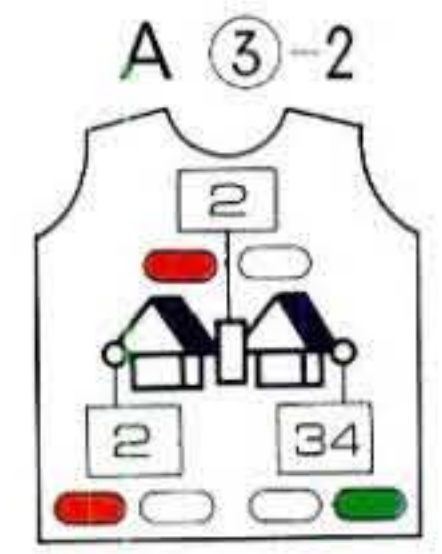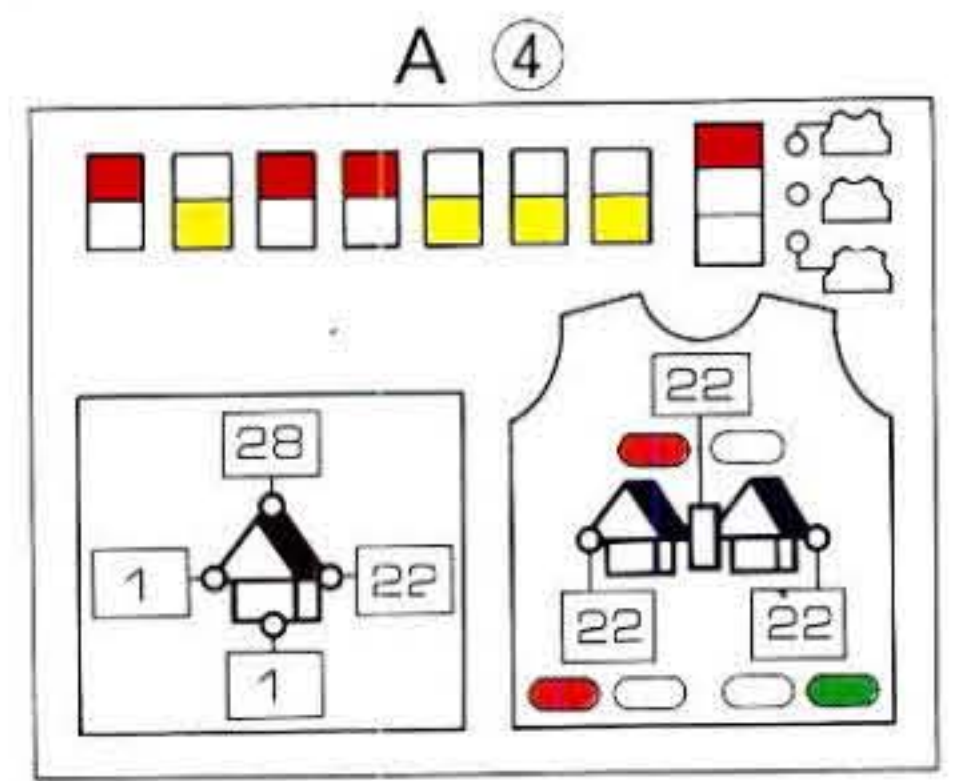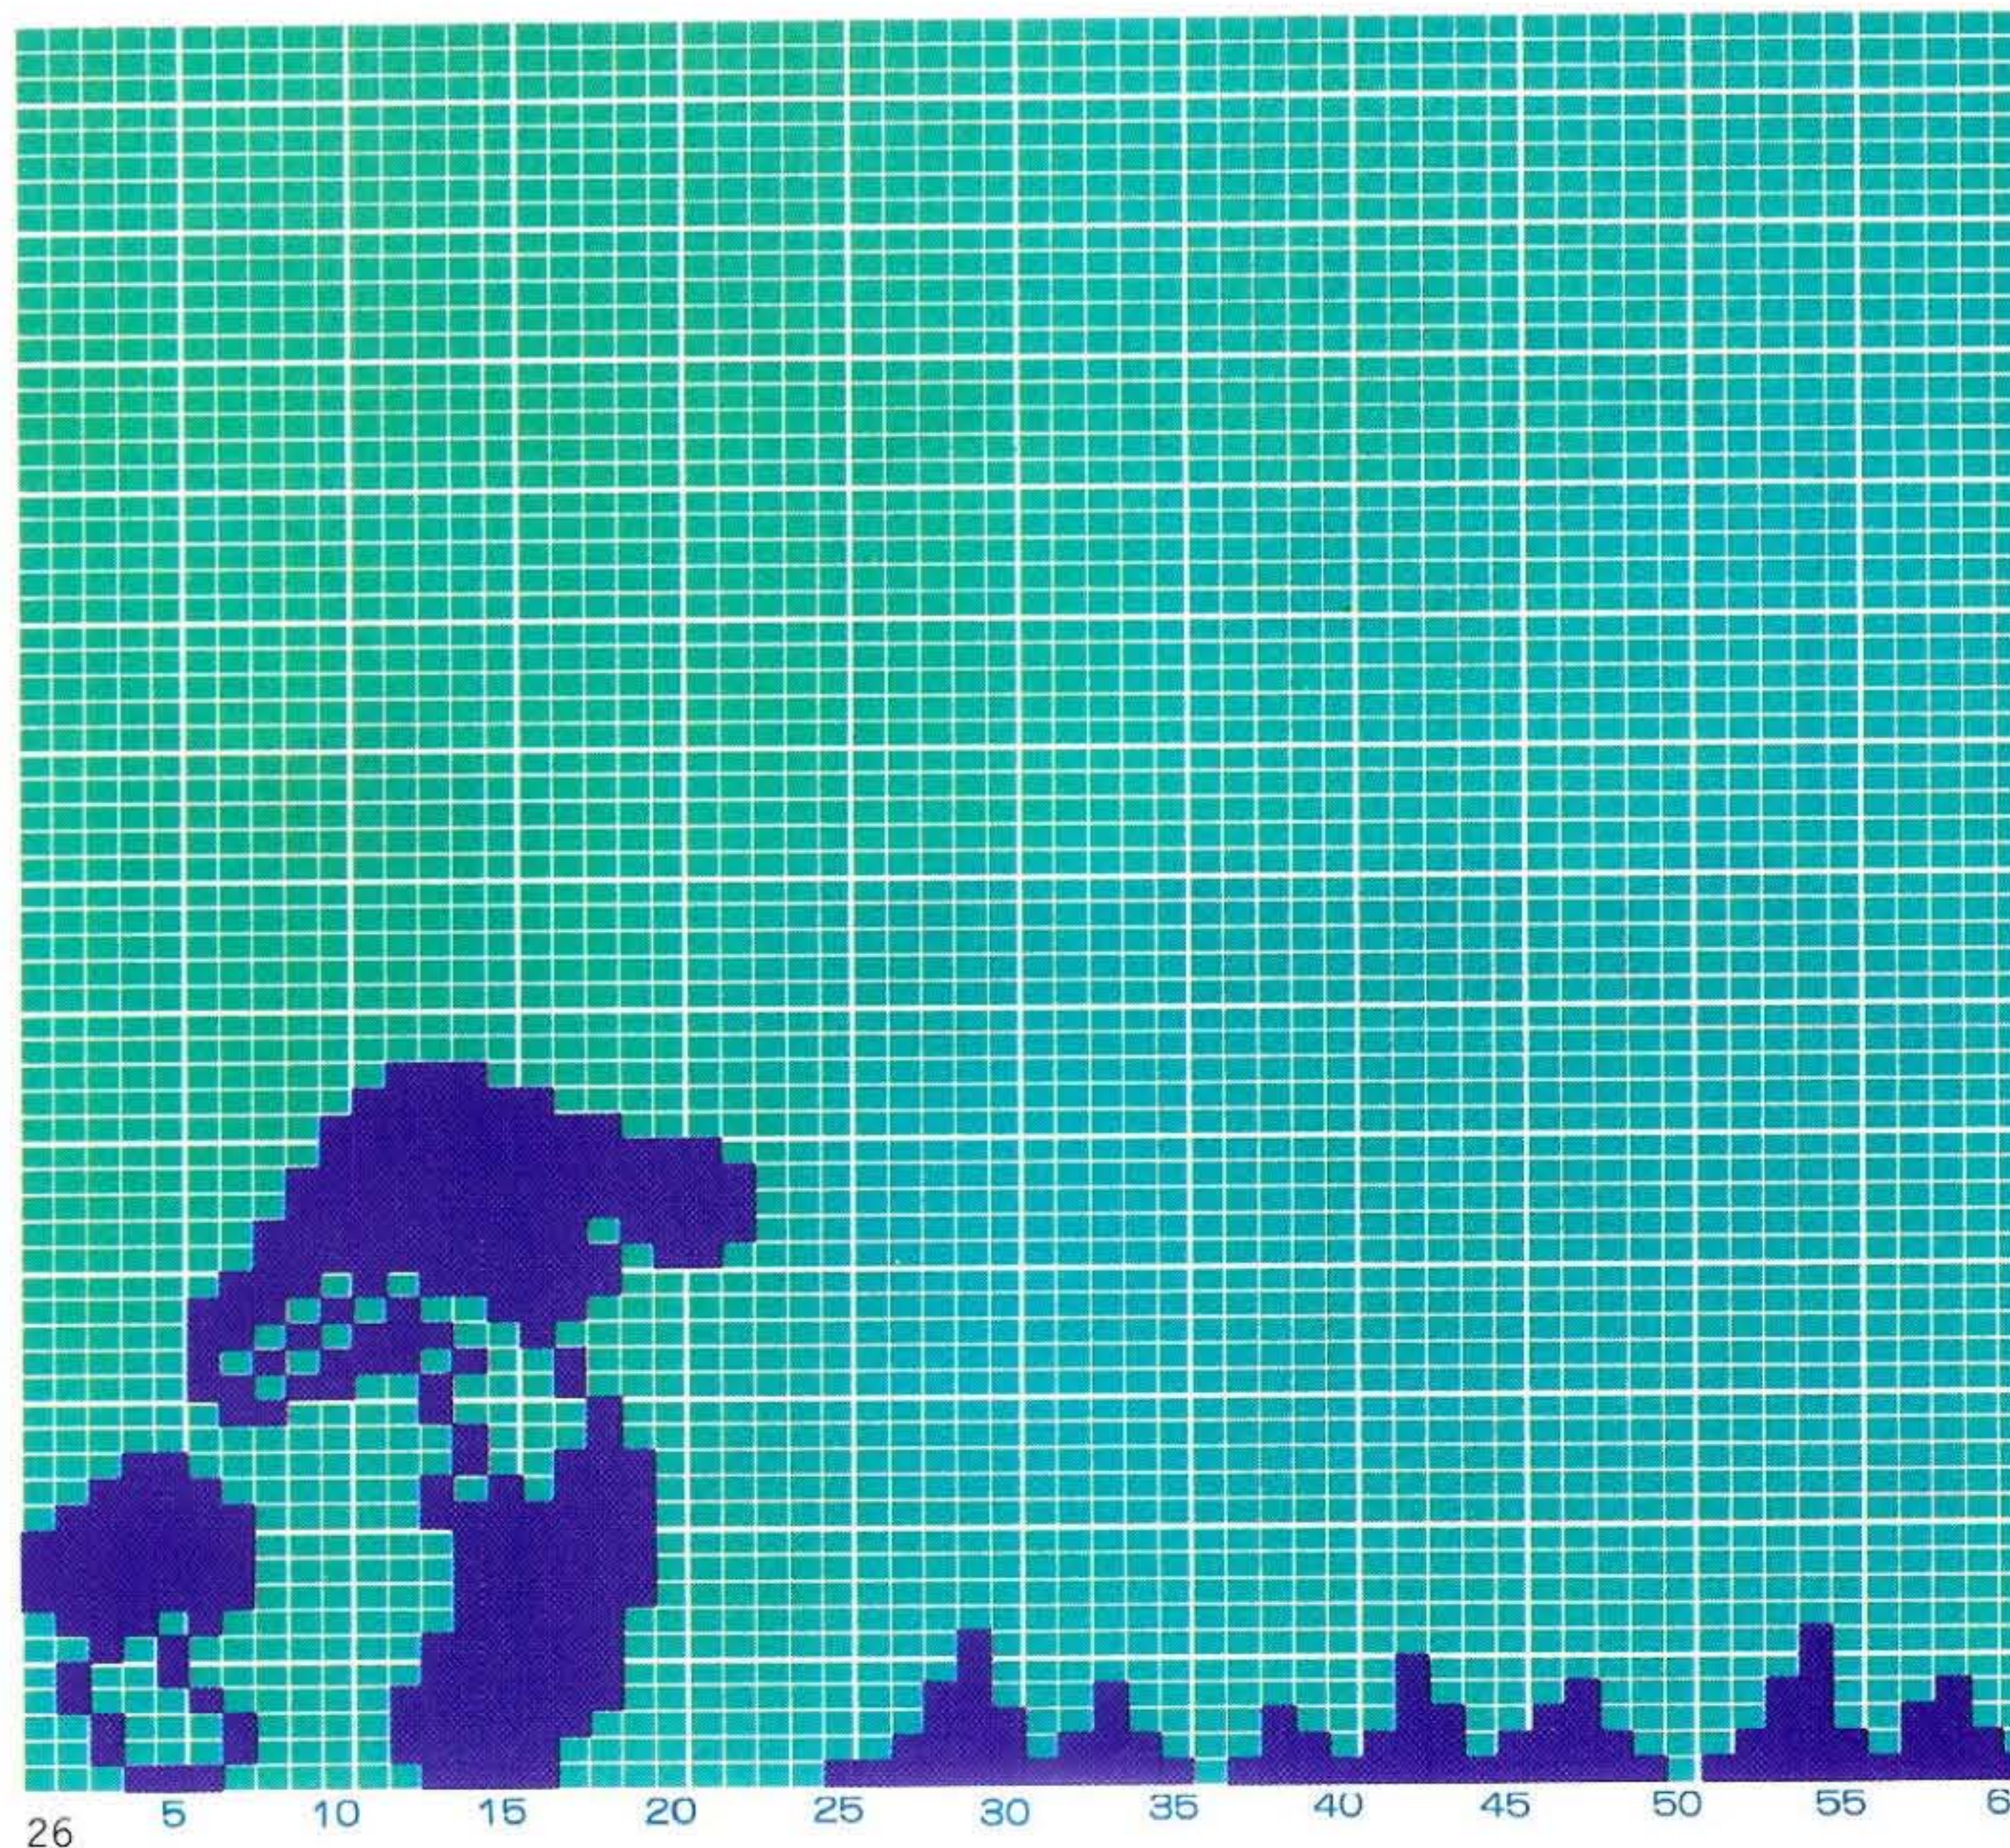


65
60
55
50
45
40
35
30
25
20
15
10
5
1

26 5 10 15 20 25 30 35 40 45 50 55 60

 
A

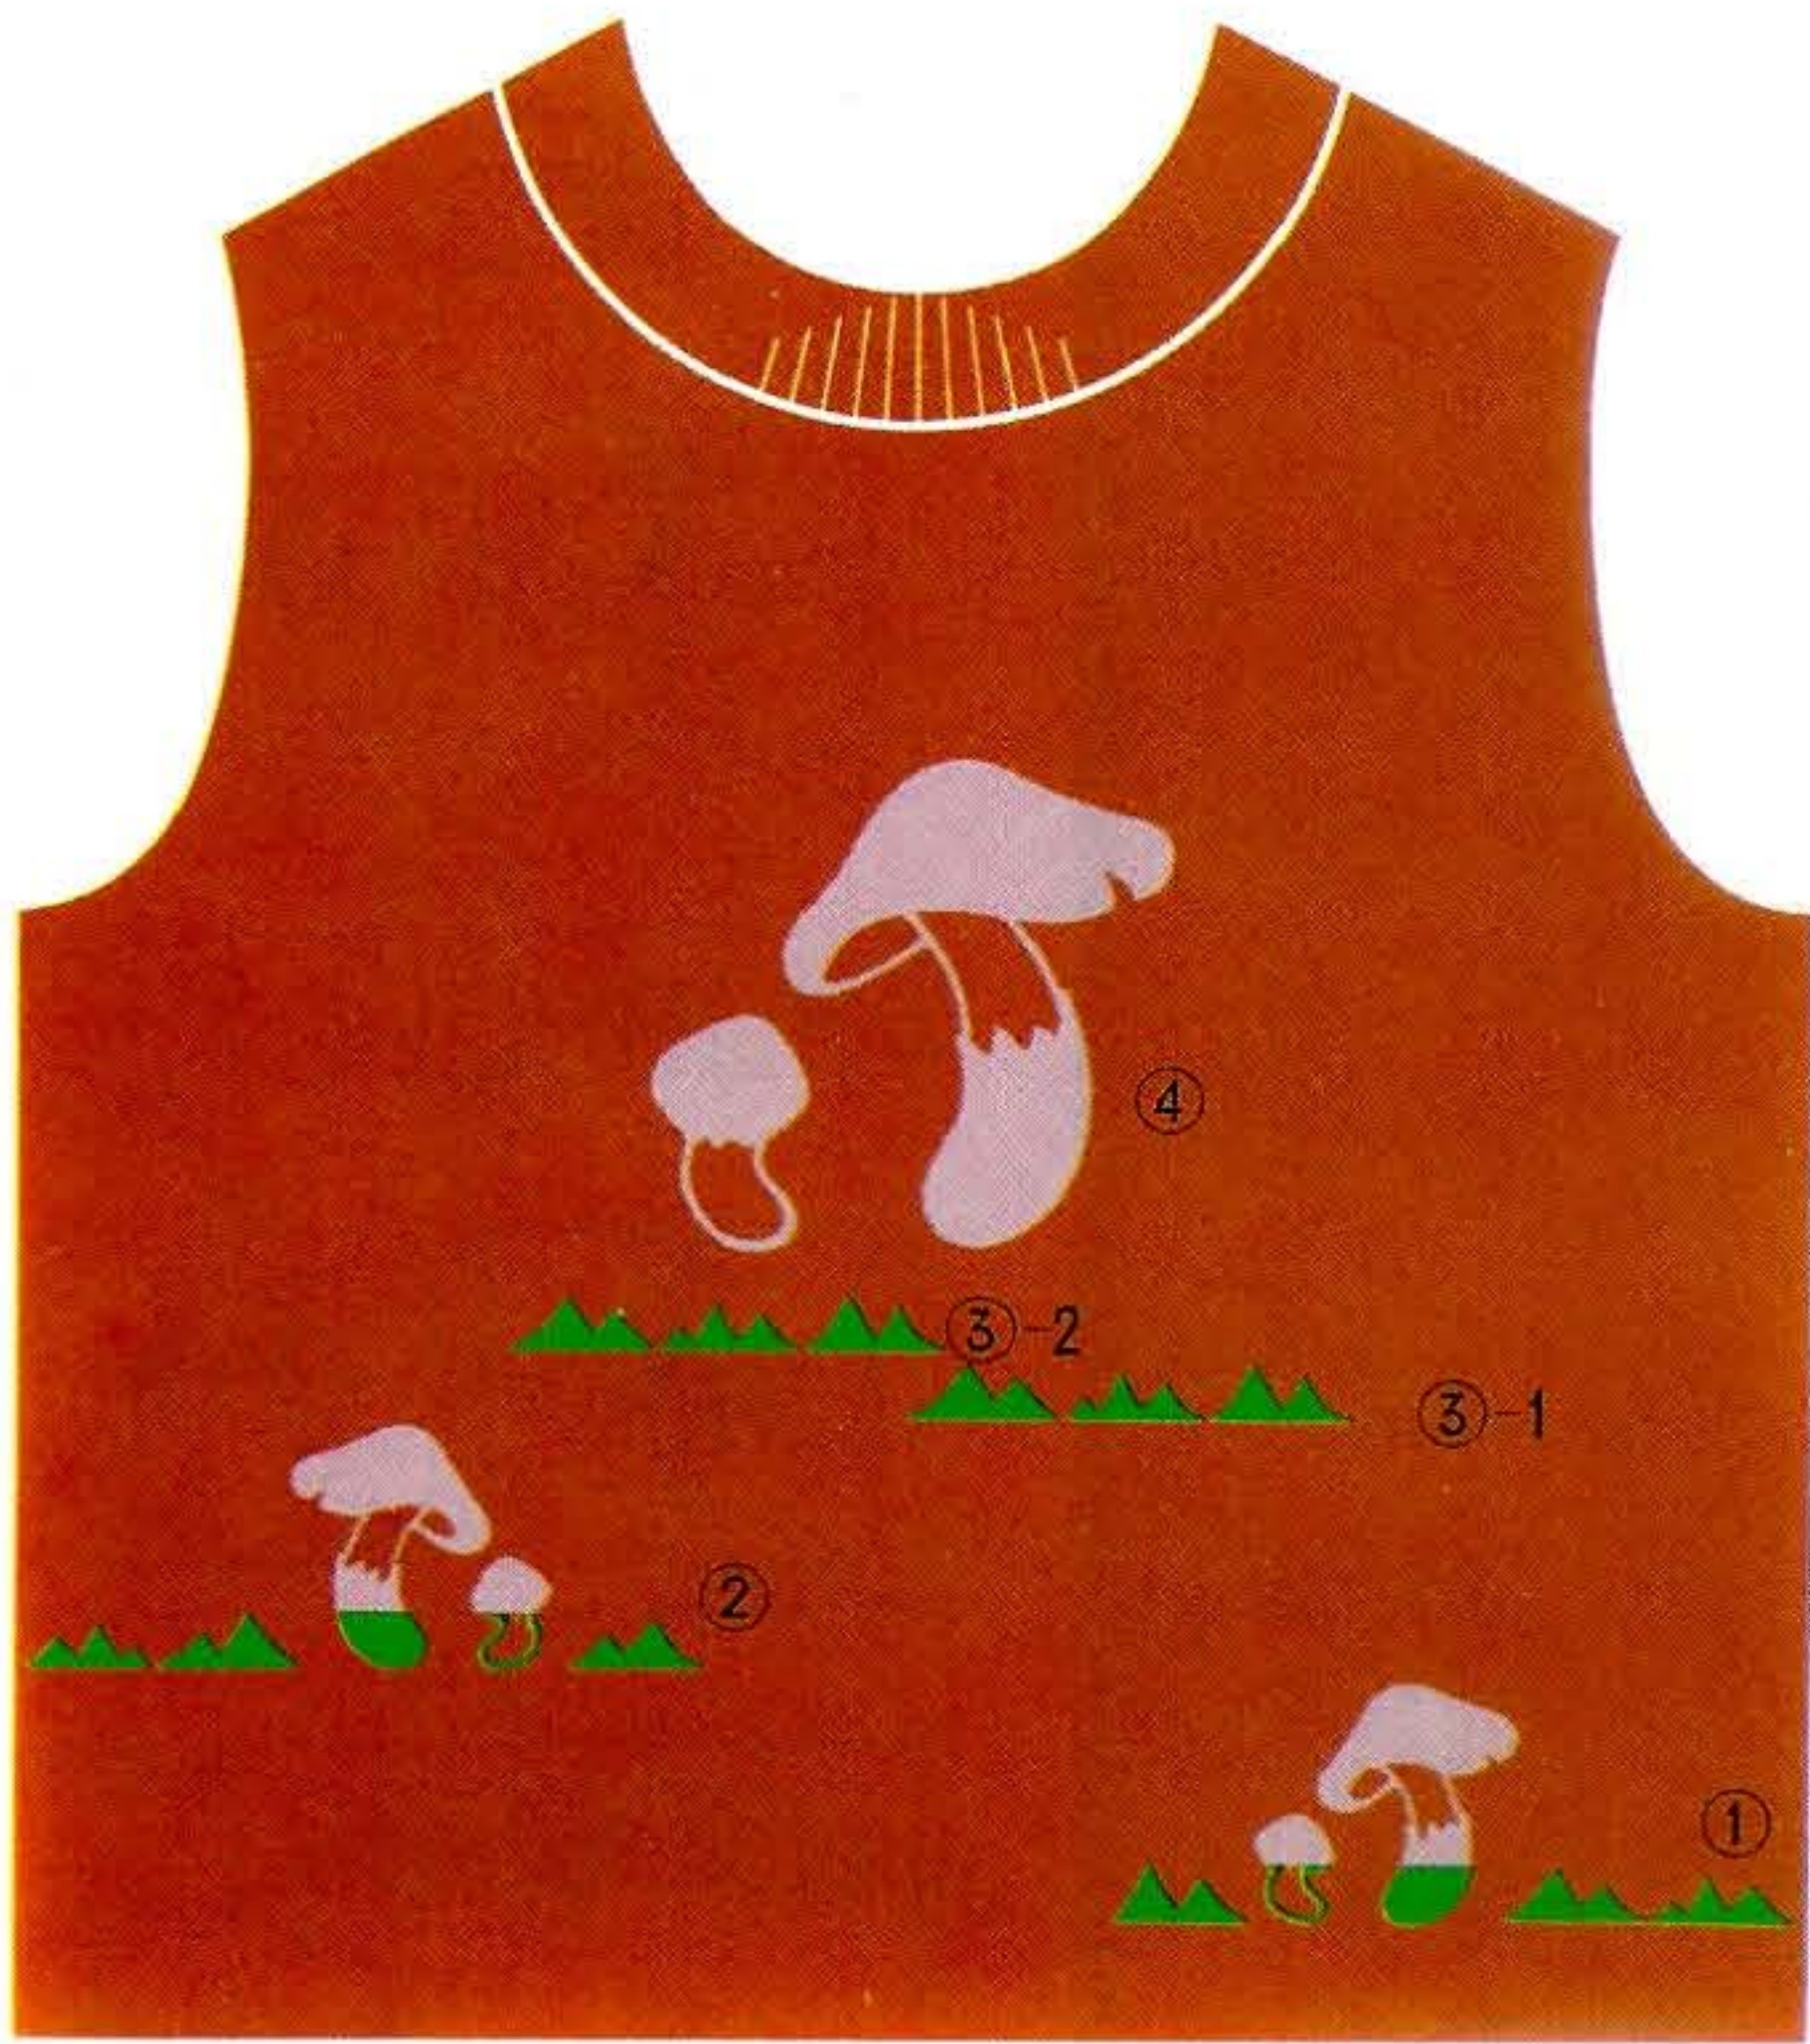


B

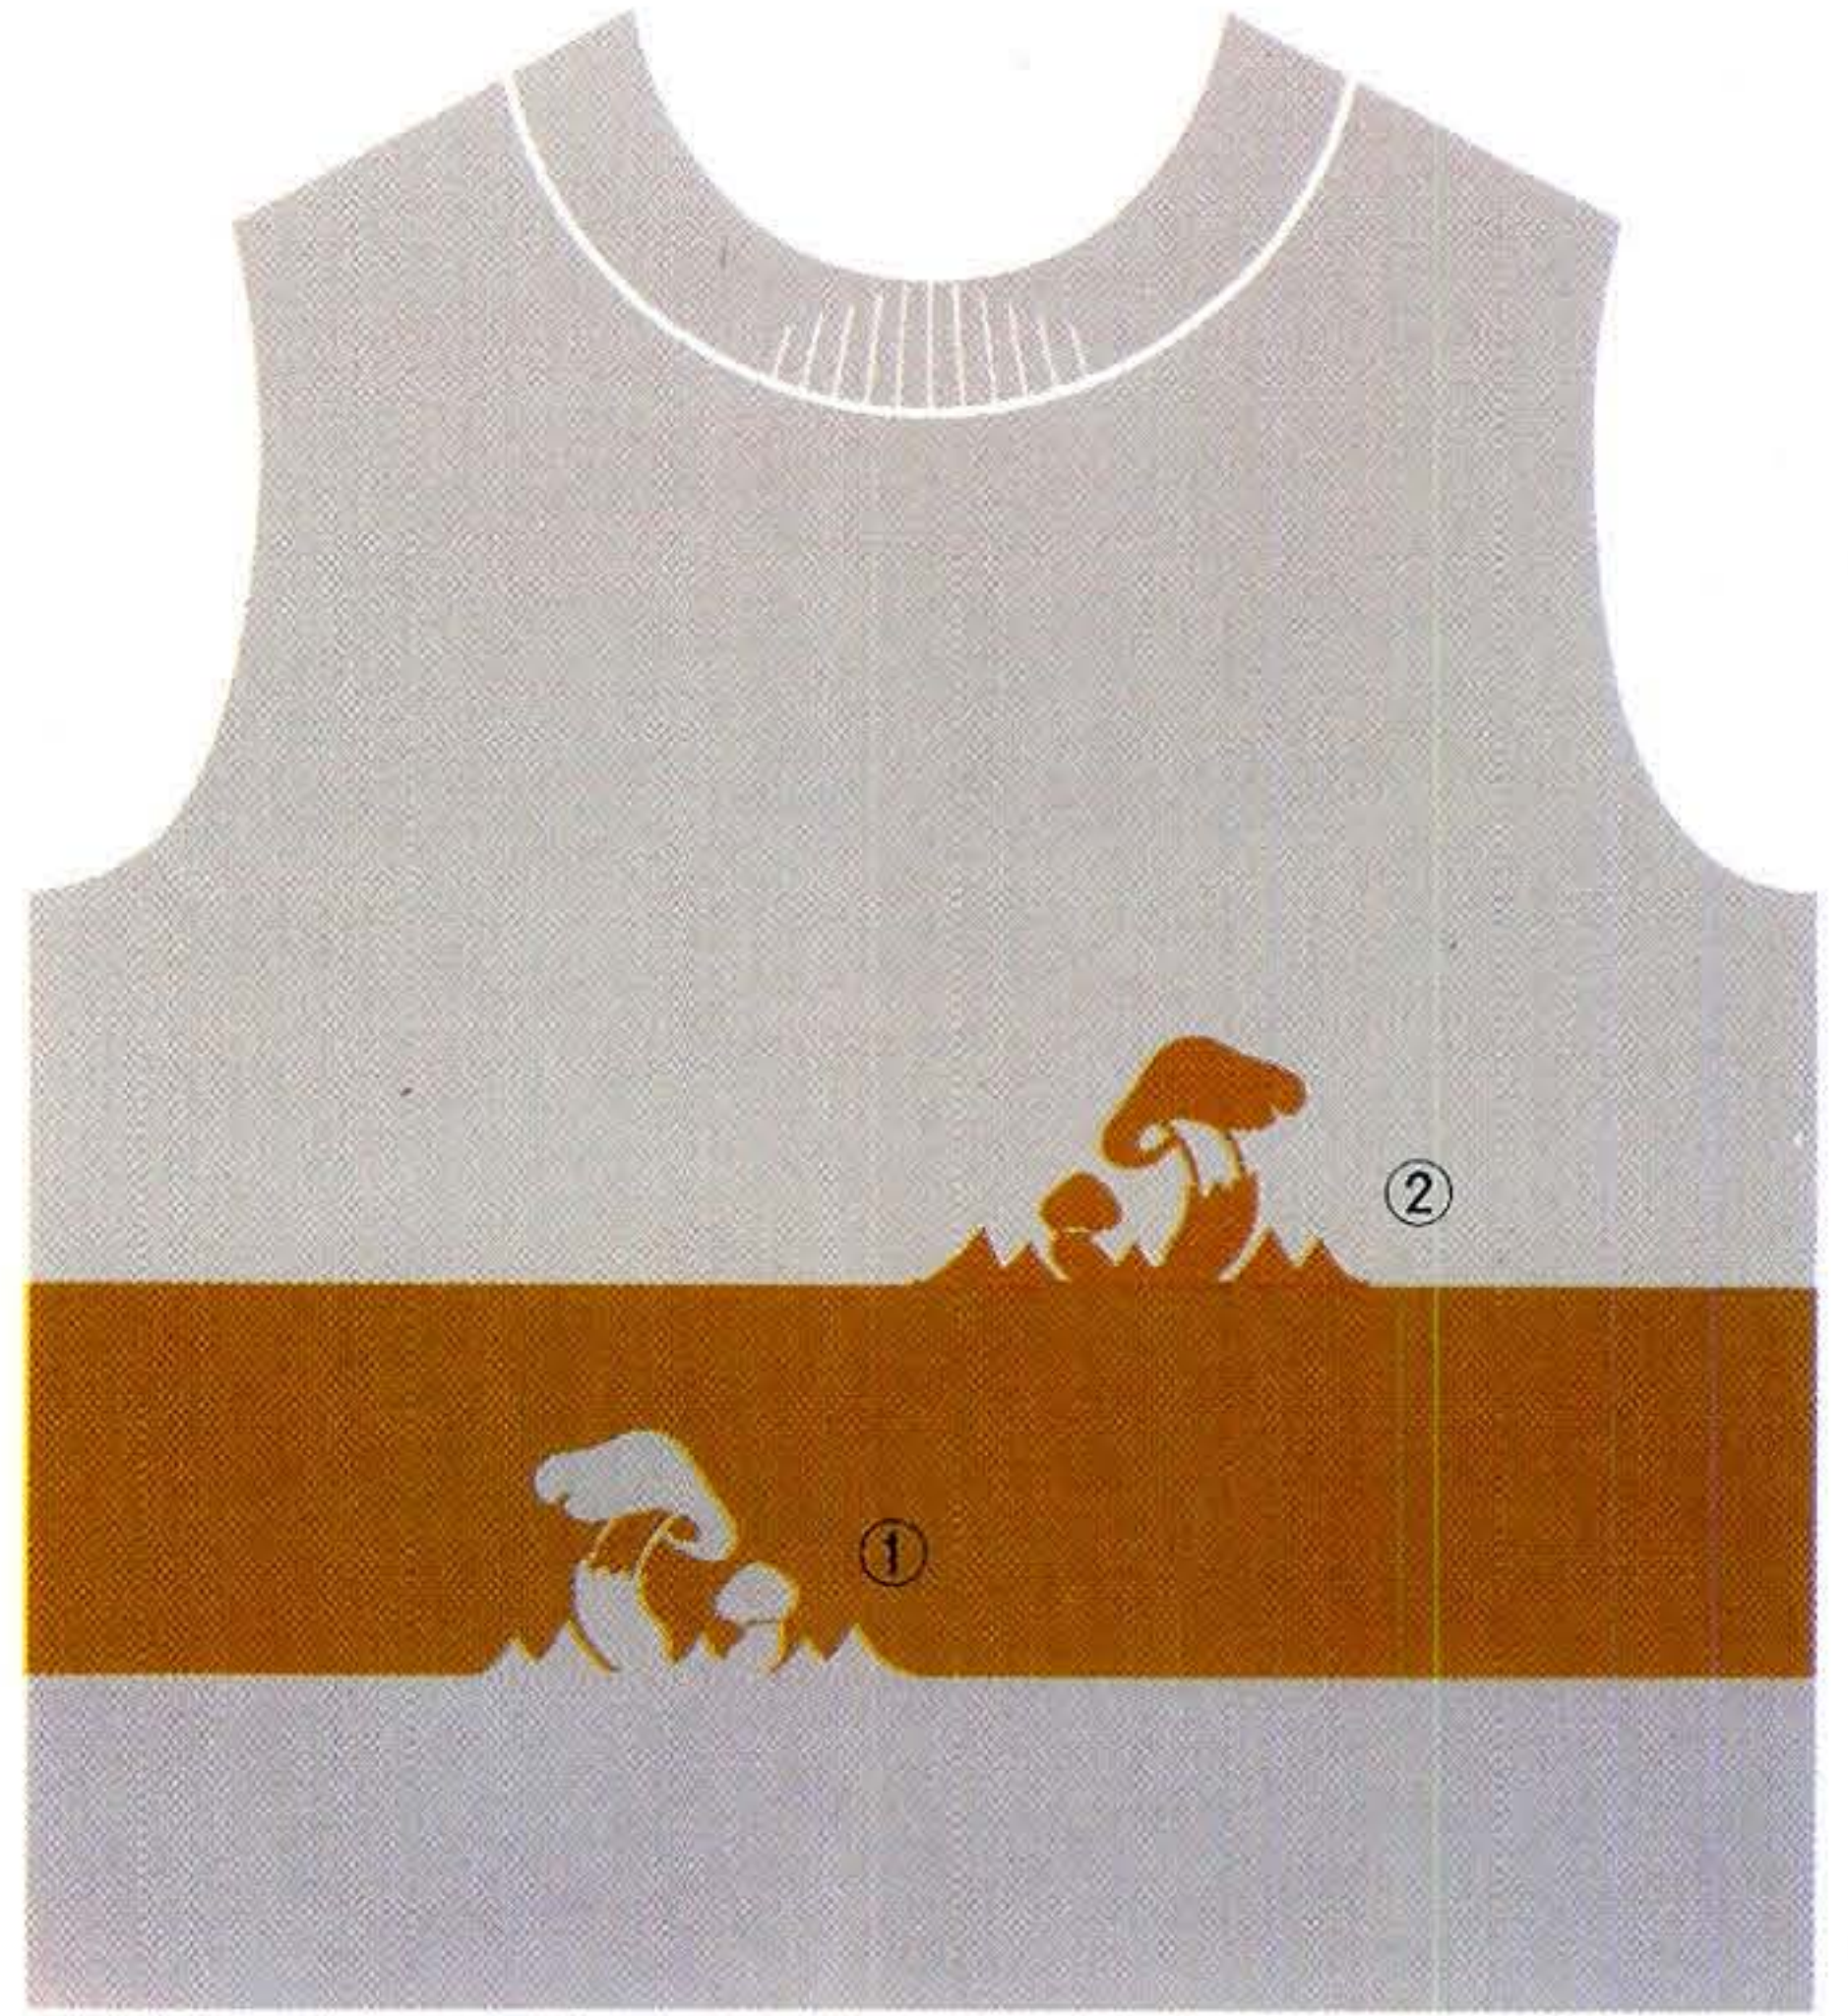 

B ①

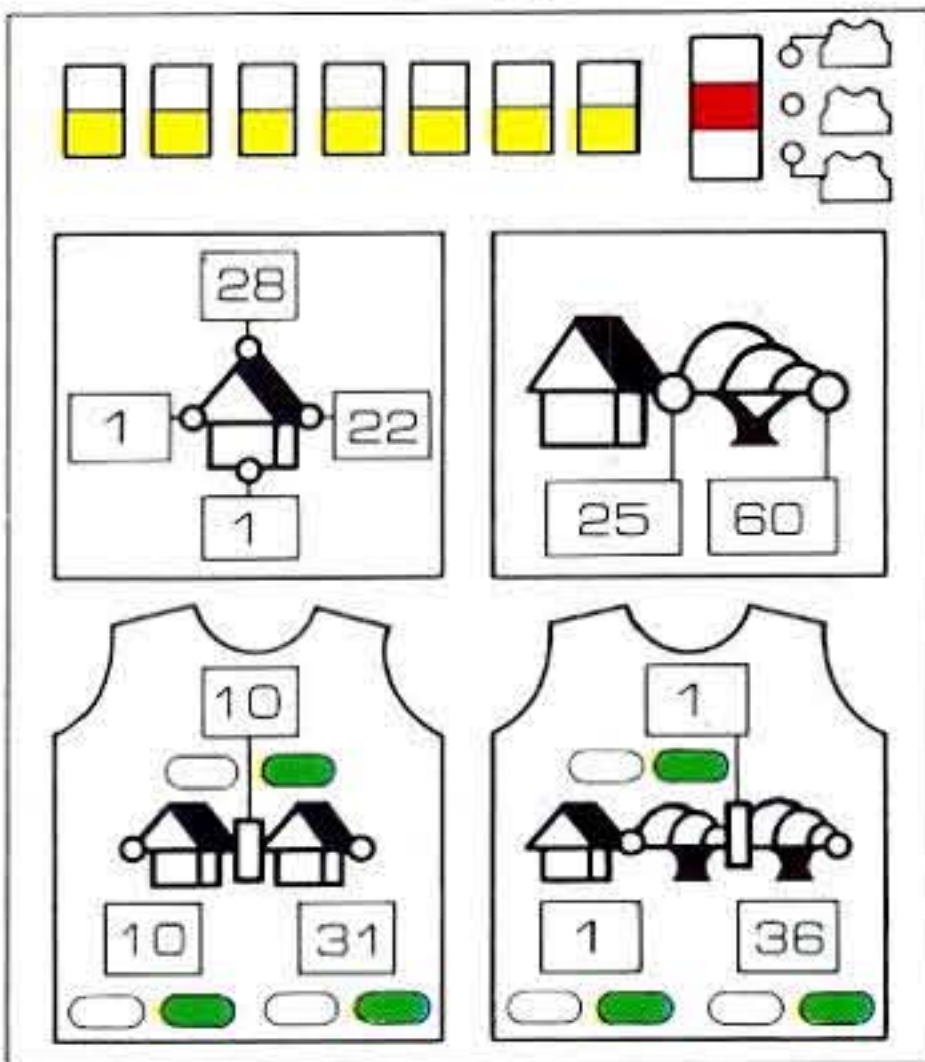 


B ②

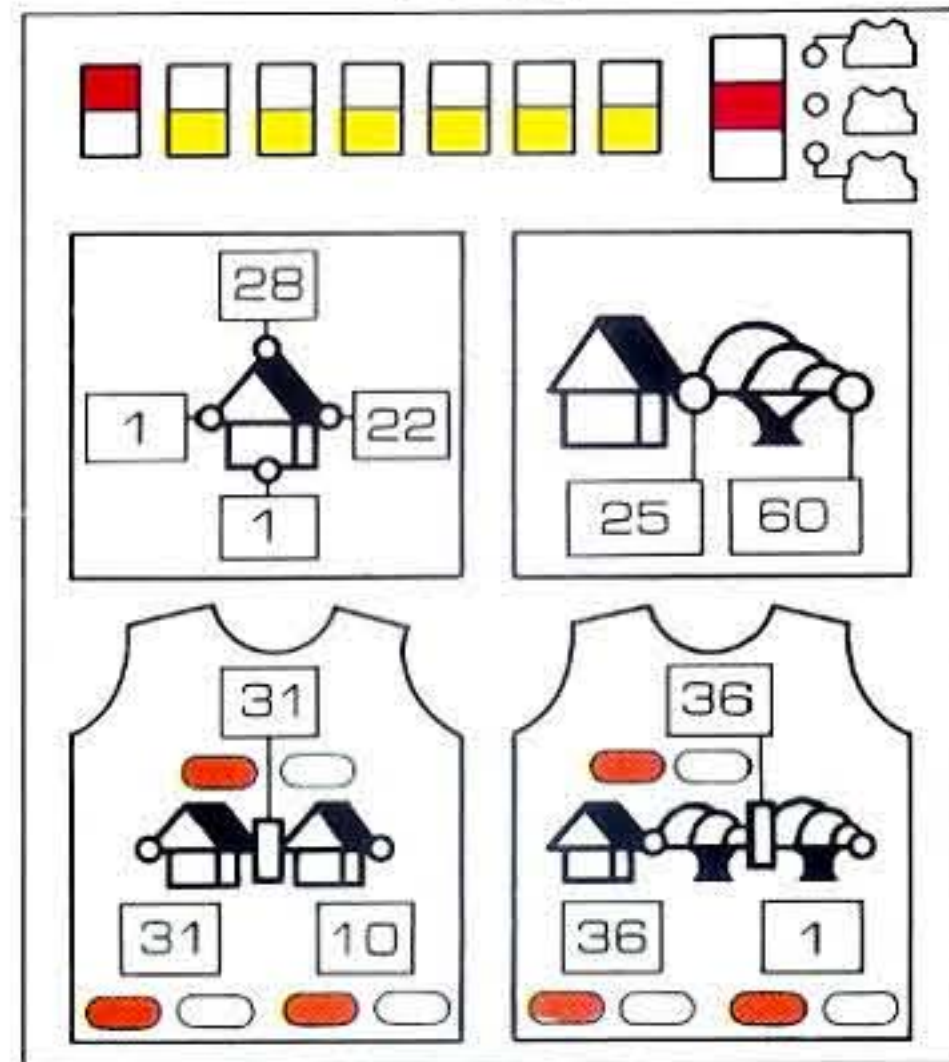 


C

 C ①-2




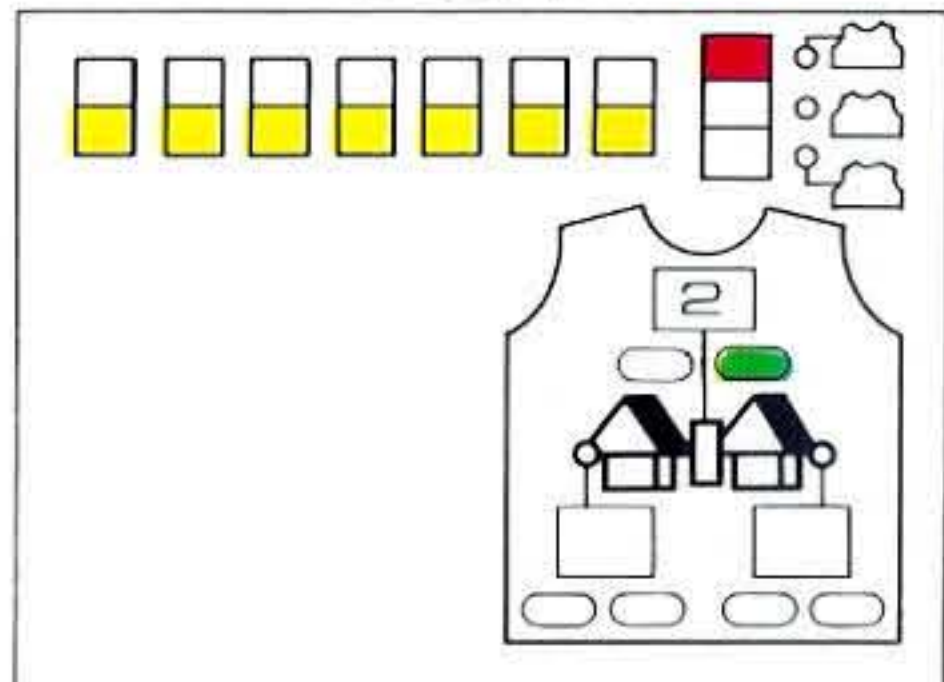


C ①-1



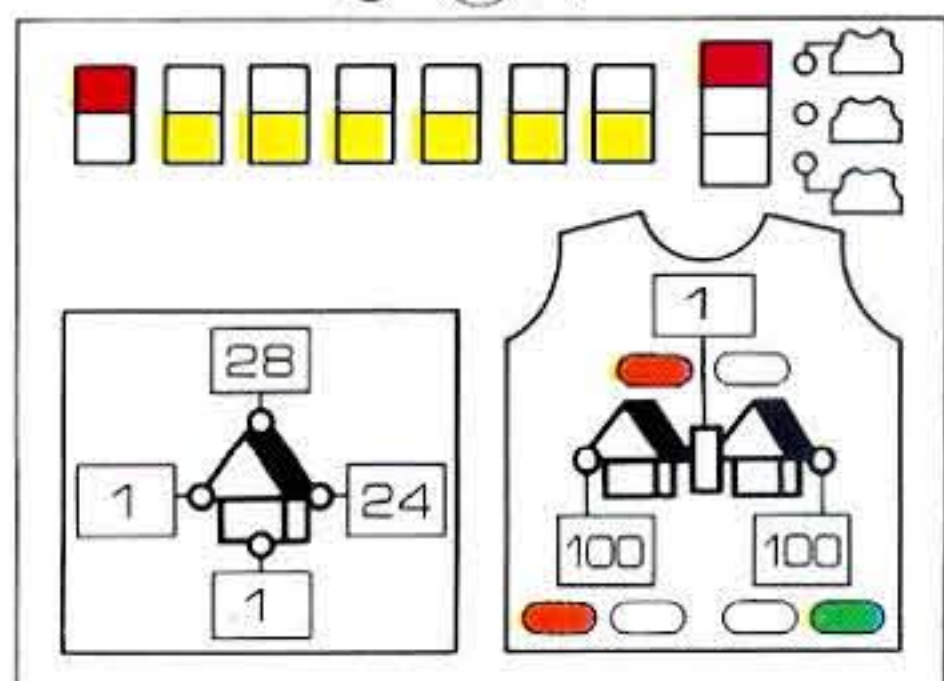 


①-2

    ①-1

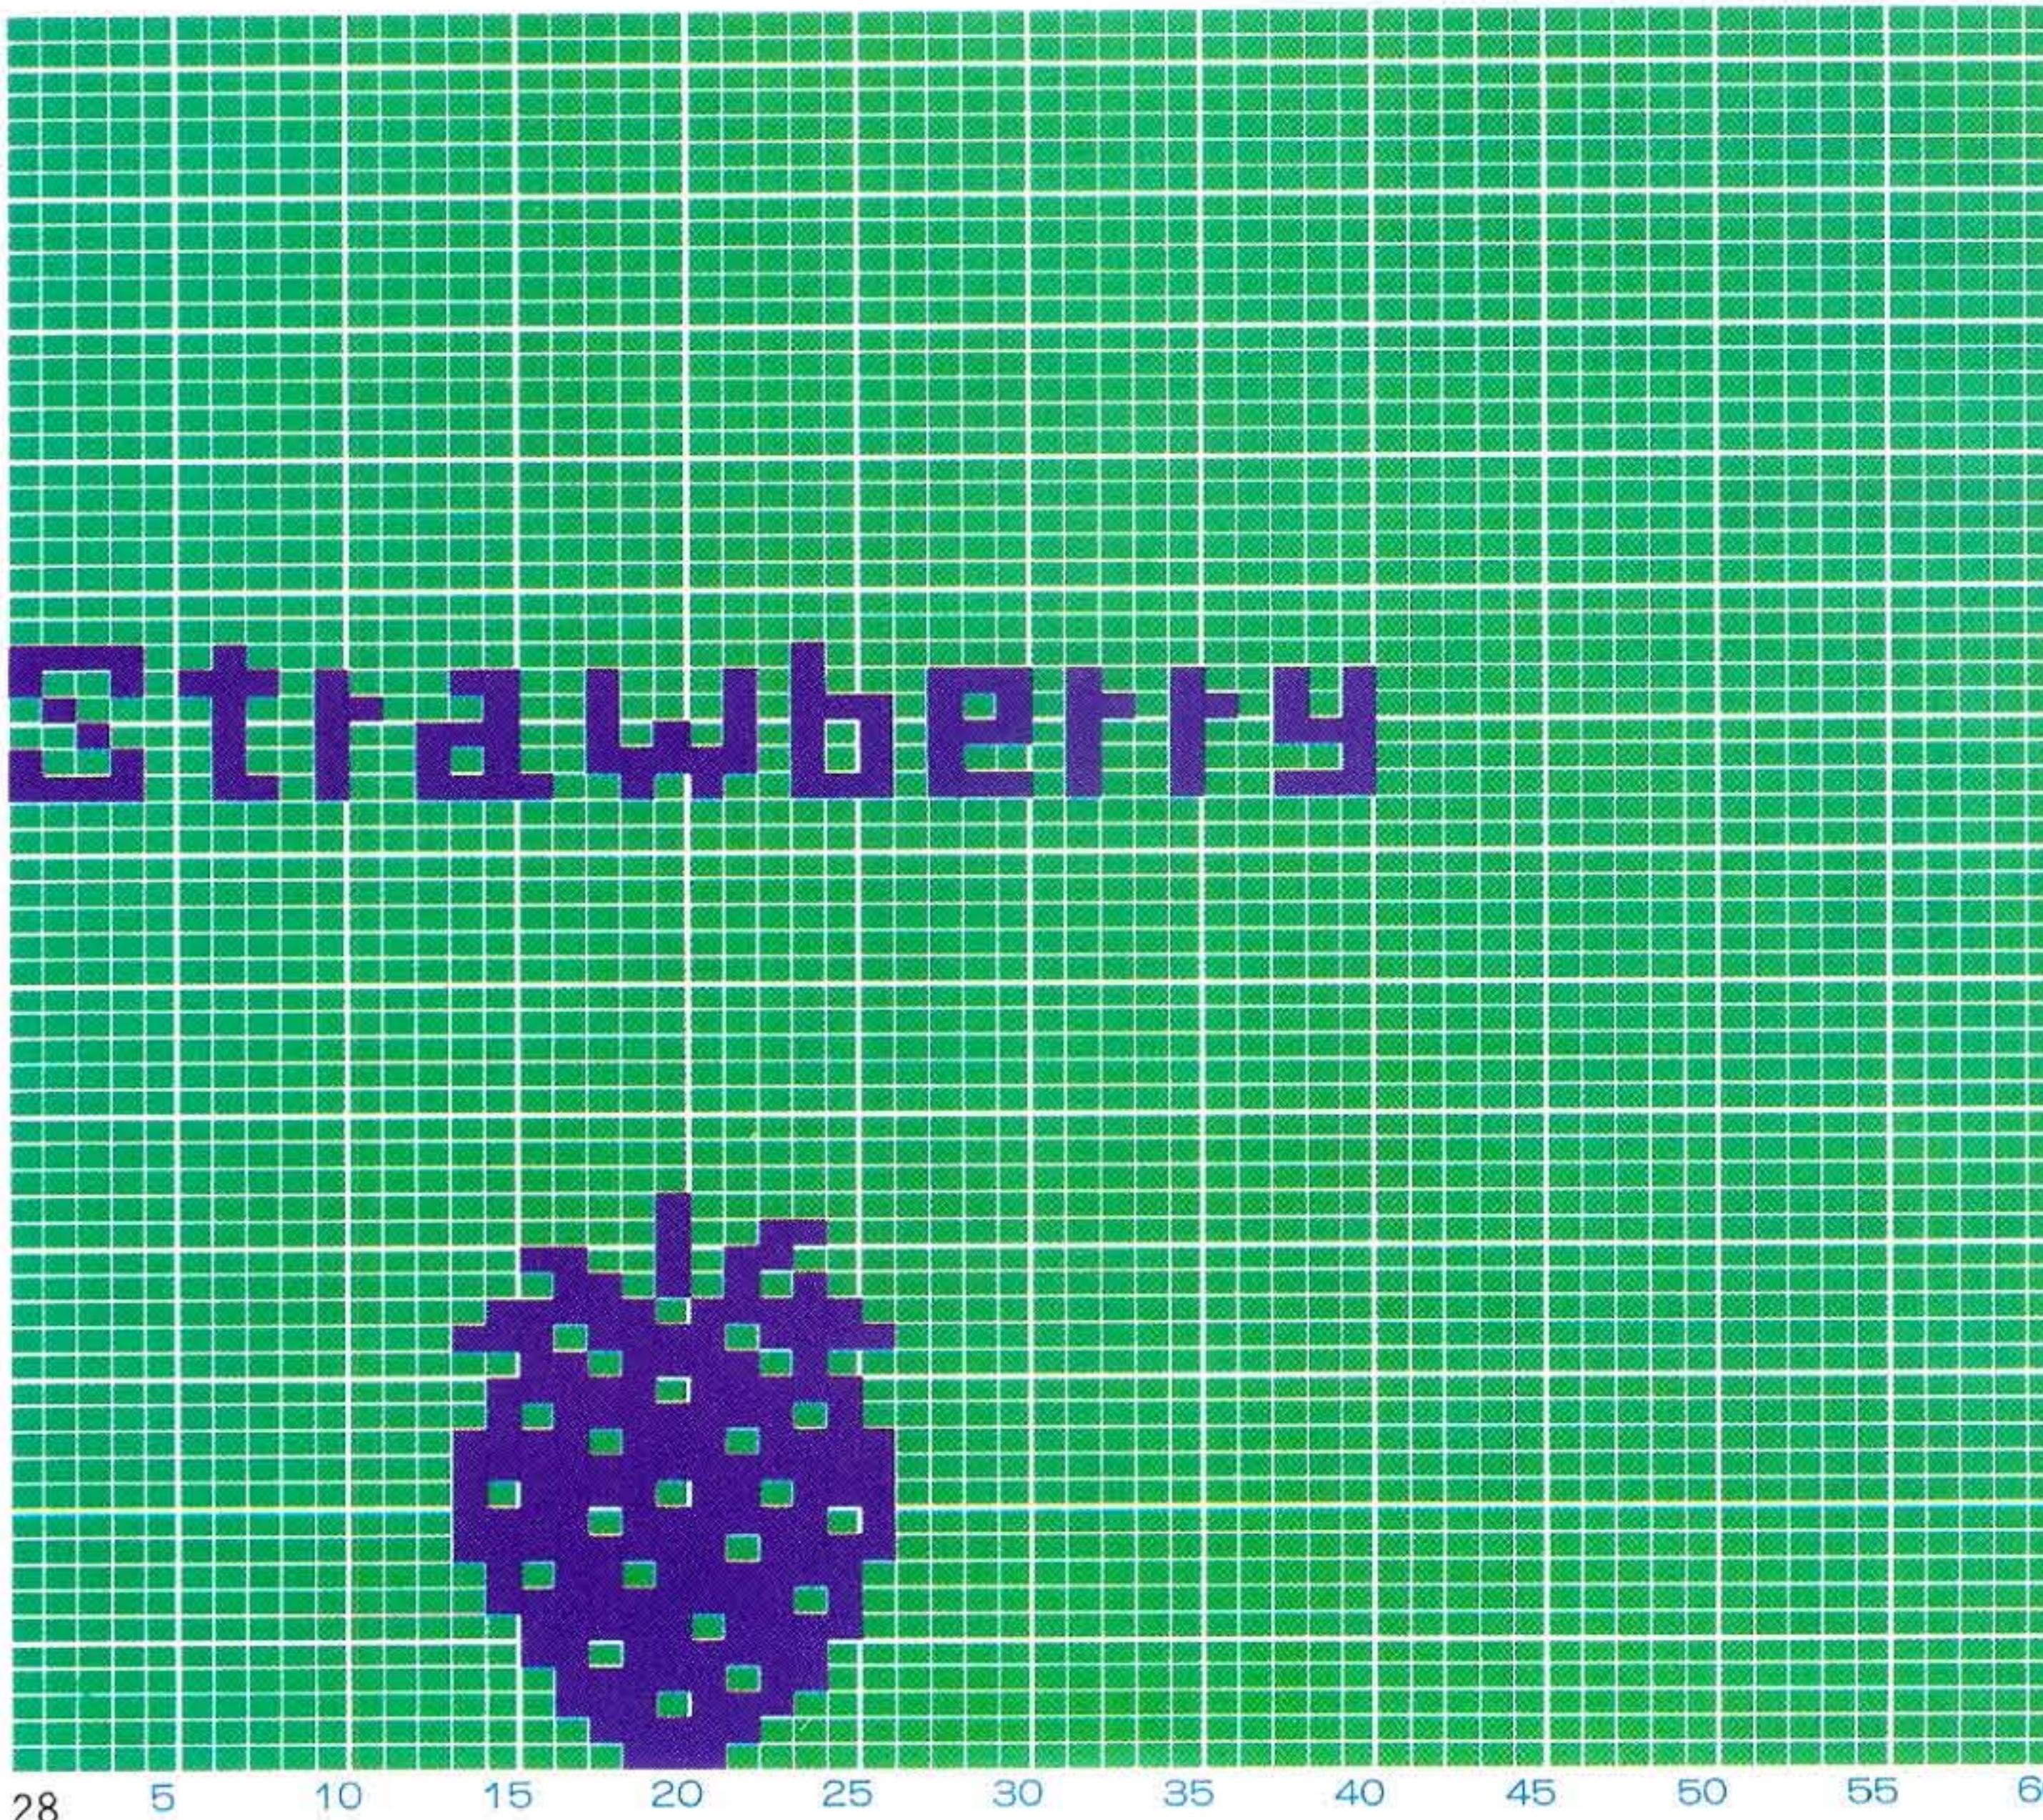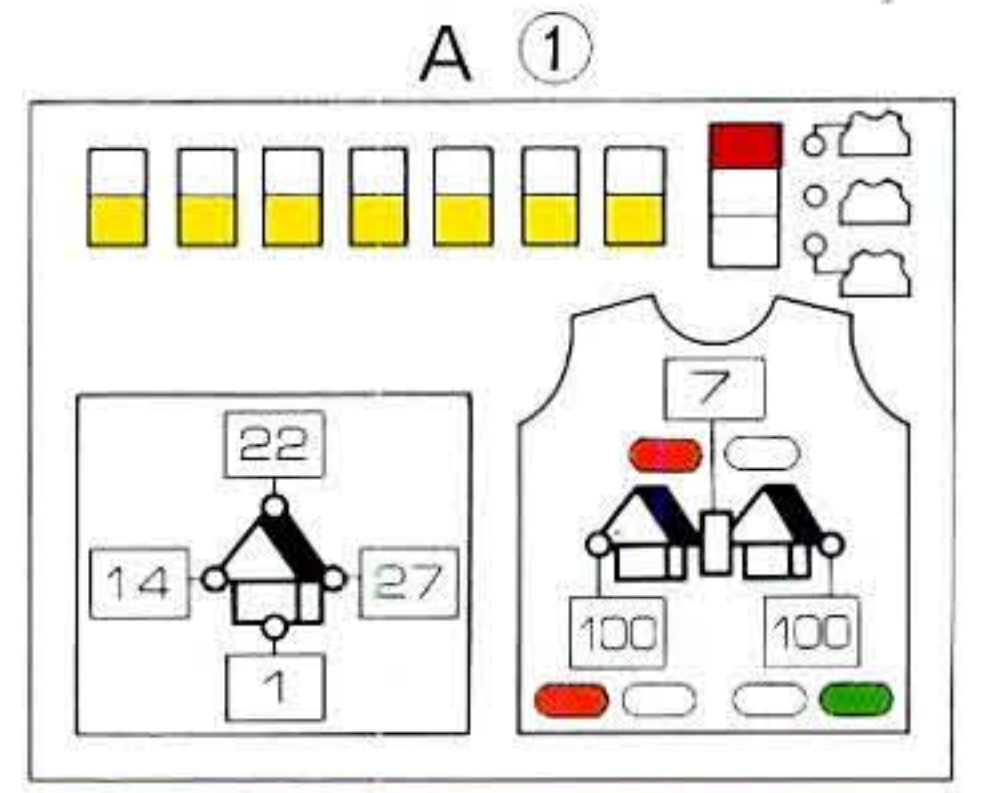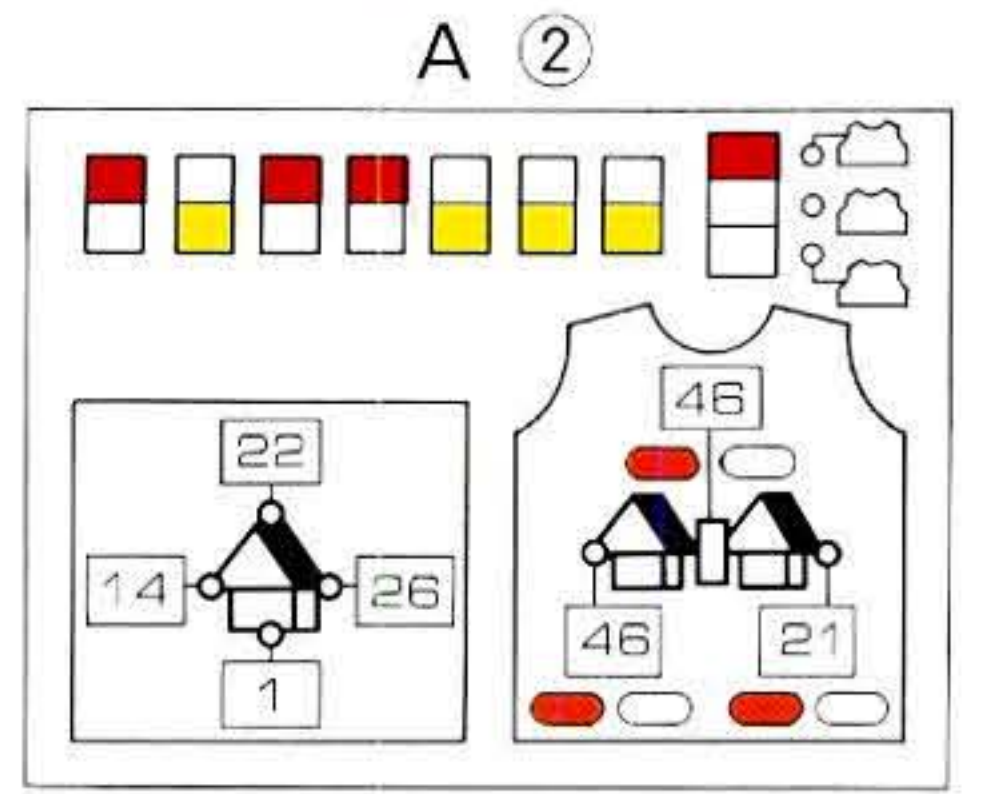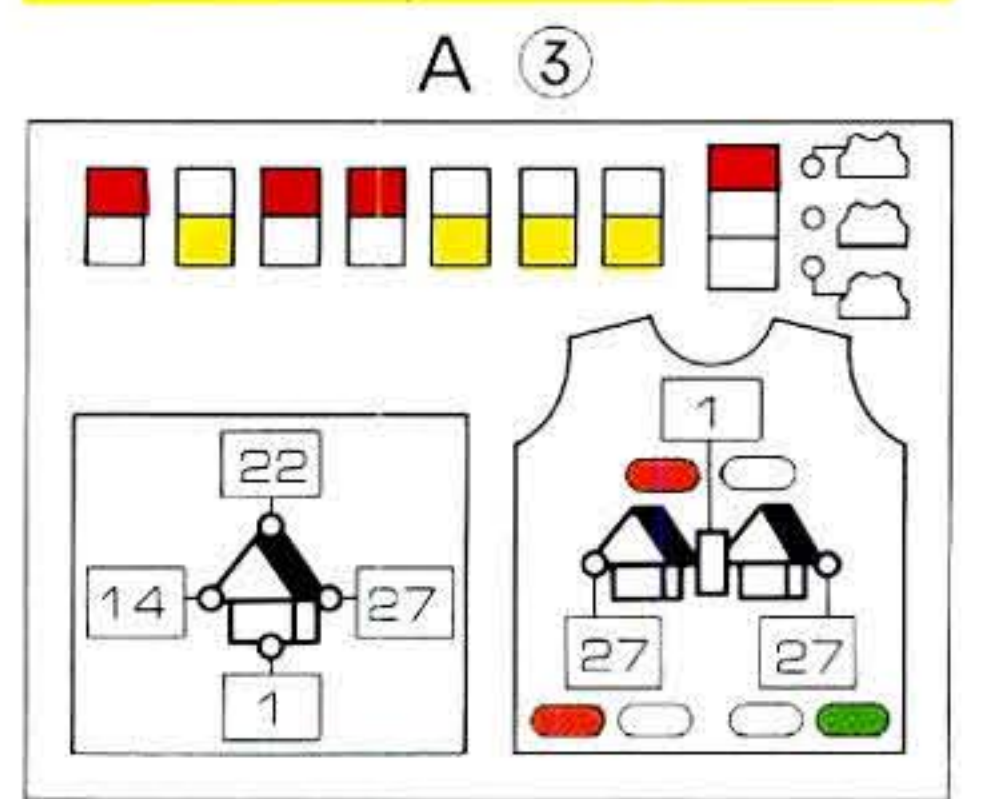

B ②
22をインプットし (はじめ) キーを押します

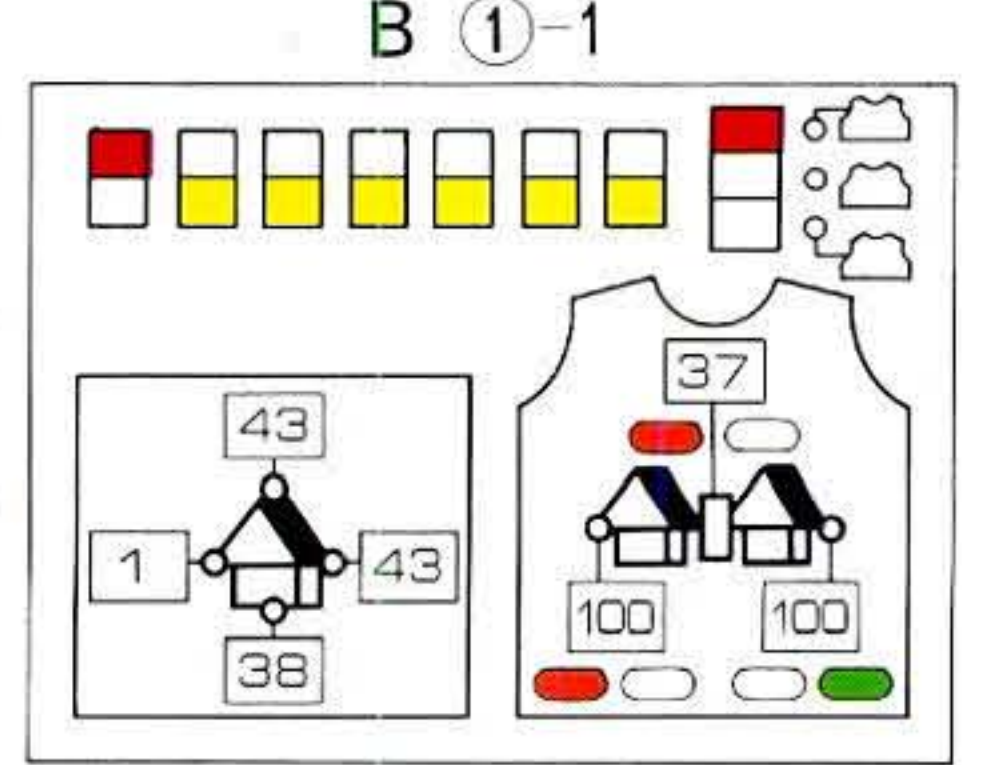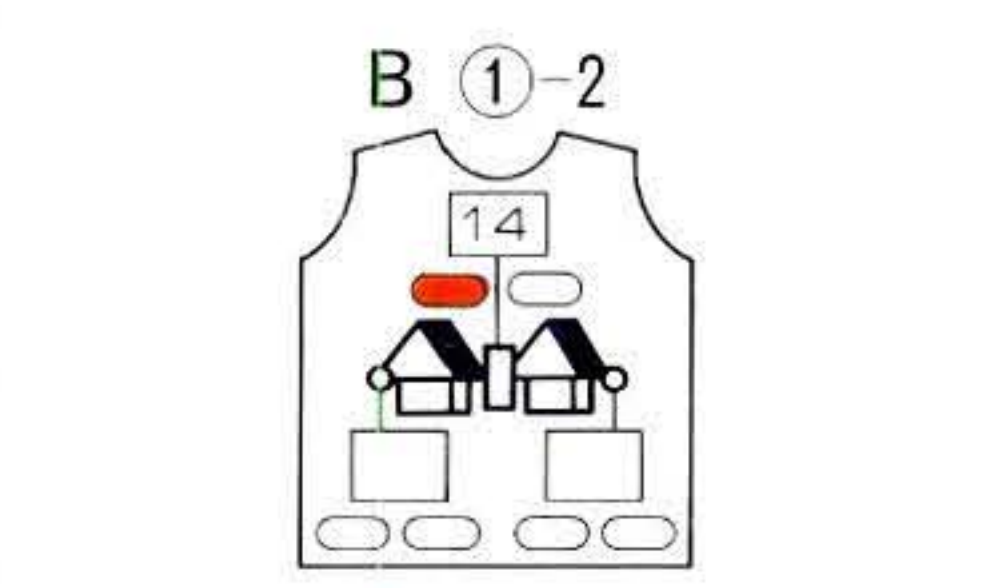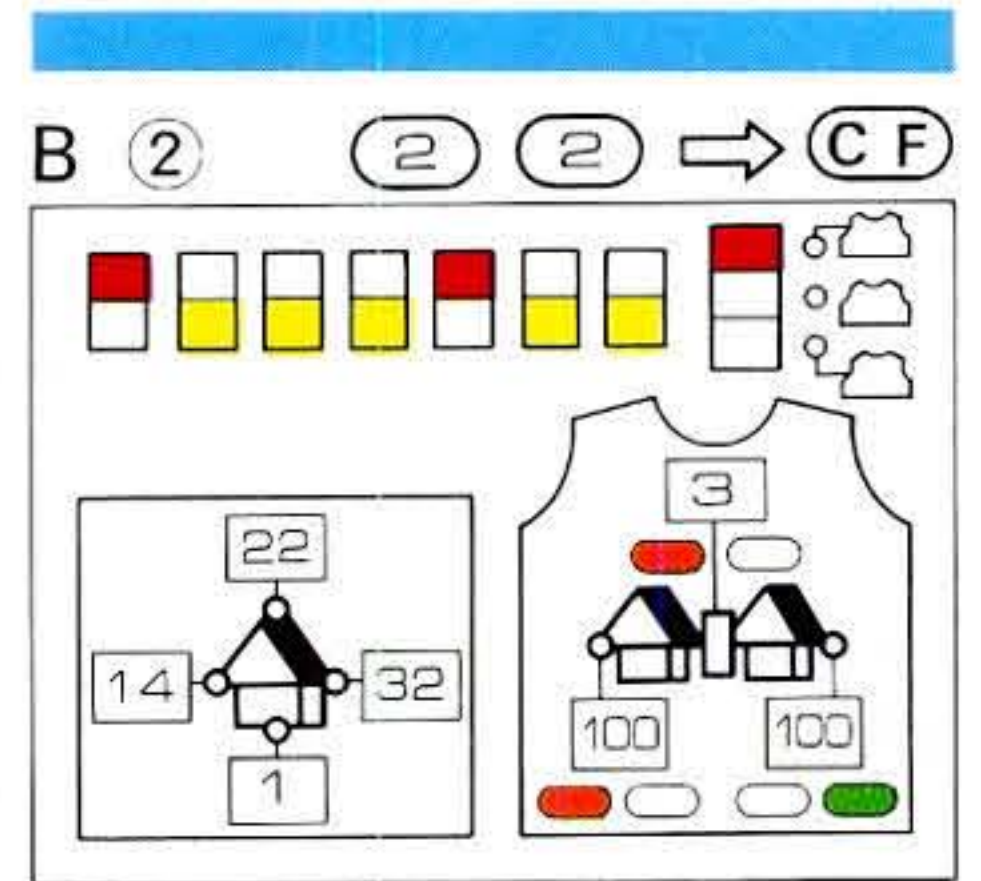   


A




B



 
C ③

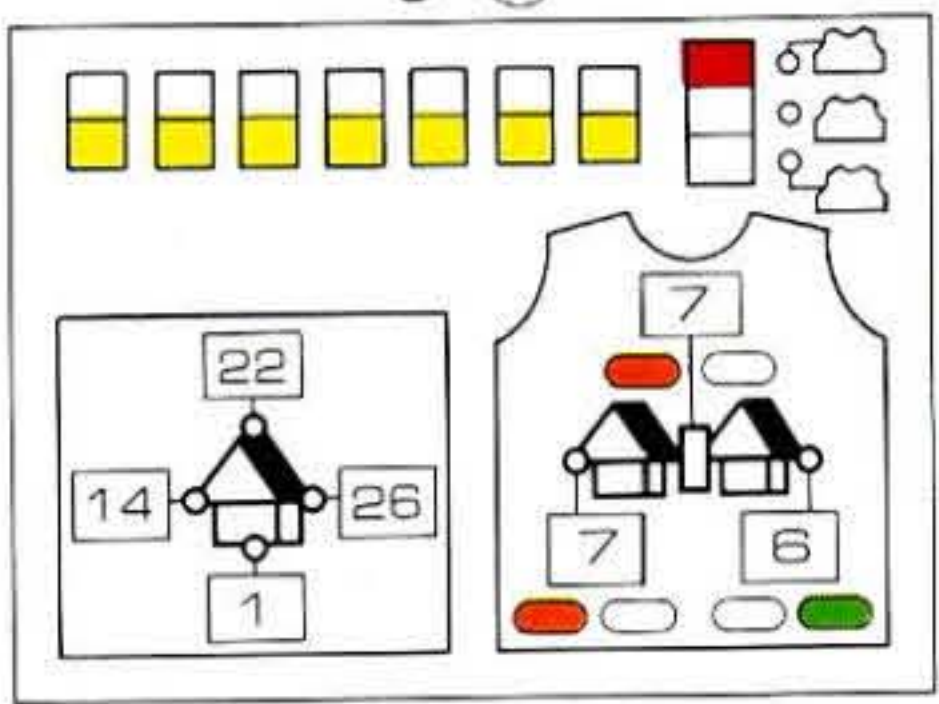


C ②







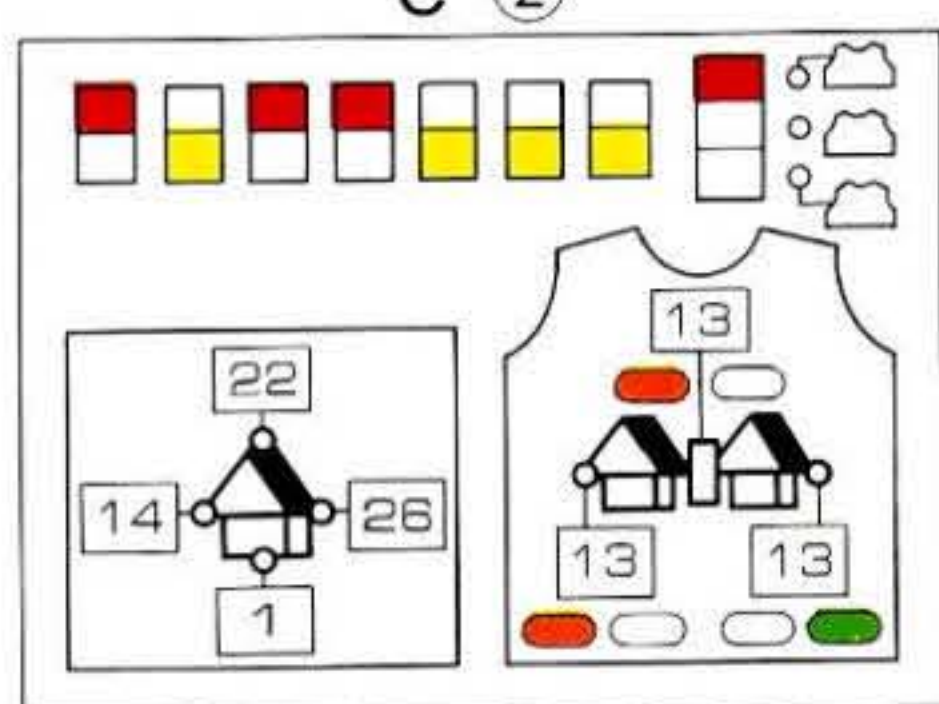 


C ①

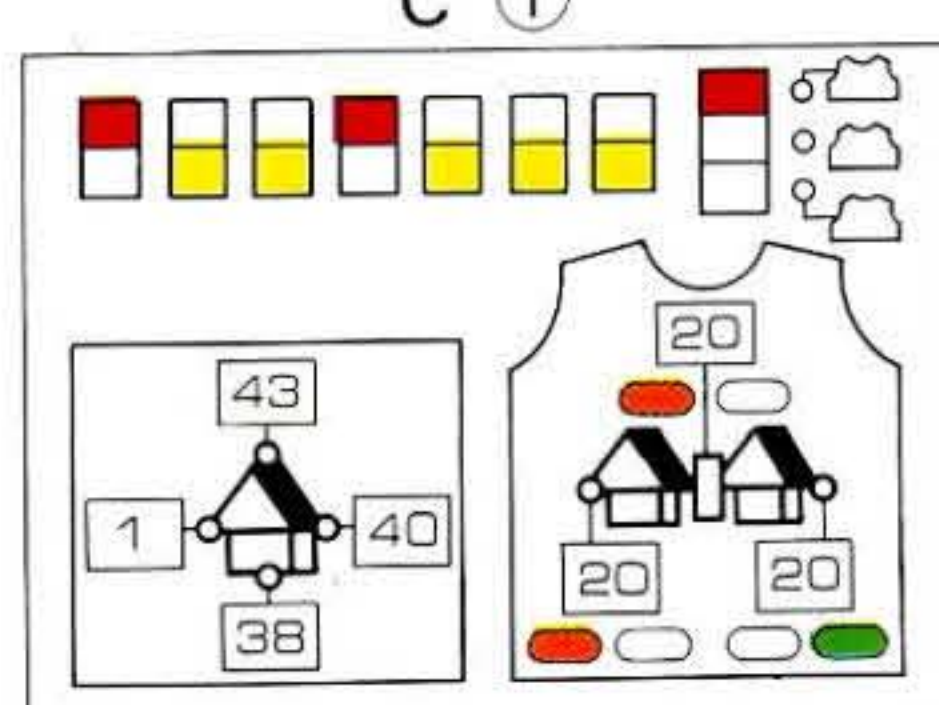 

C


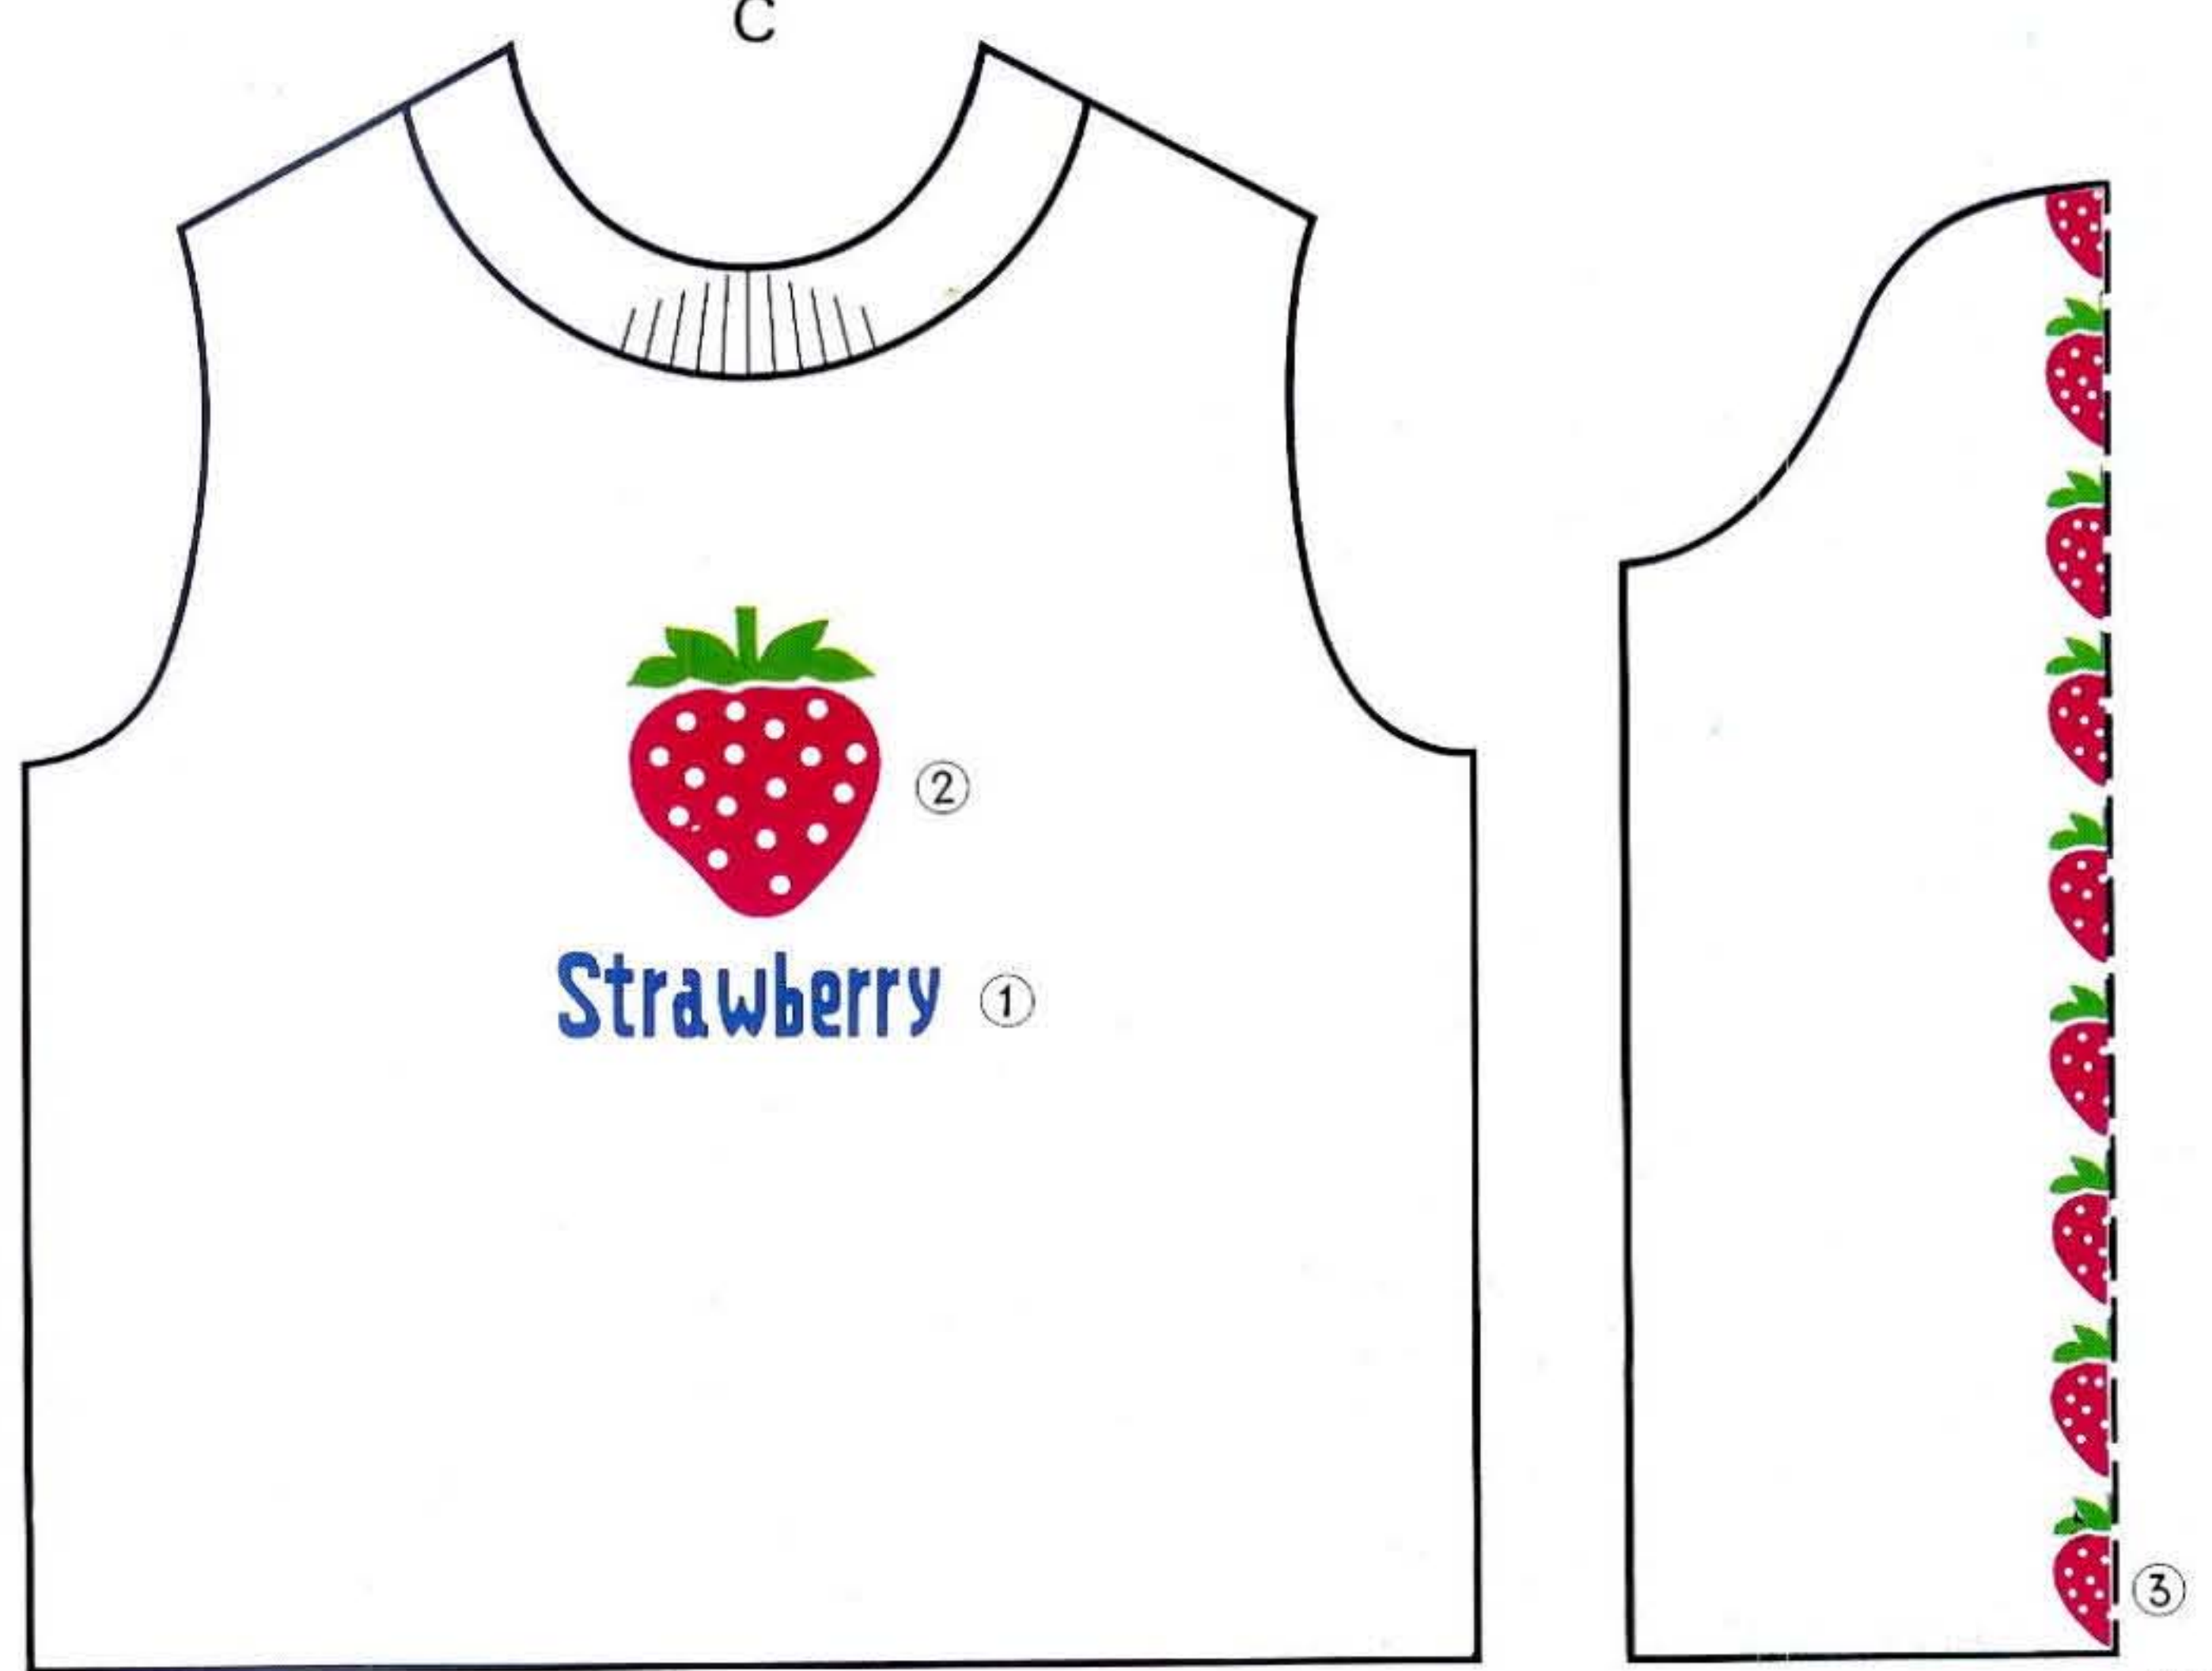 


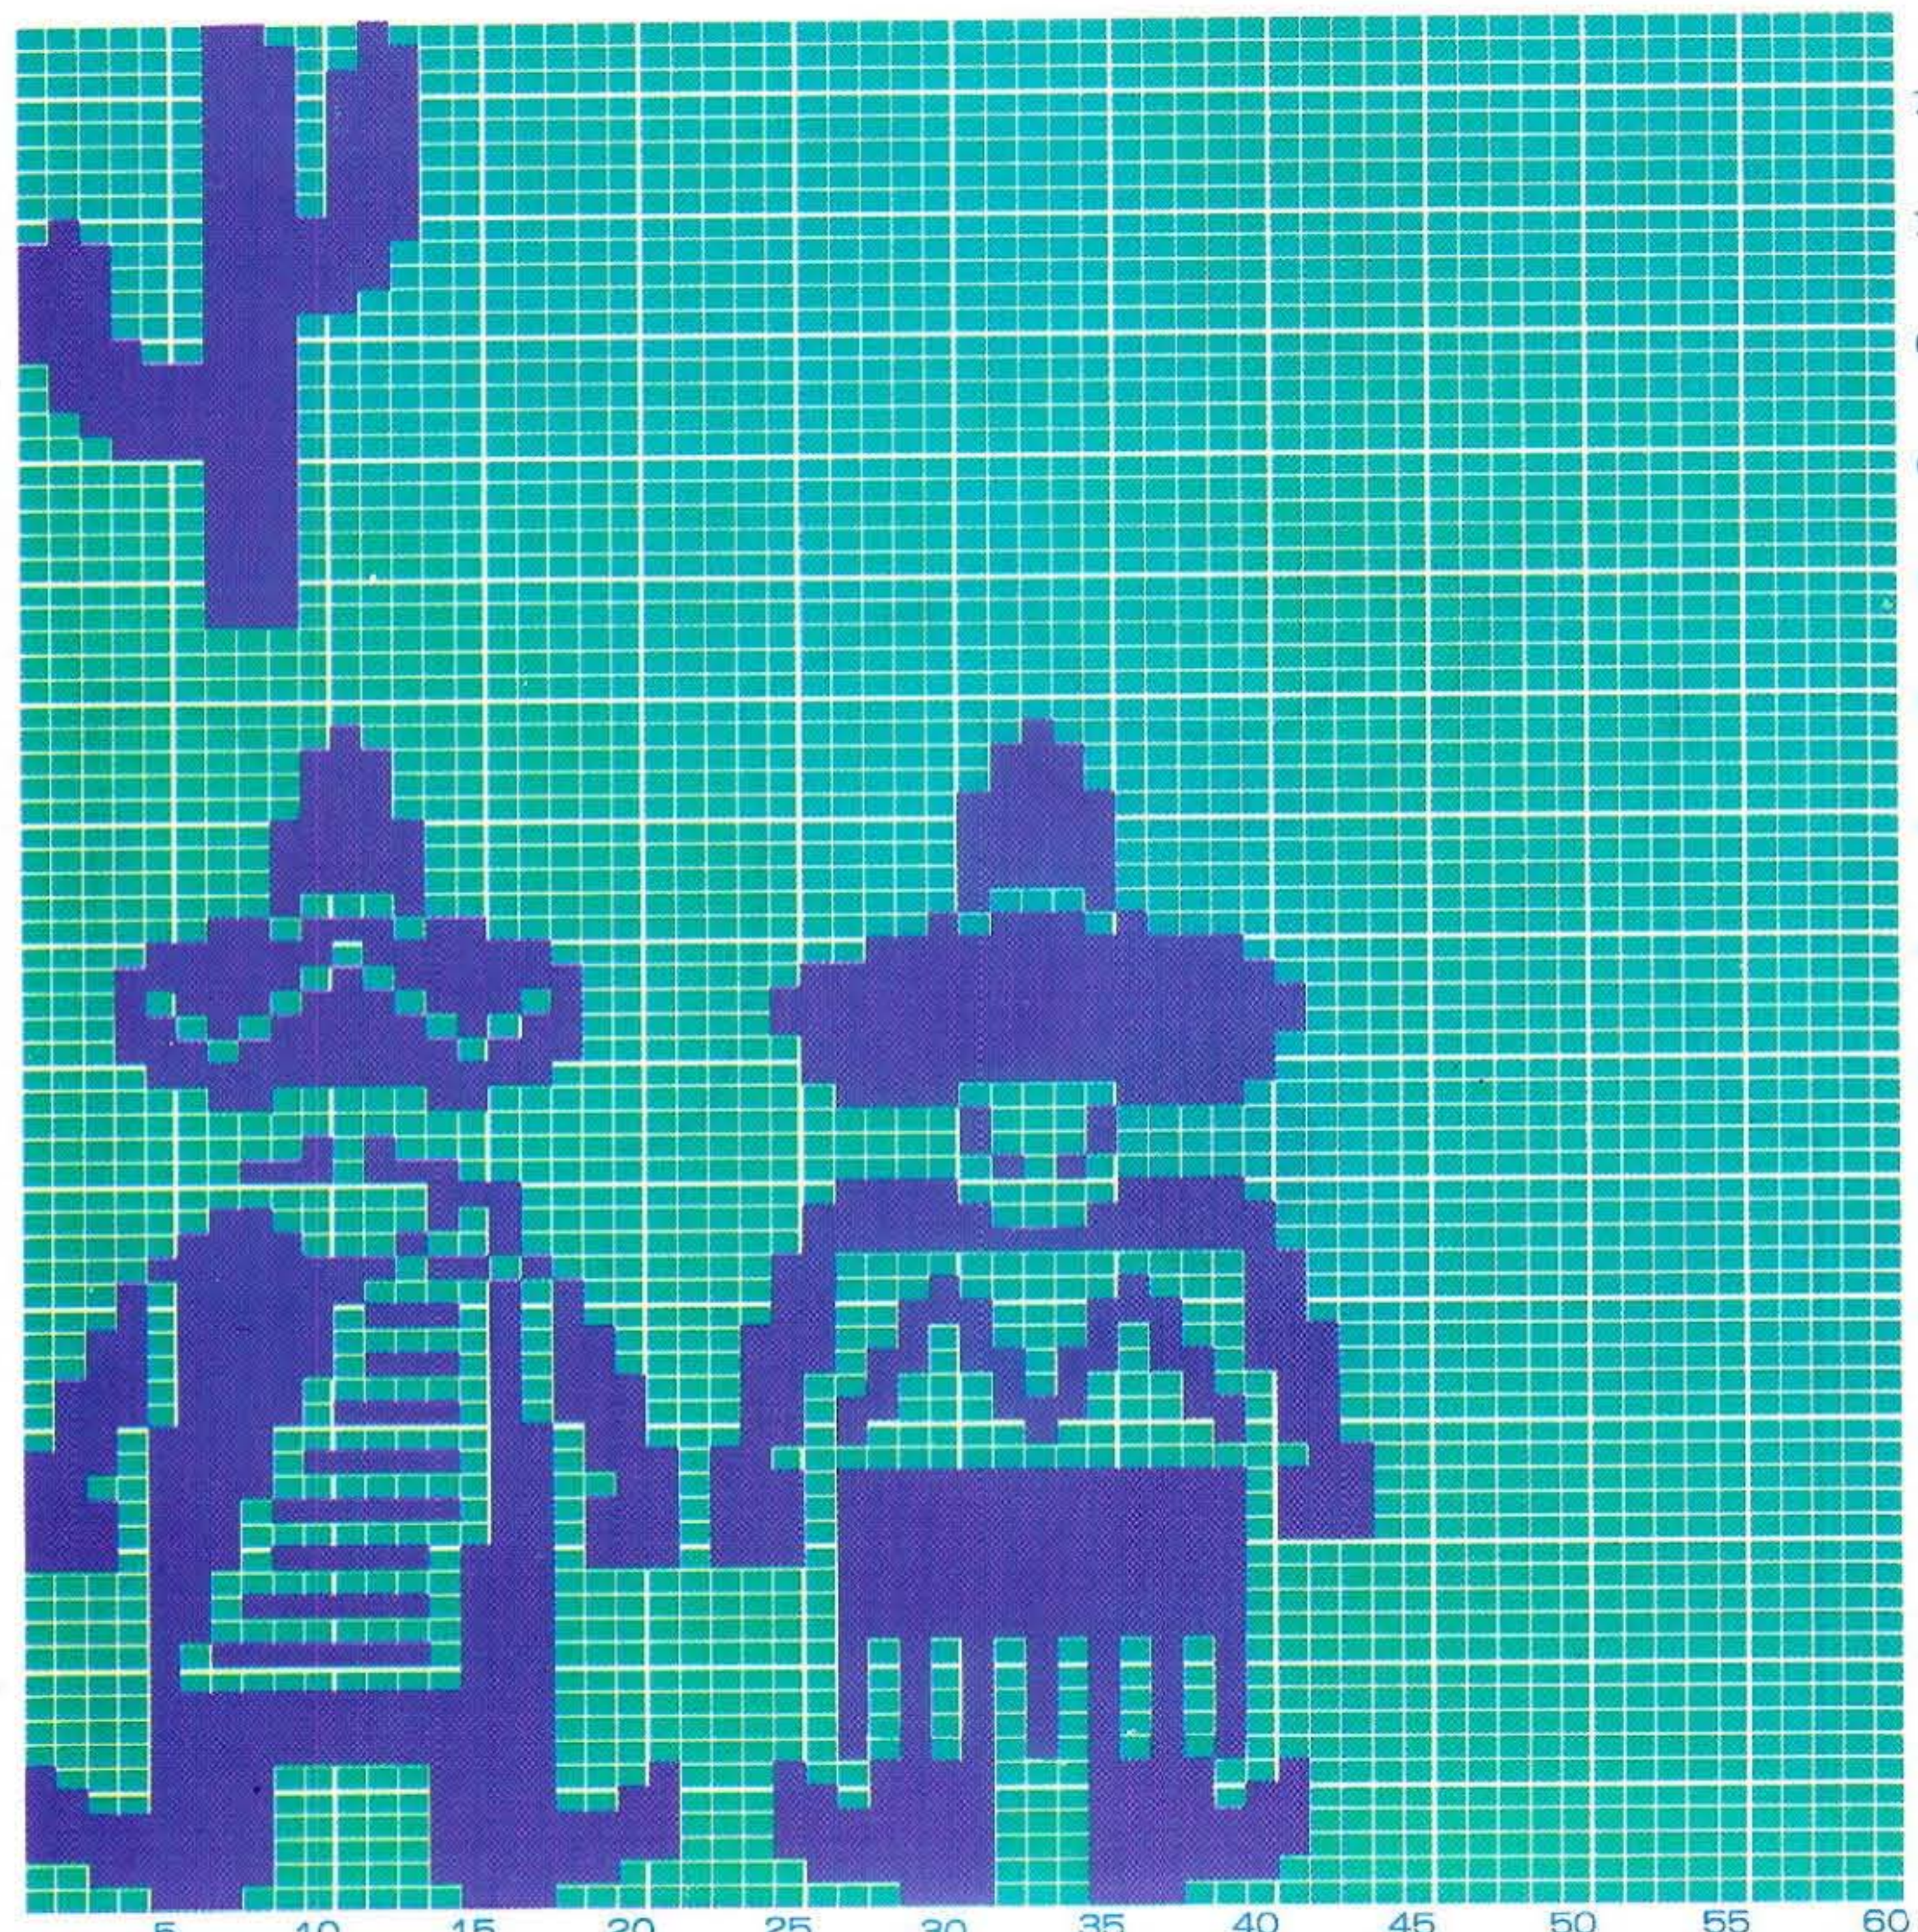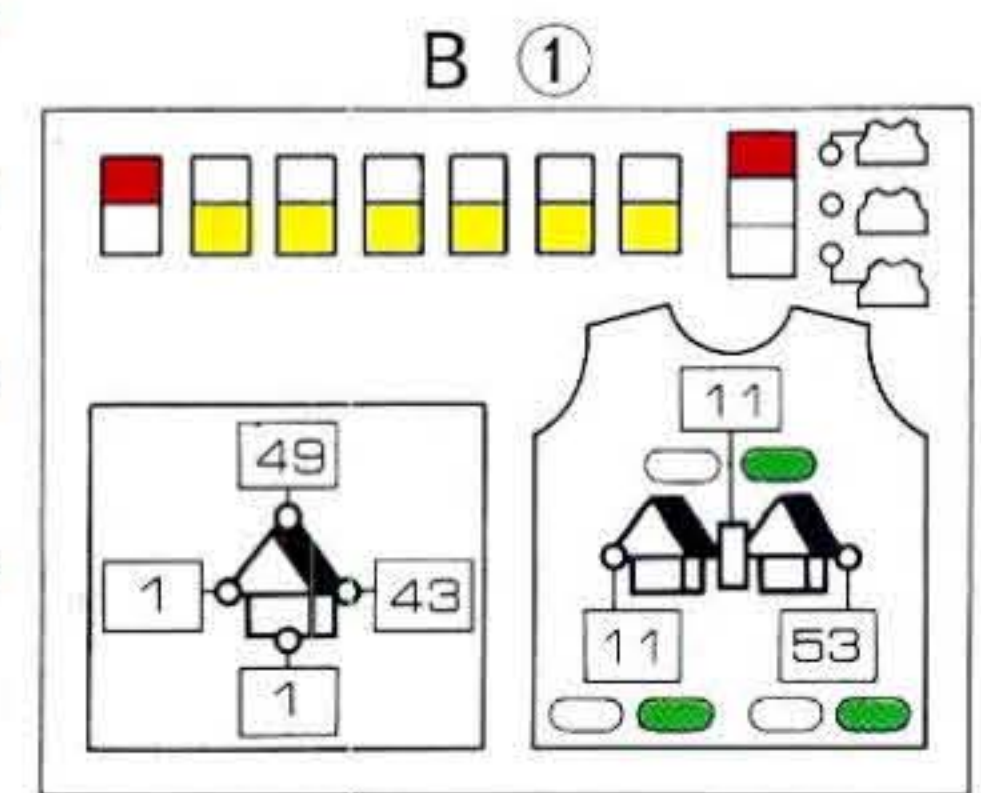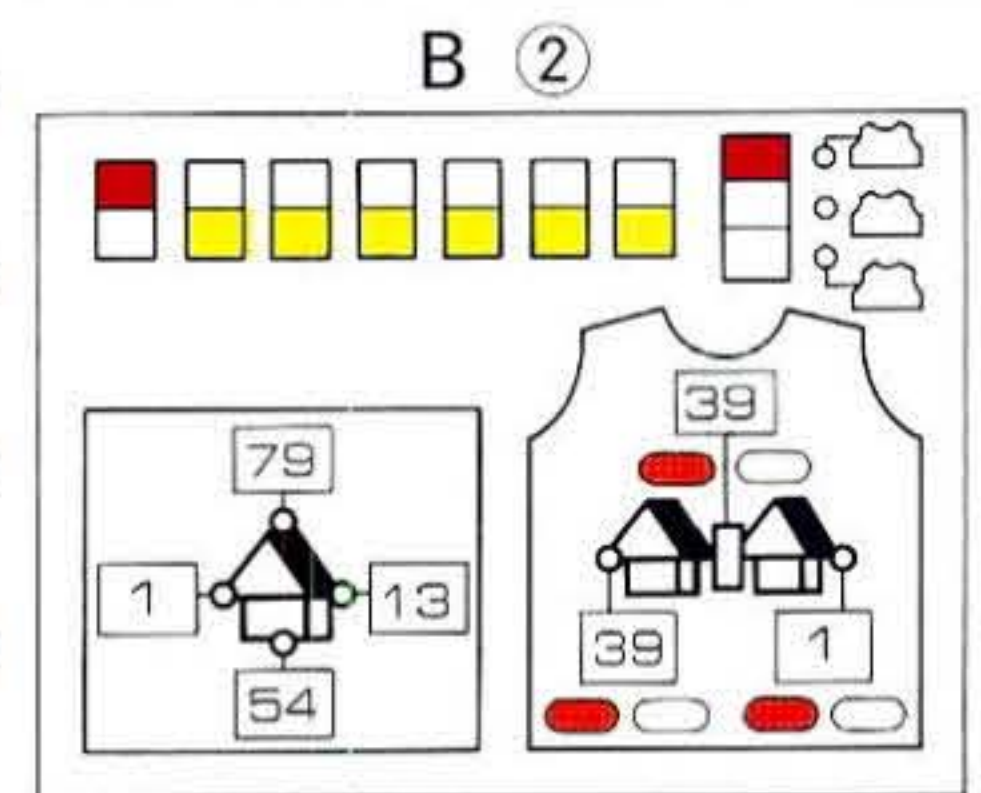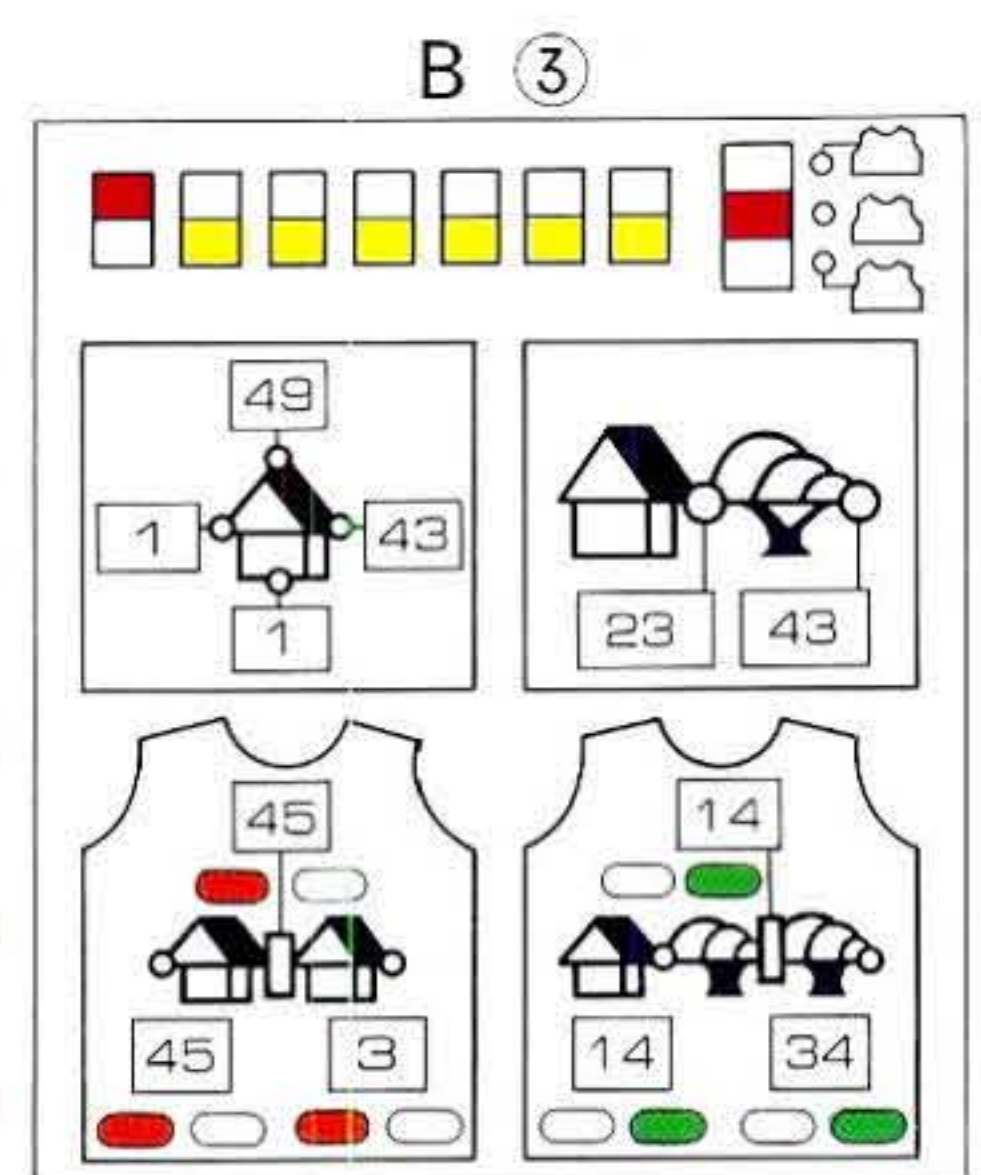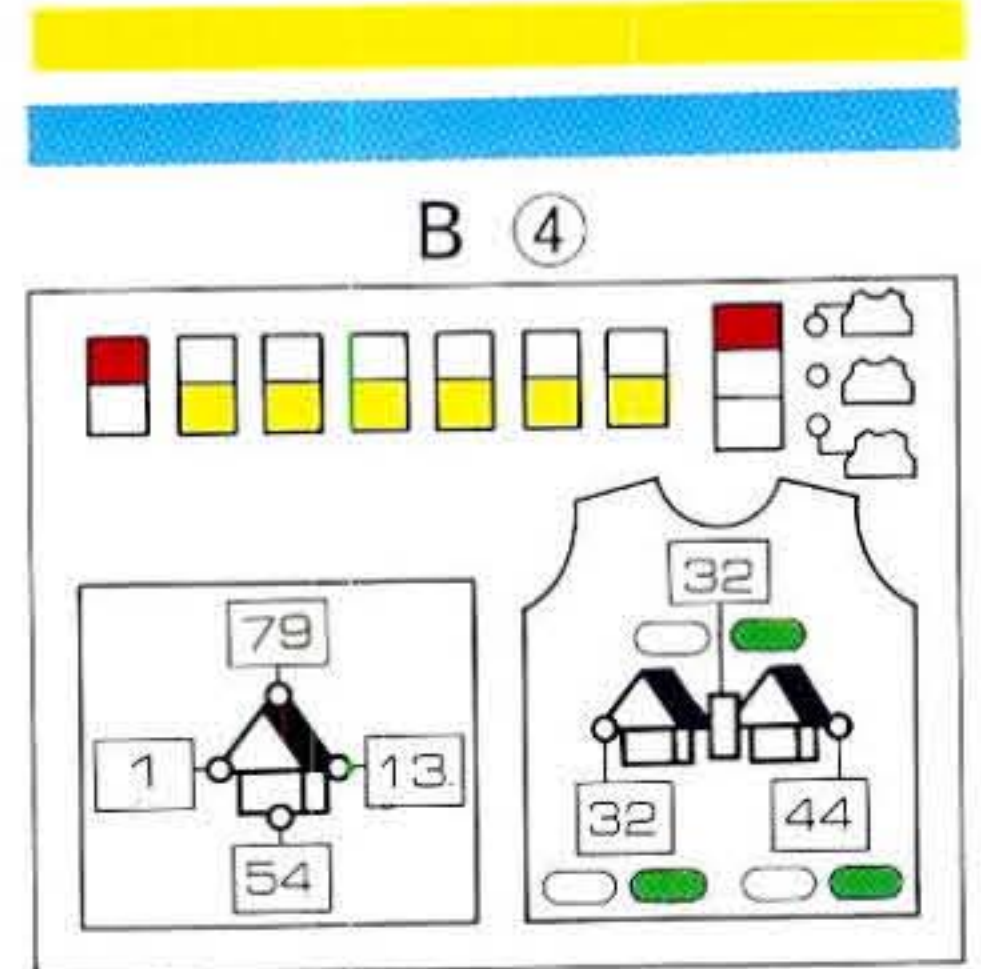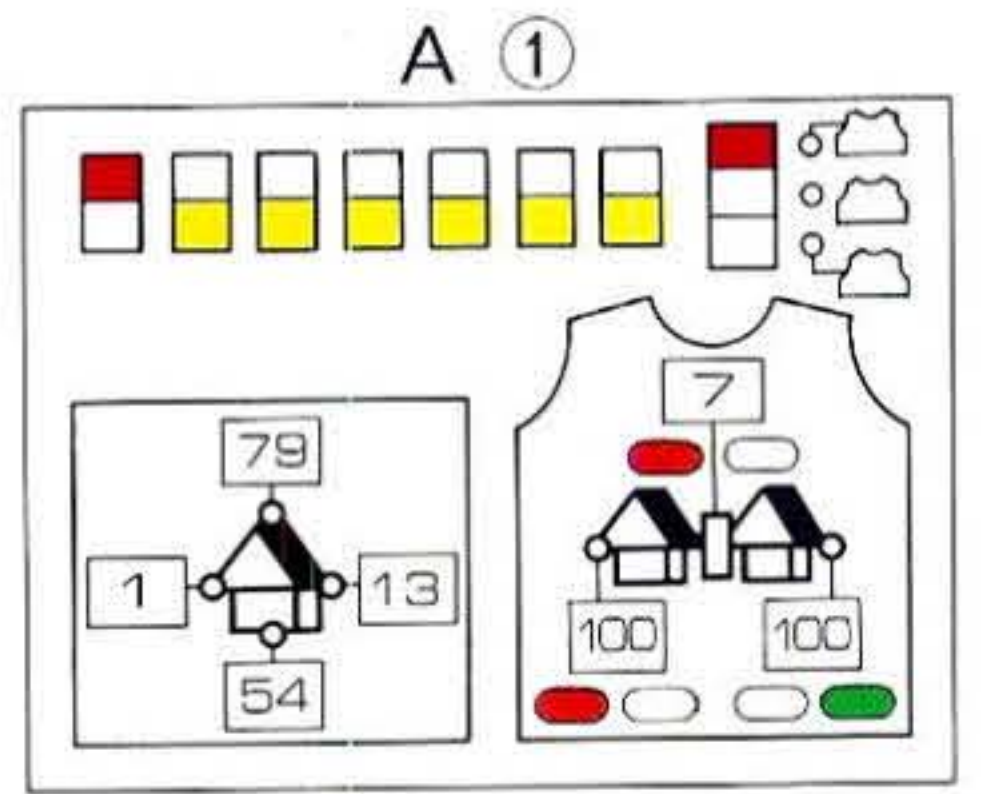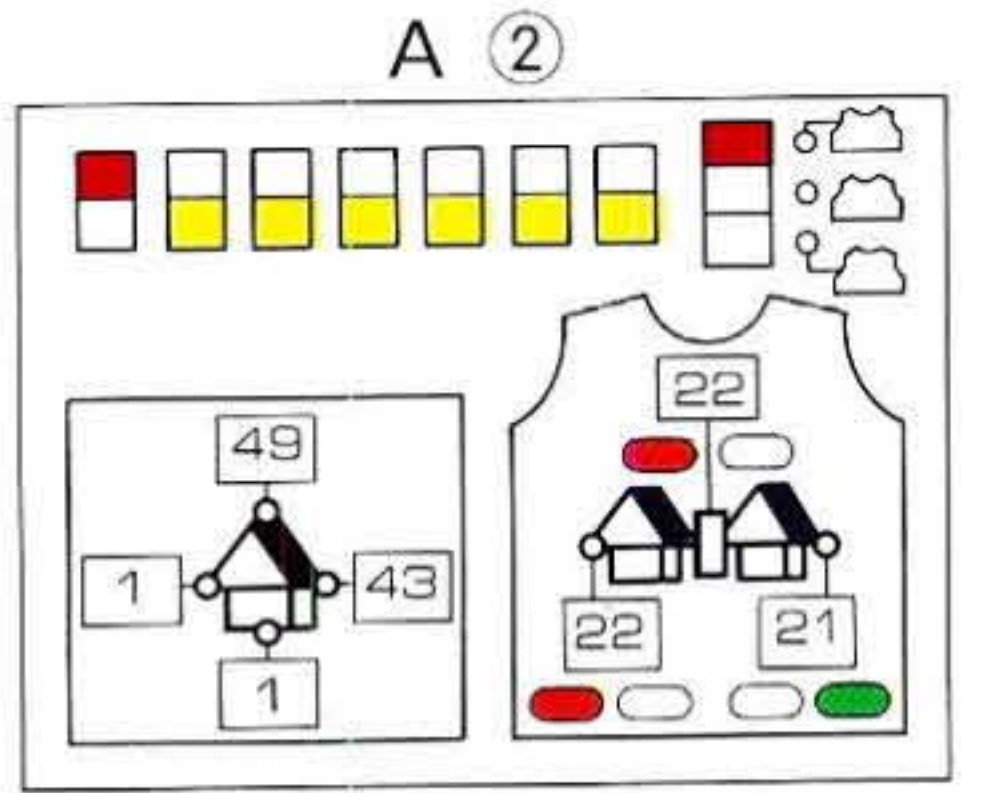       

A






  B

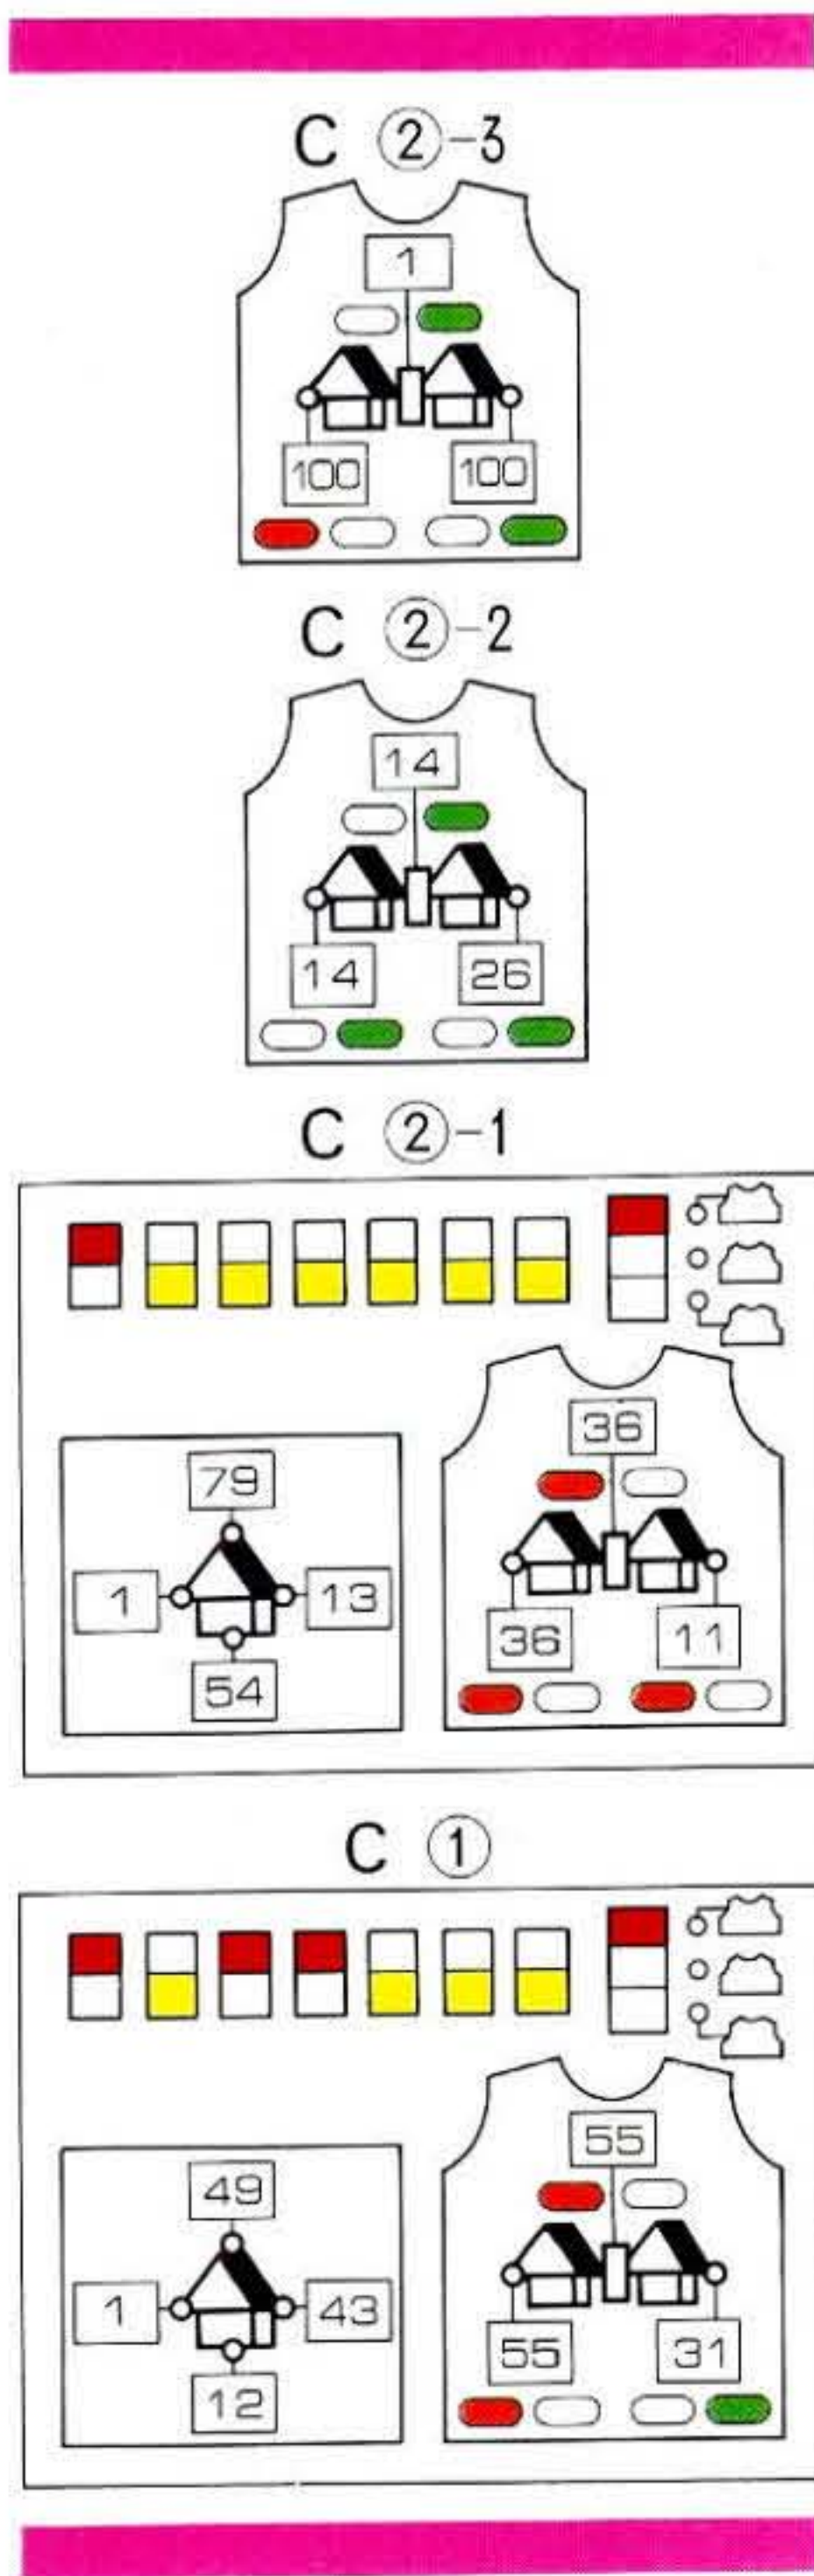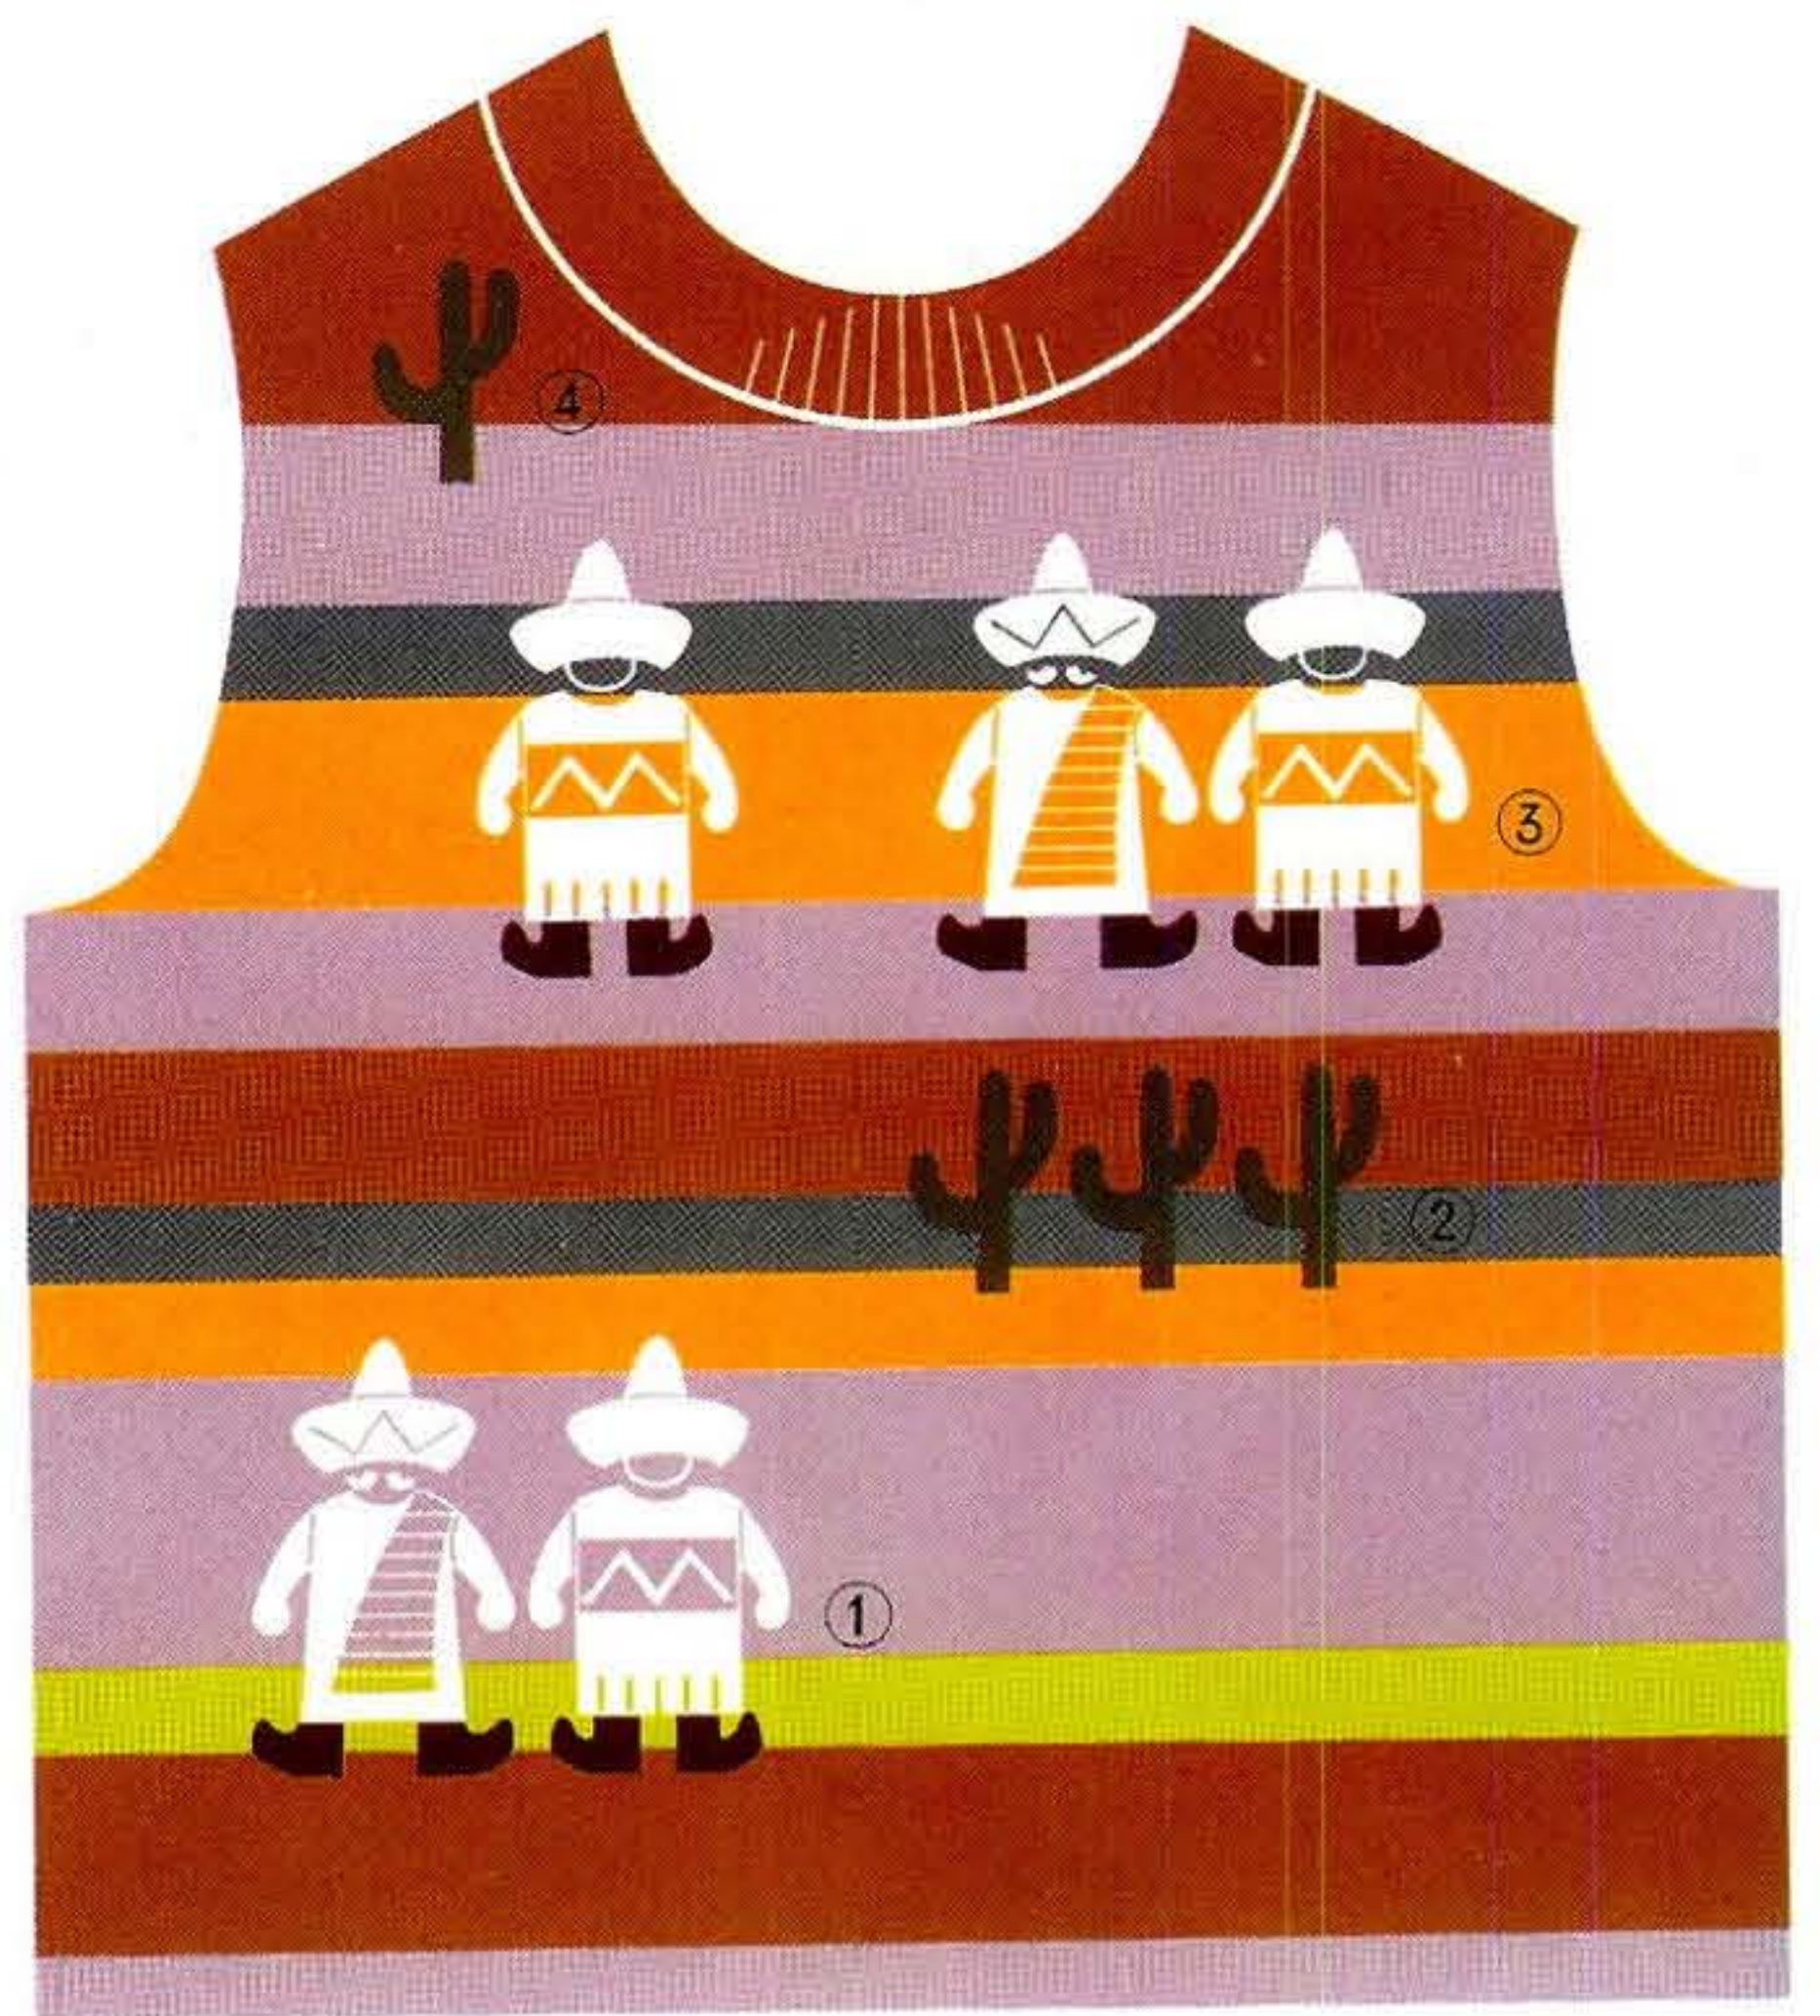

C



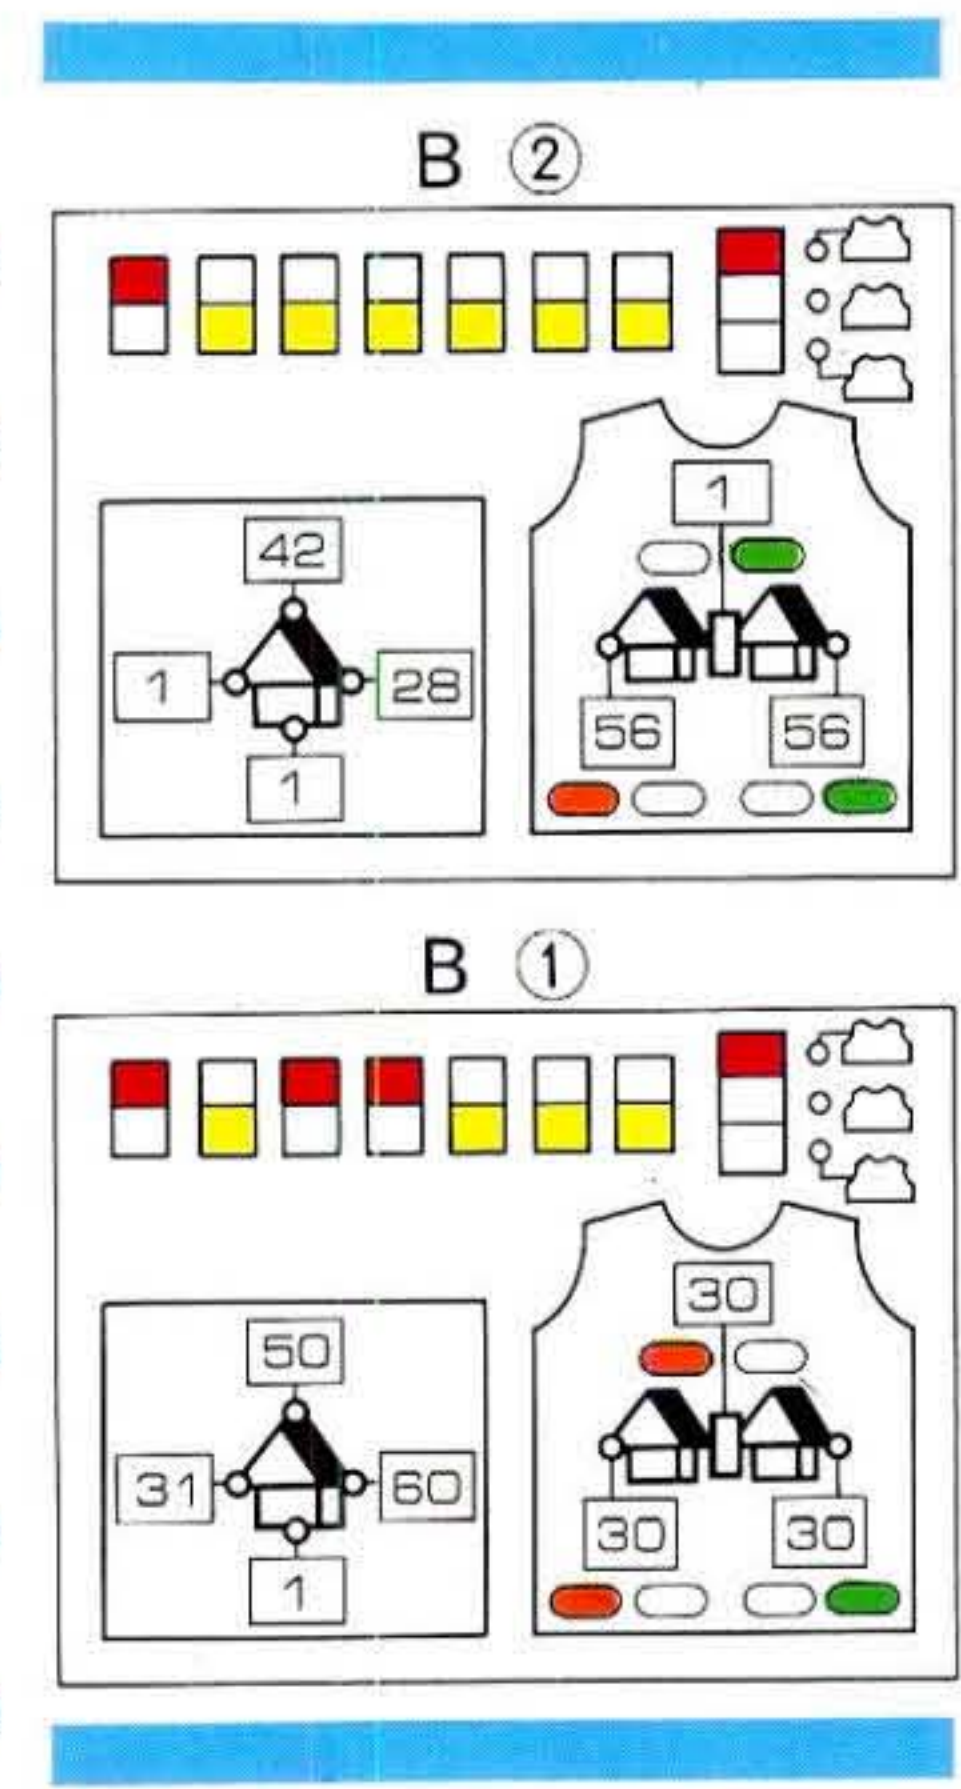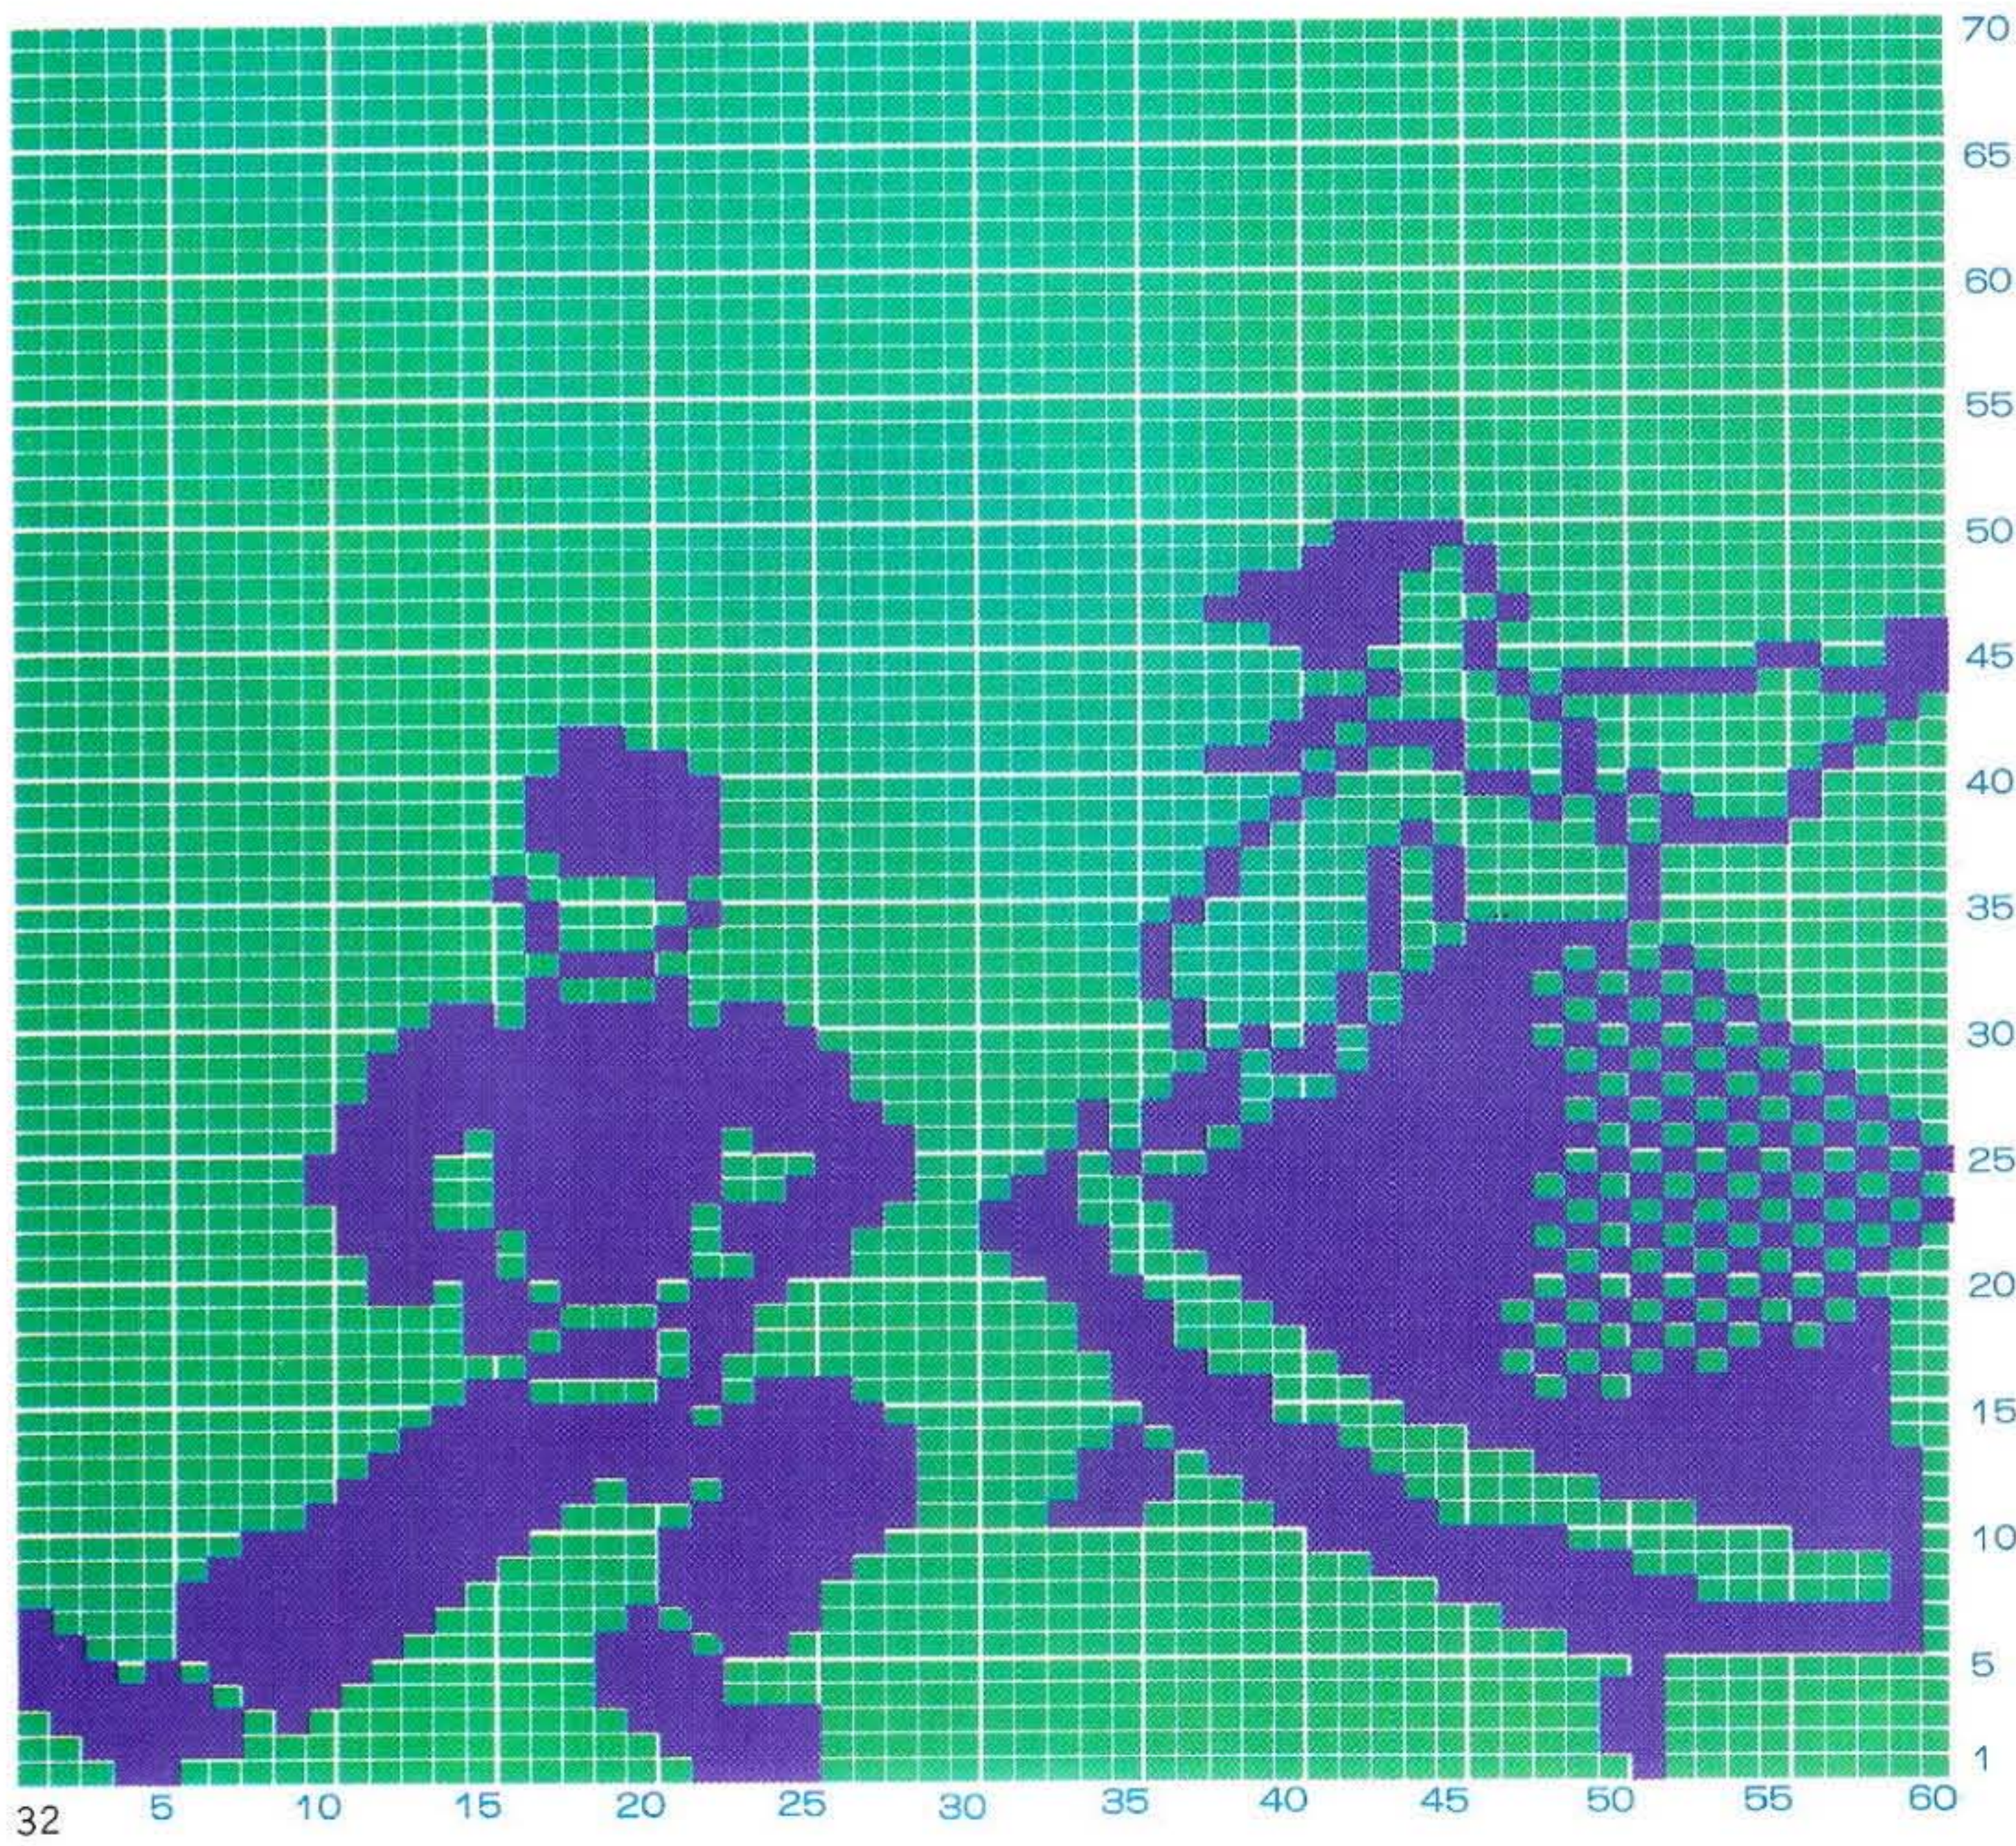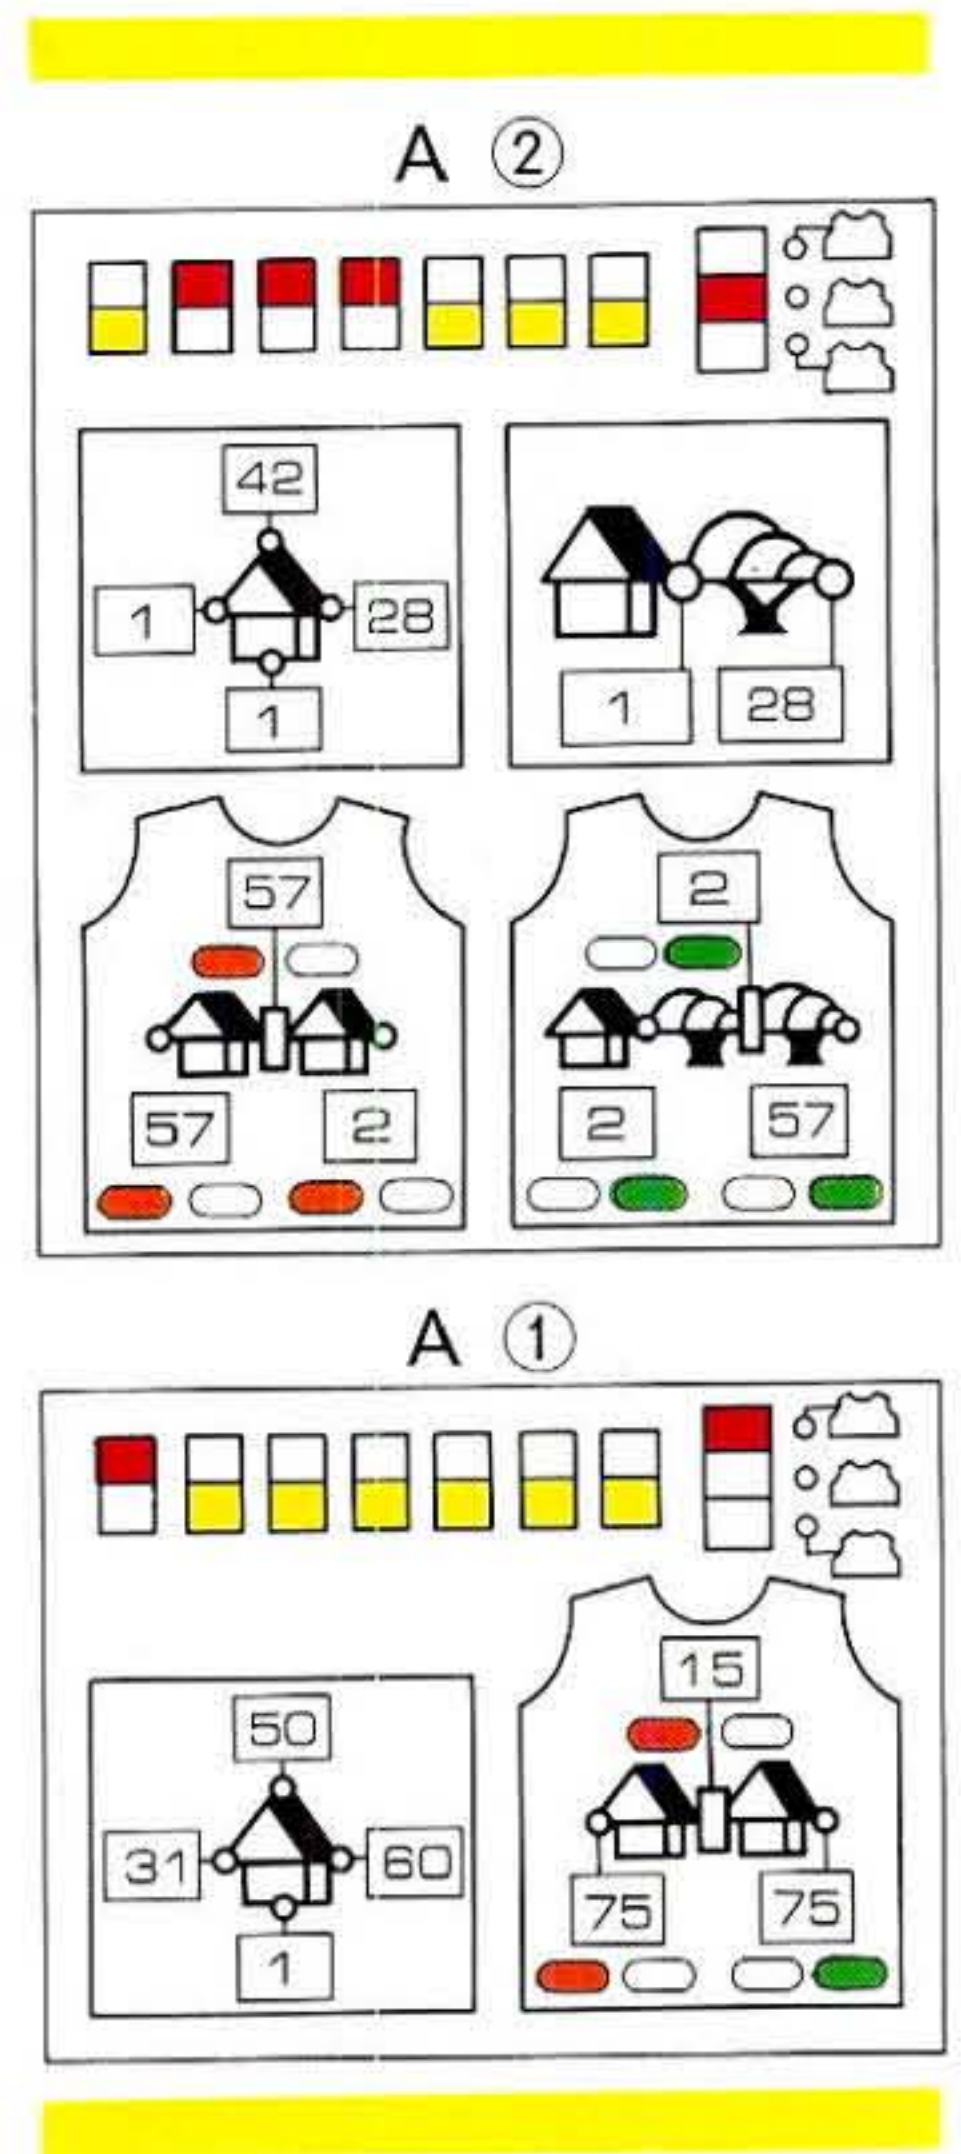   


A




B



 
C ②-2

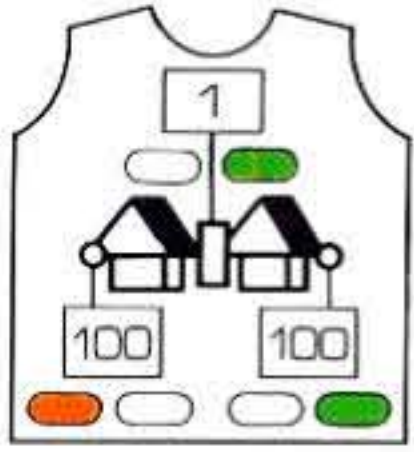


C ②-1



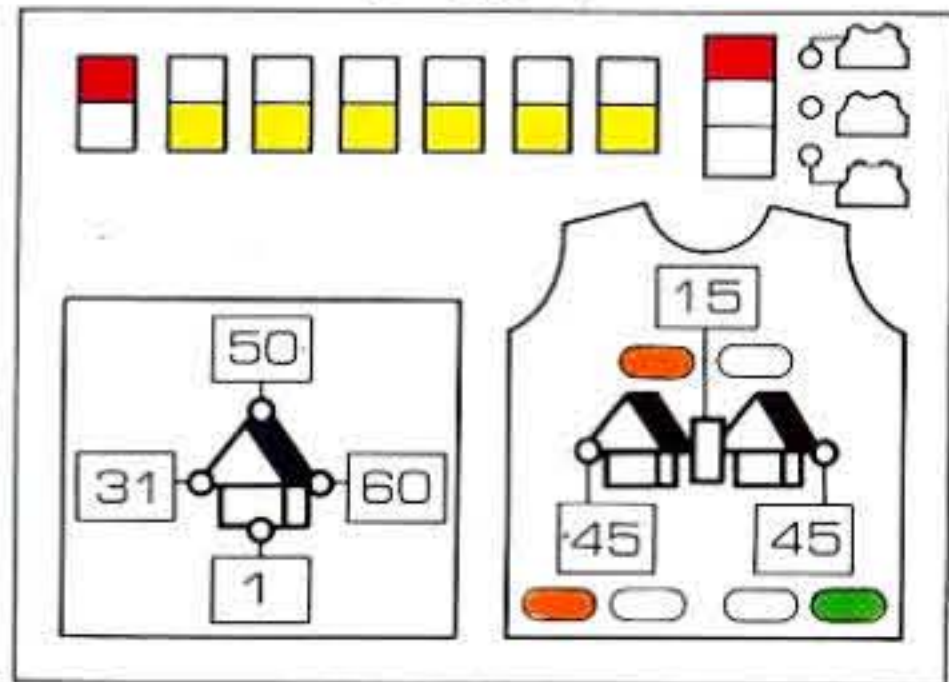 


C ①

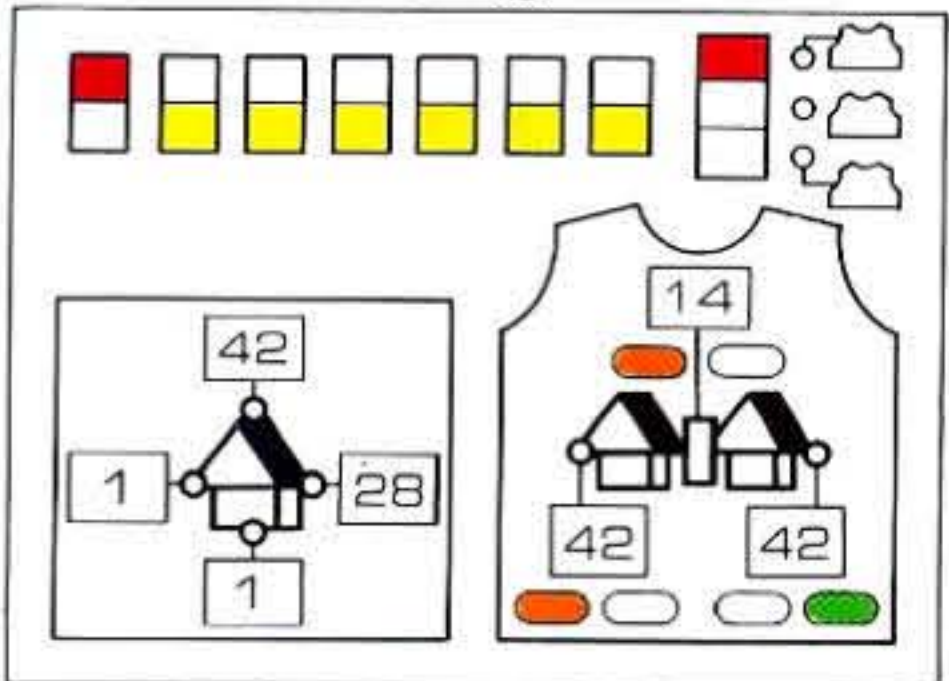 

C

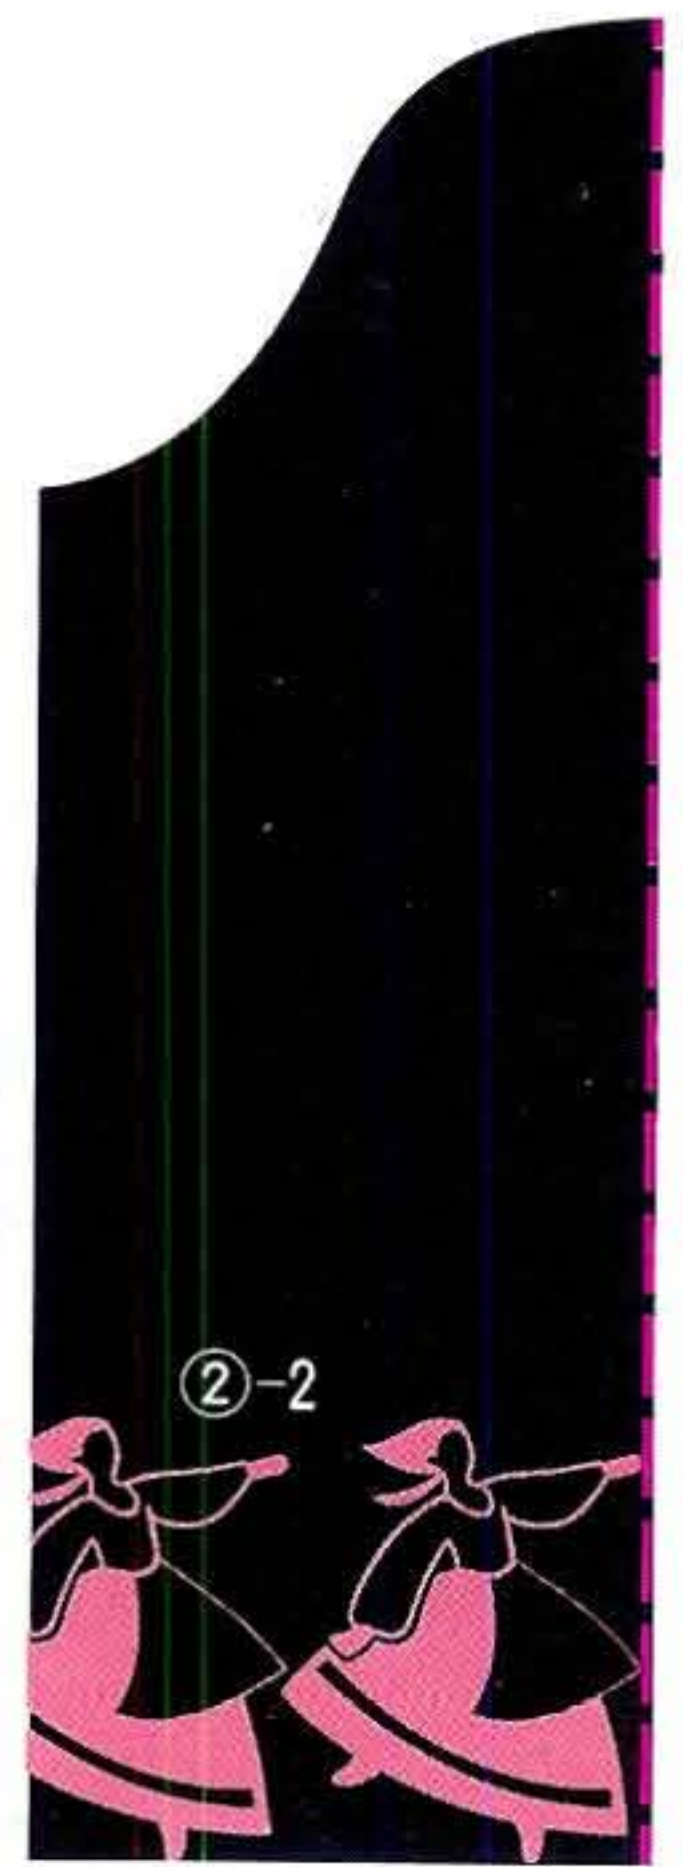 

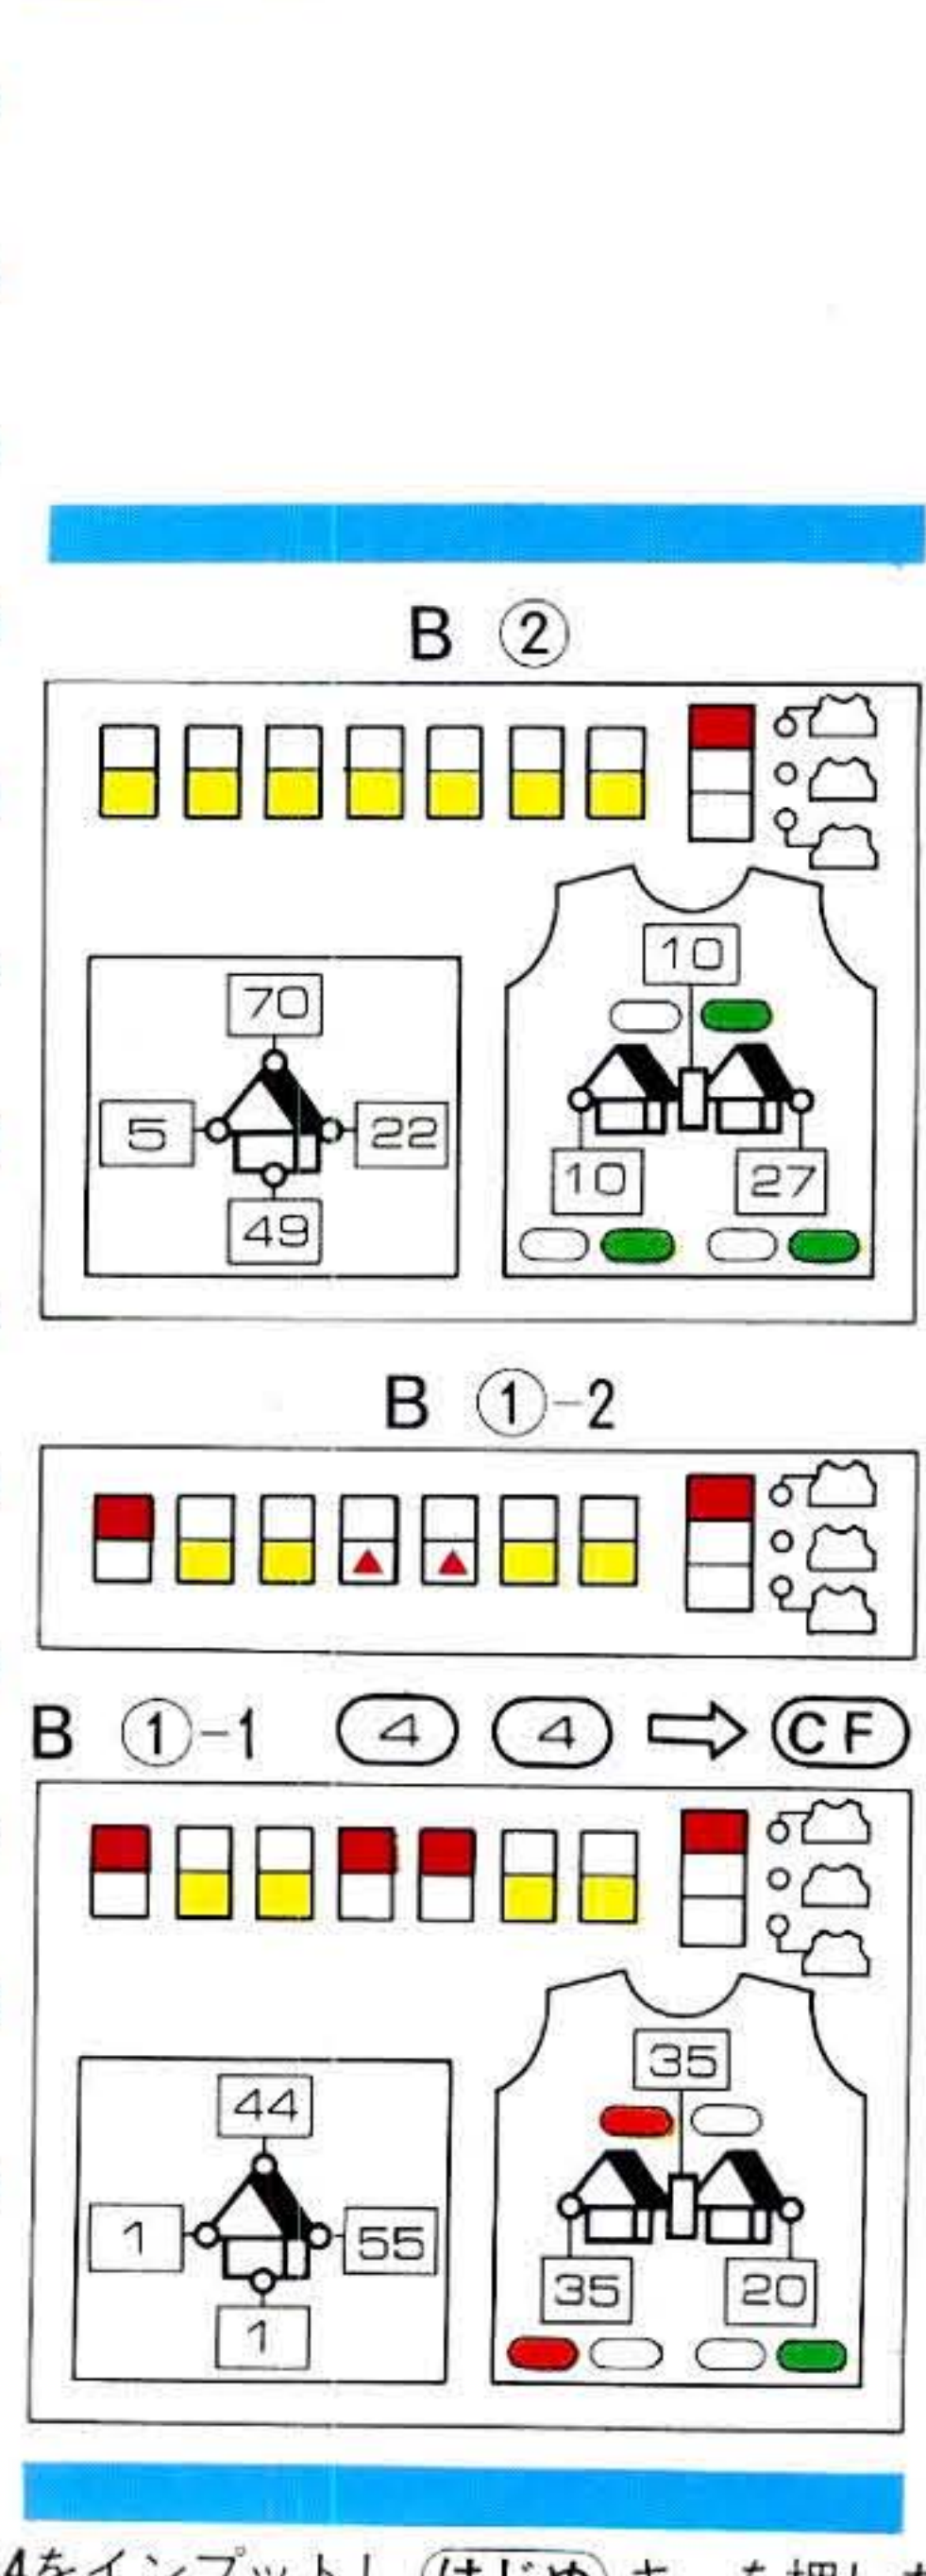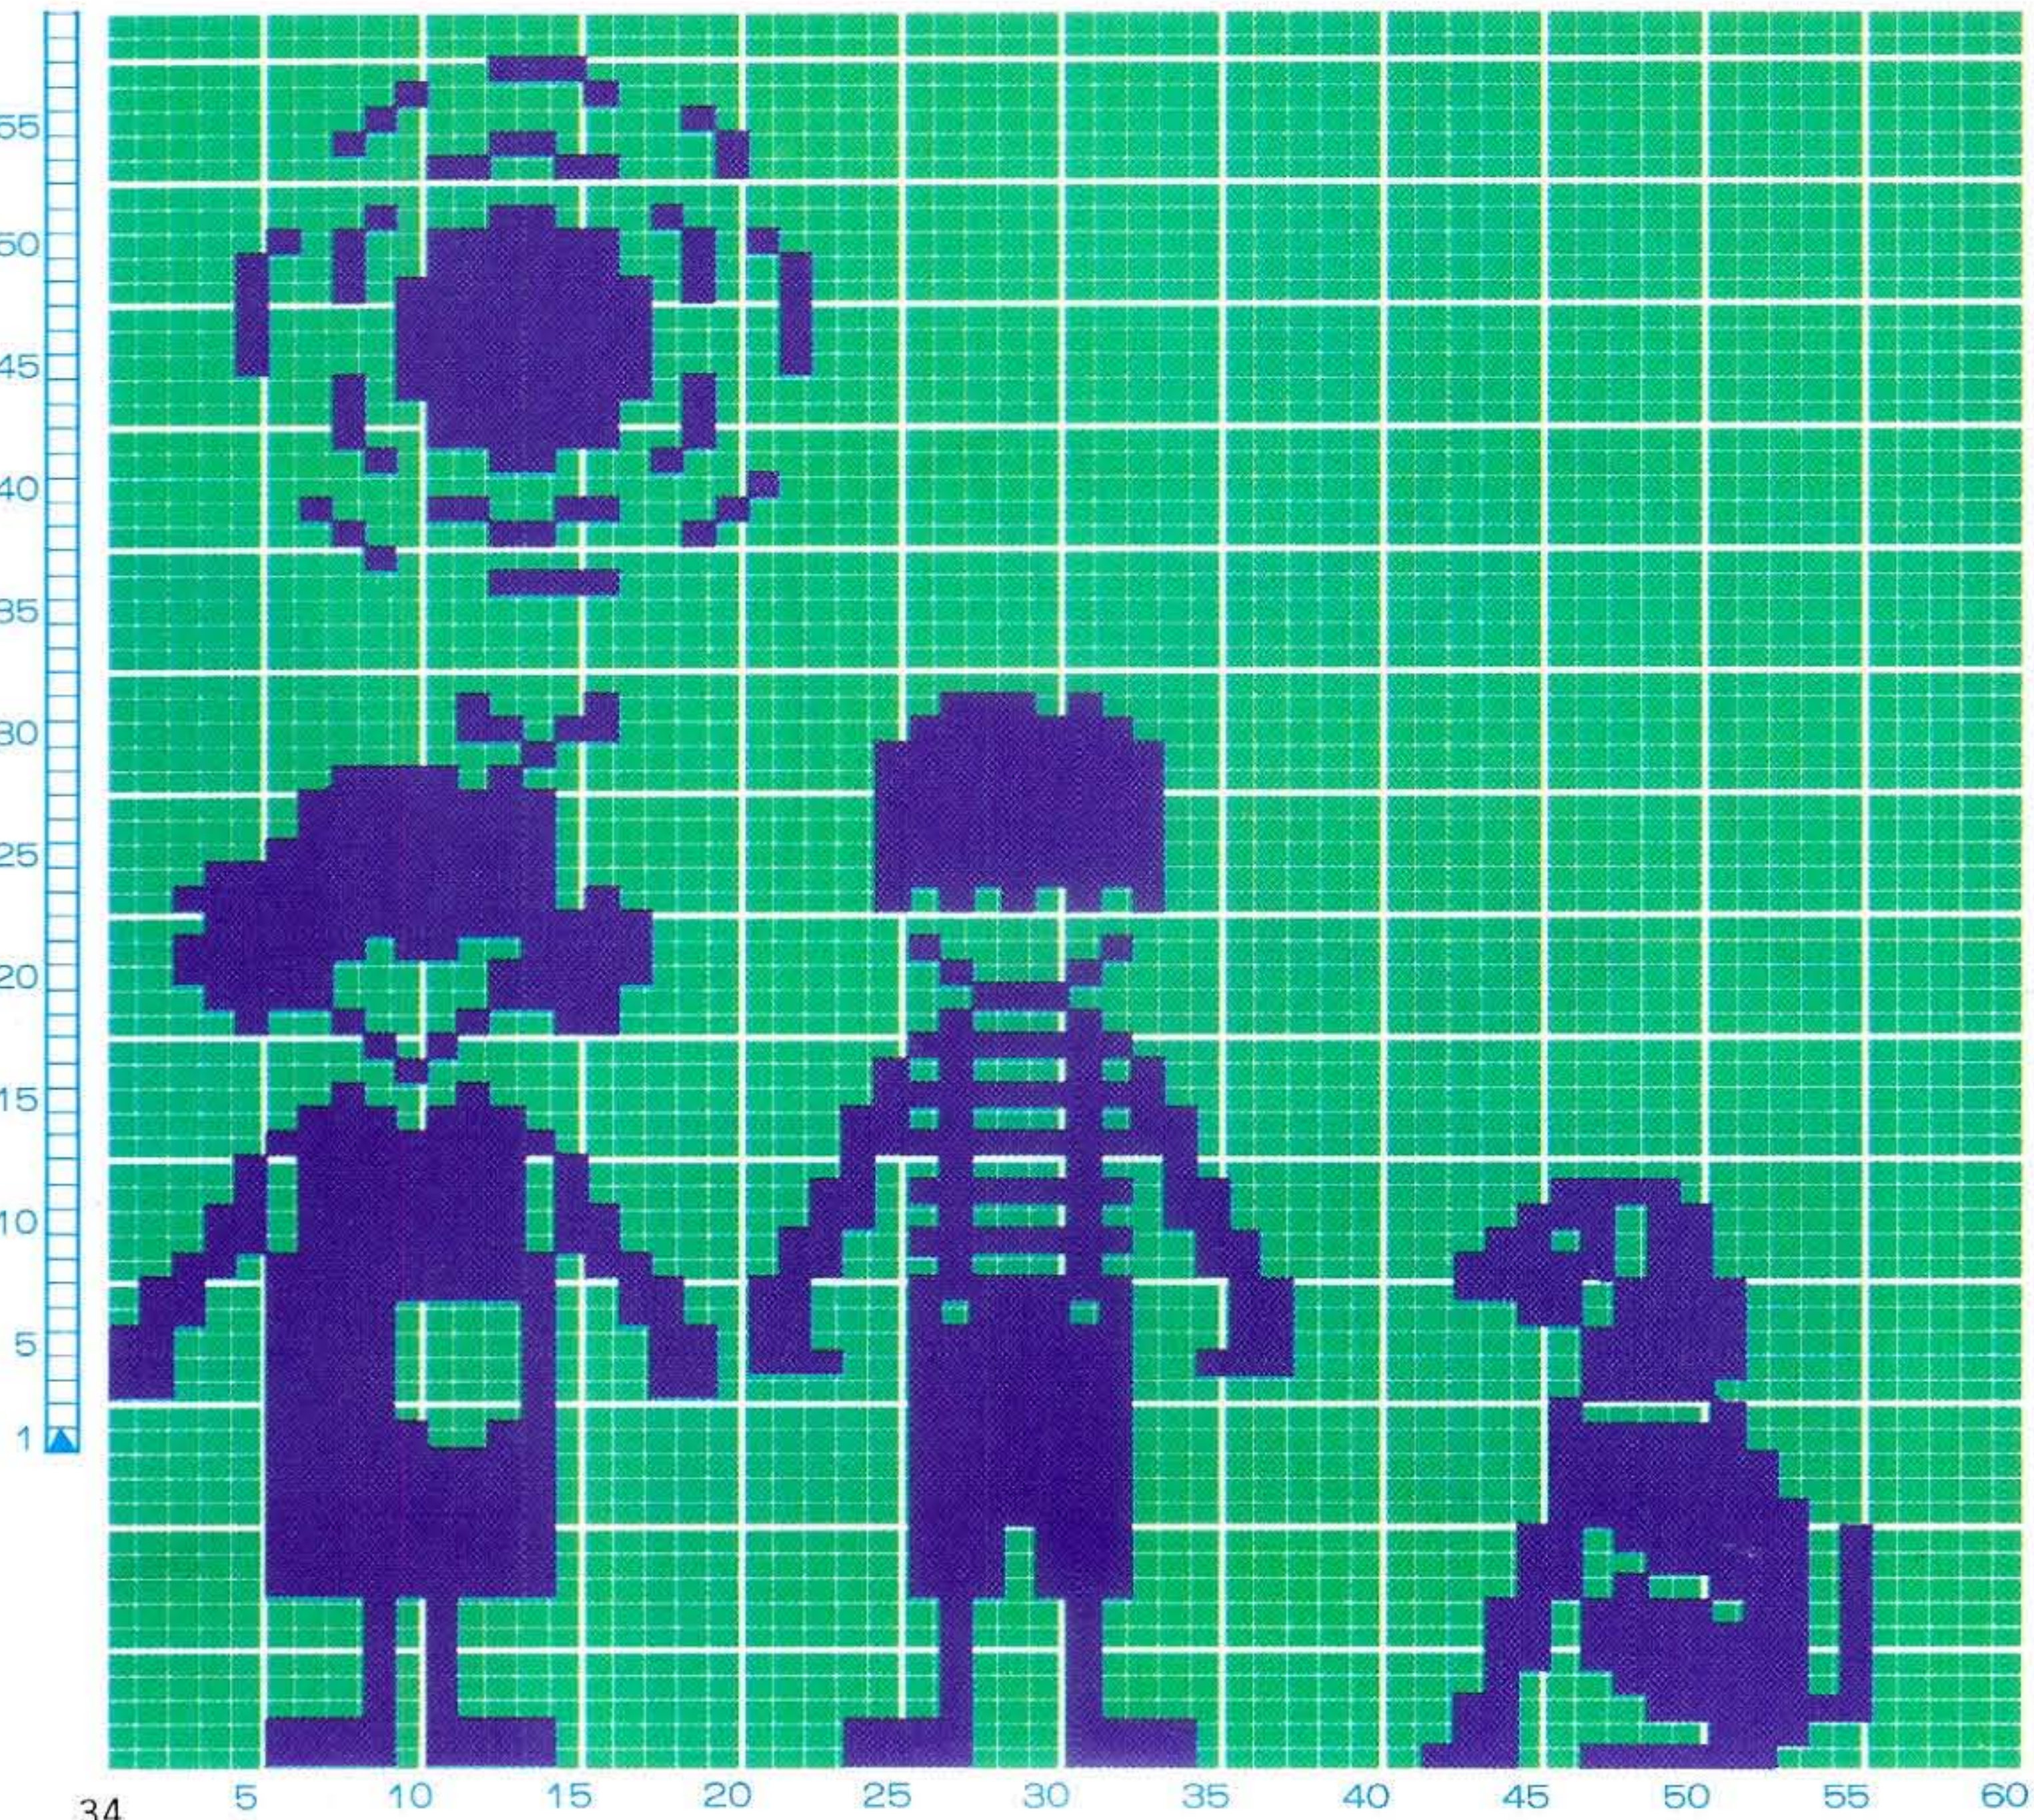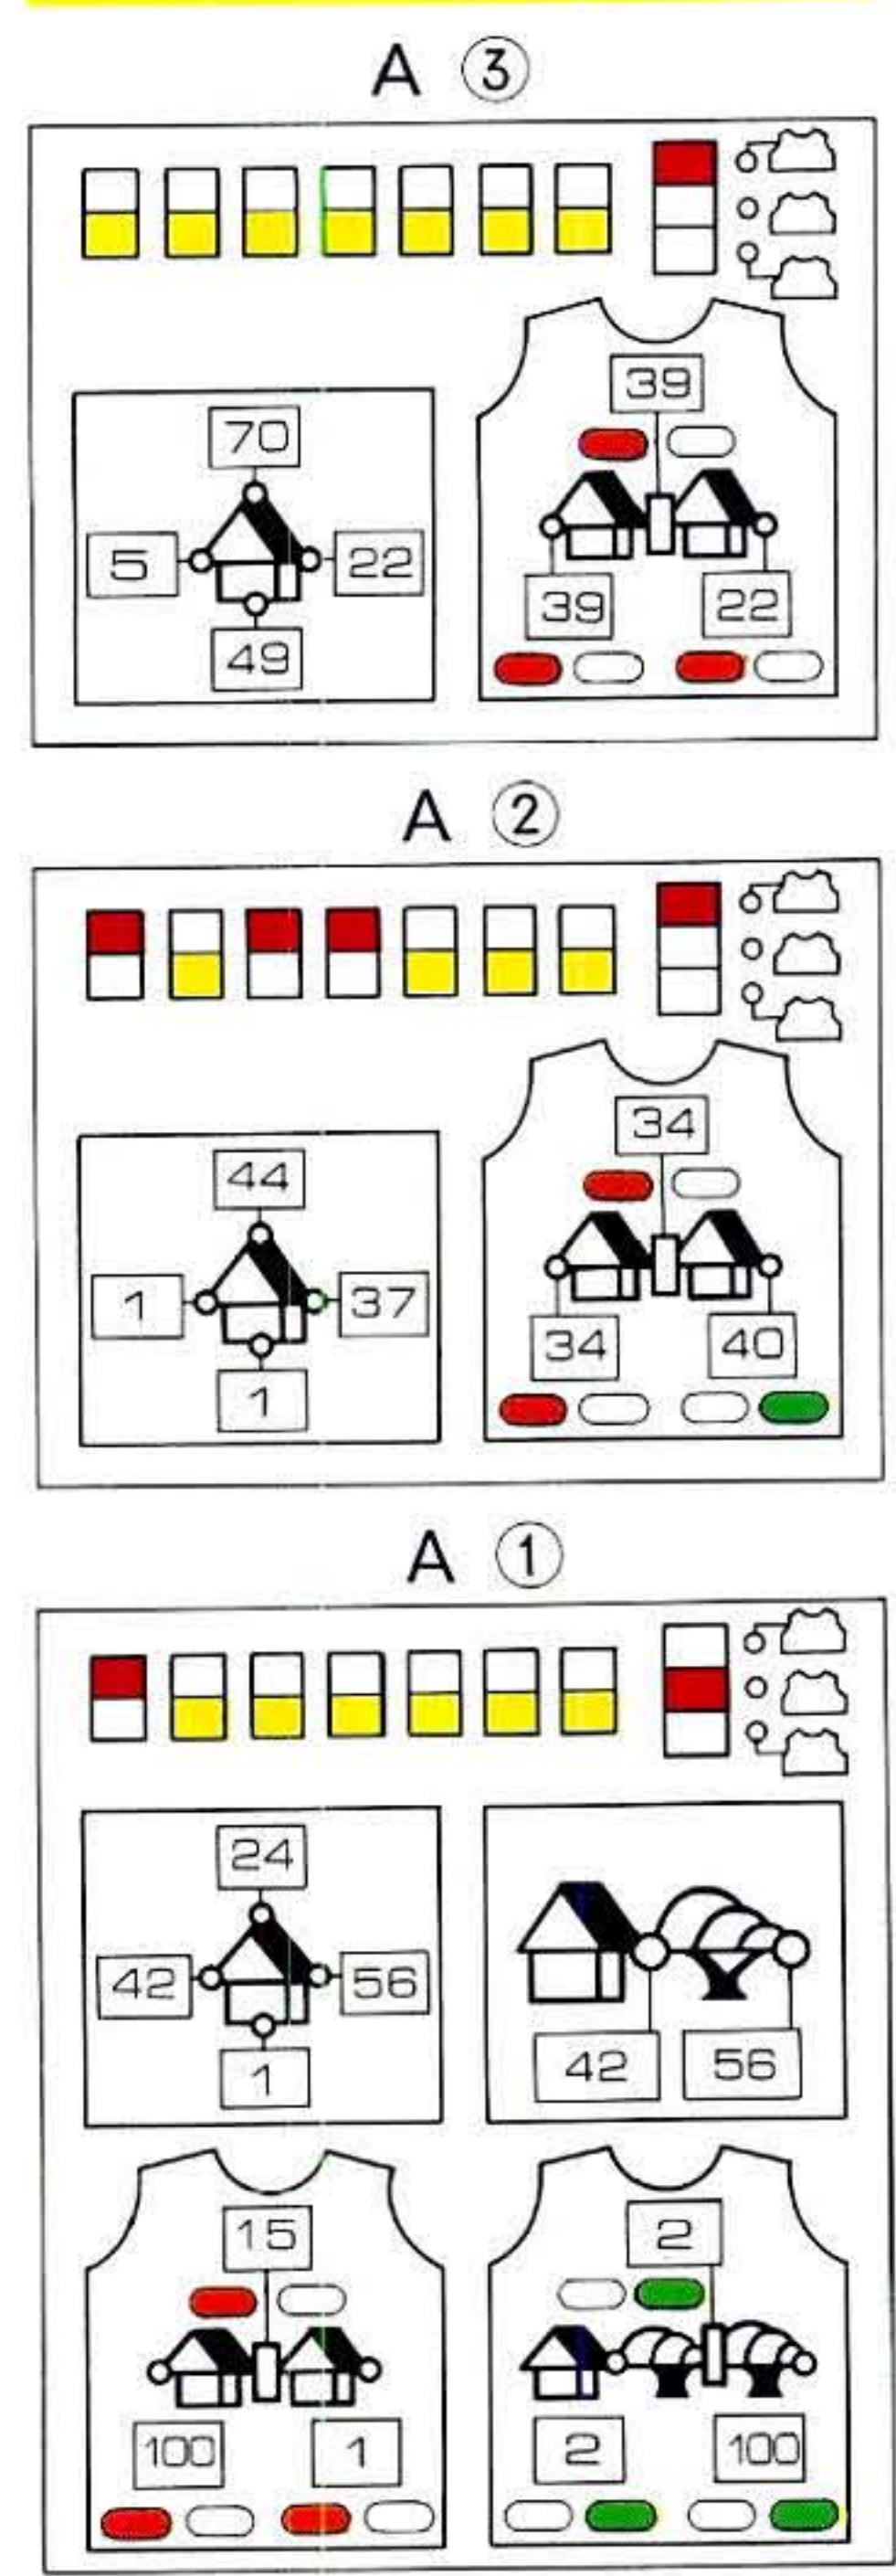   


44をインプットし (はじめ) キーを押します


A



 
B

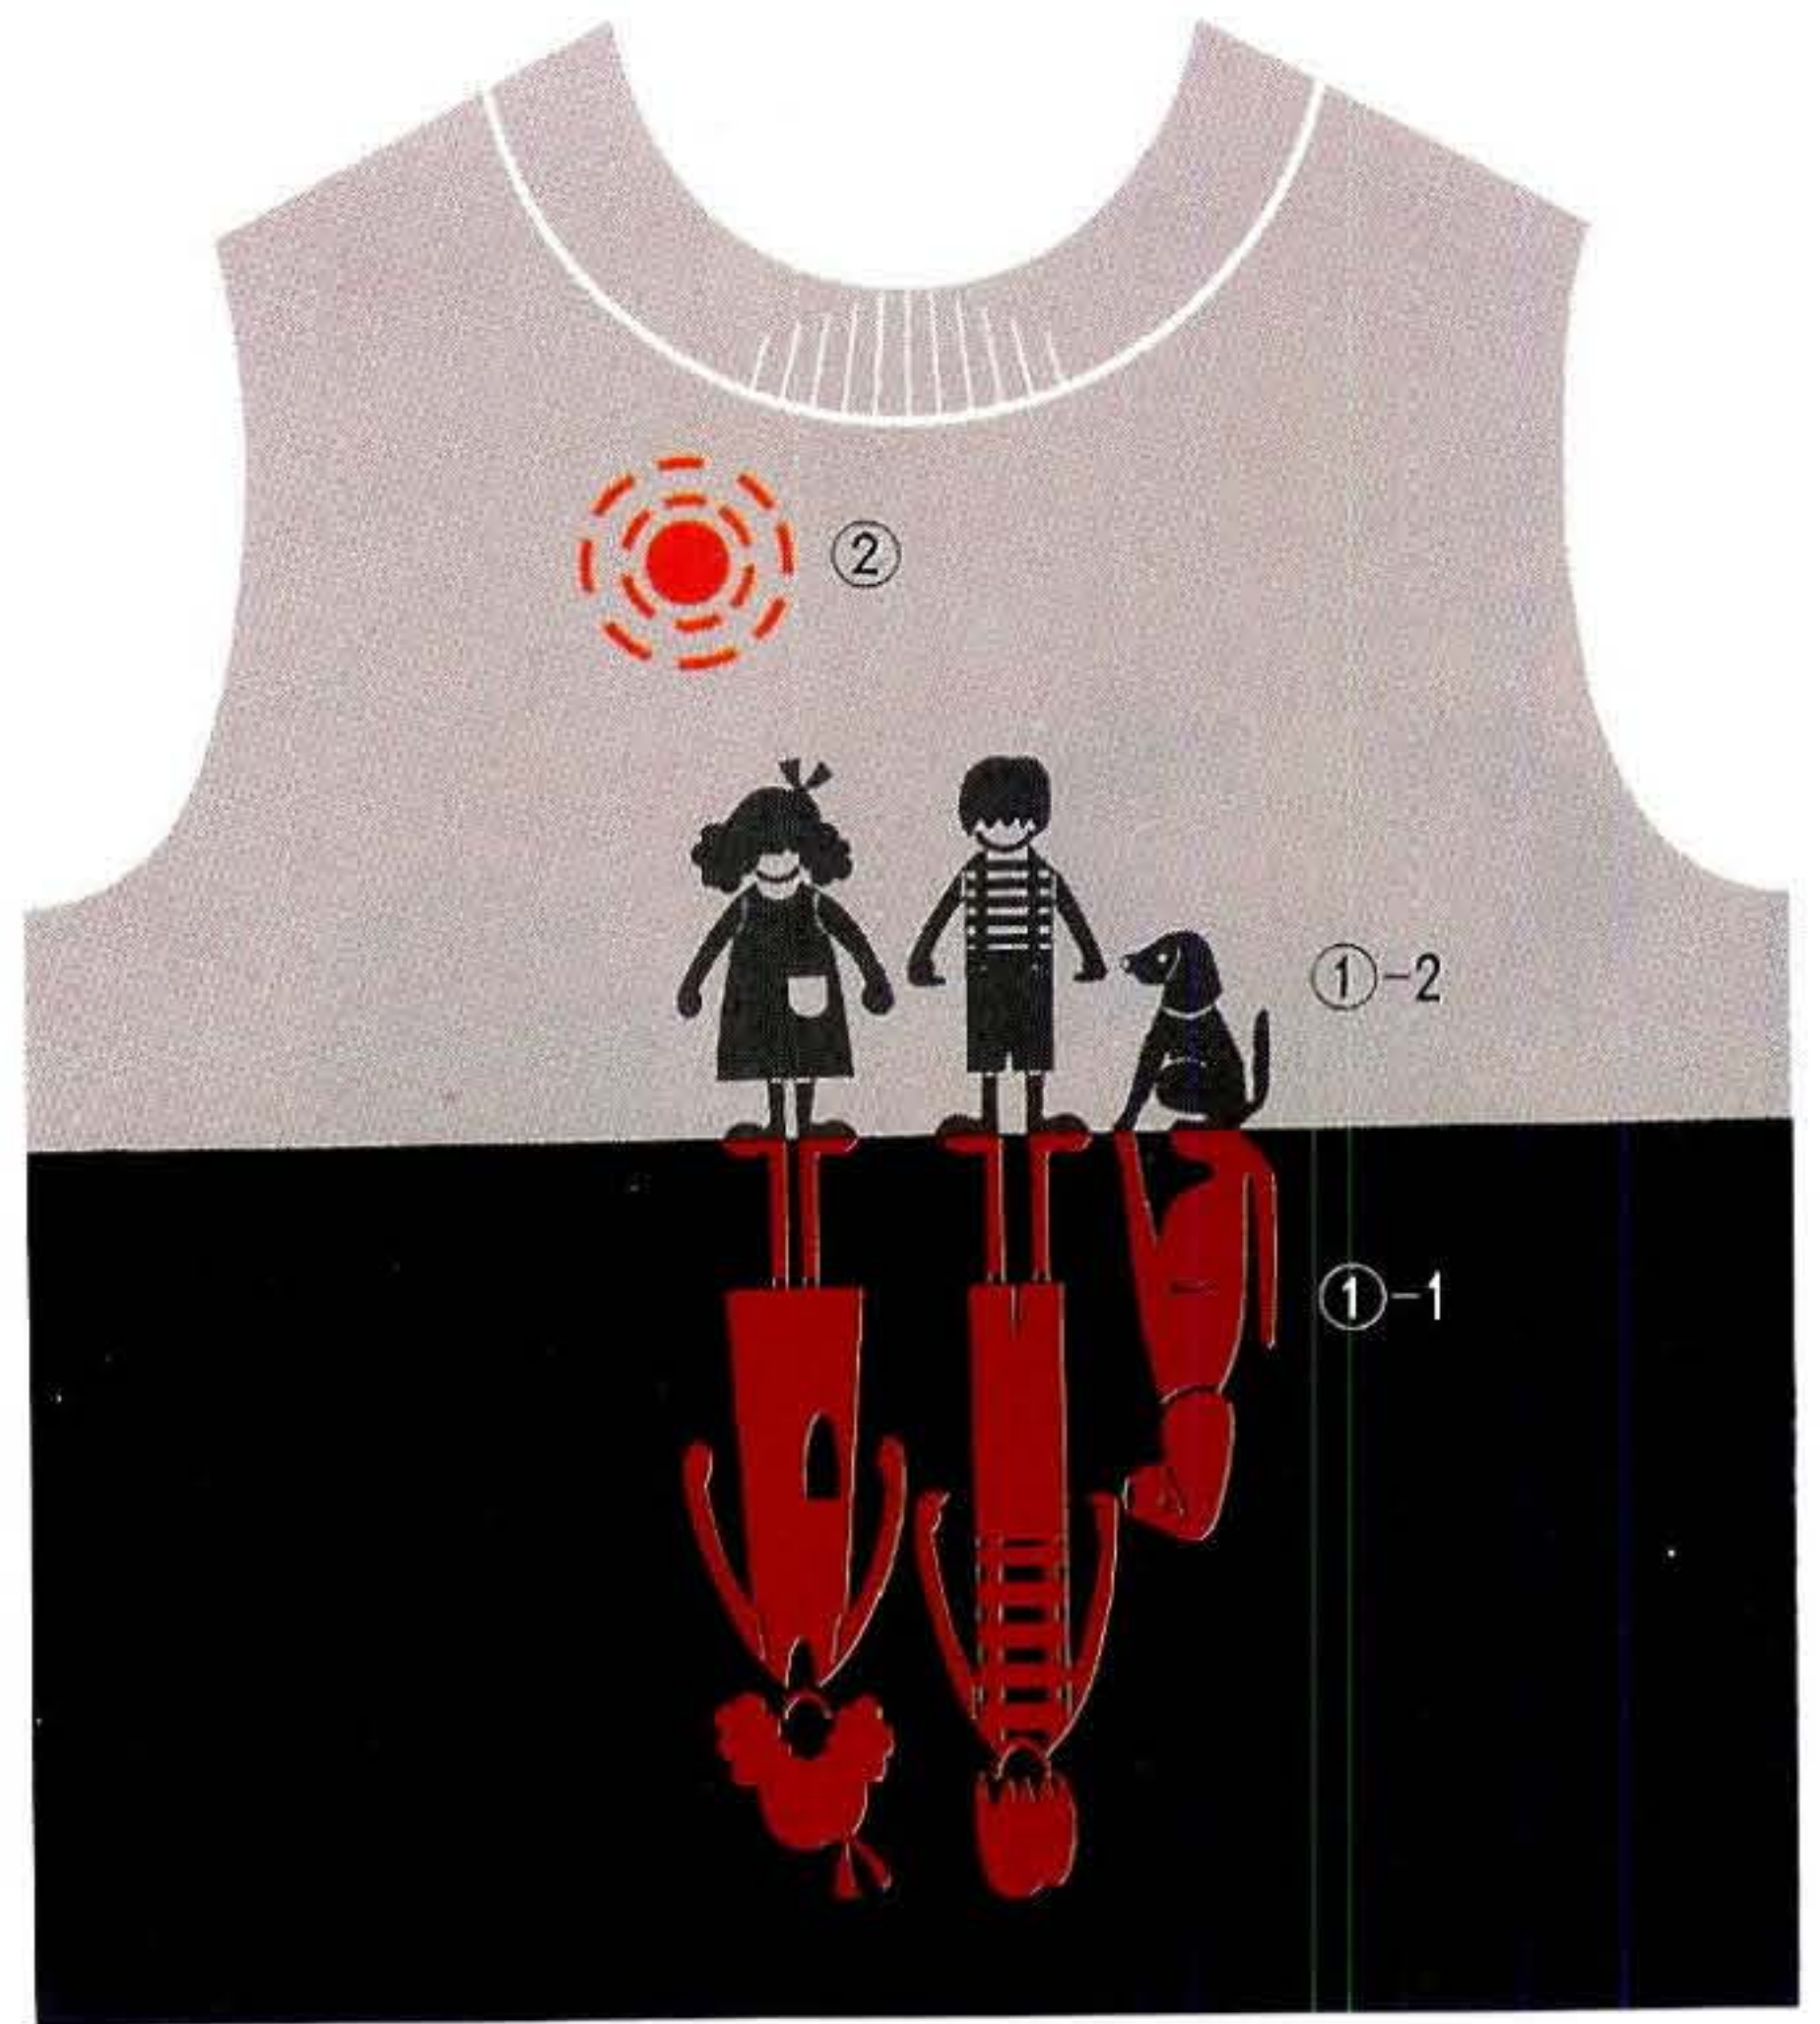


C ③

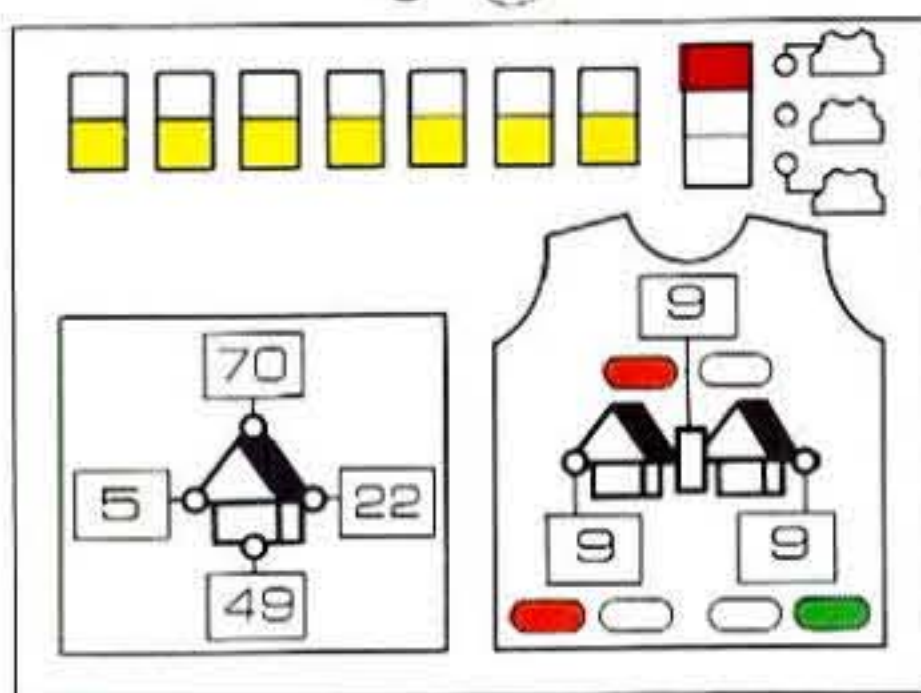 


C ②




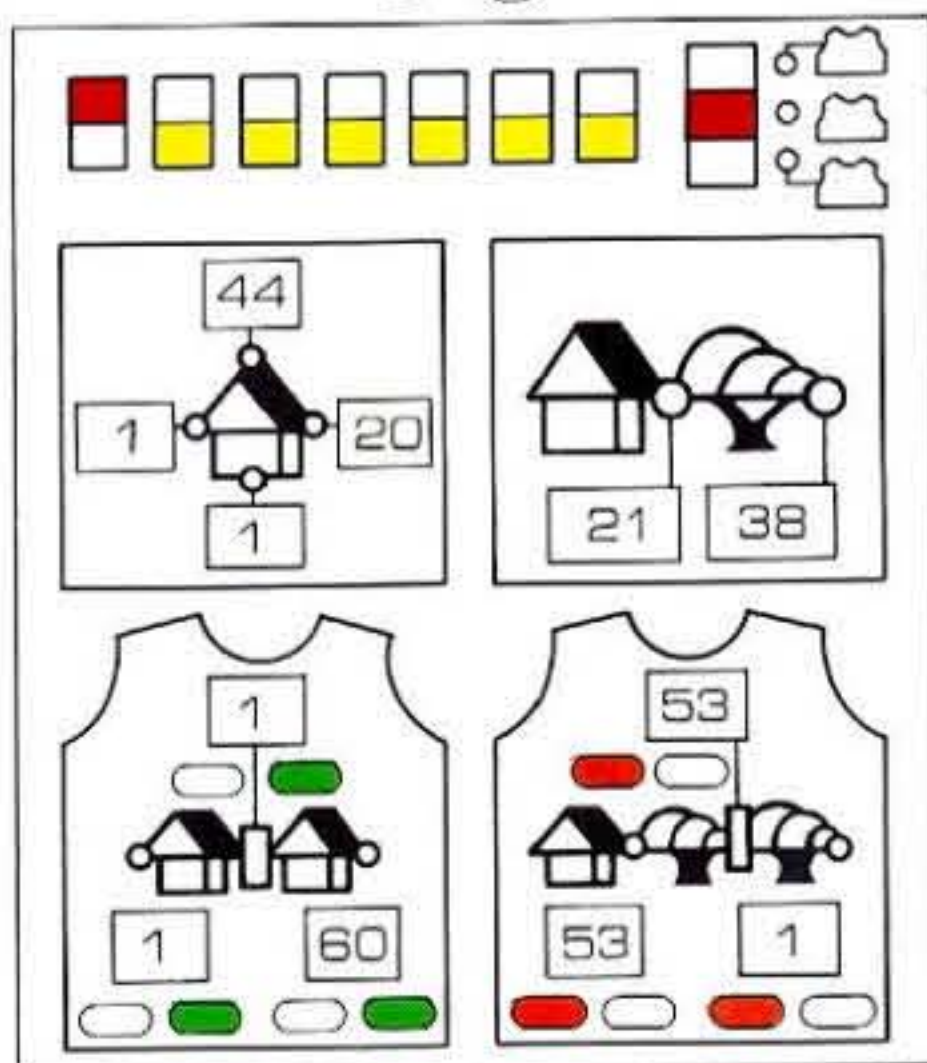 


C ①

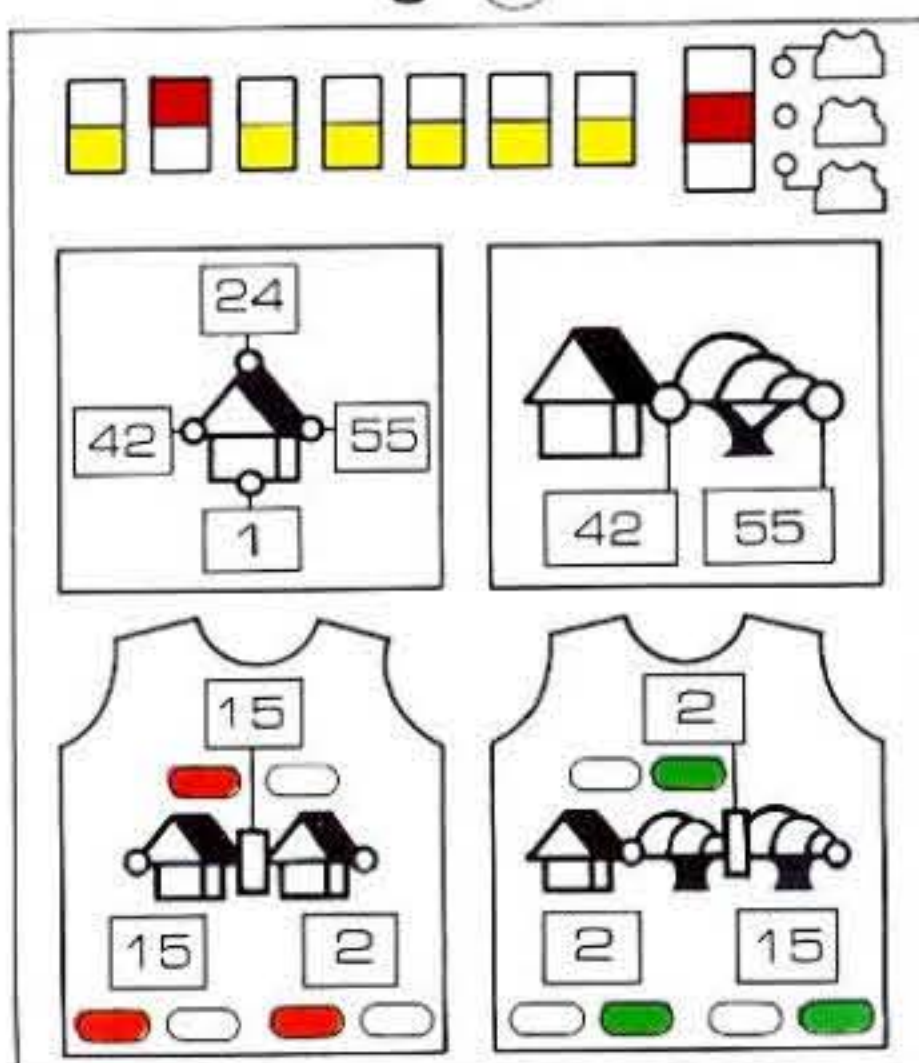 

C

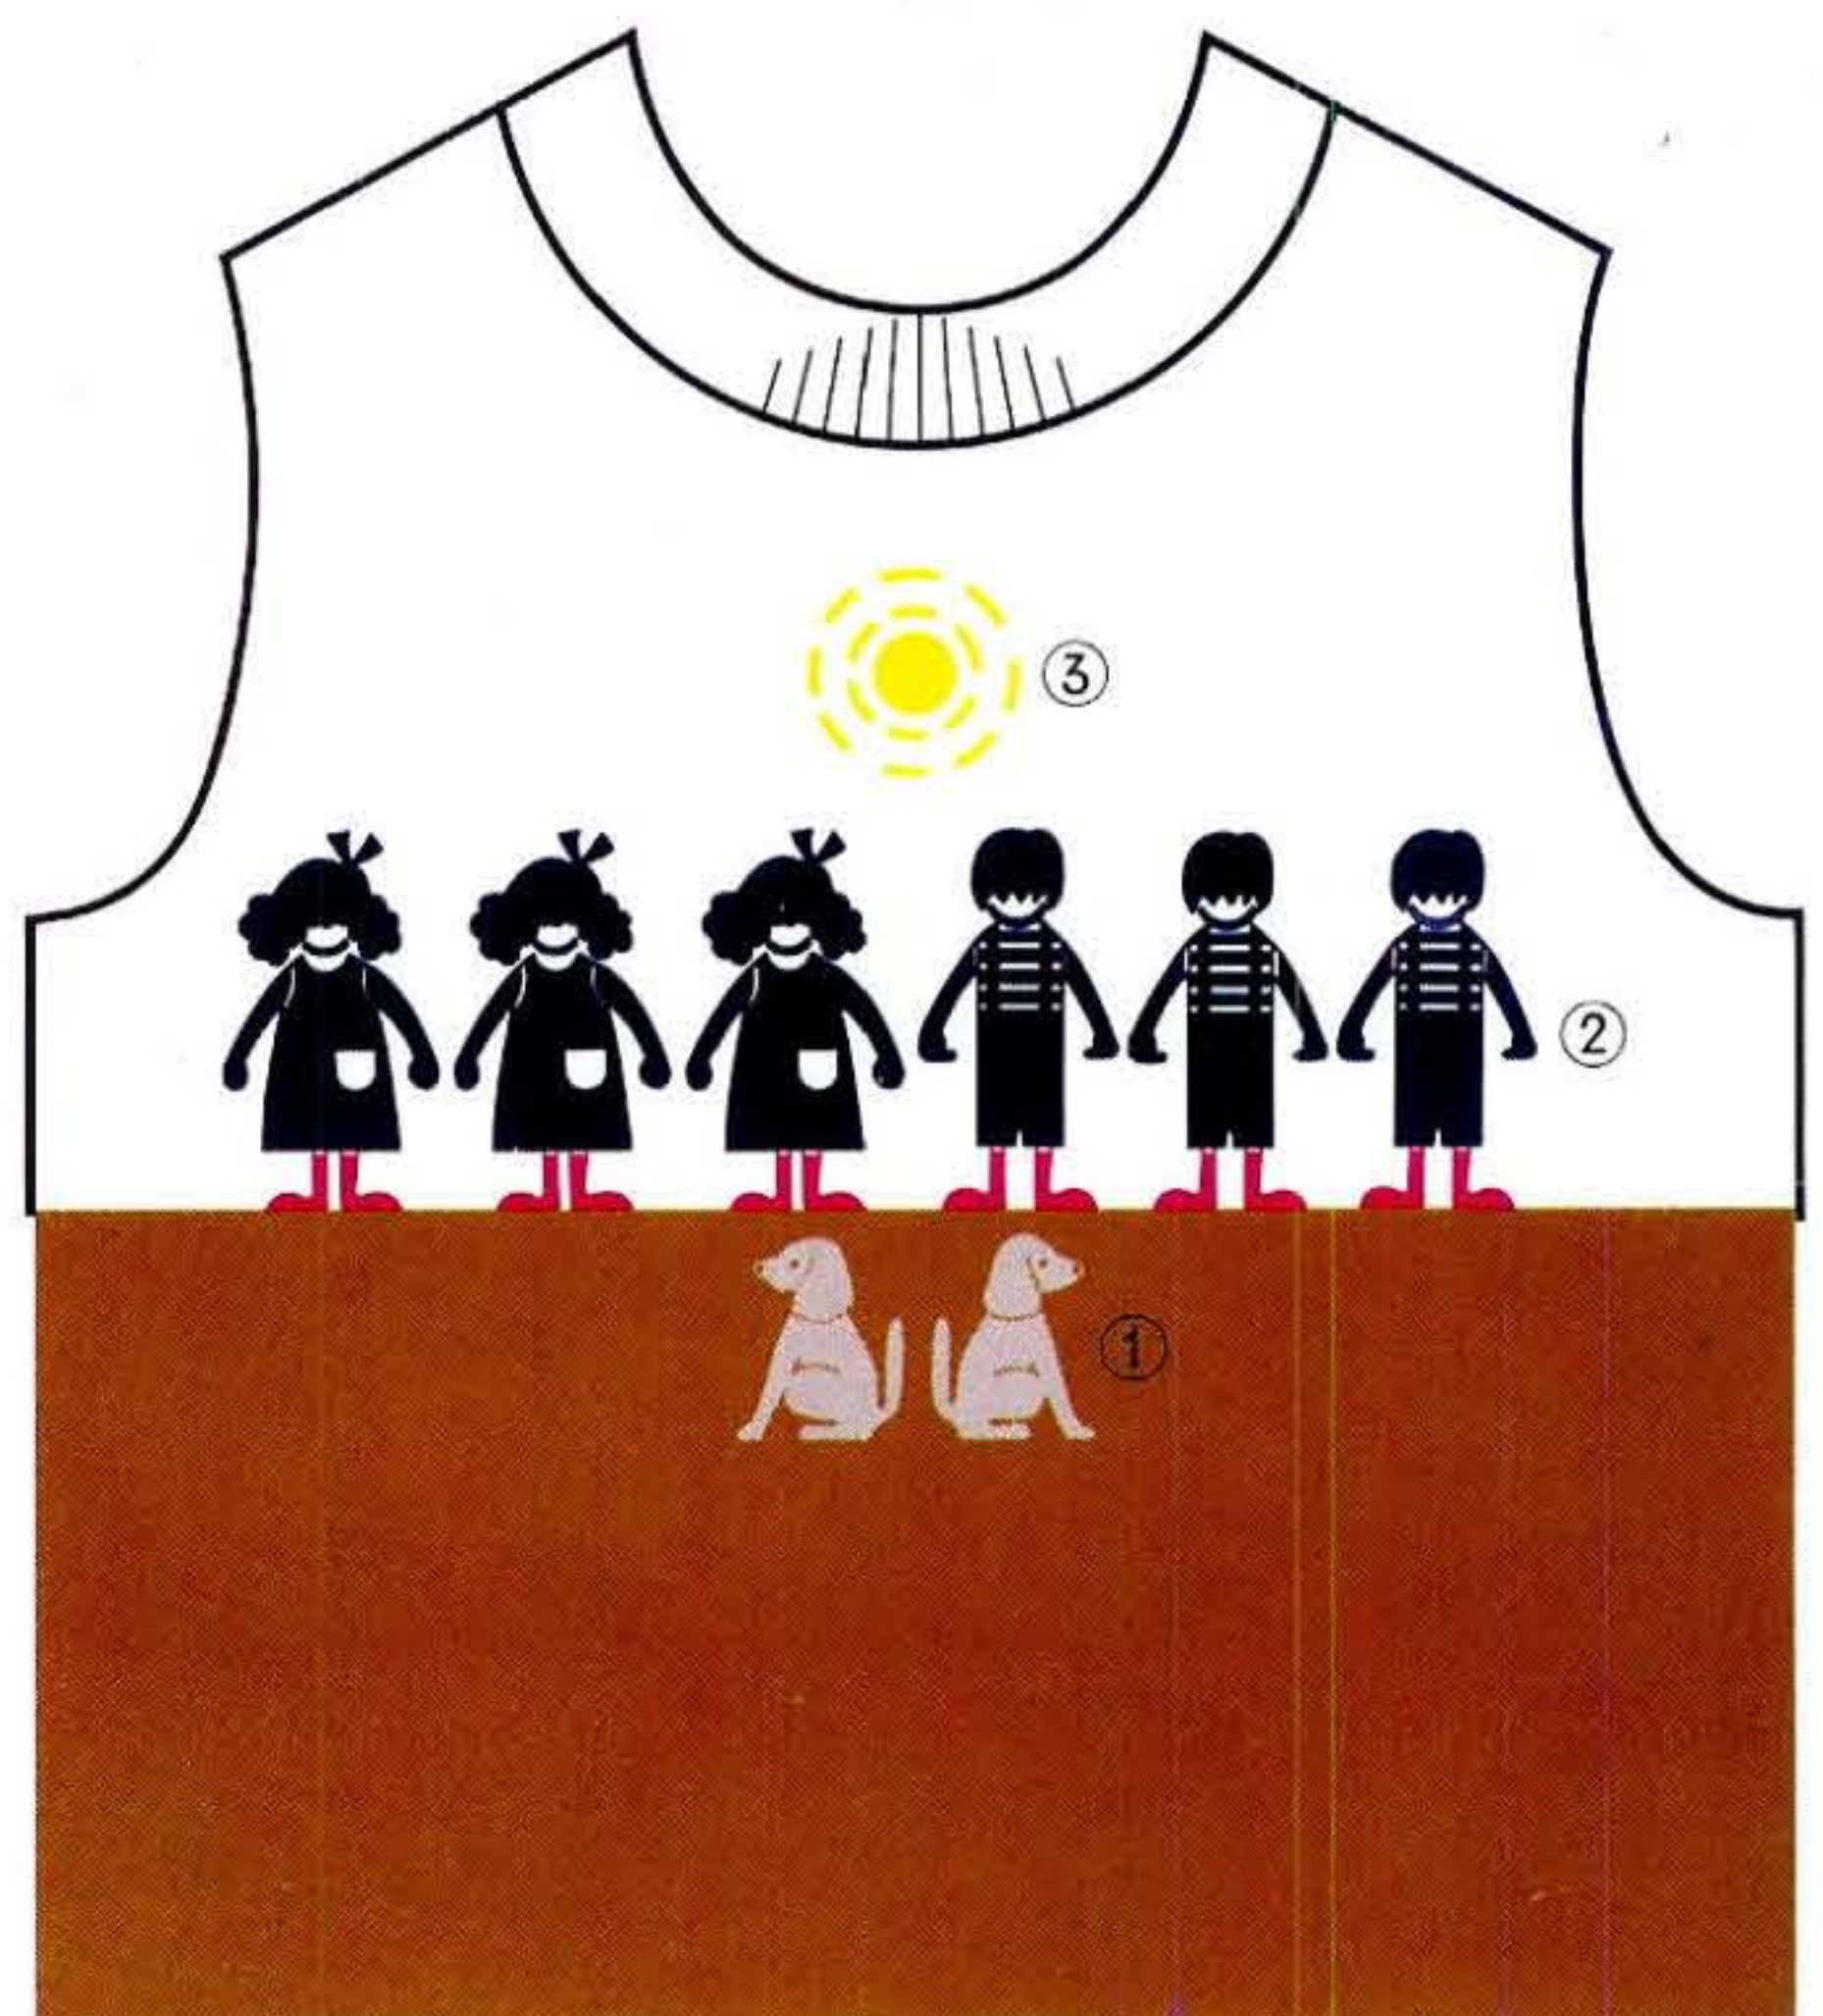 


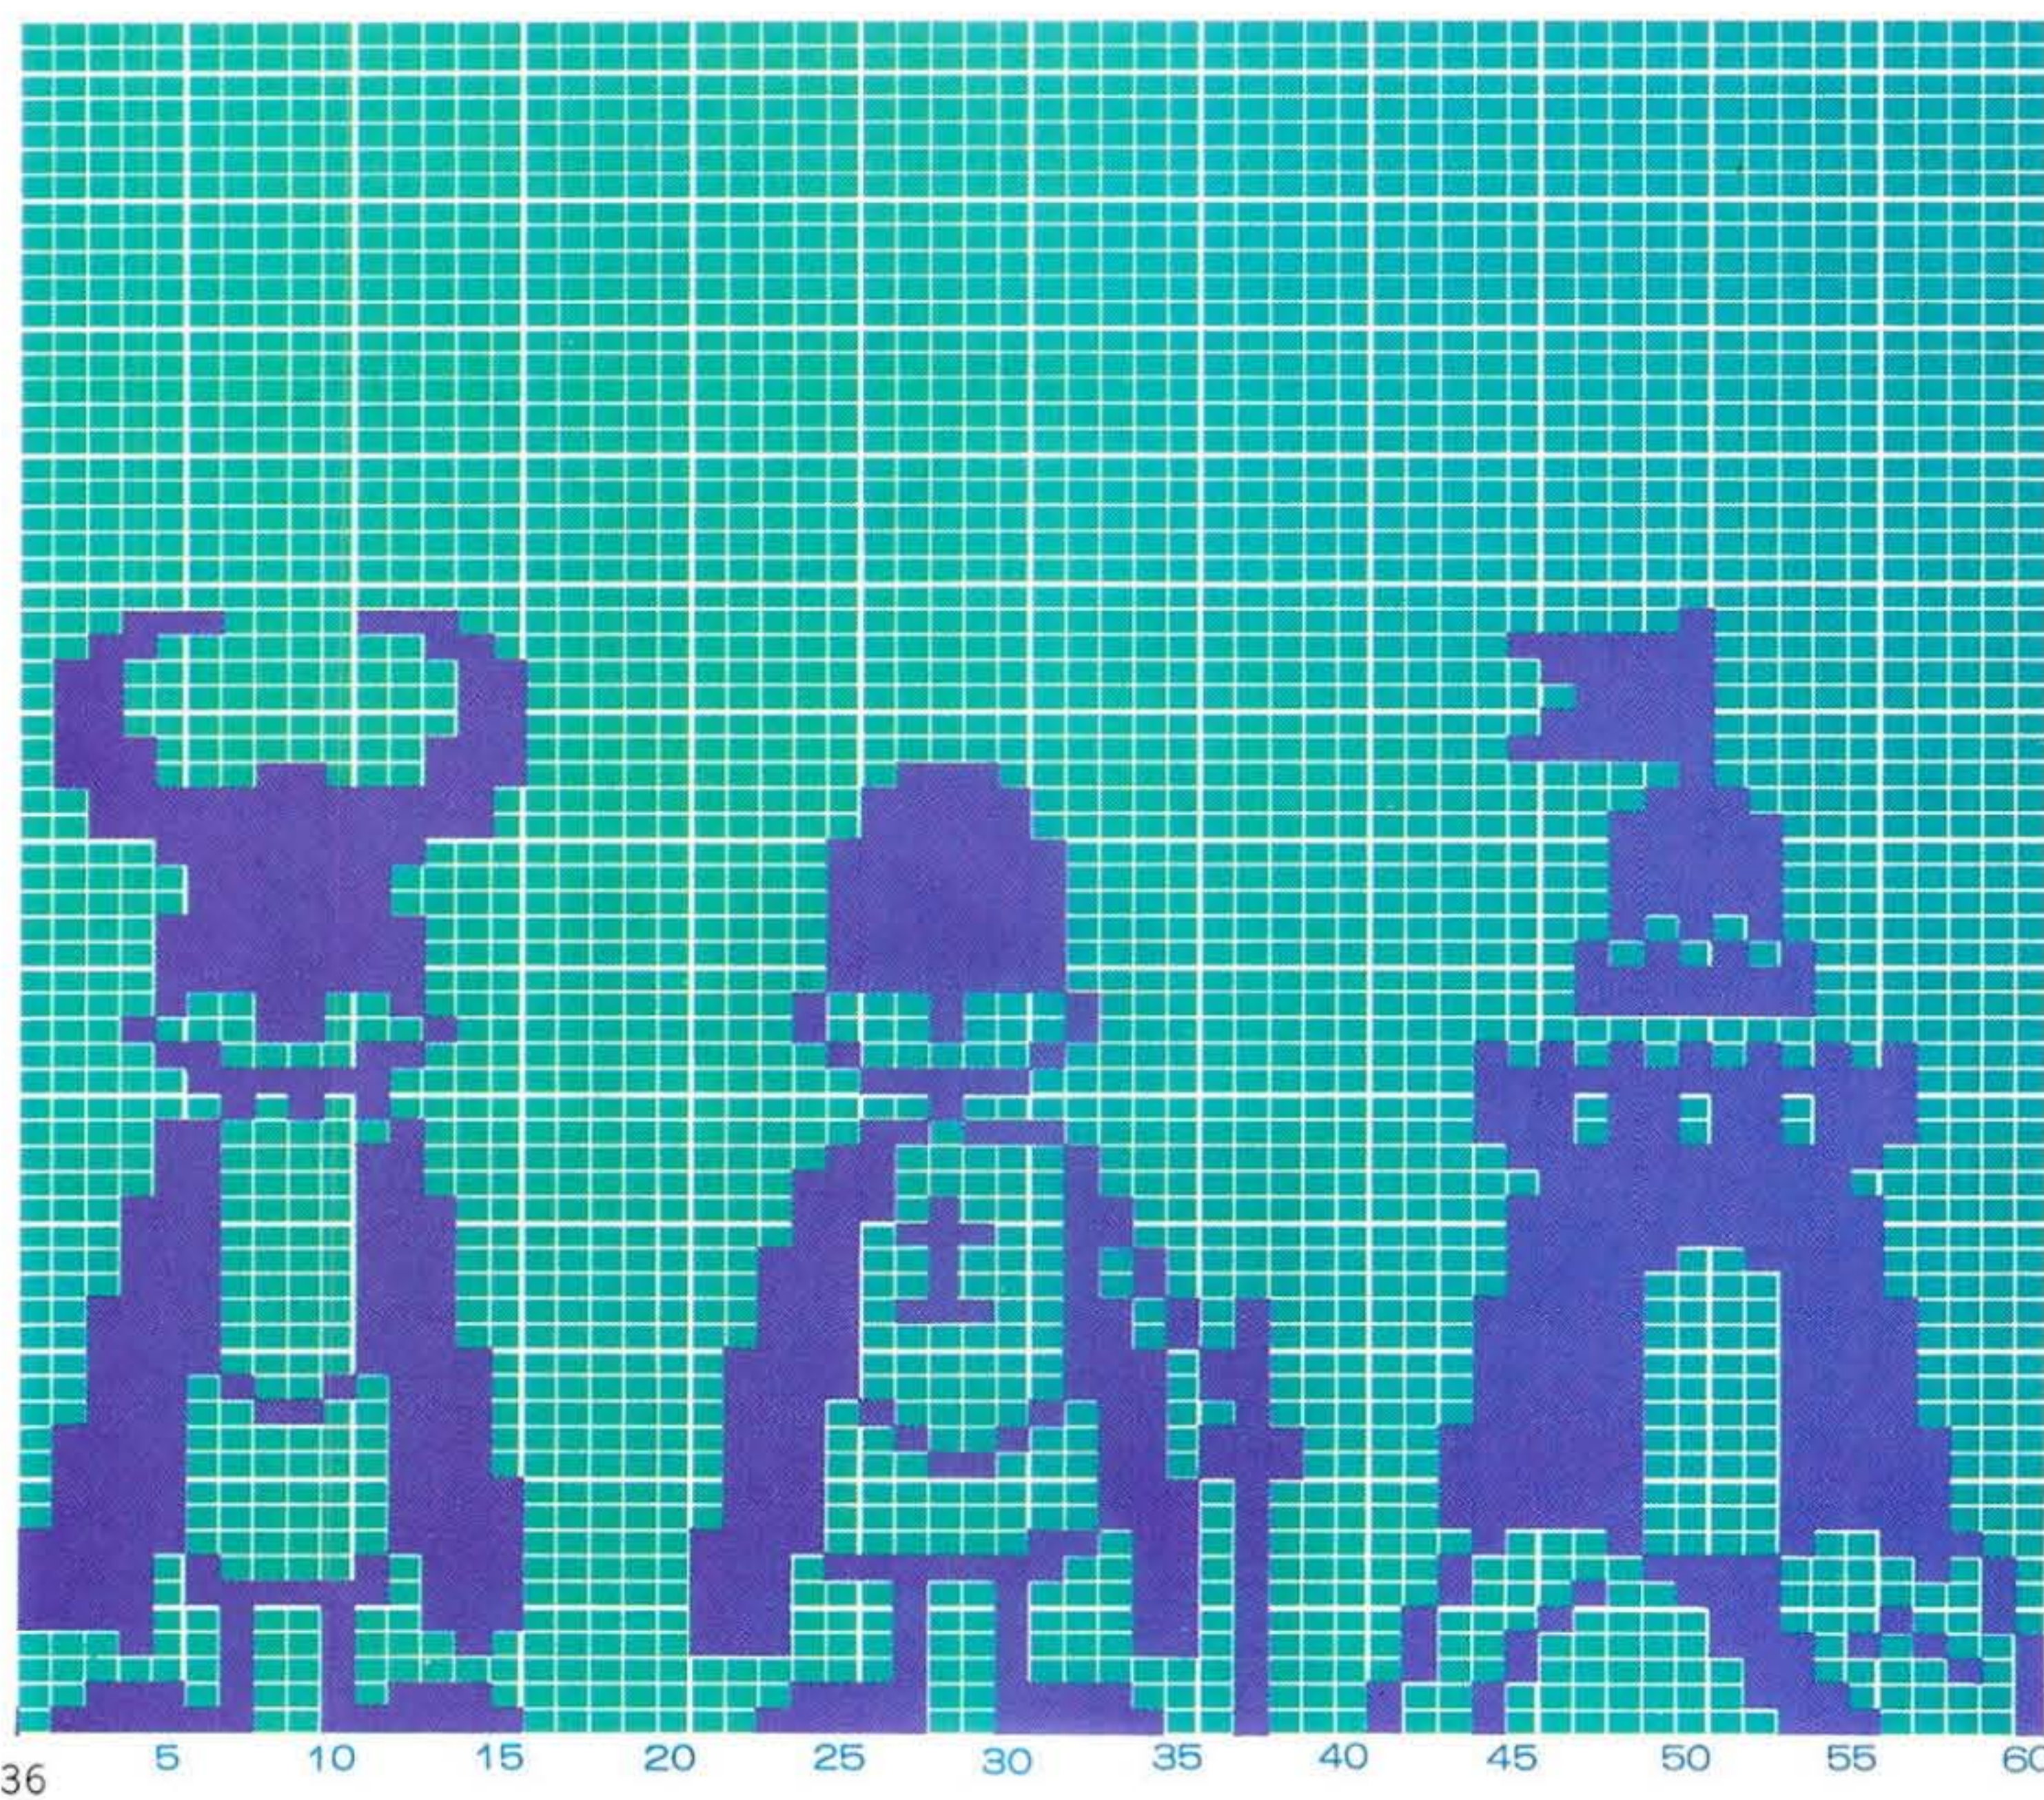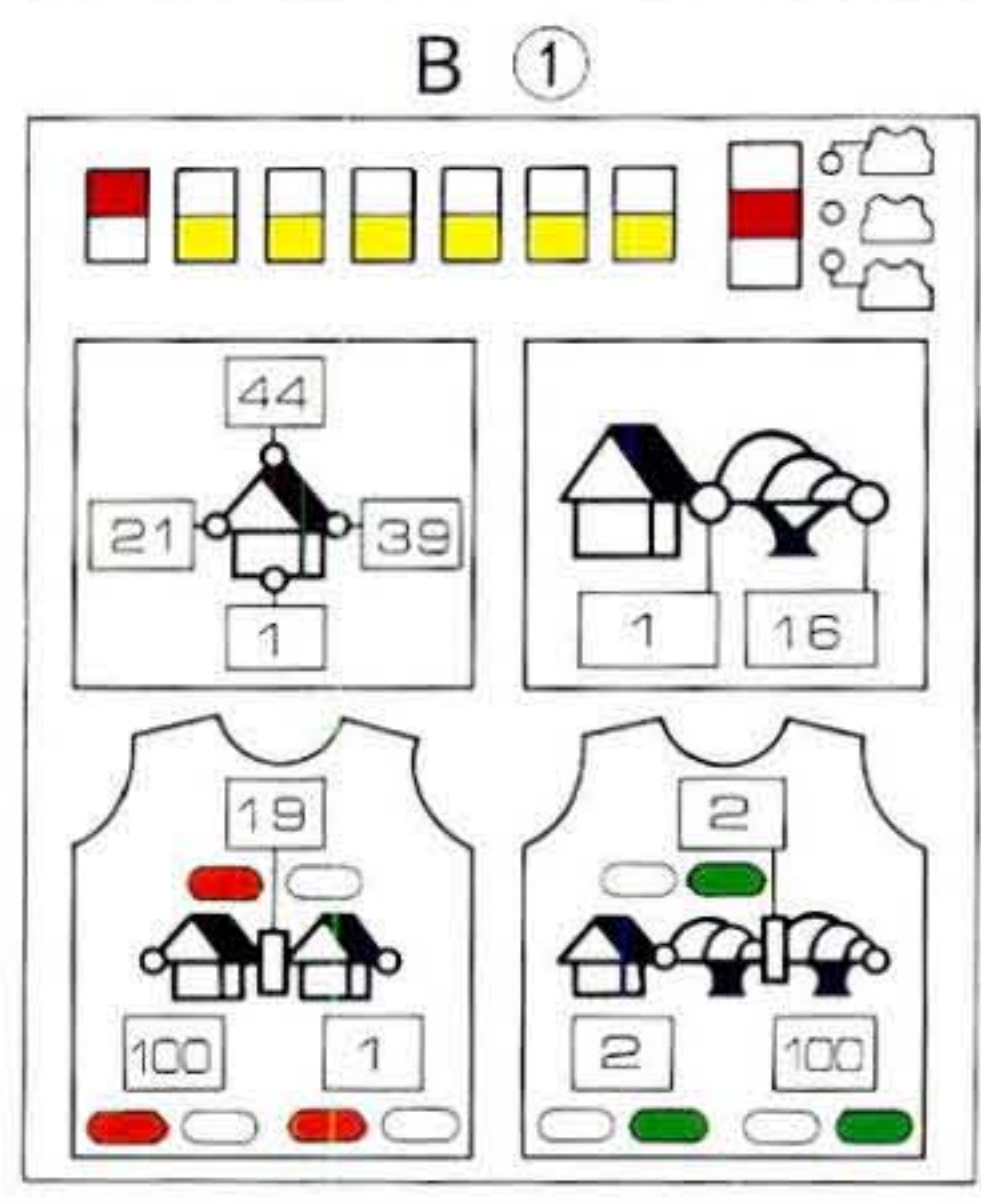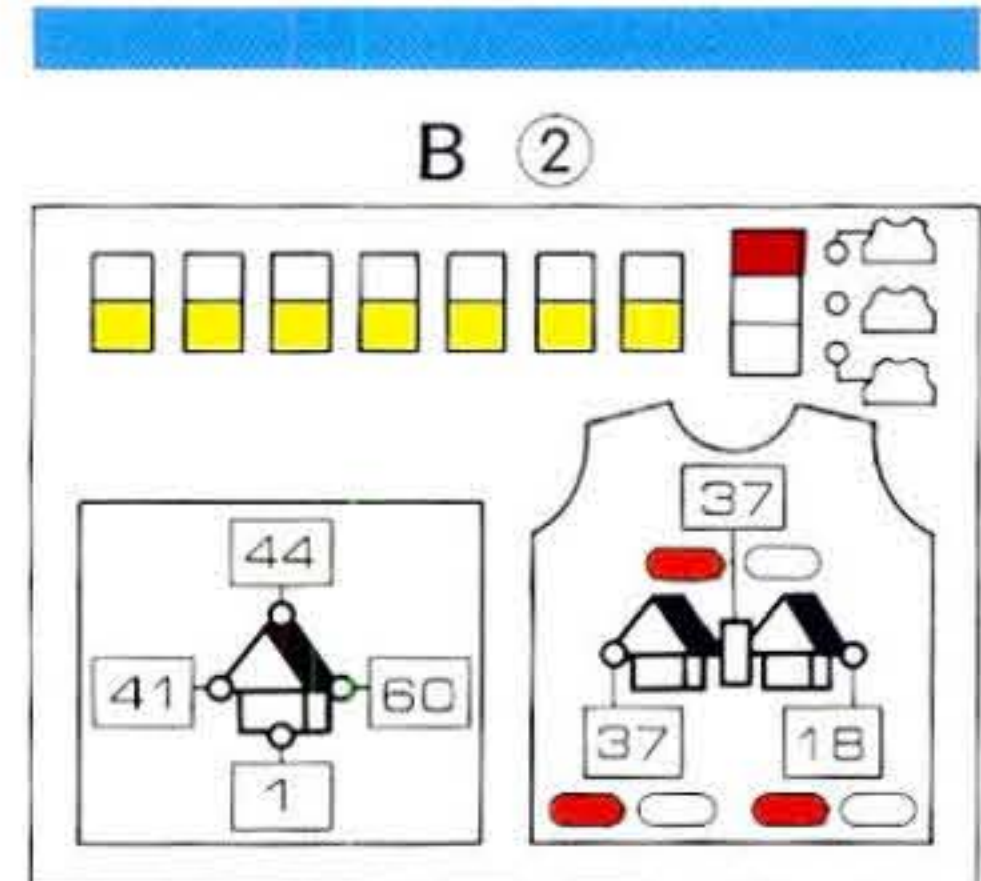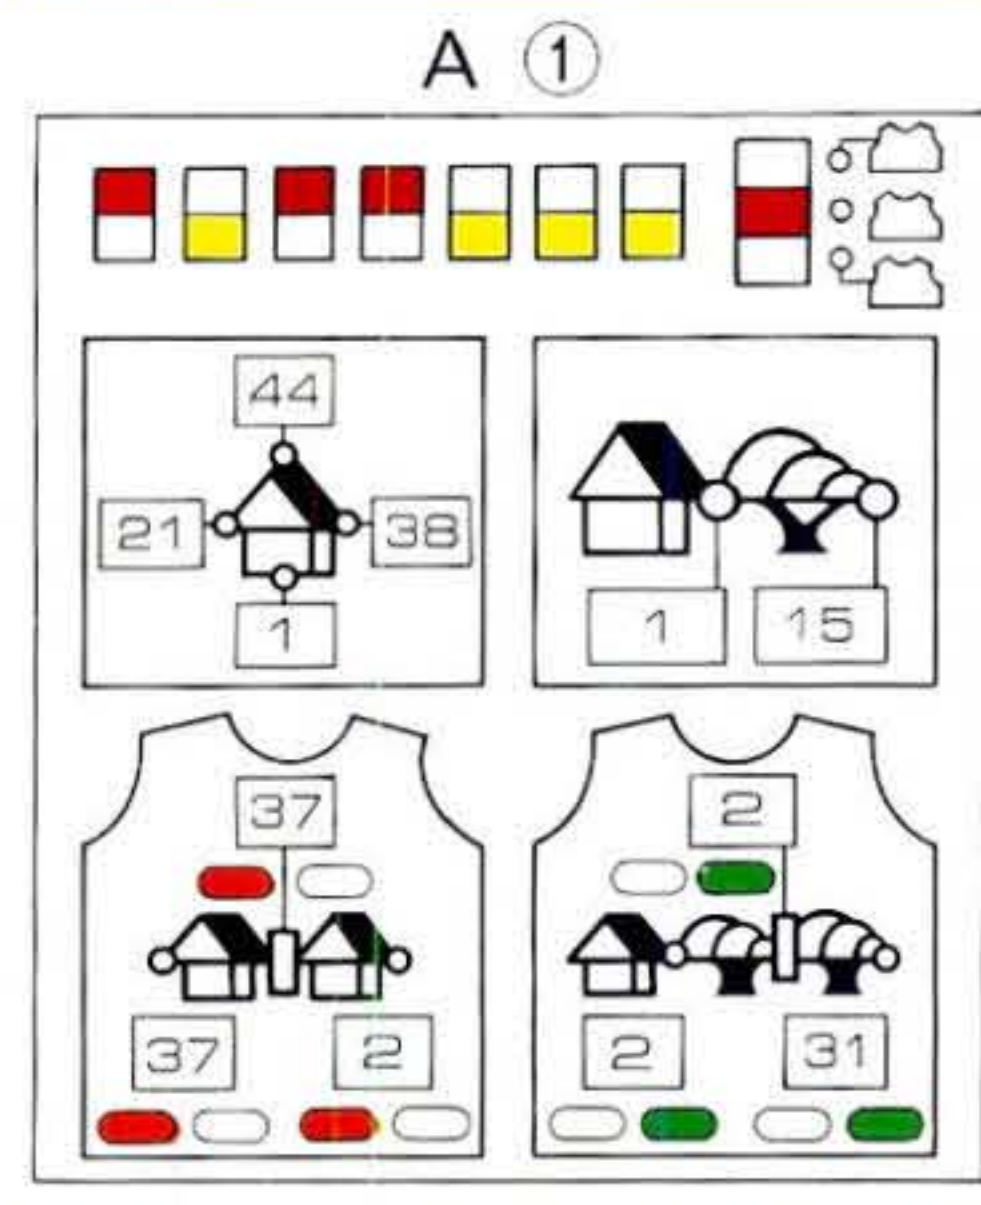    


A



 
B

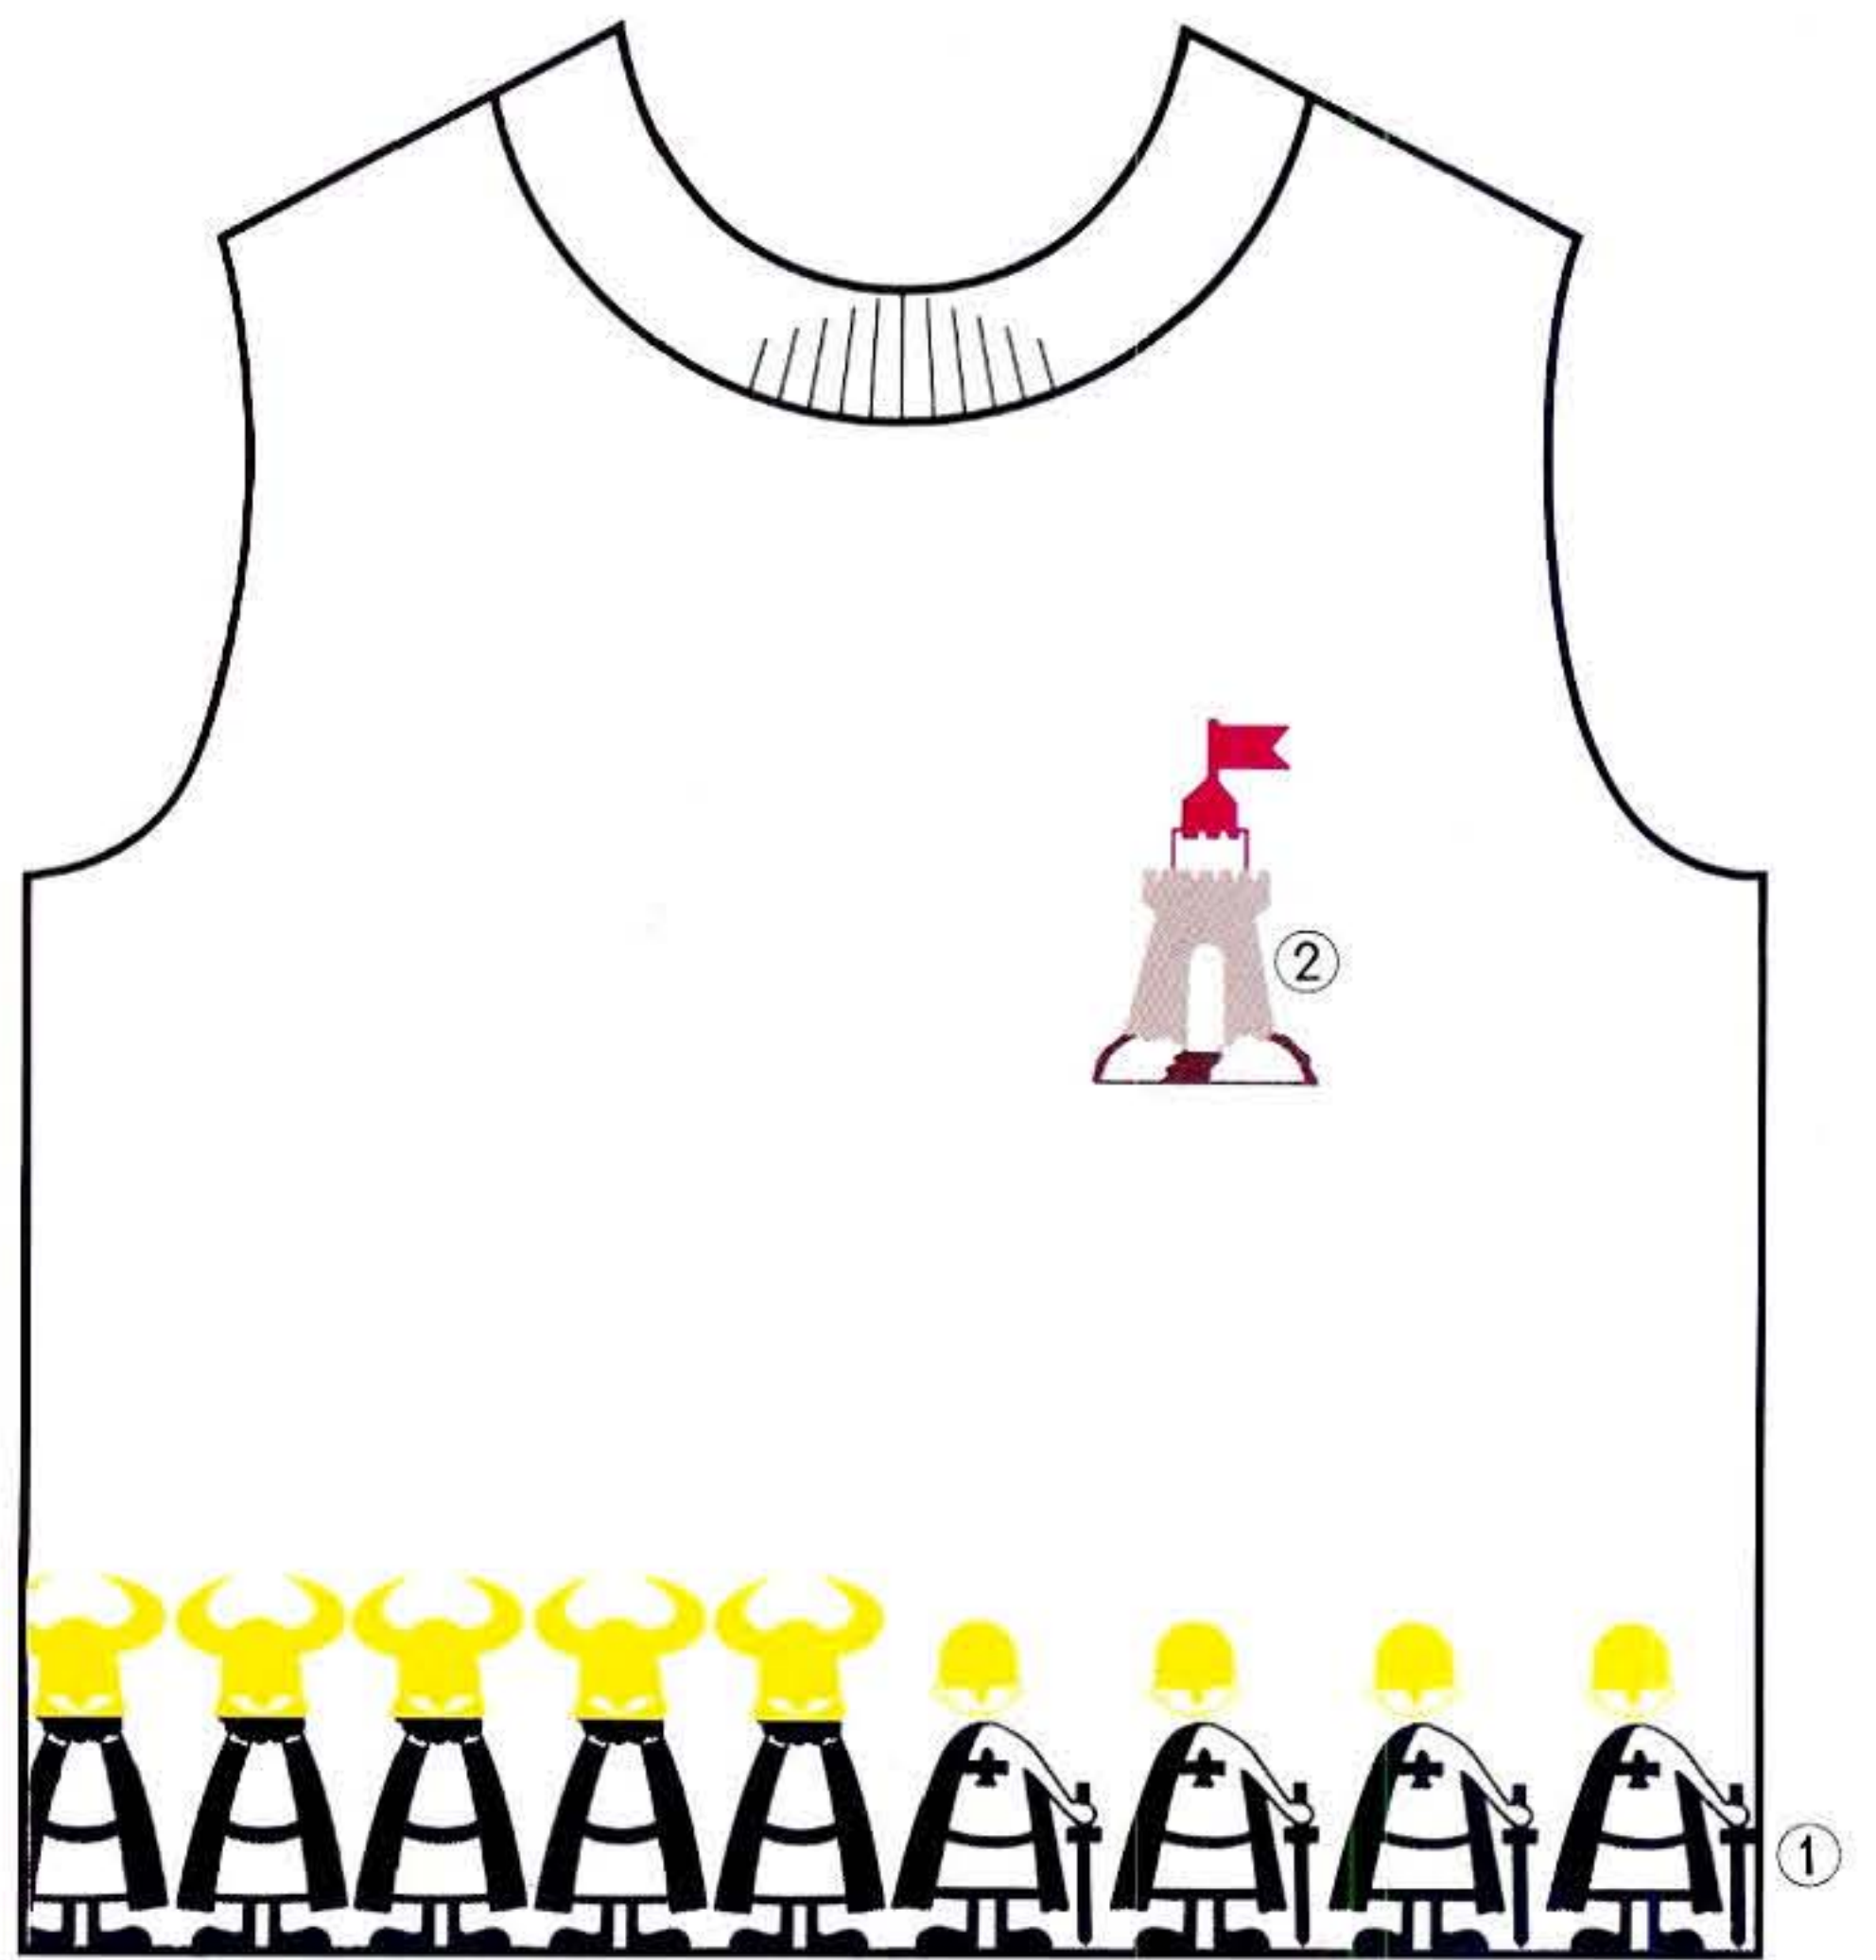


C ③

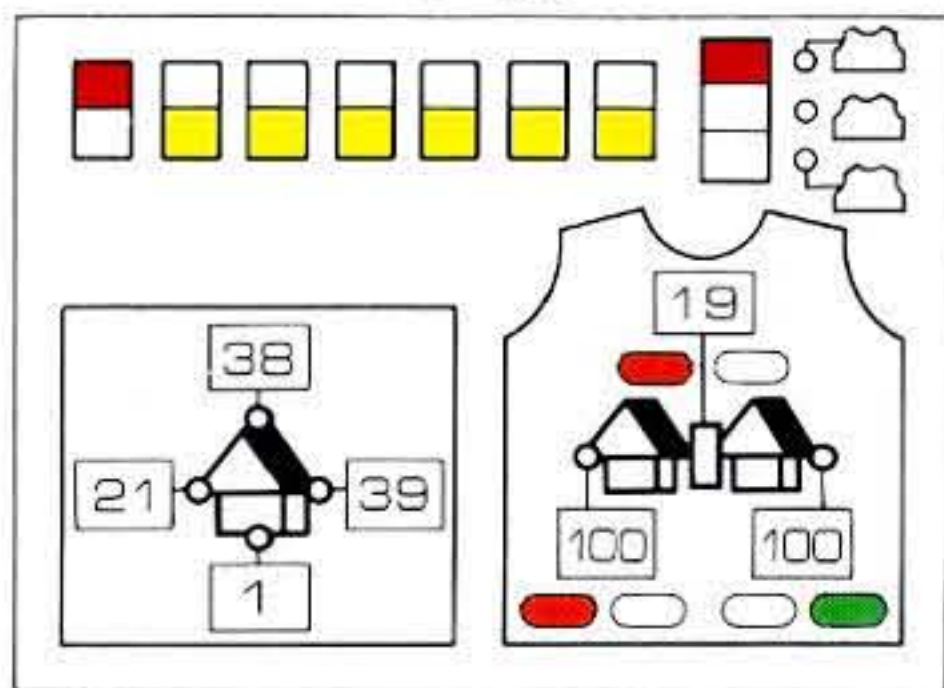 

C ②






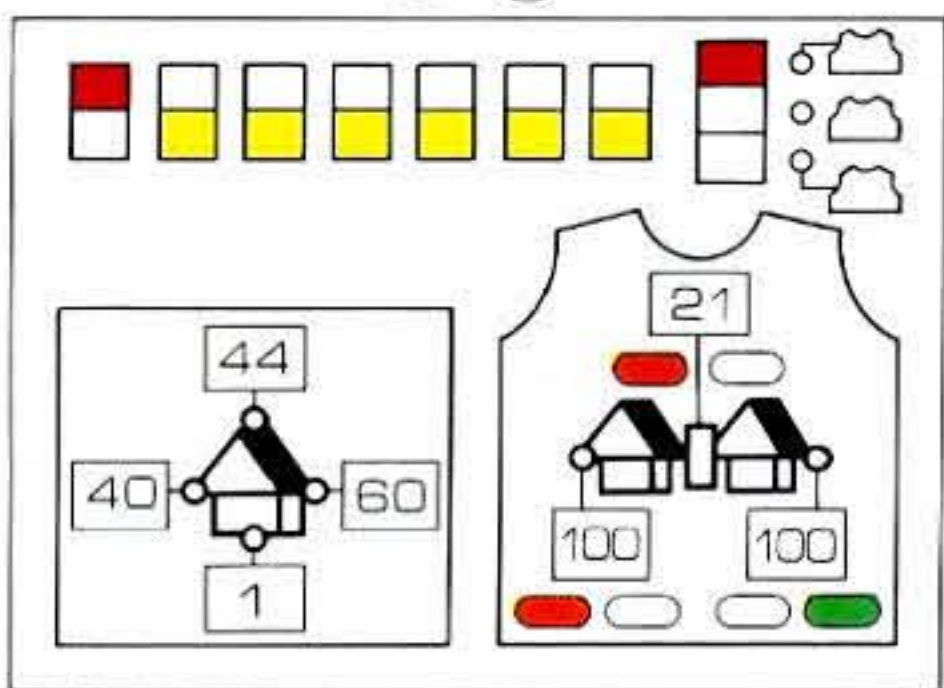 



C ①

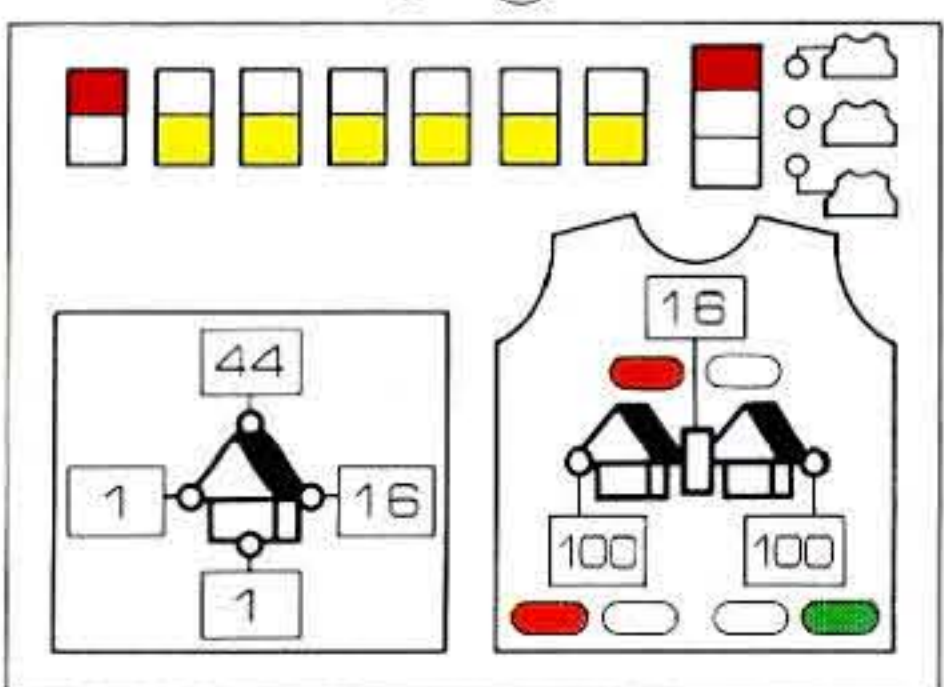 

C




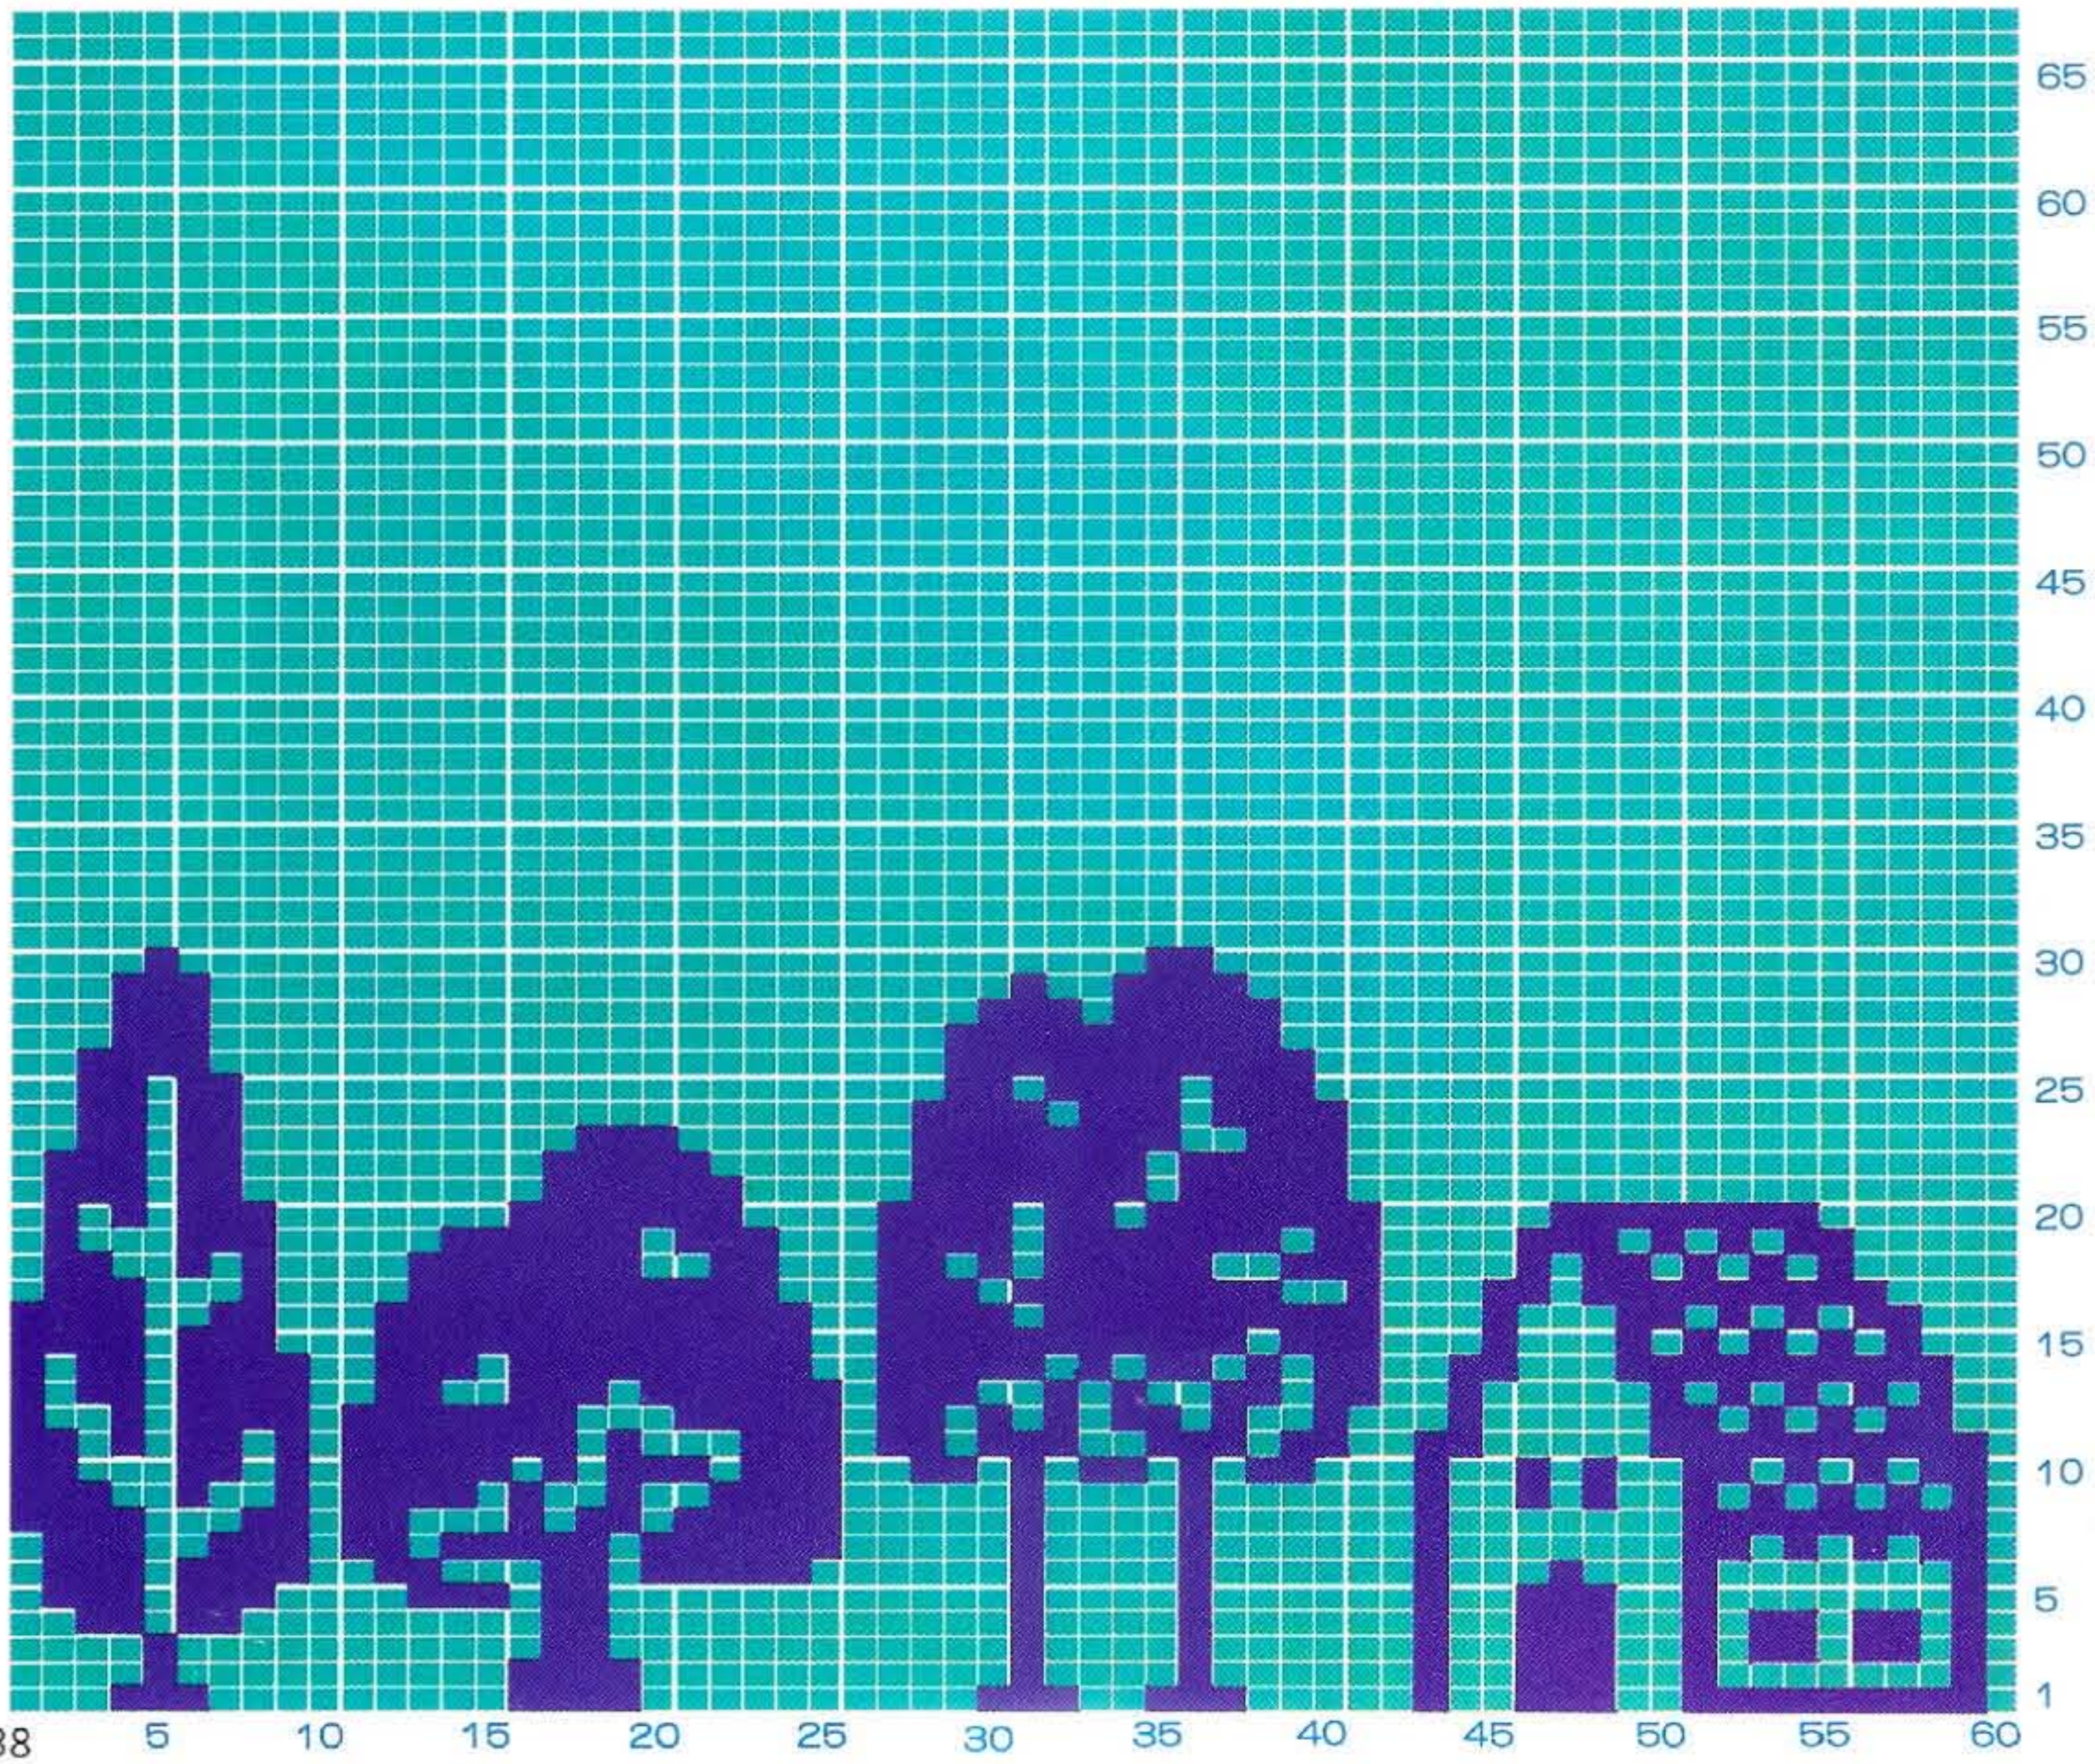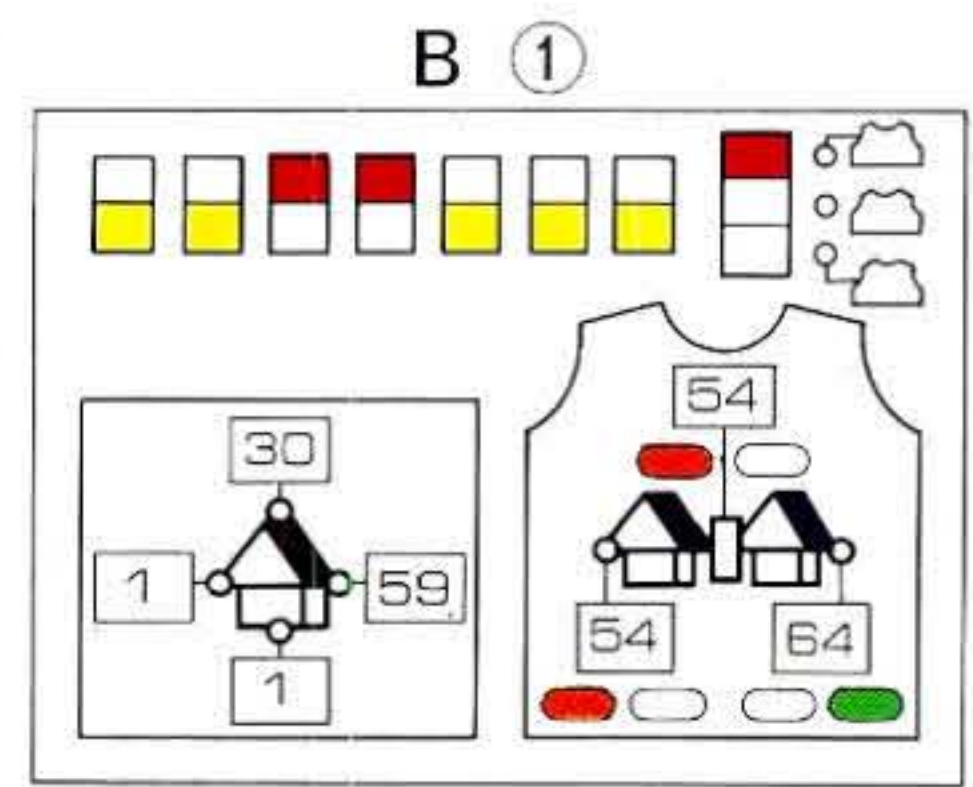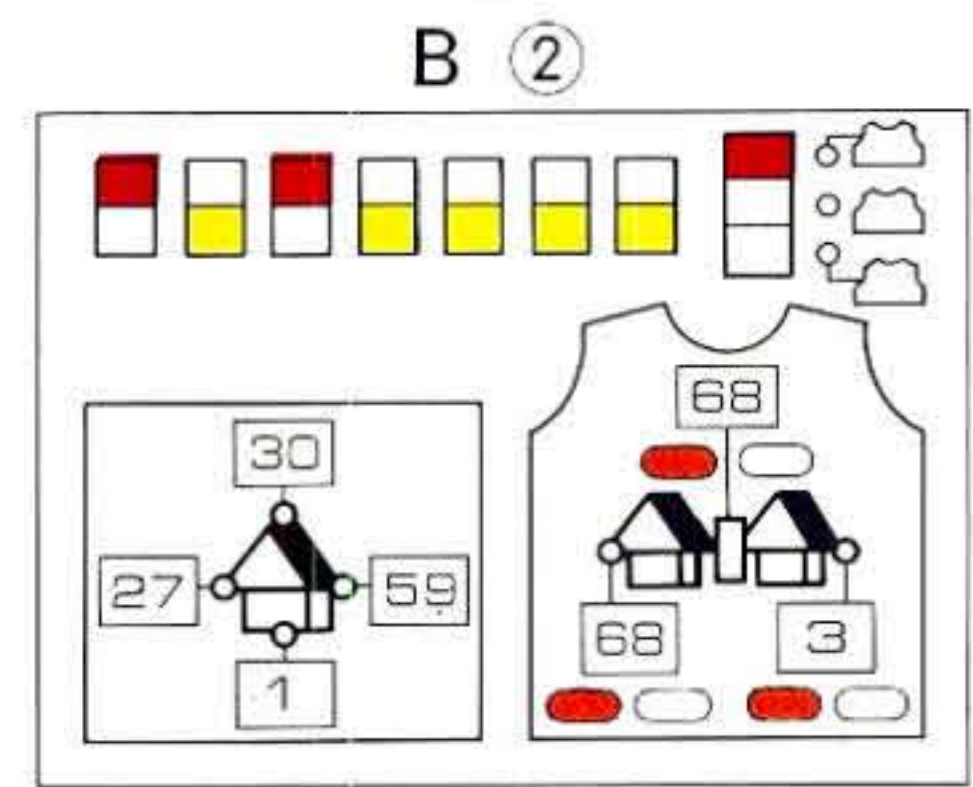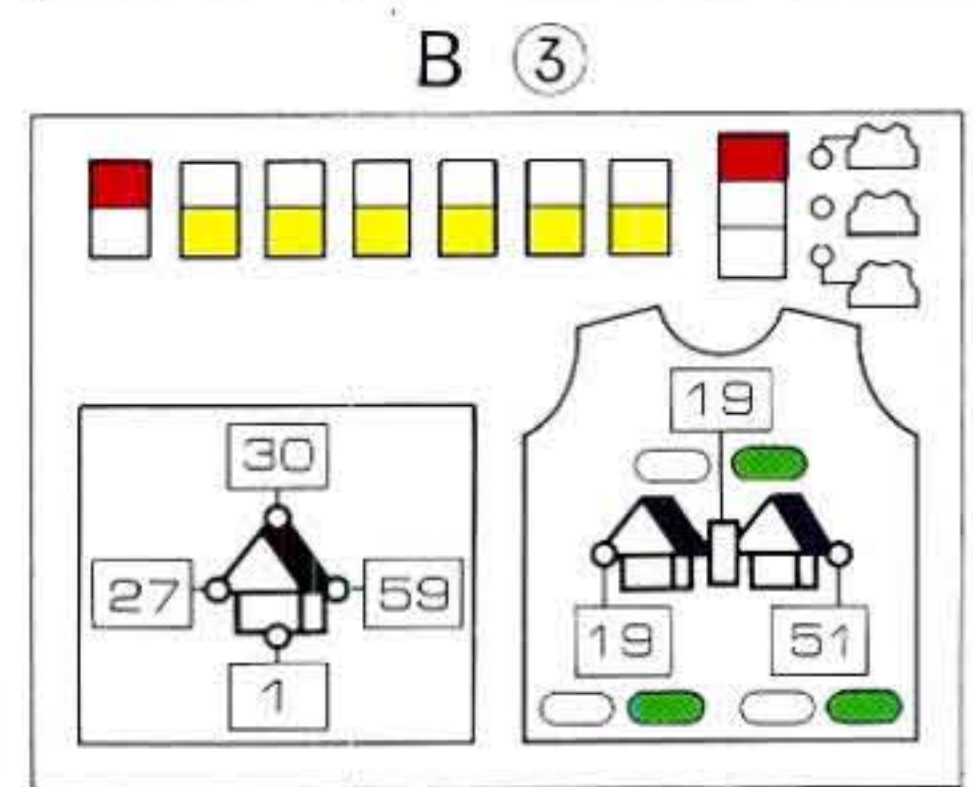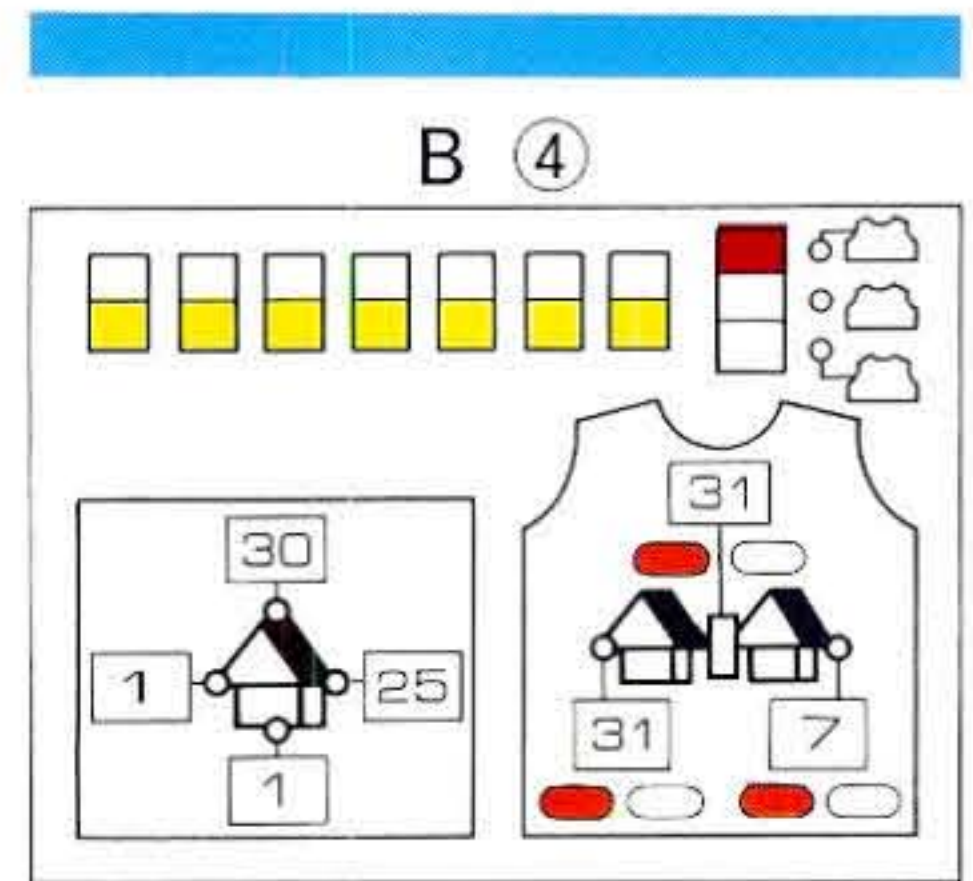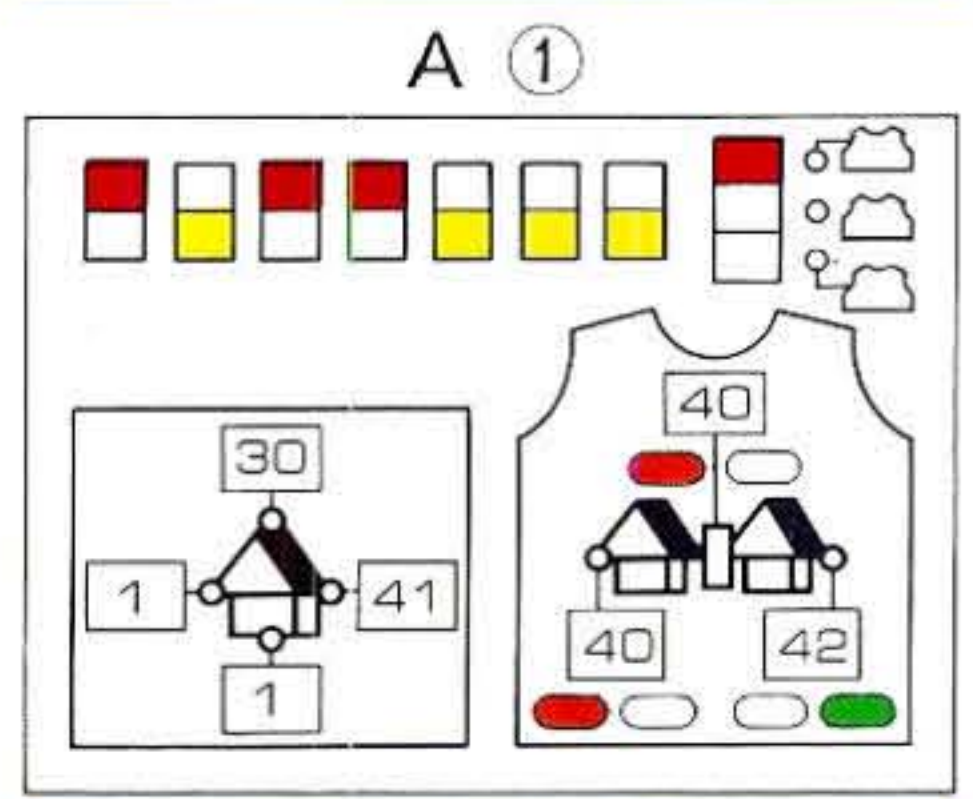      



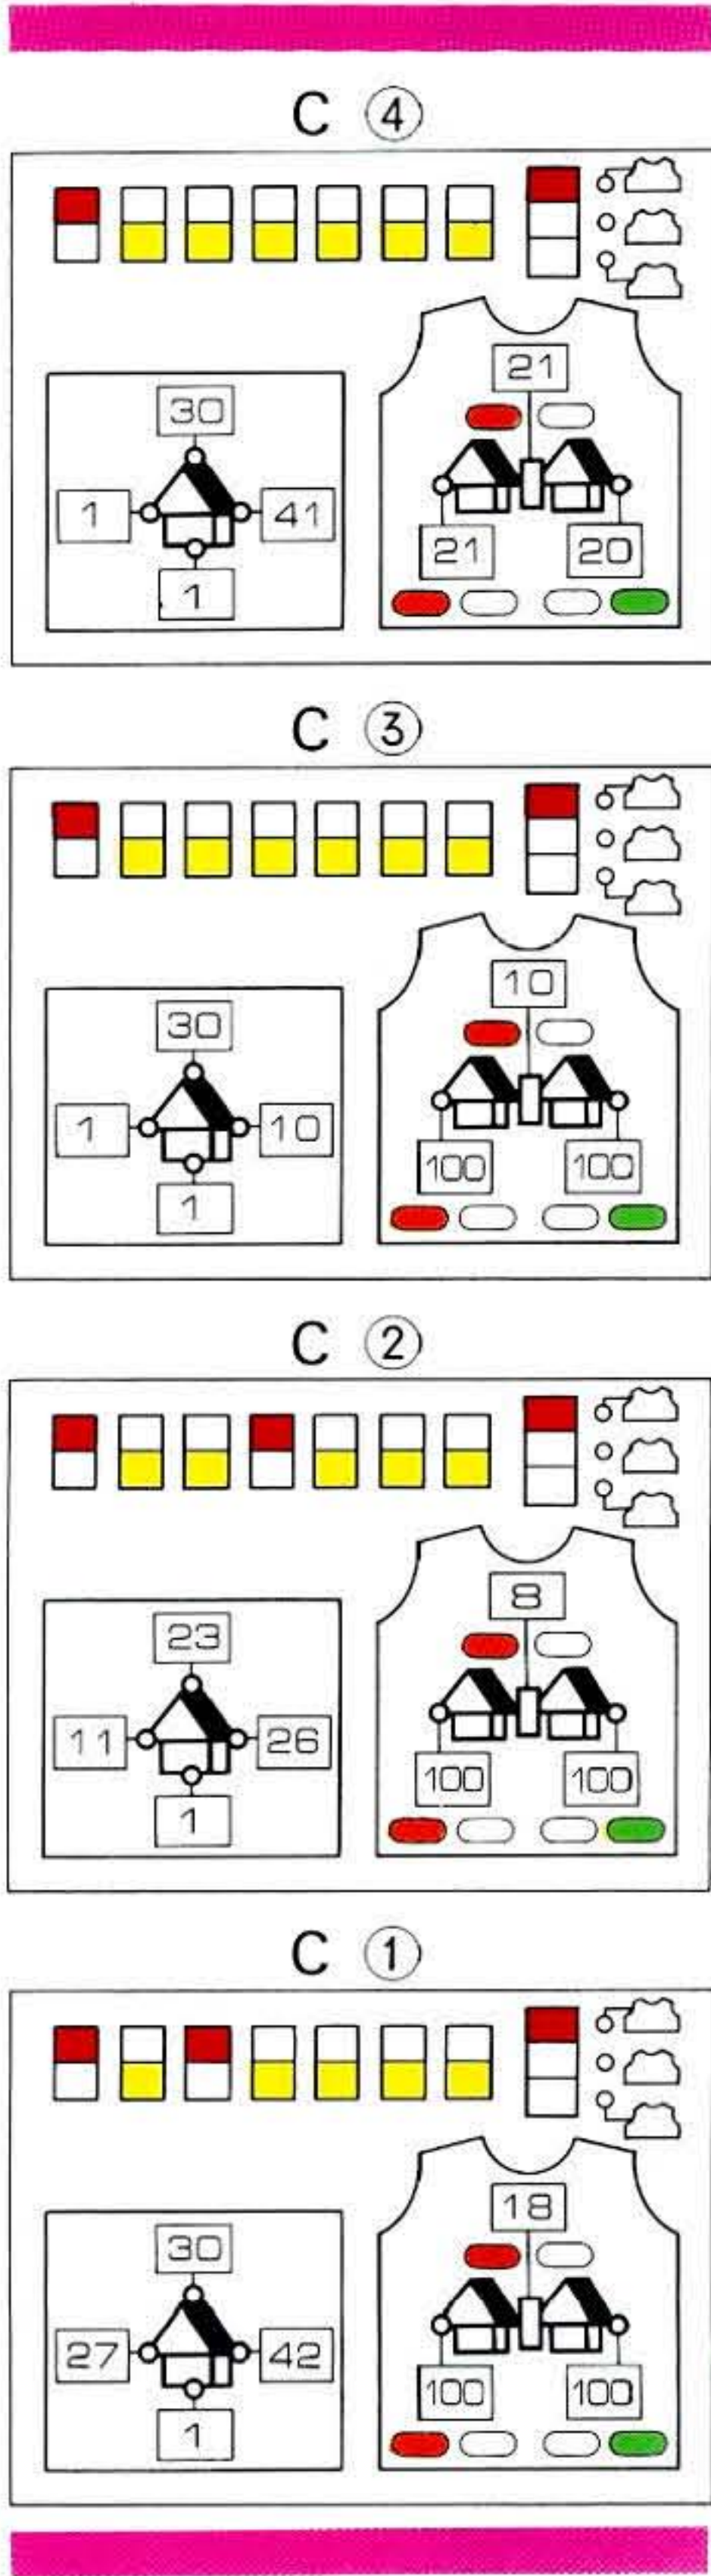 





A ②

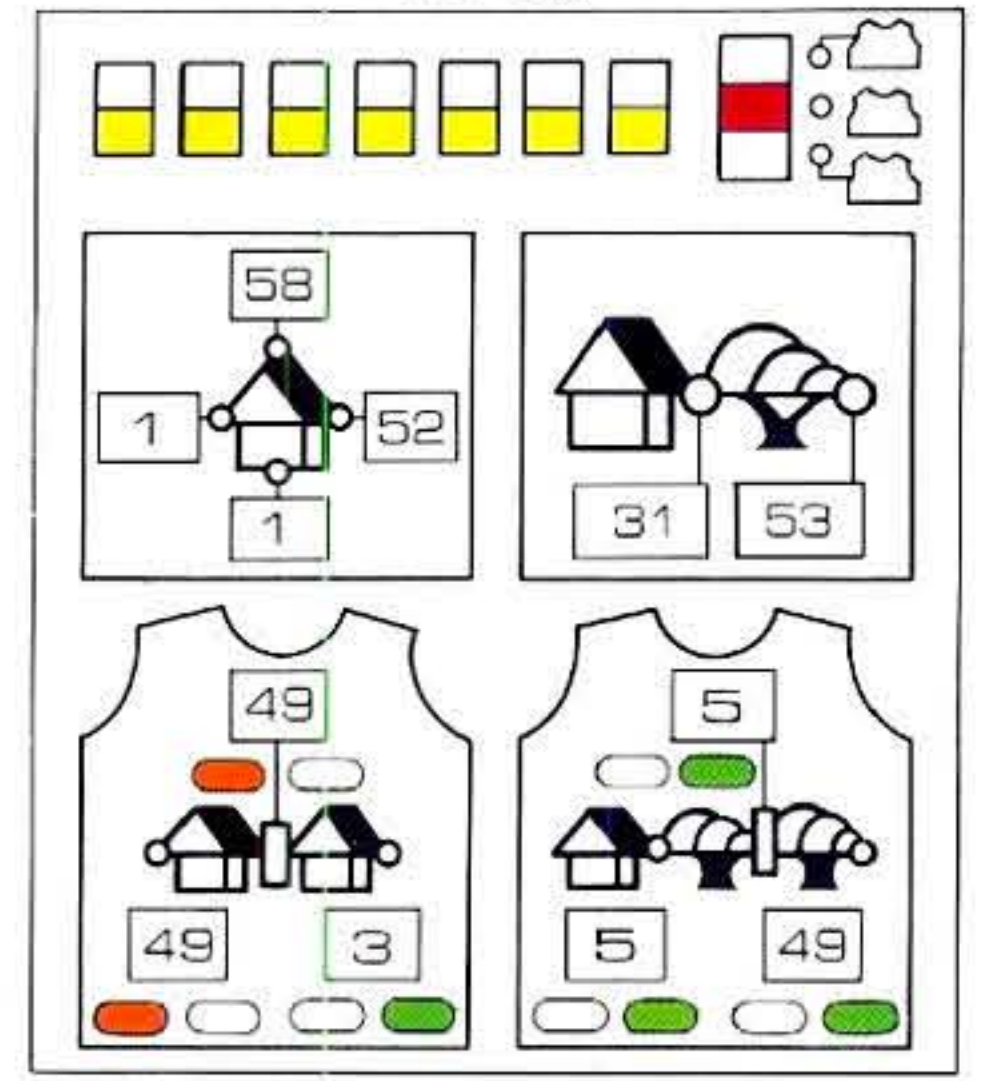 

A ①

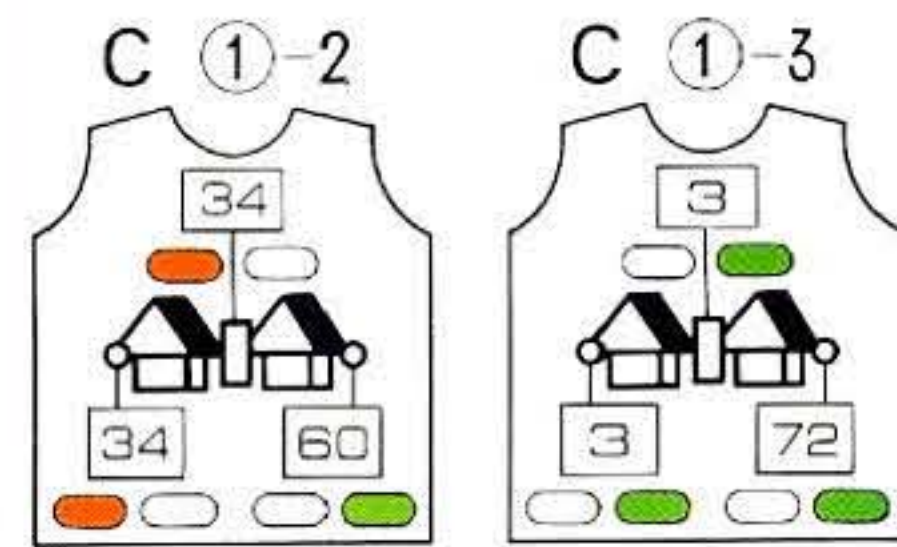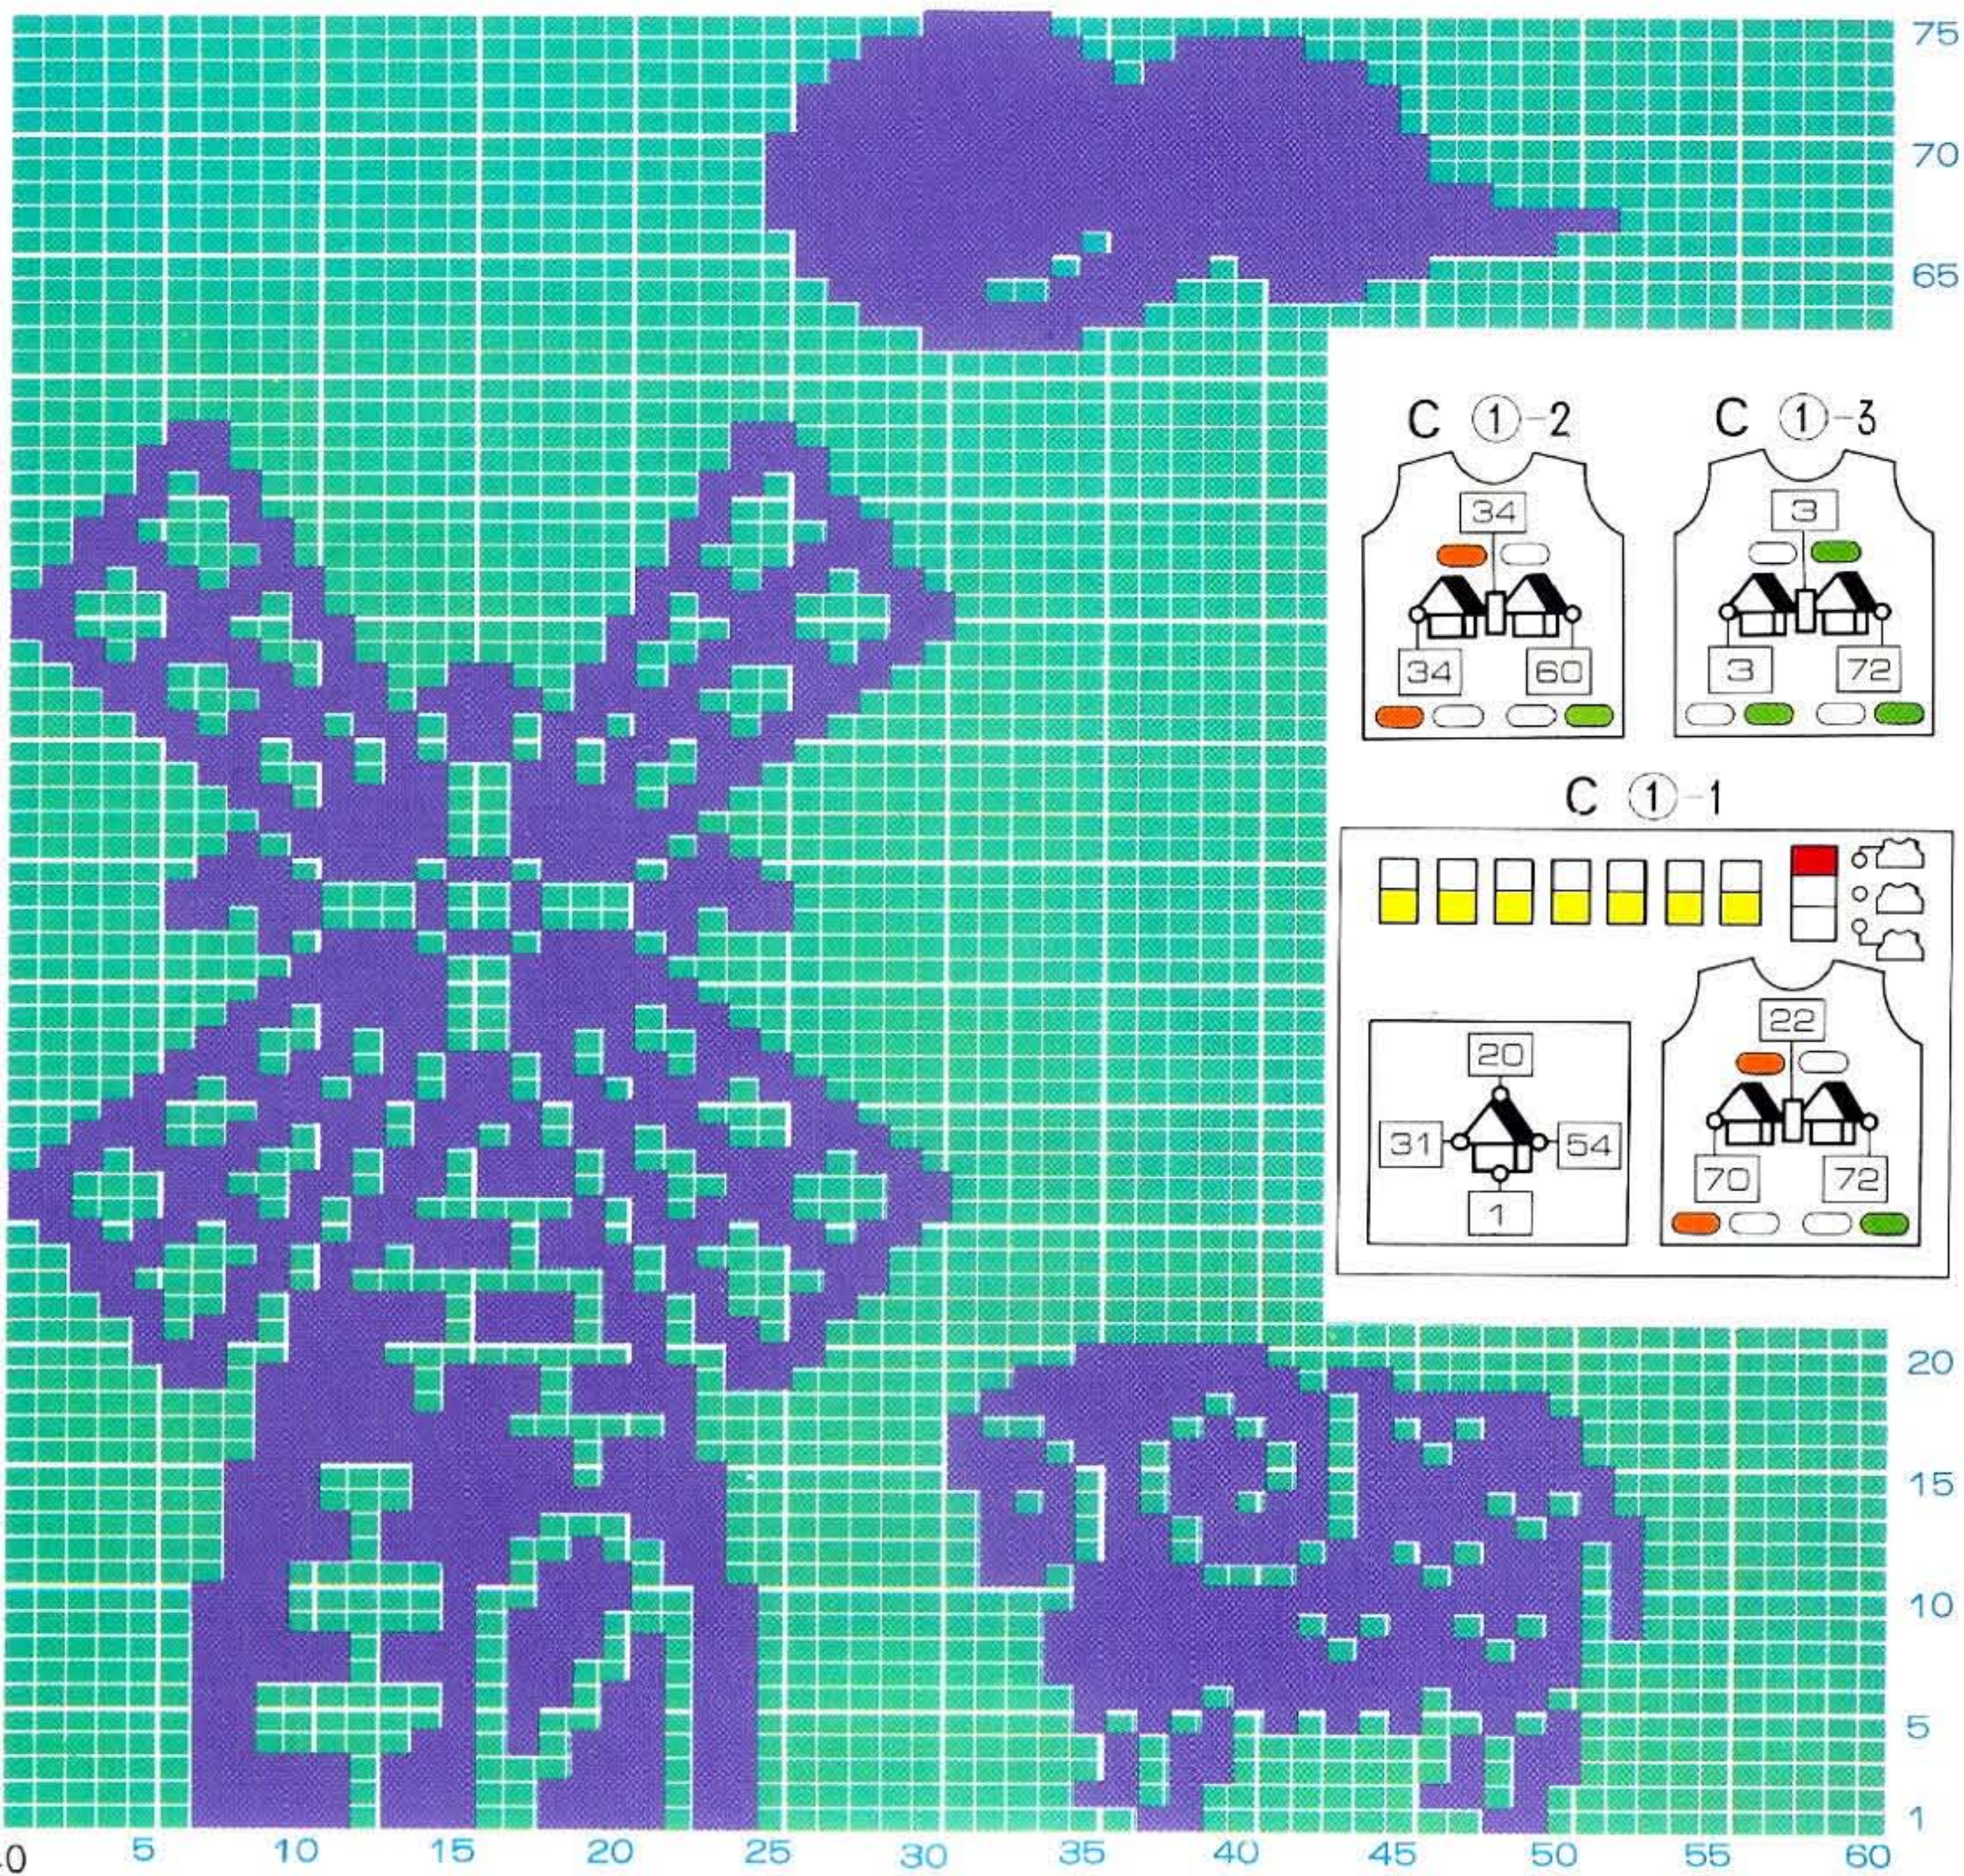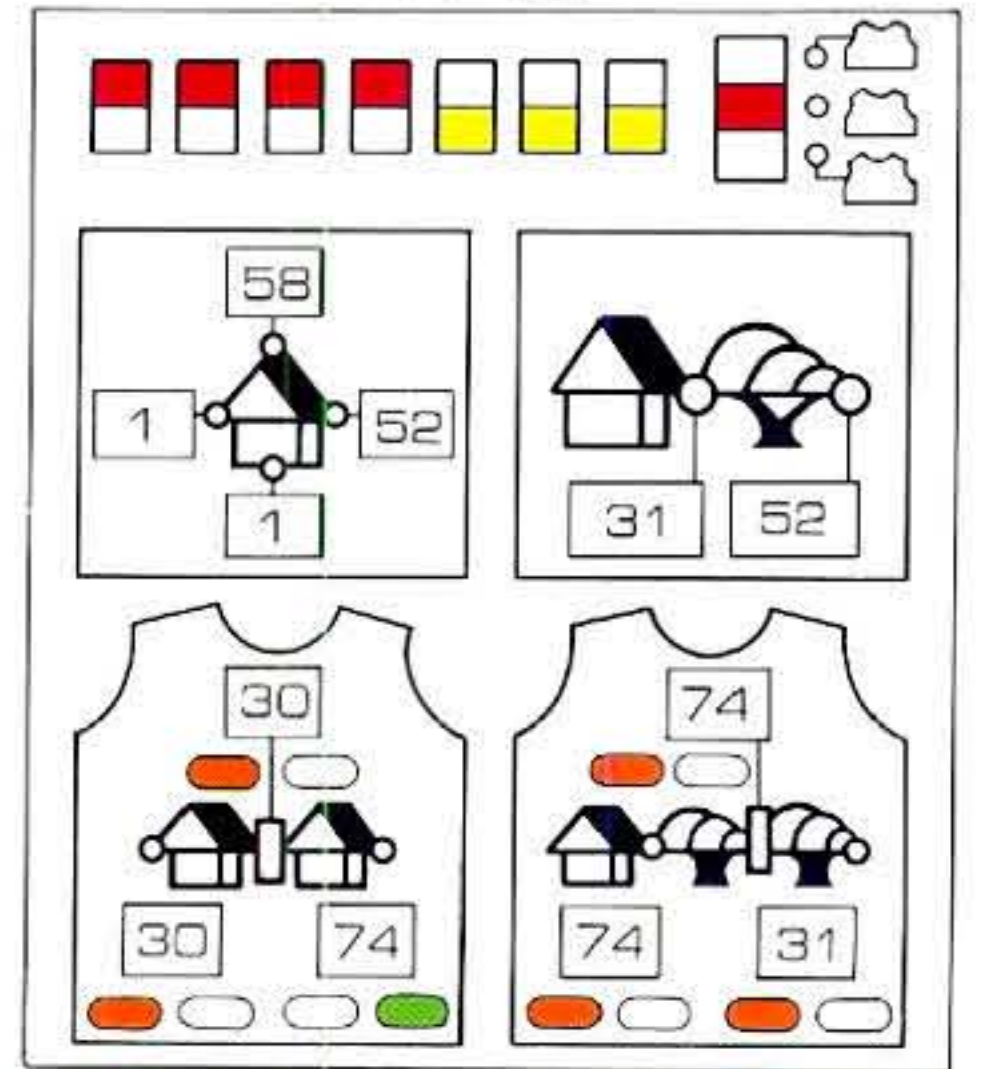   


C ①-1

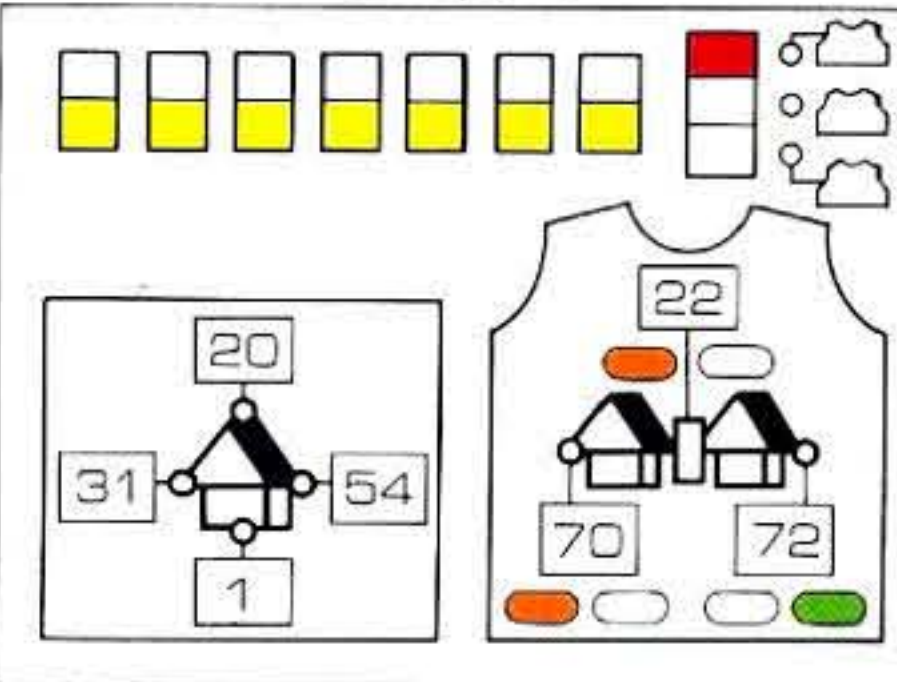 


C ③-2



 C ③-1

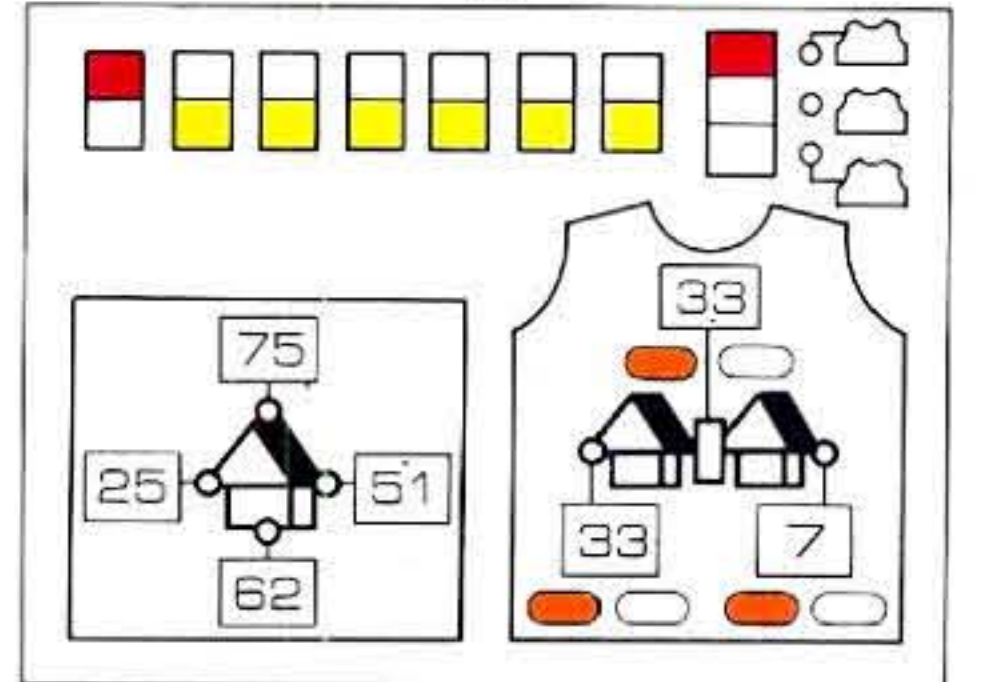

C ②

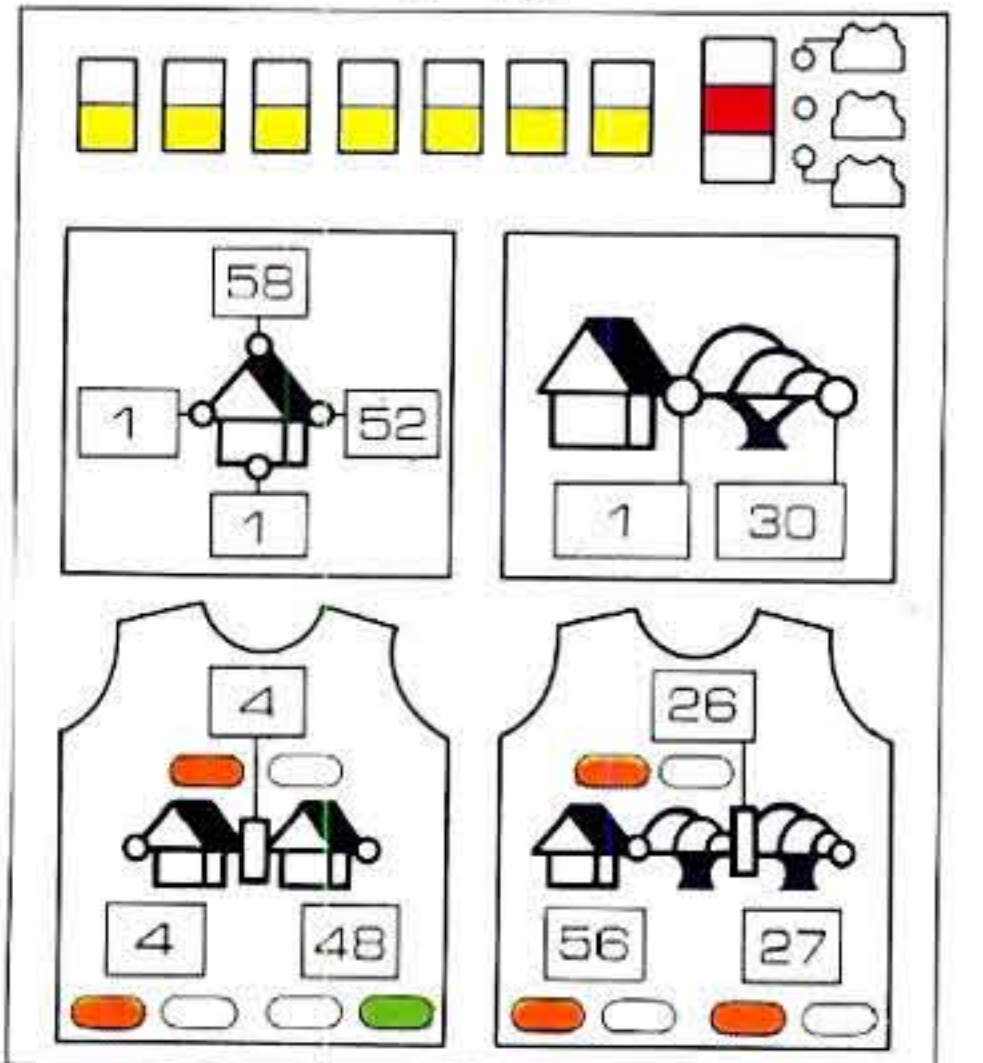 


A




B



 
B ②

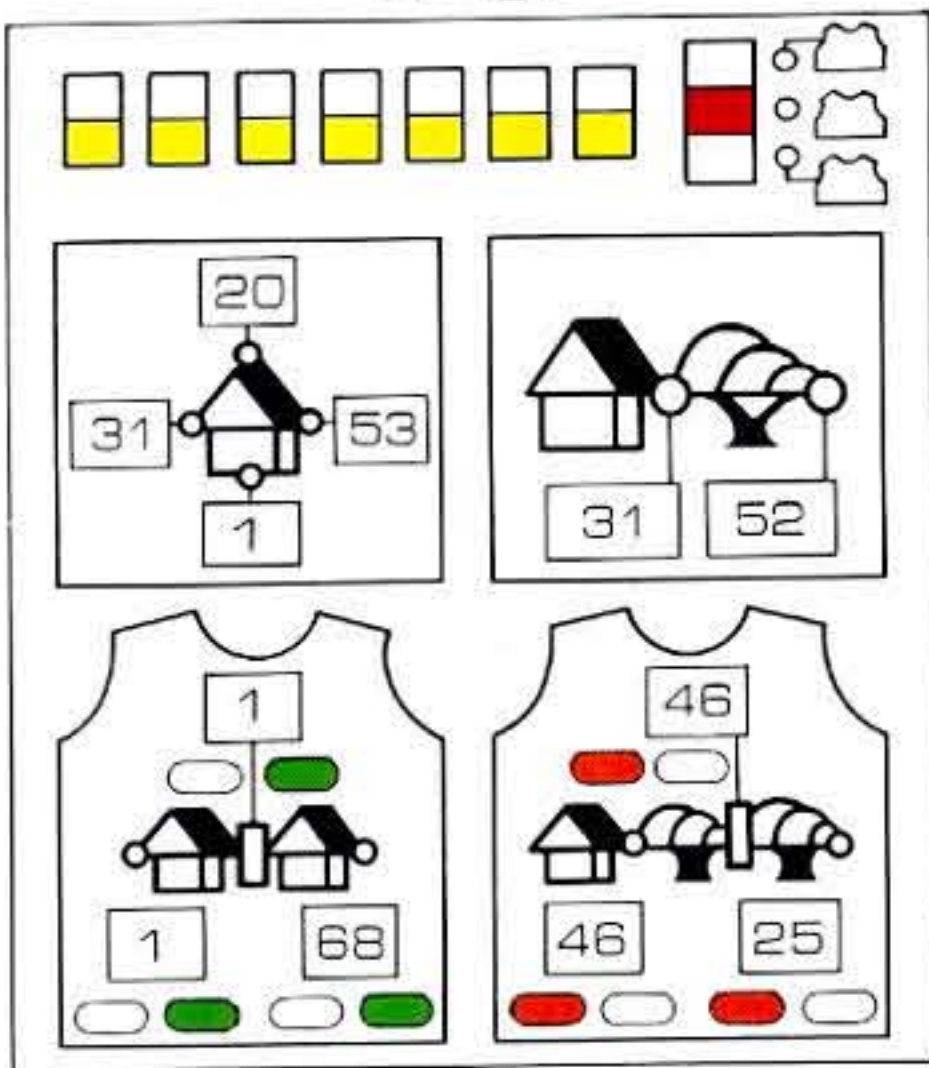


B ⑤

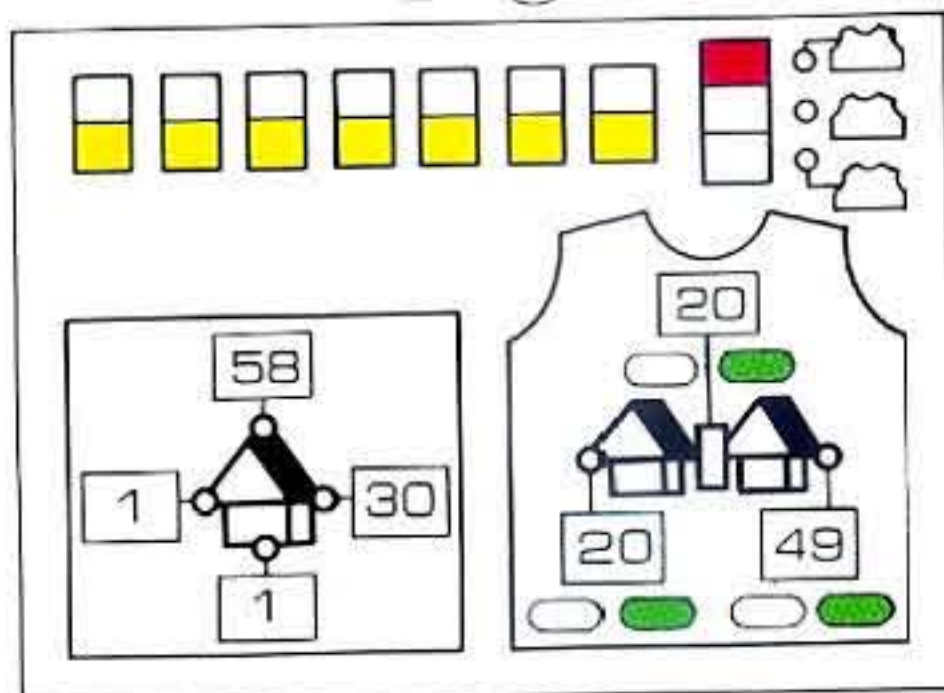 


B ④

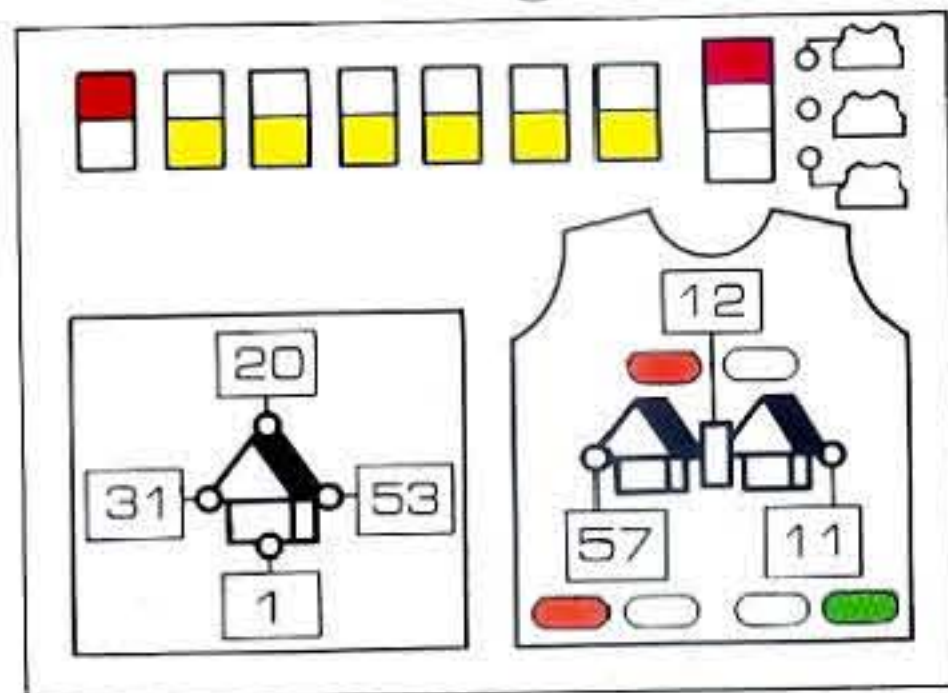 


B ①



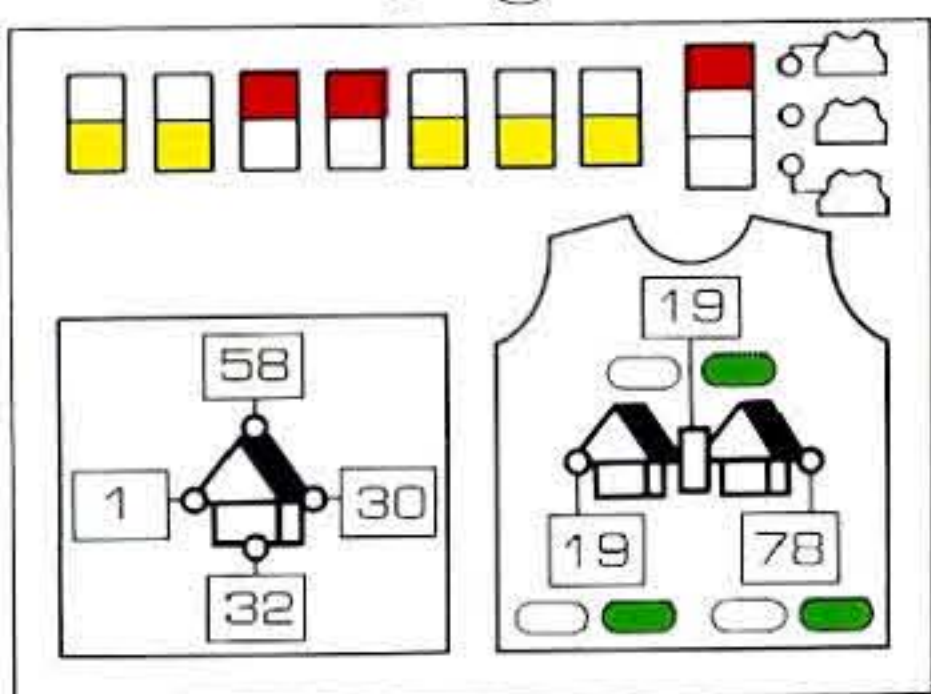 


B ③

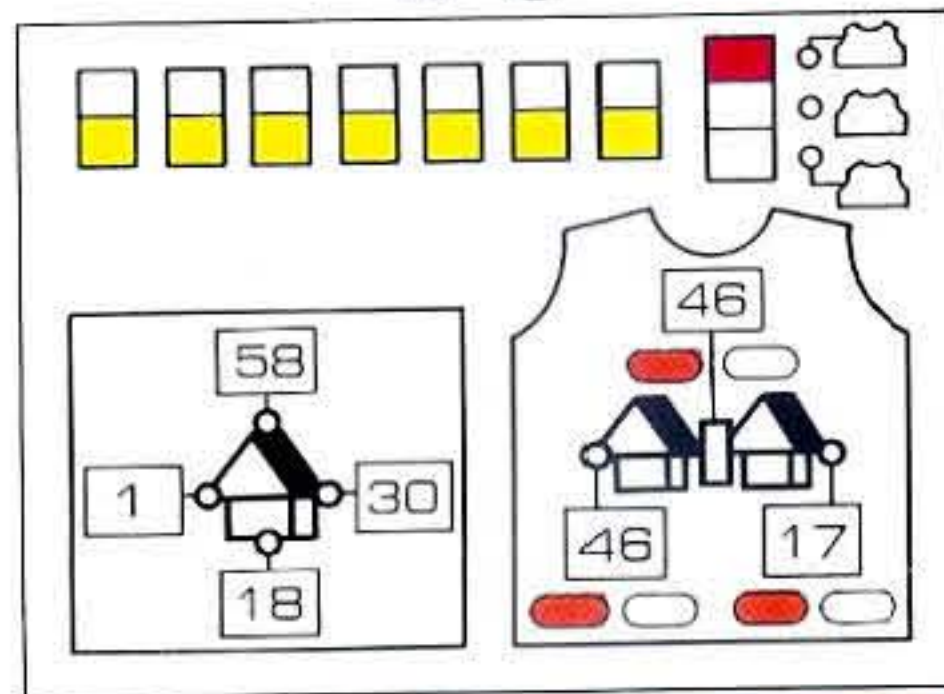 

C

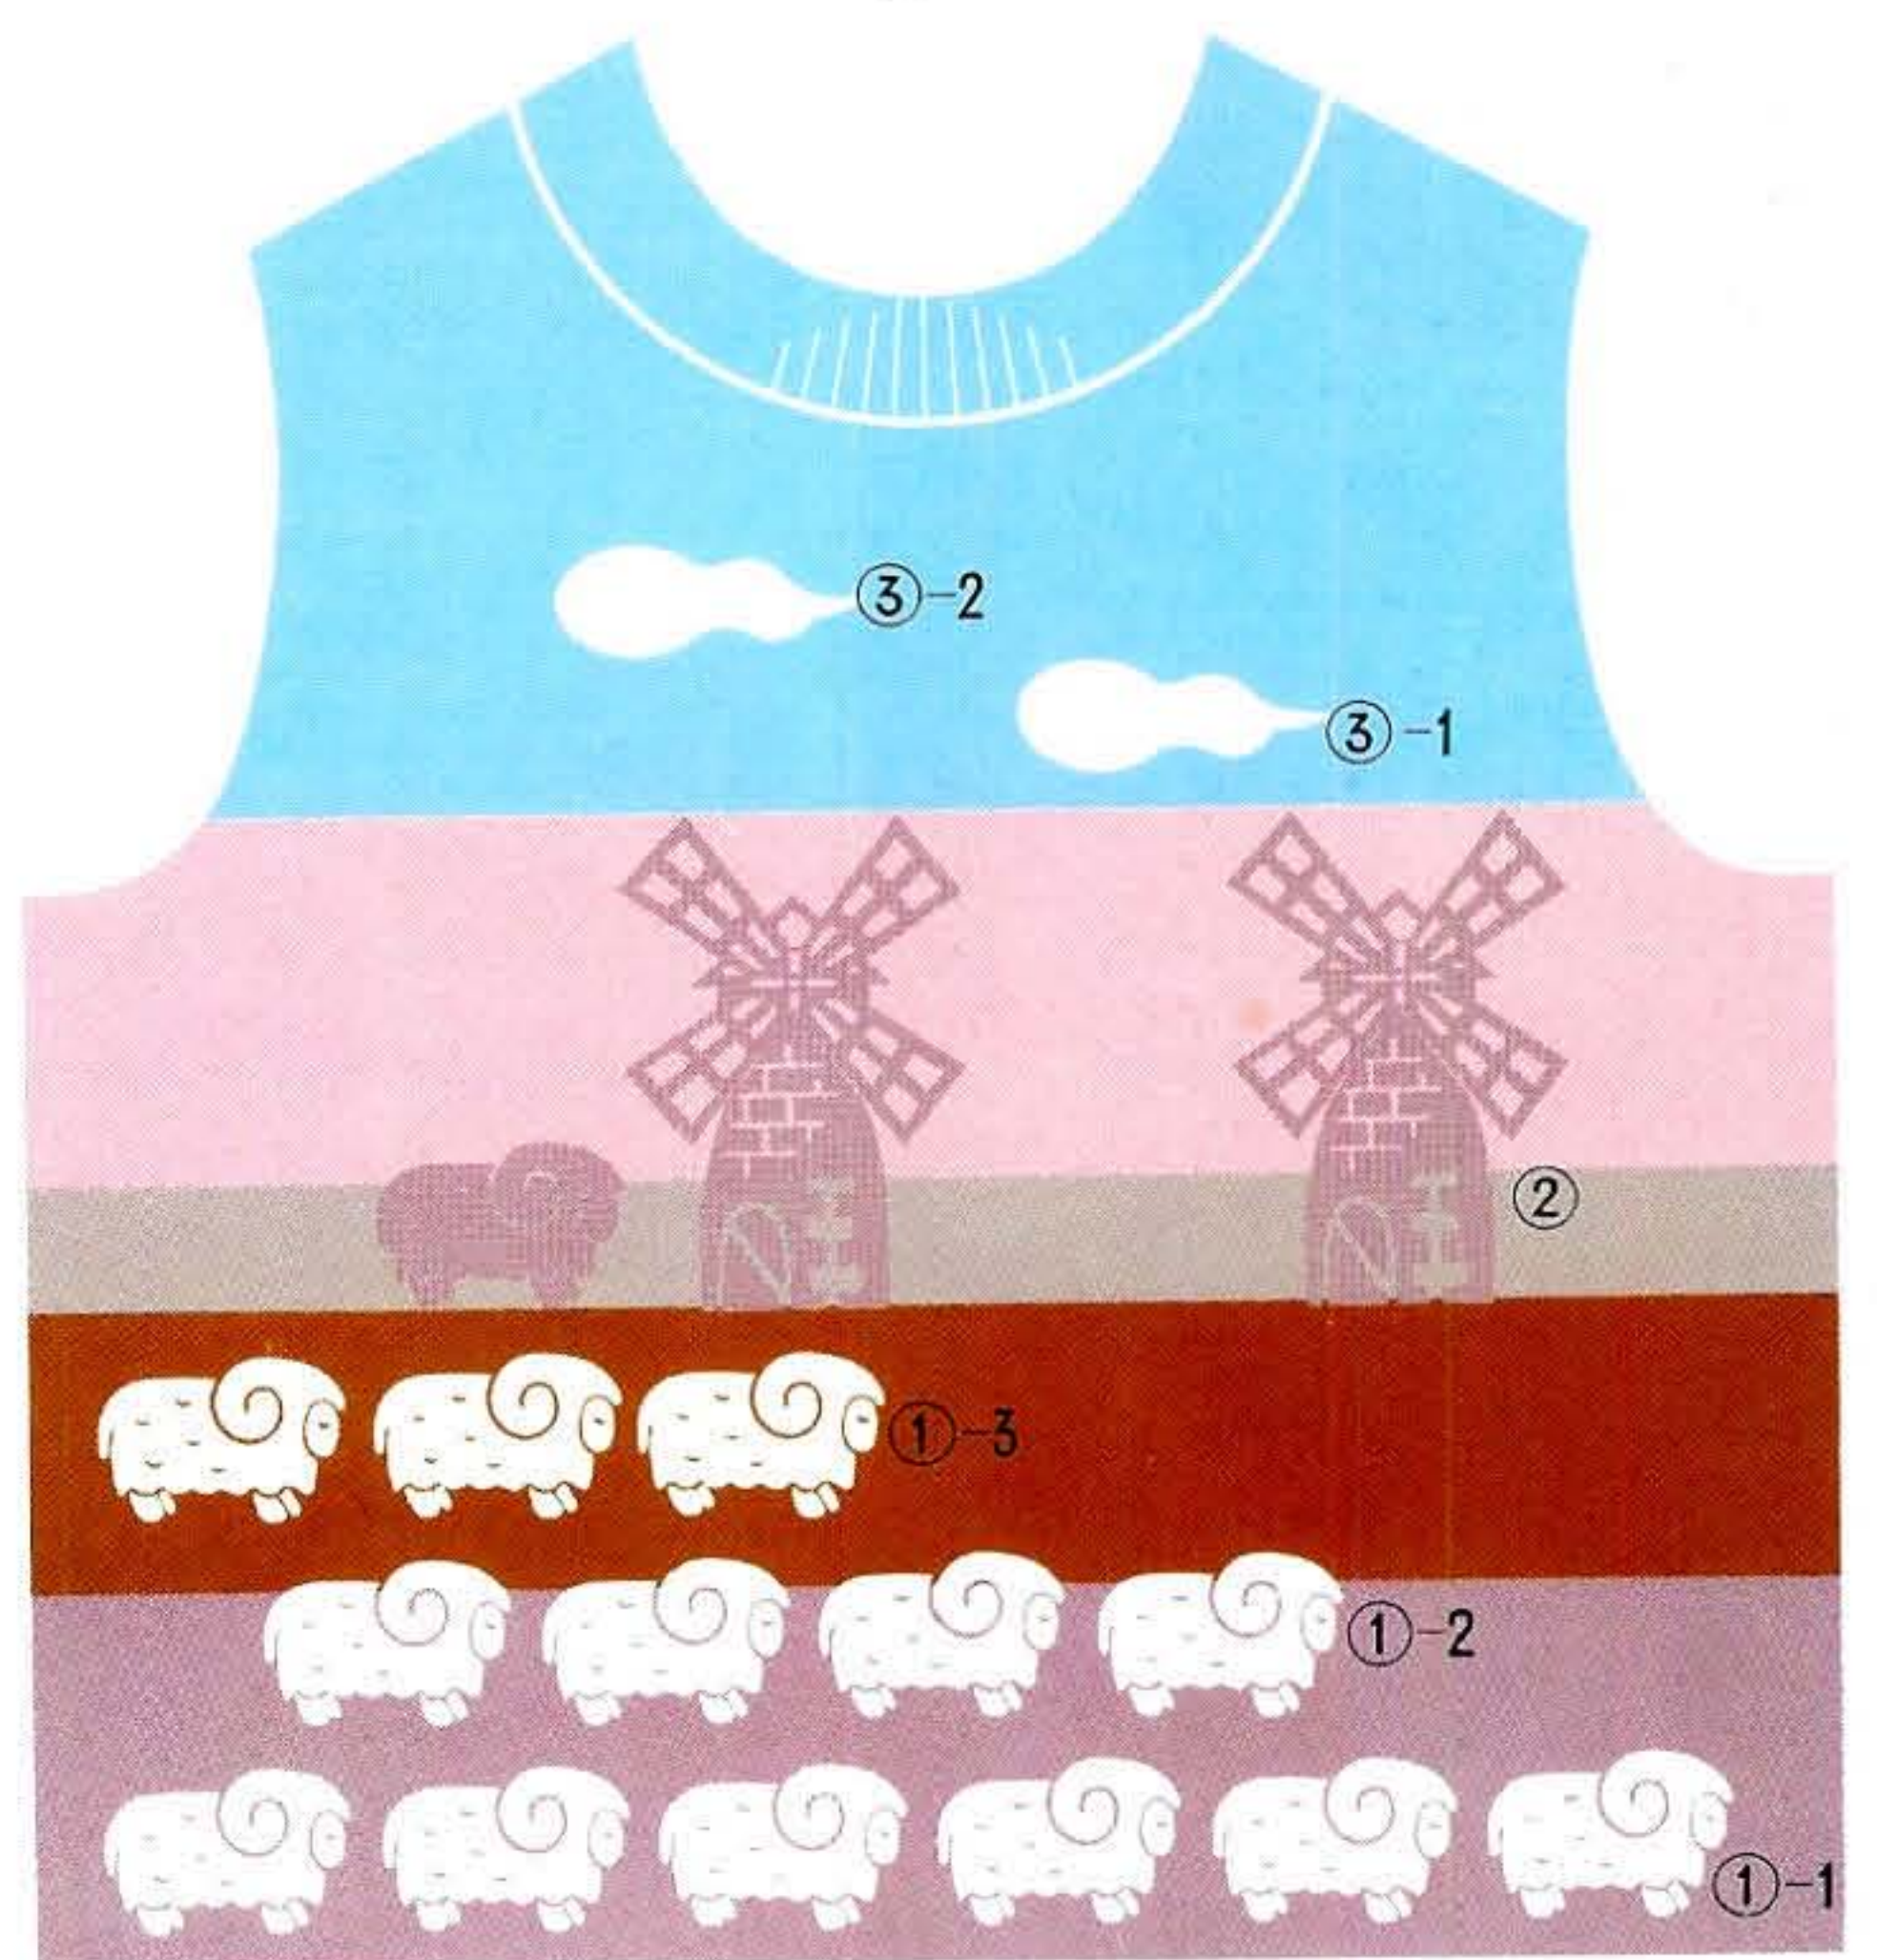 

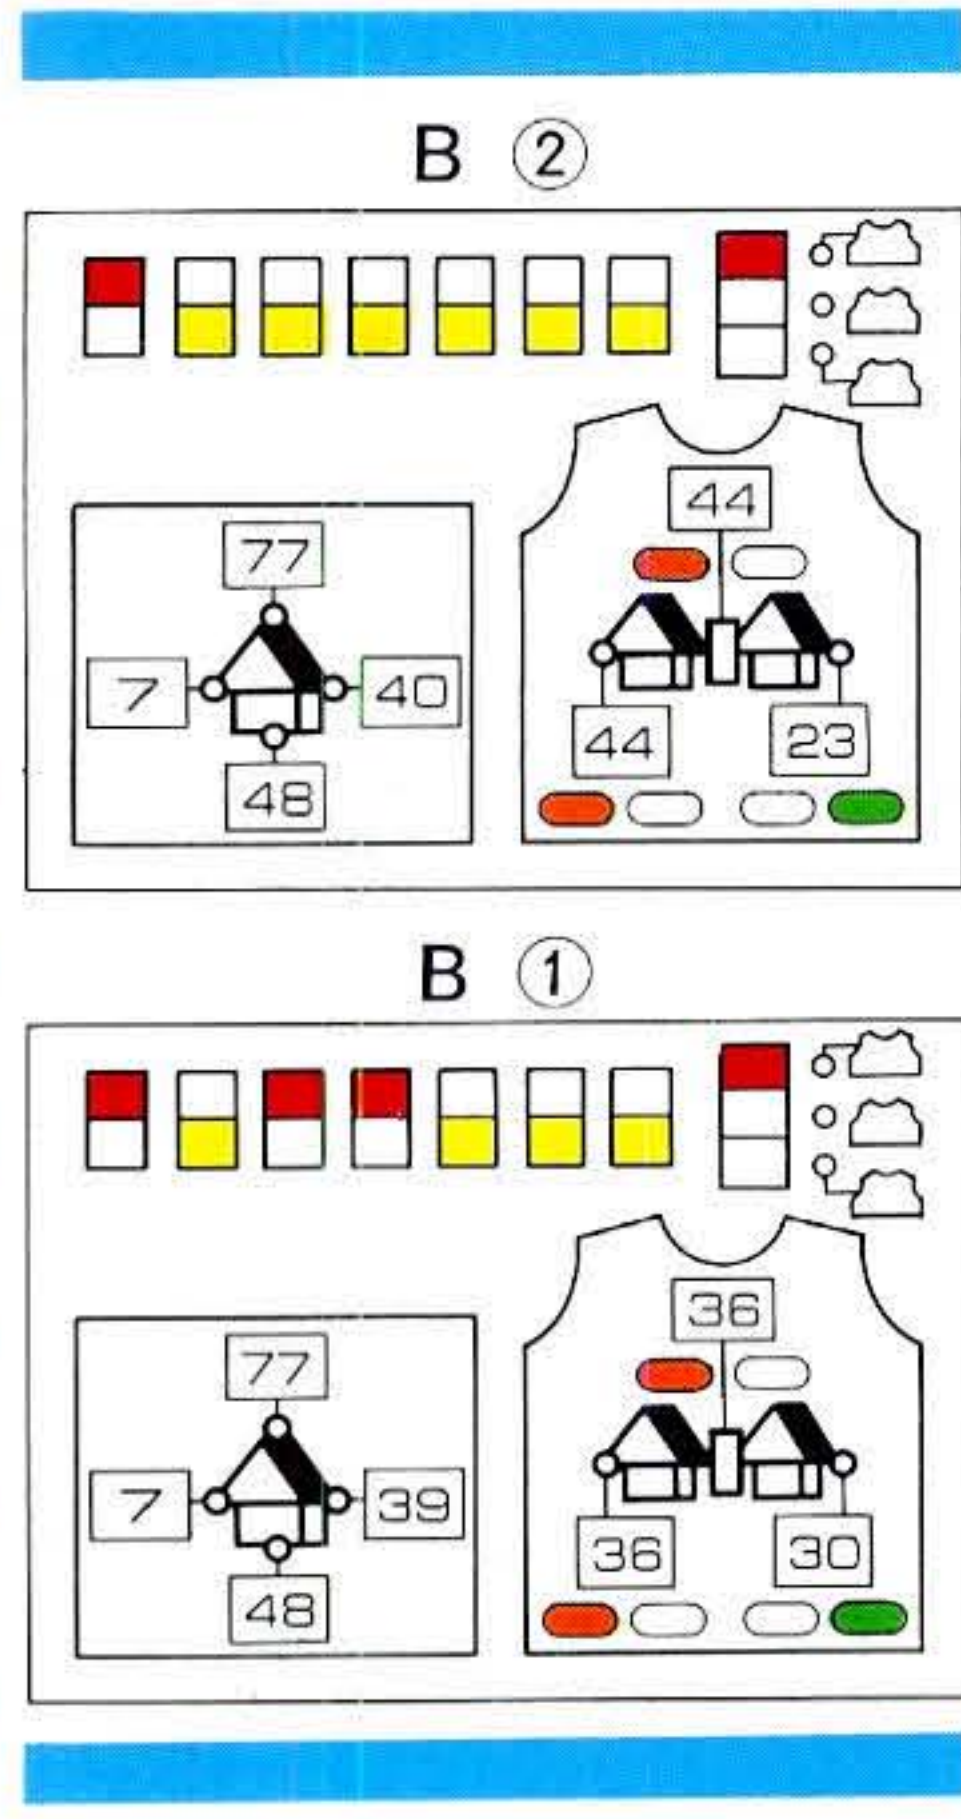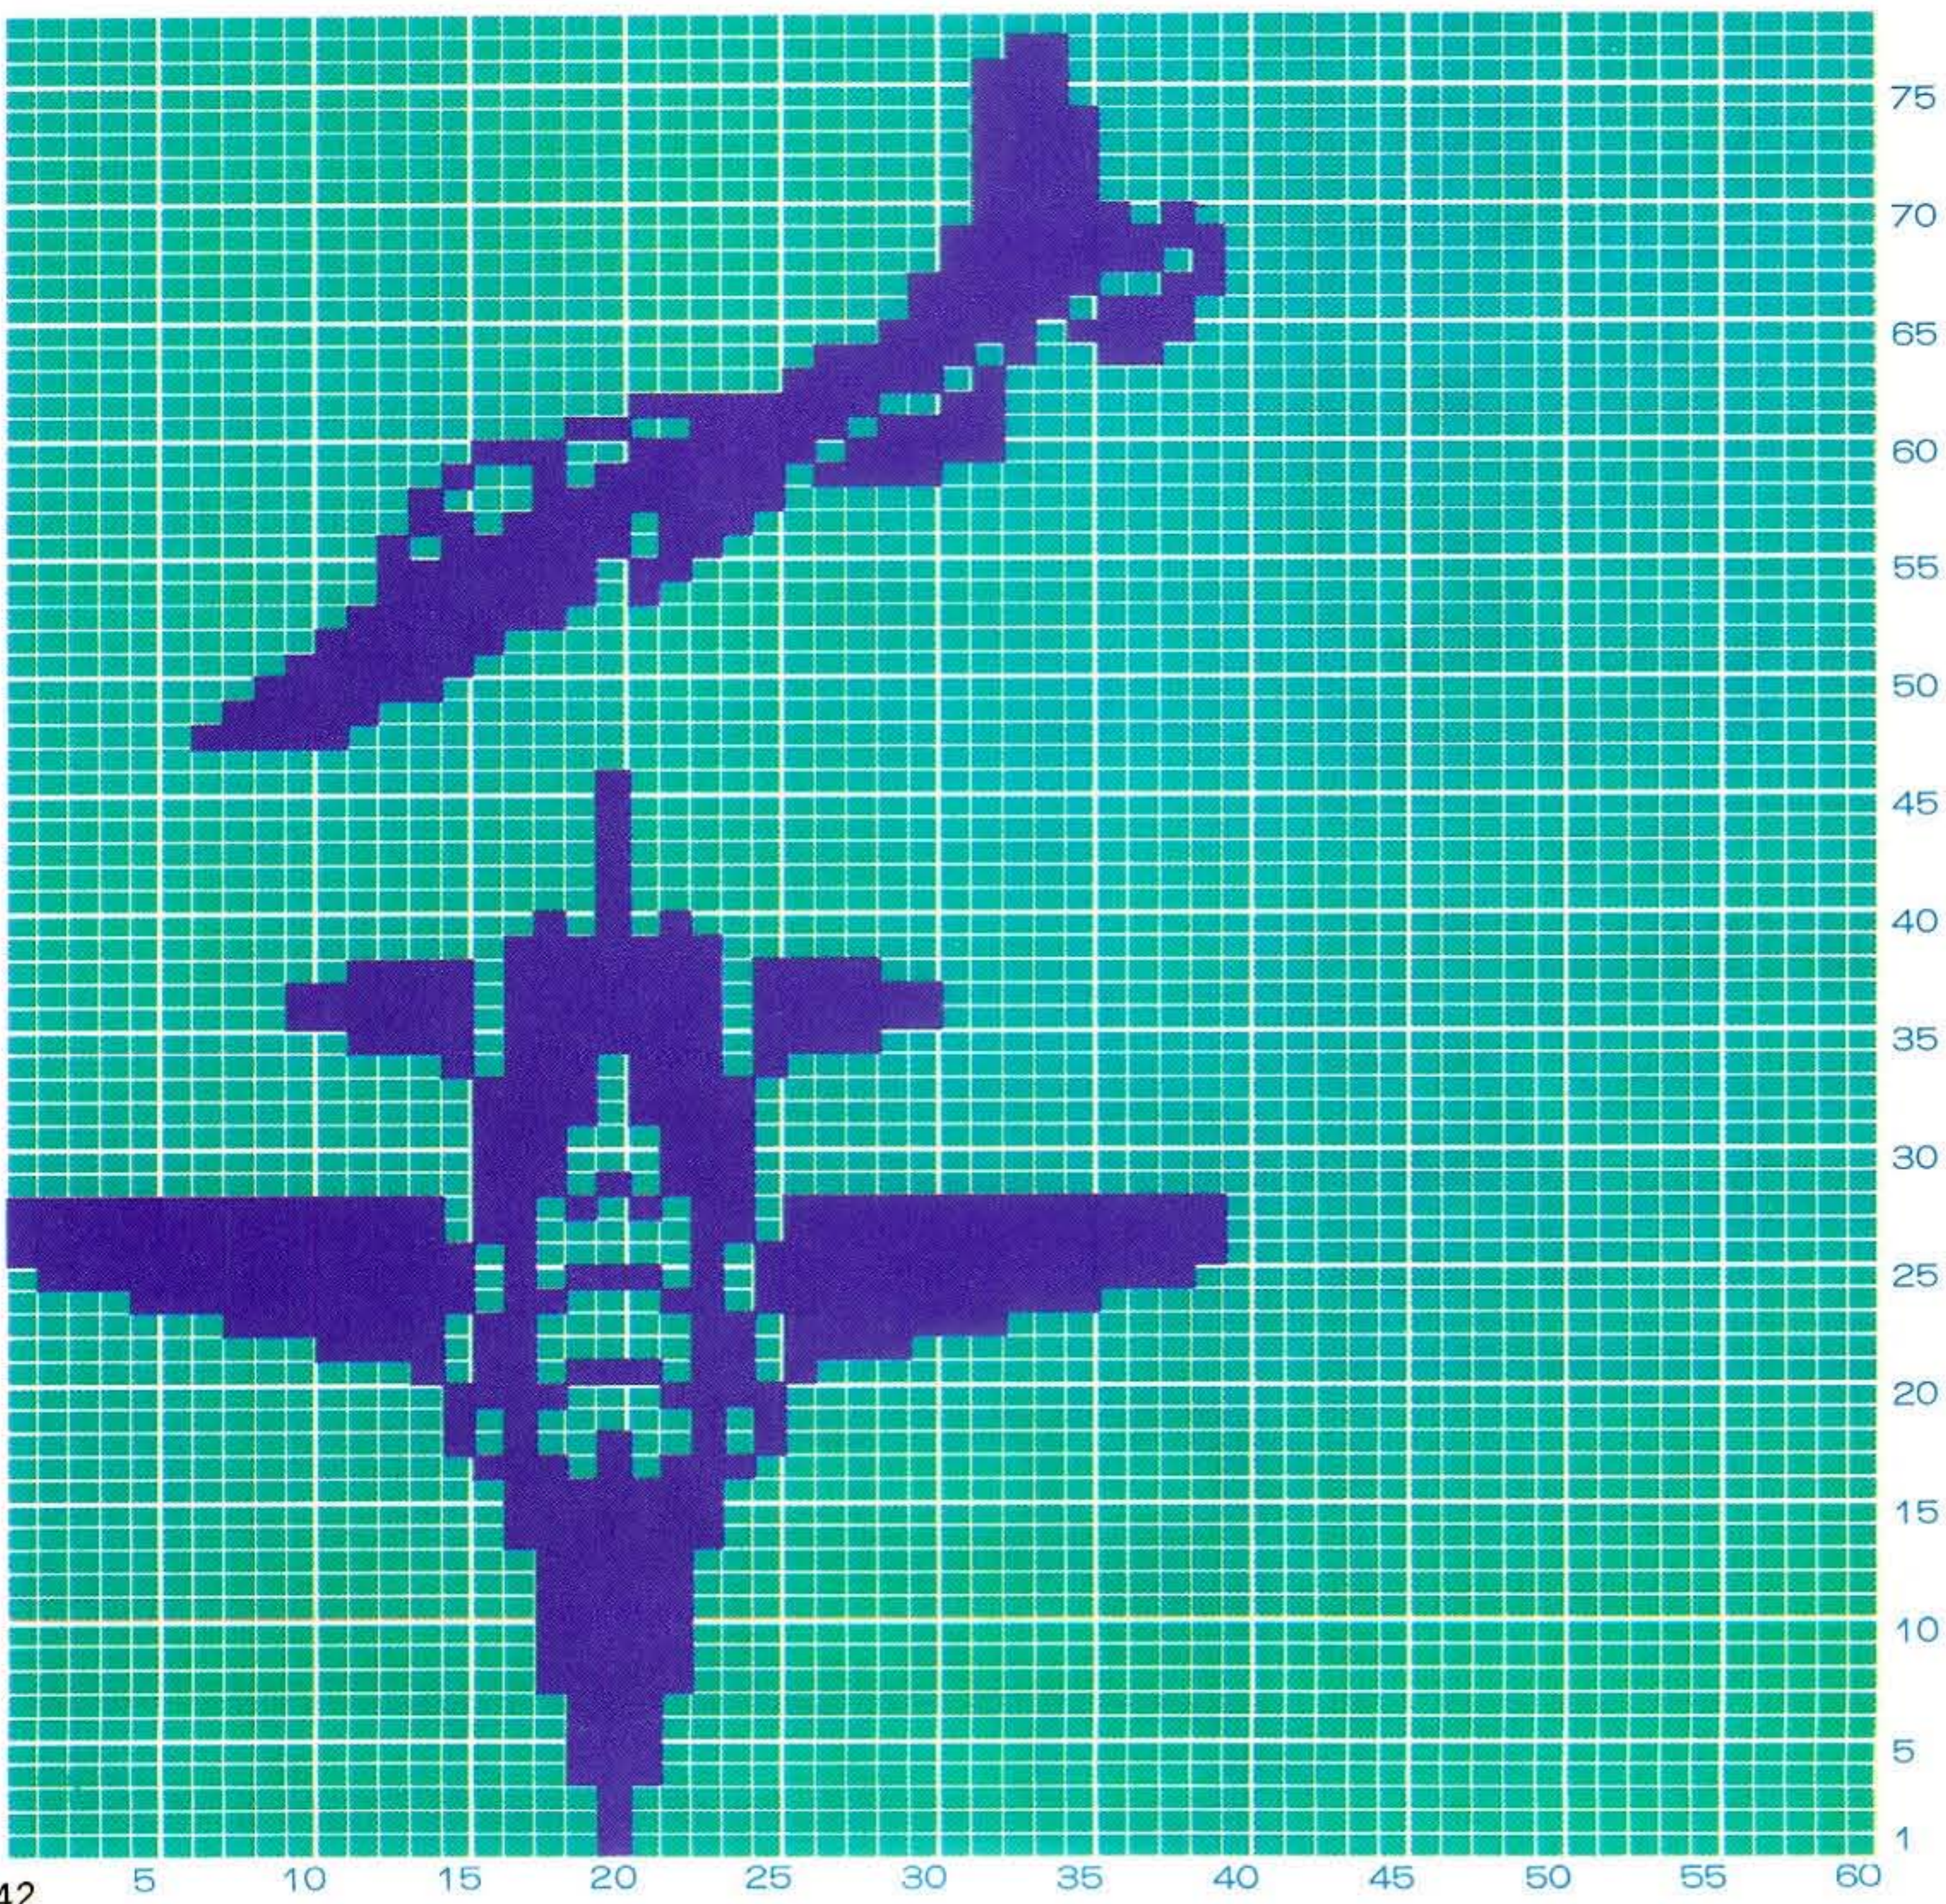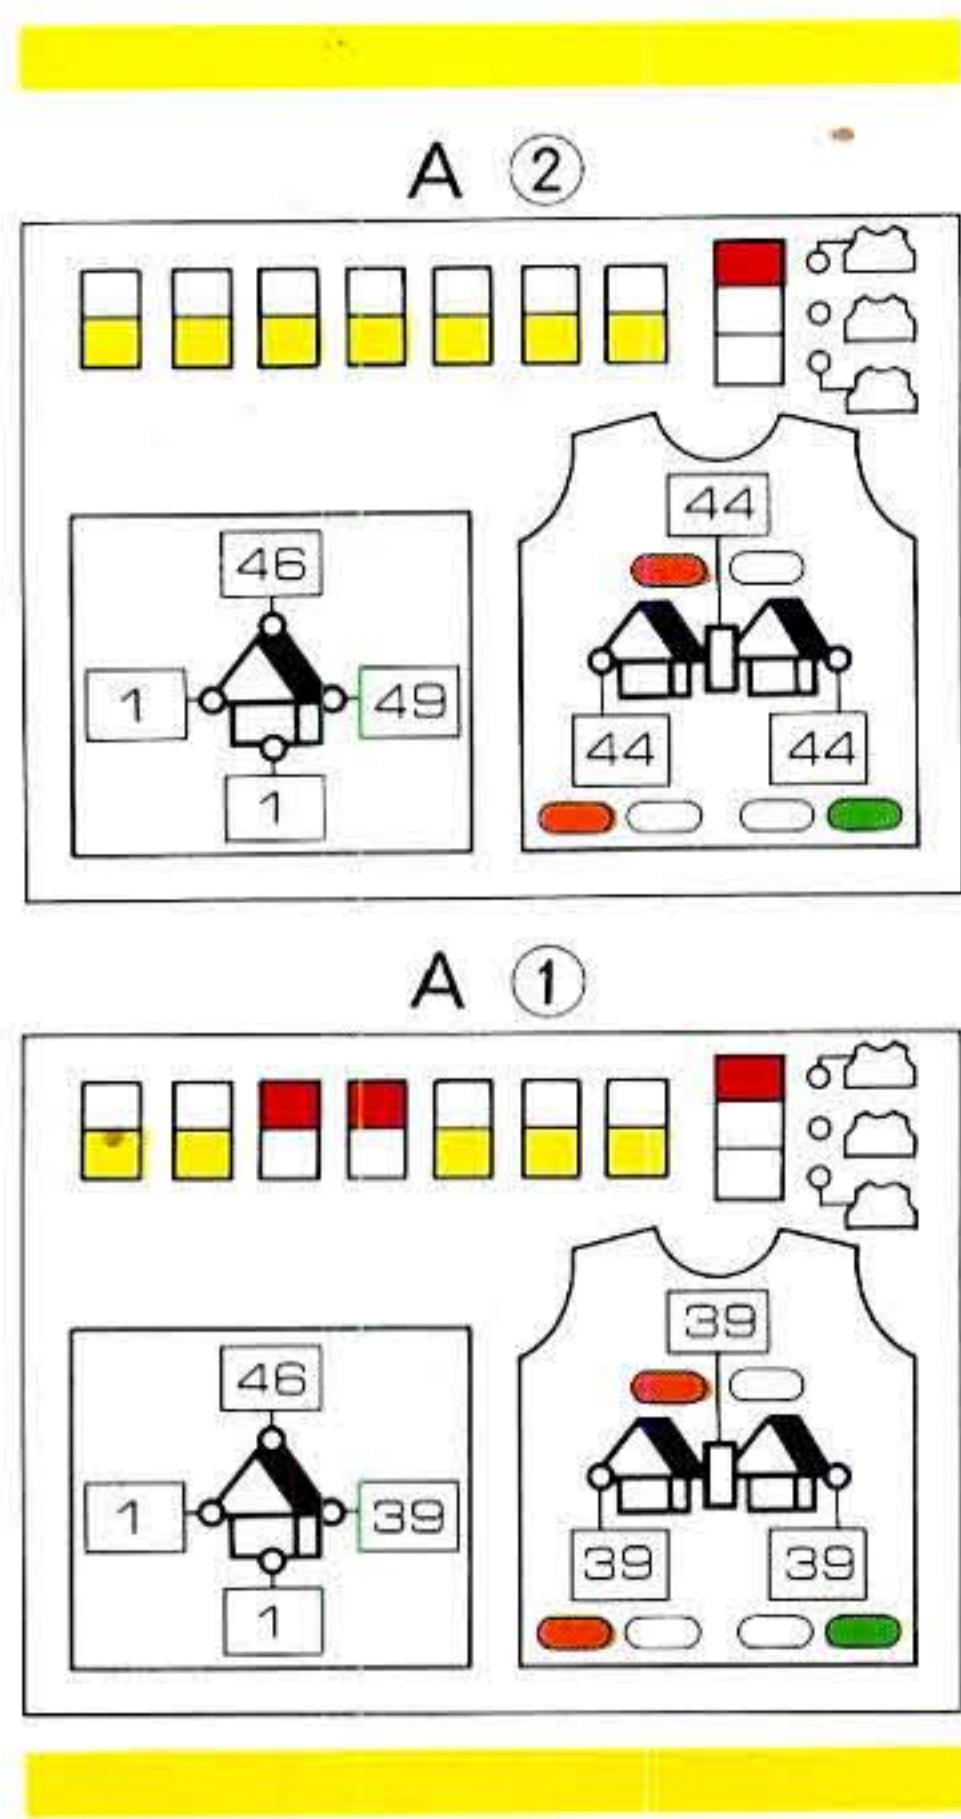   


A



B



 
C ②

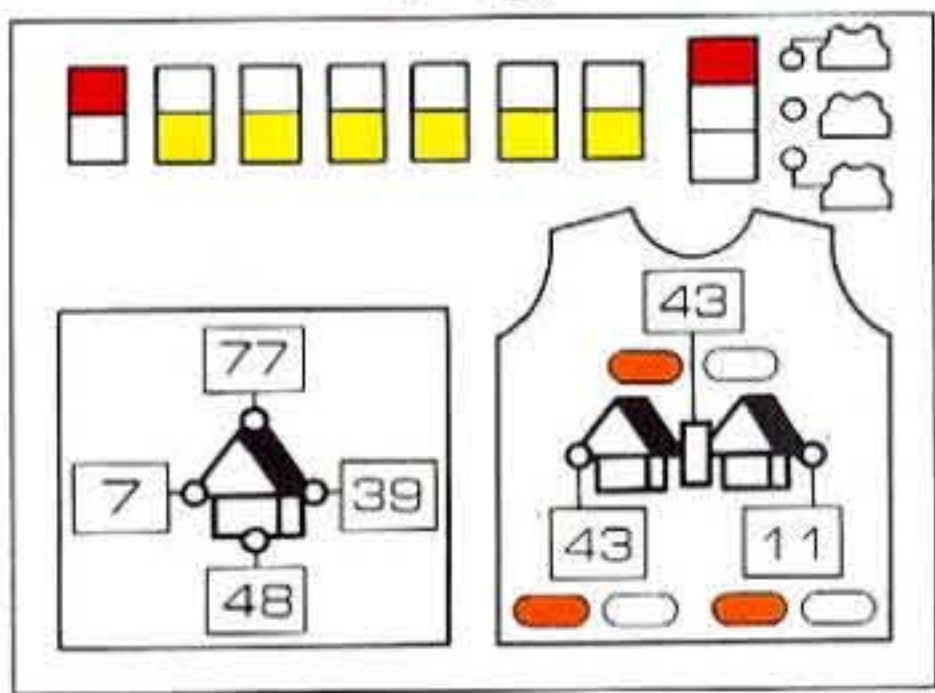


C ①-2








 C ①-1

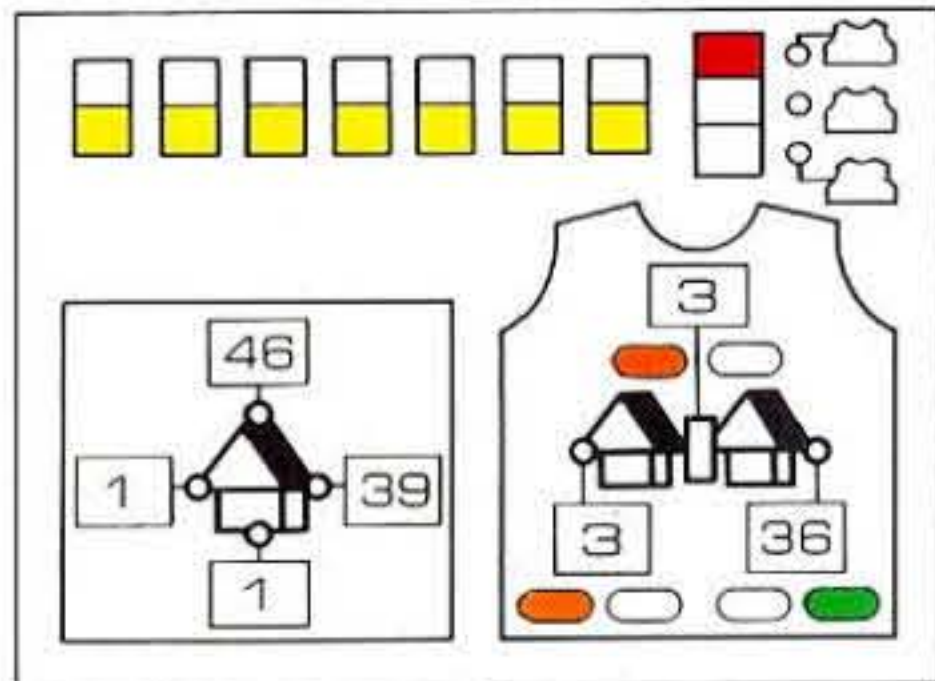


C

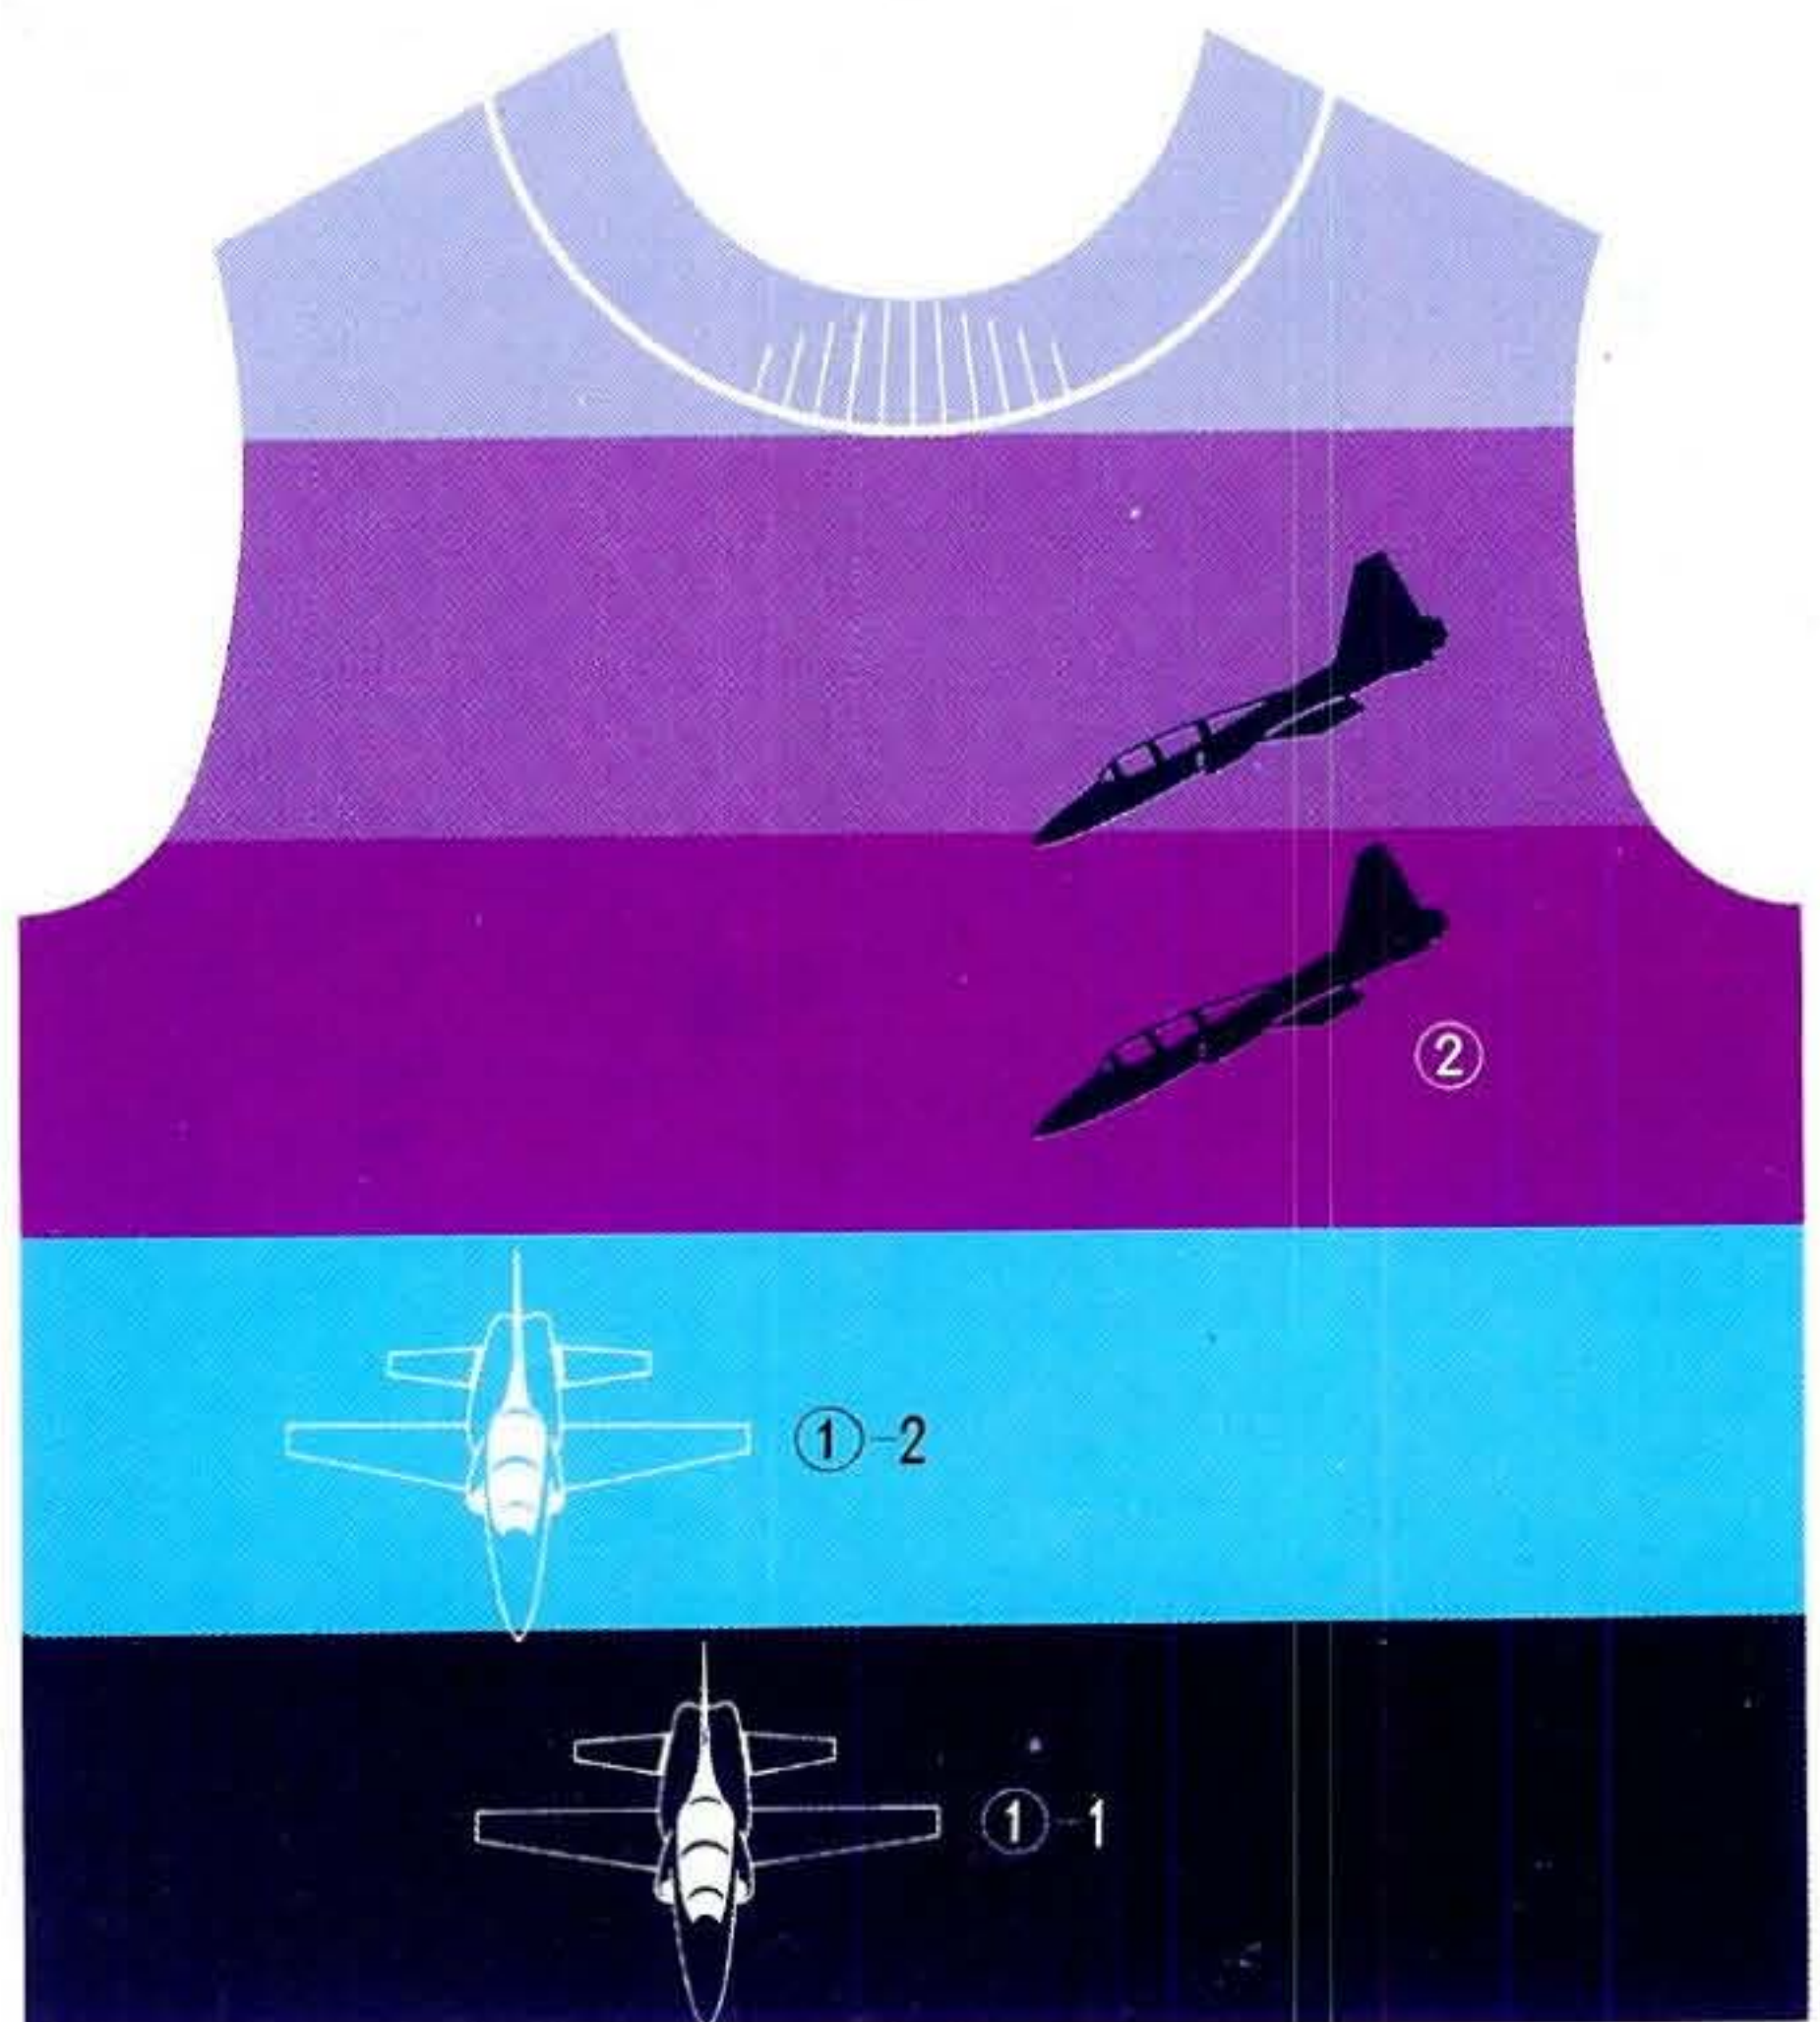 


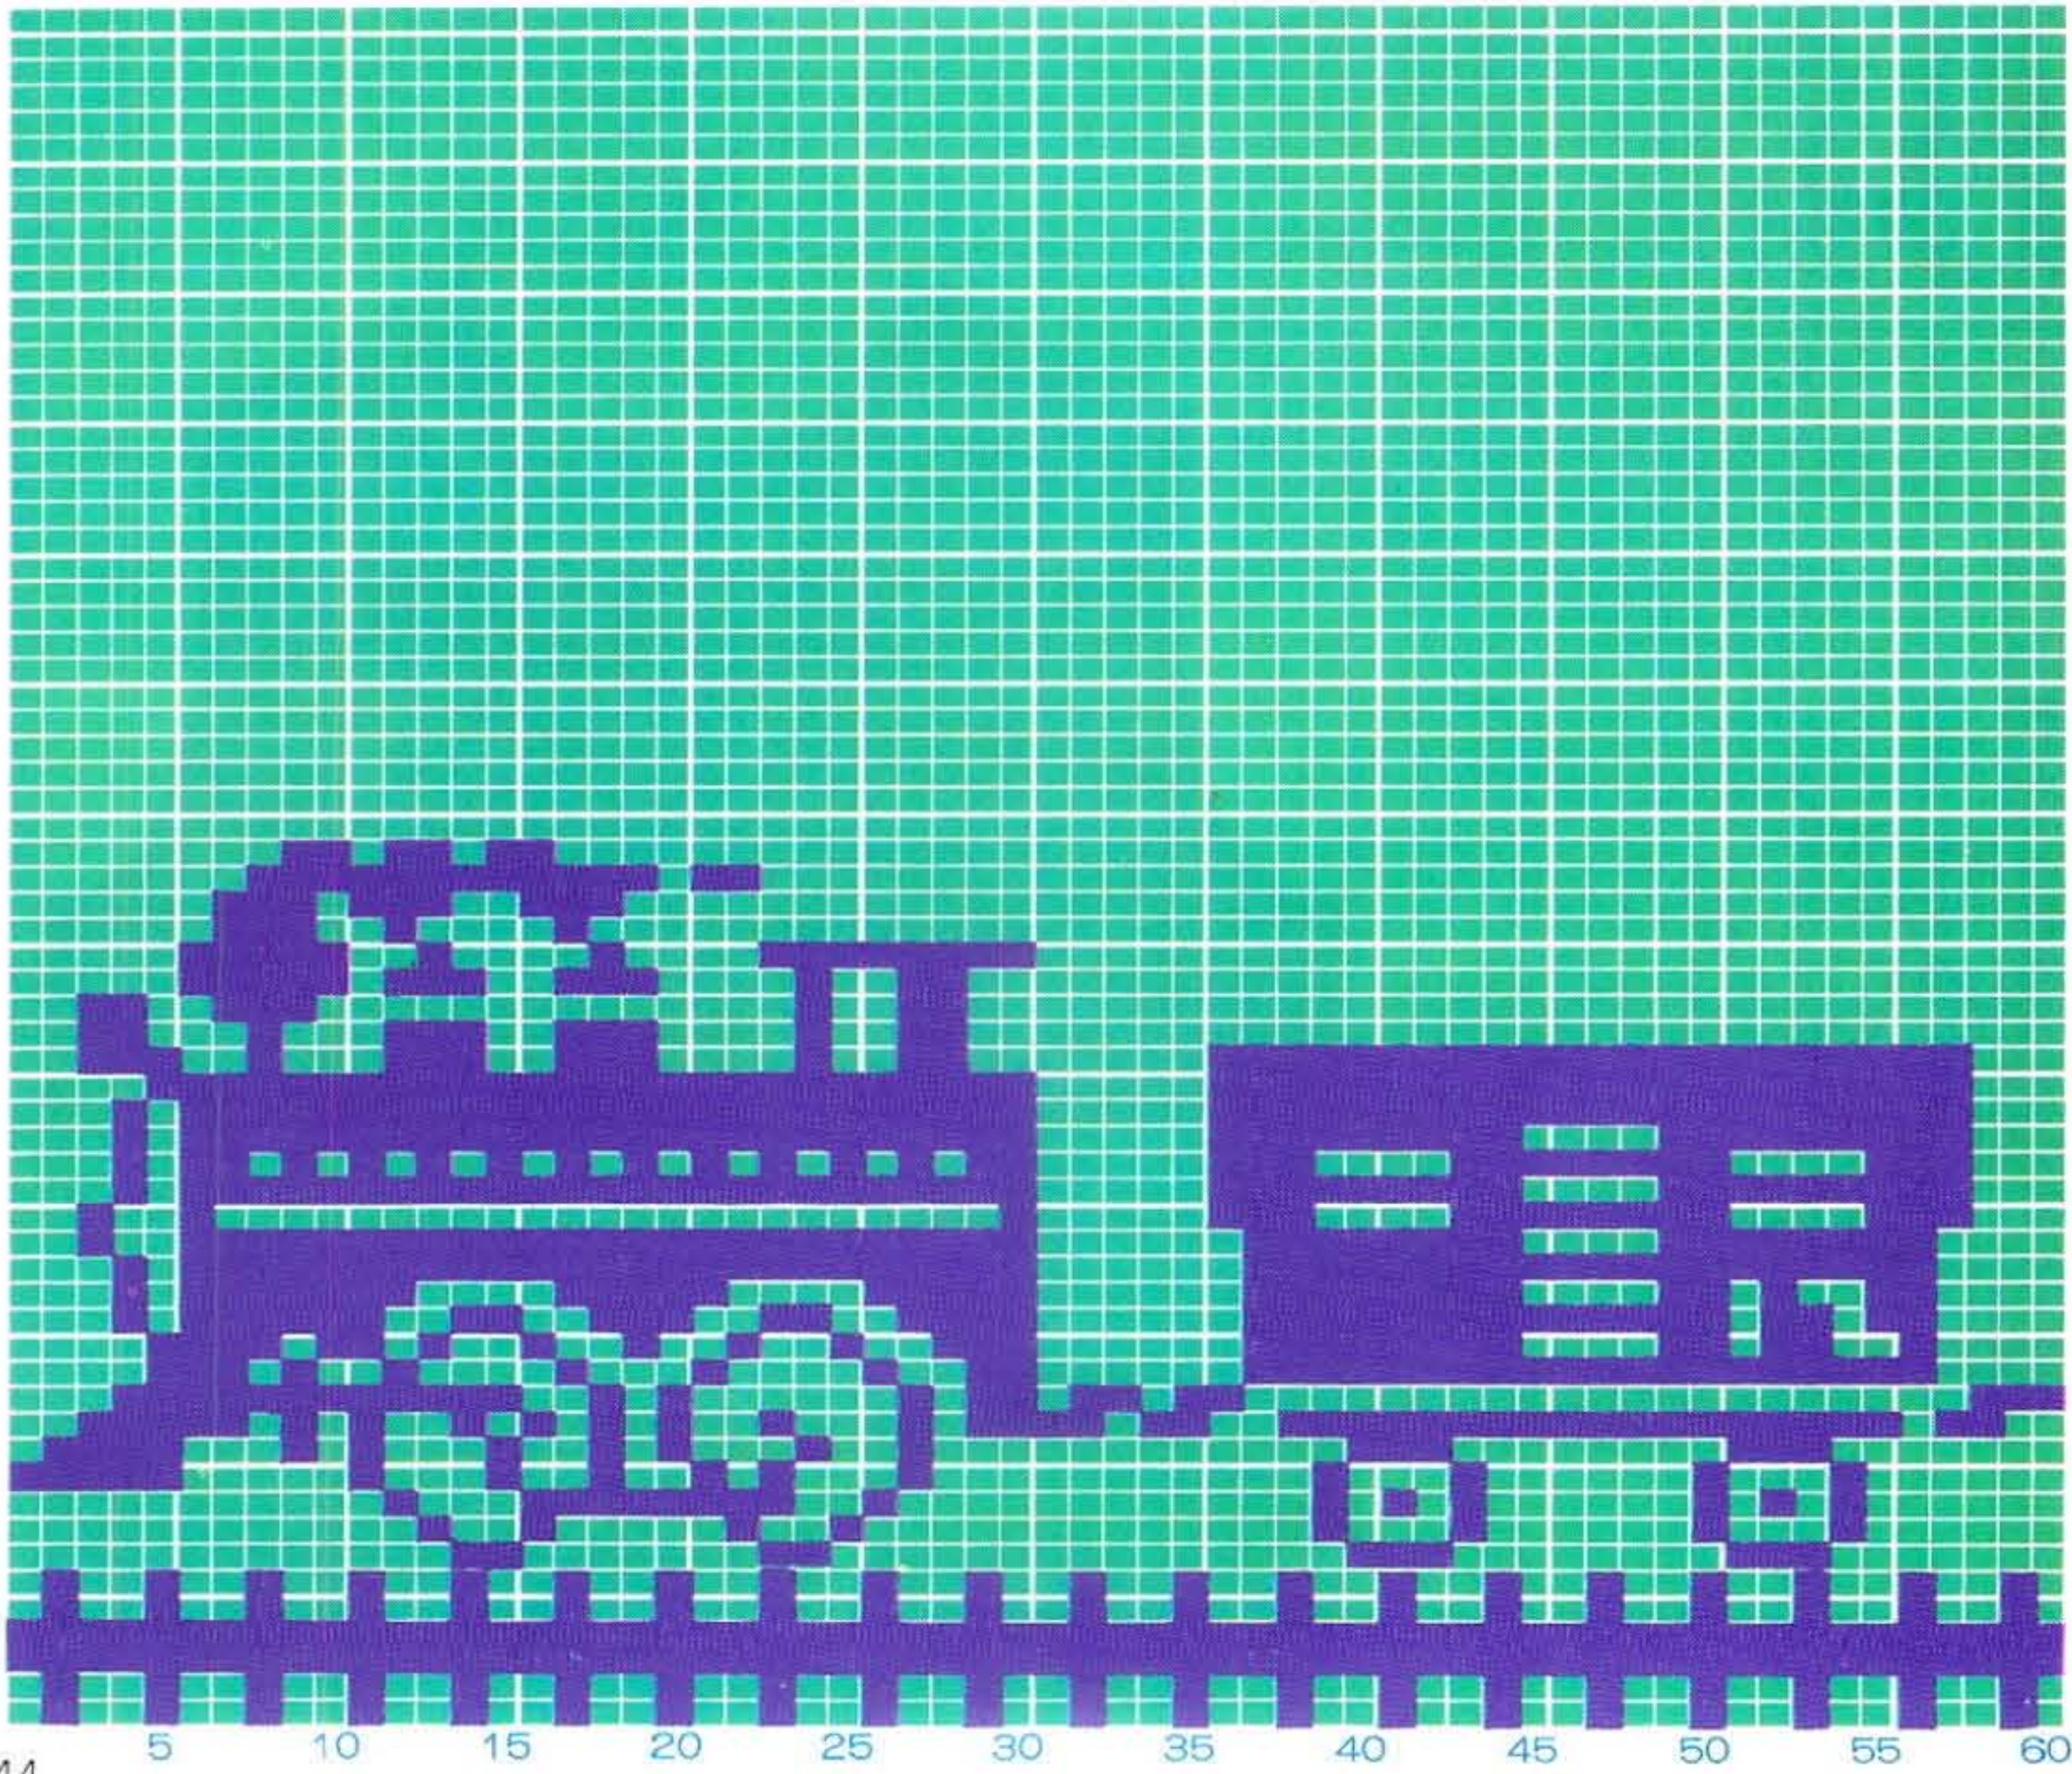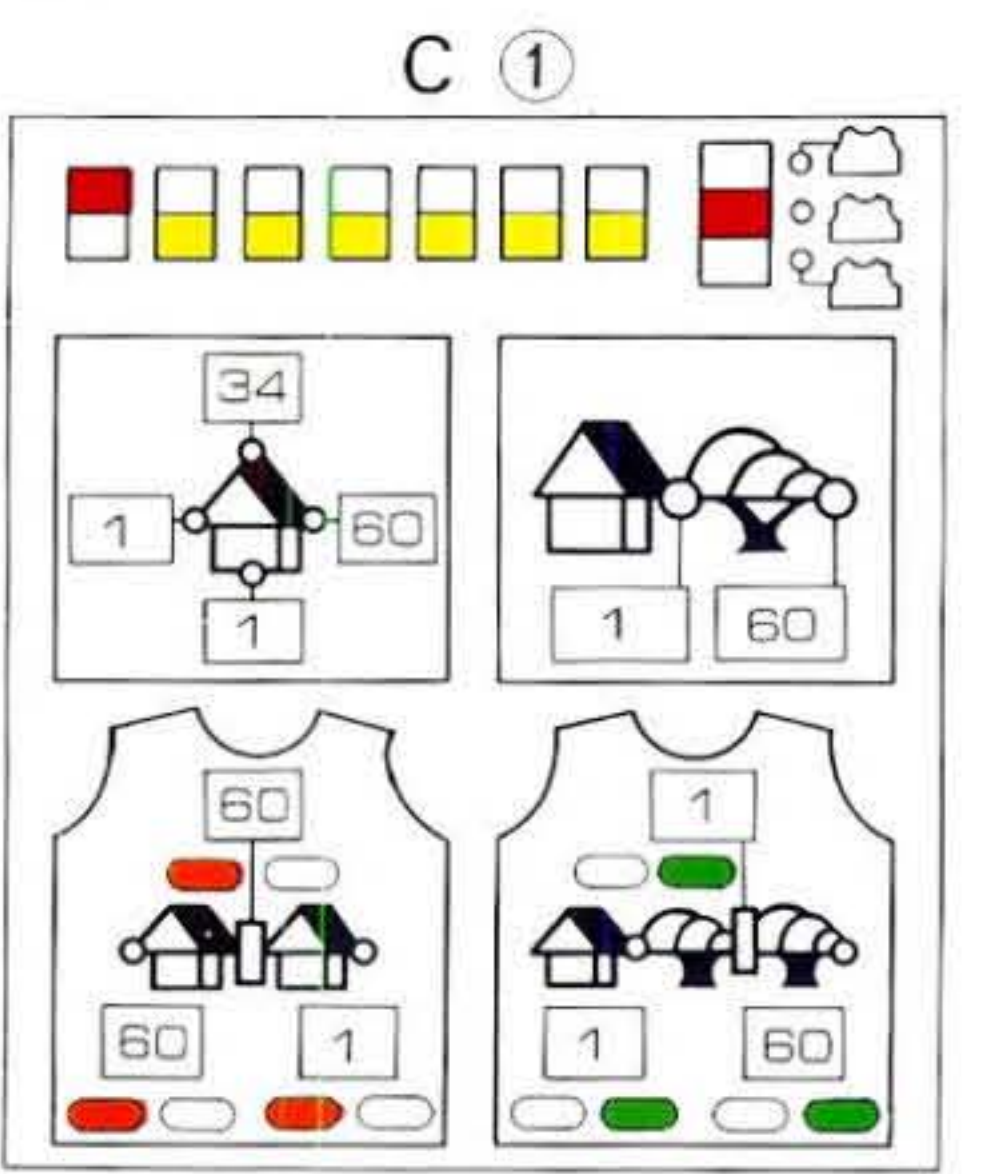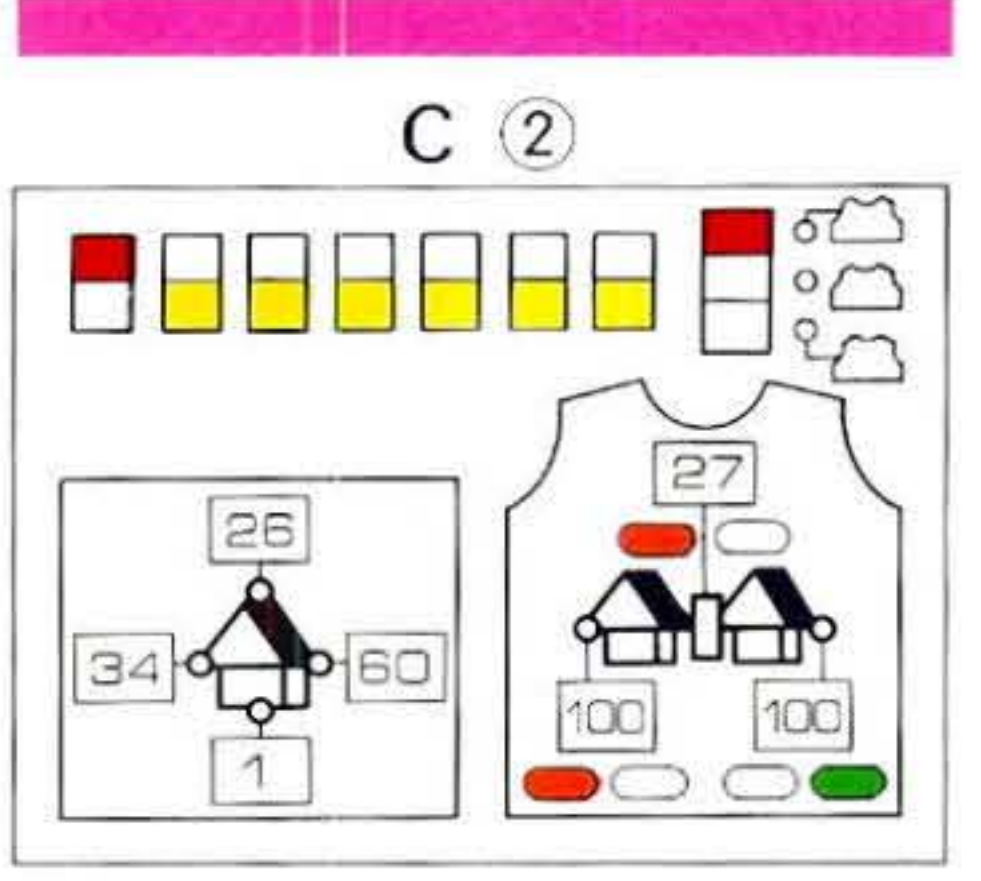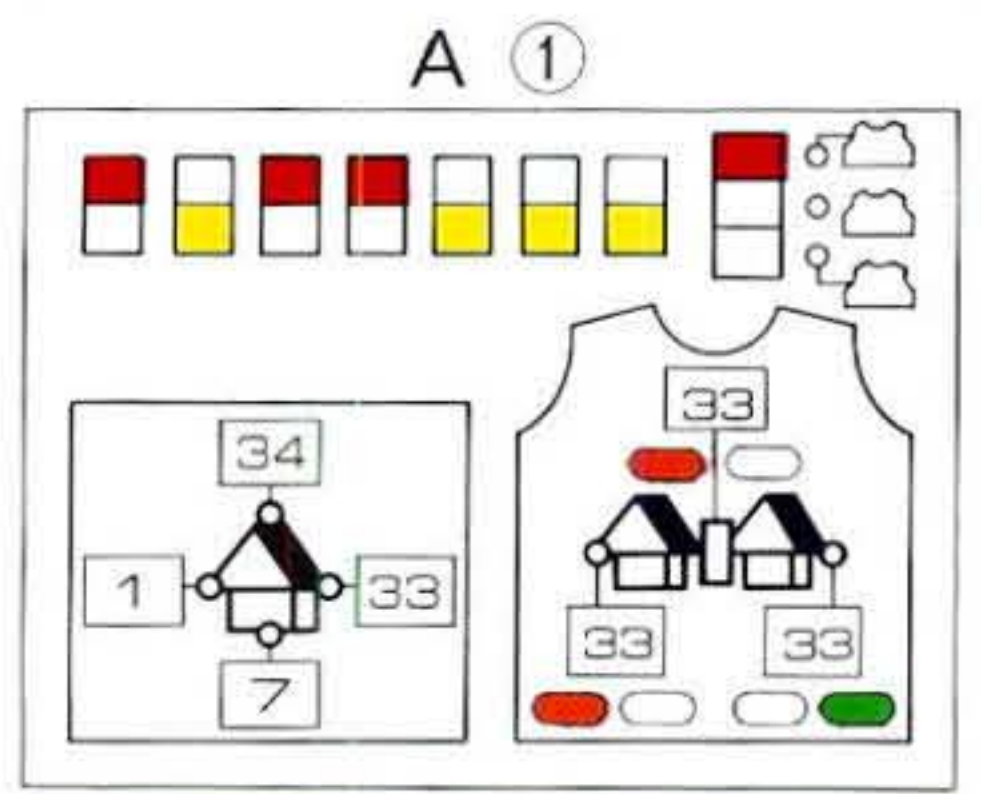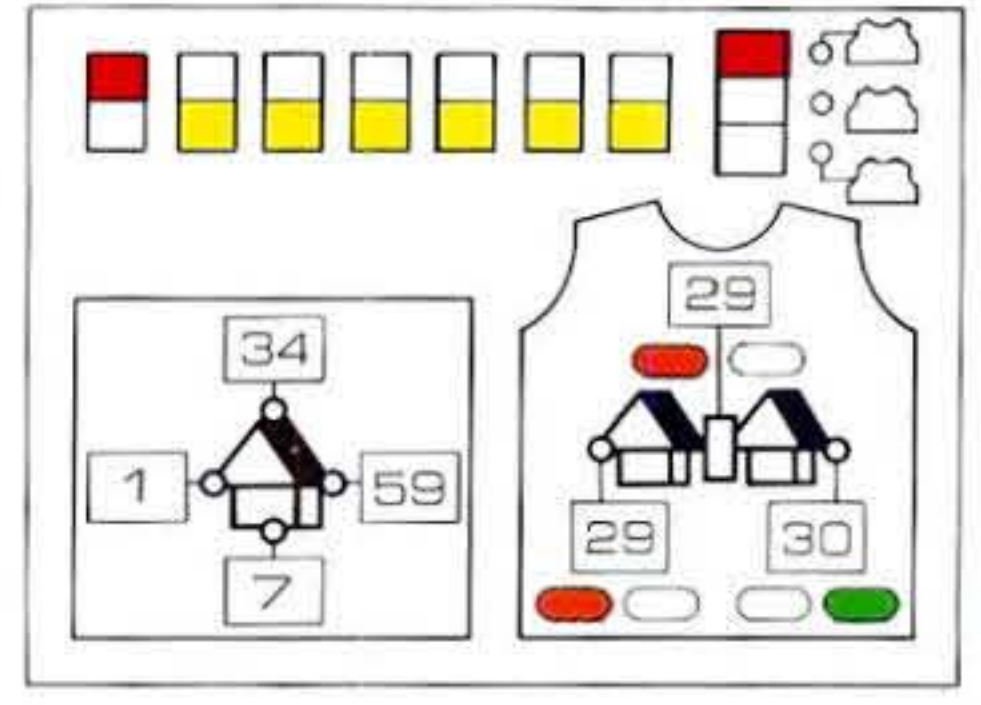     

A


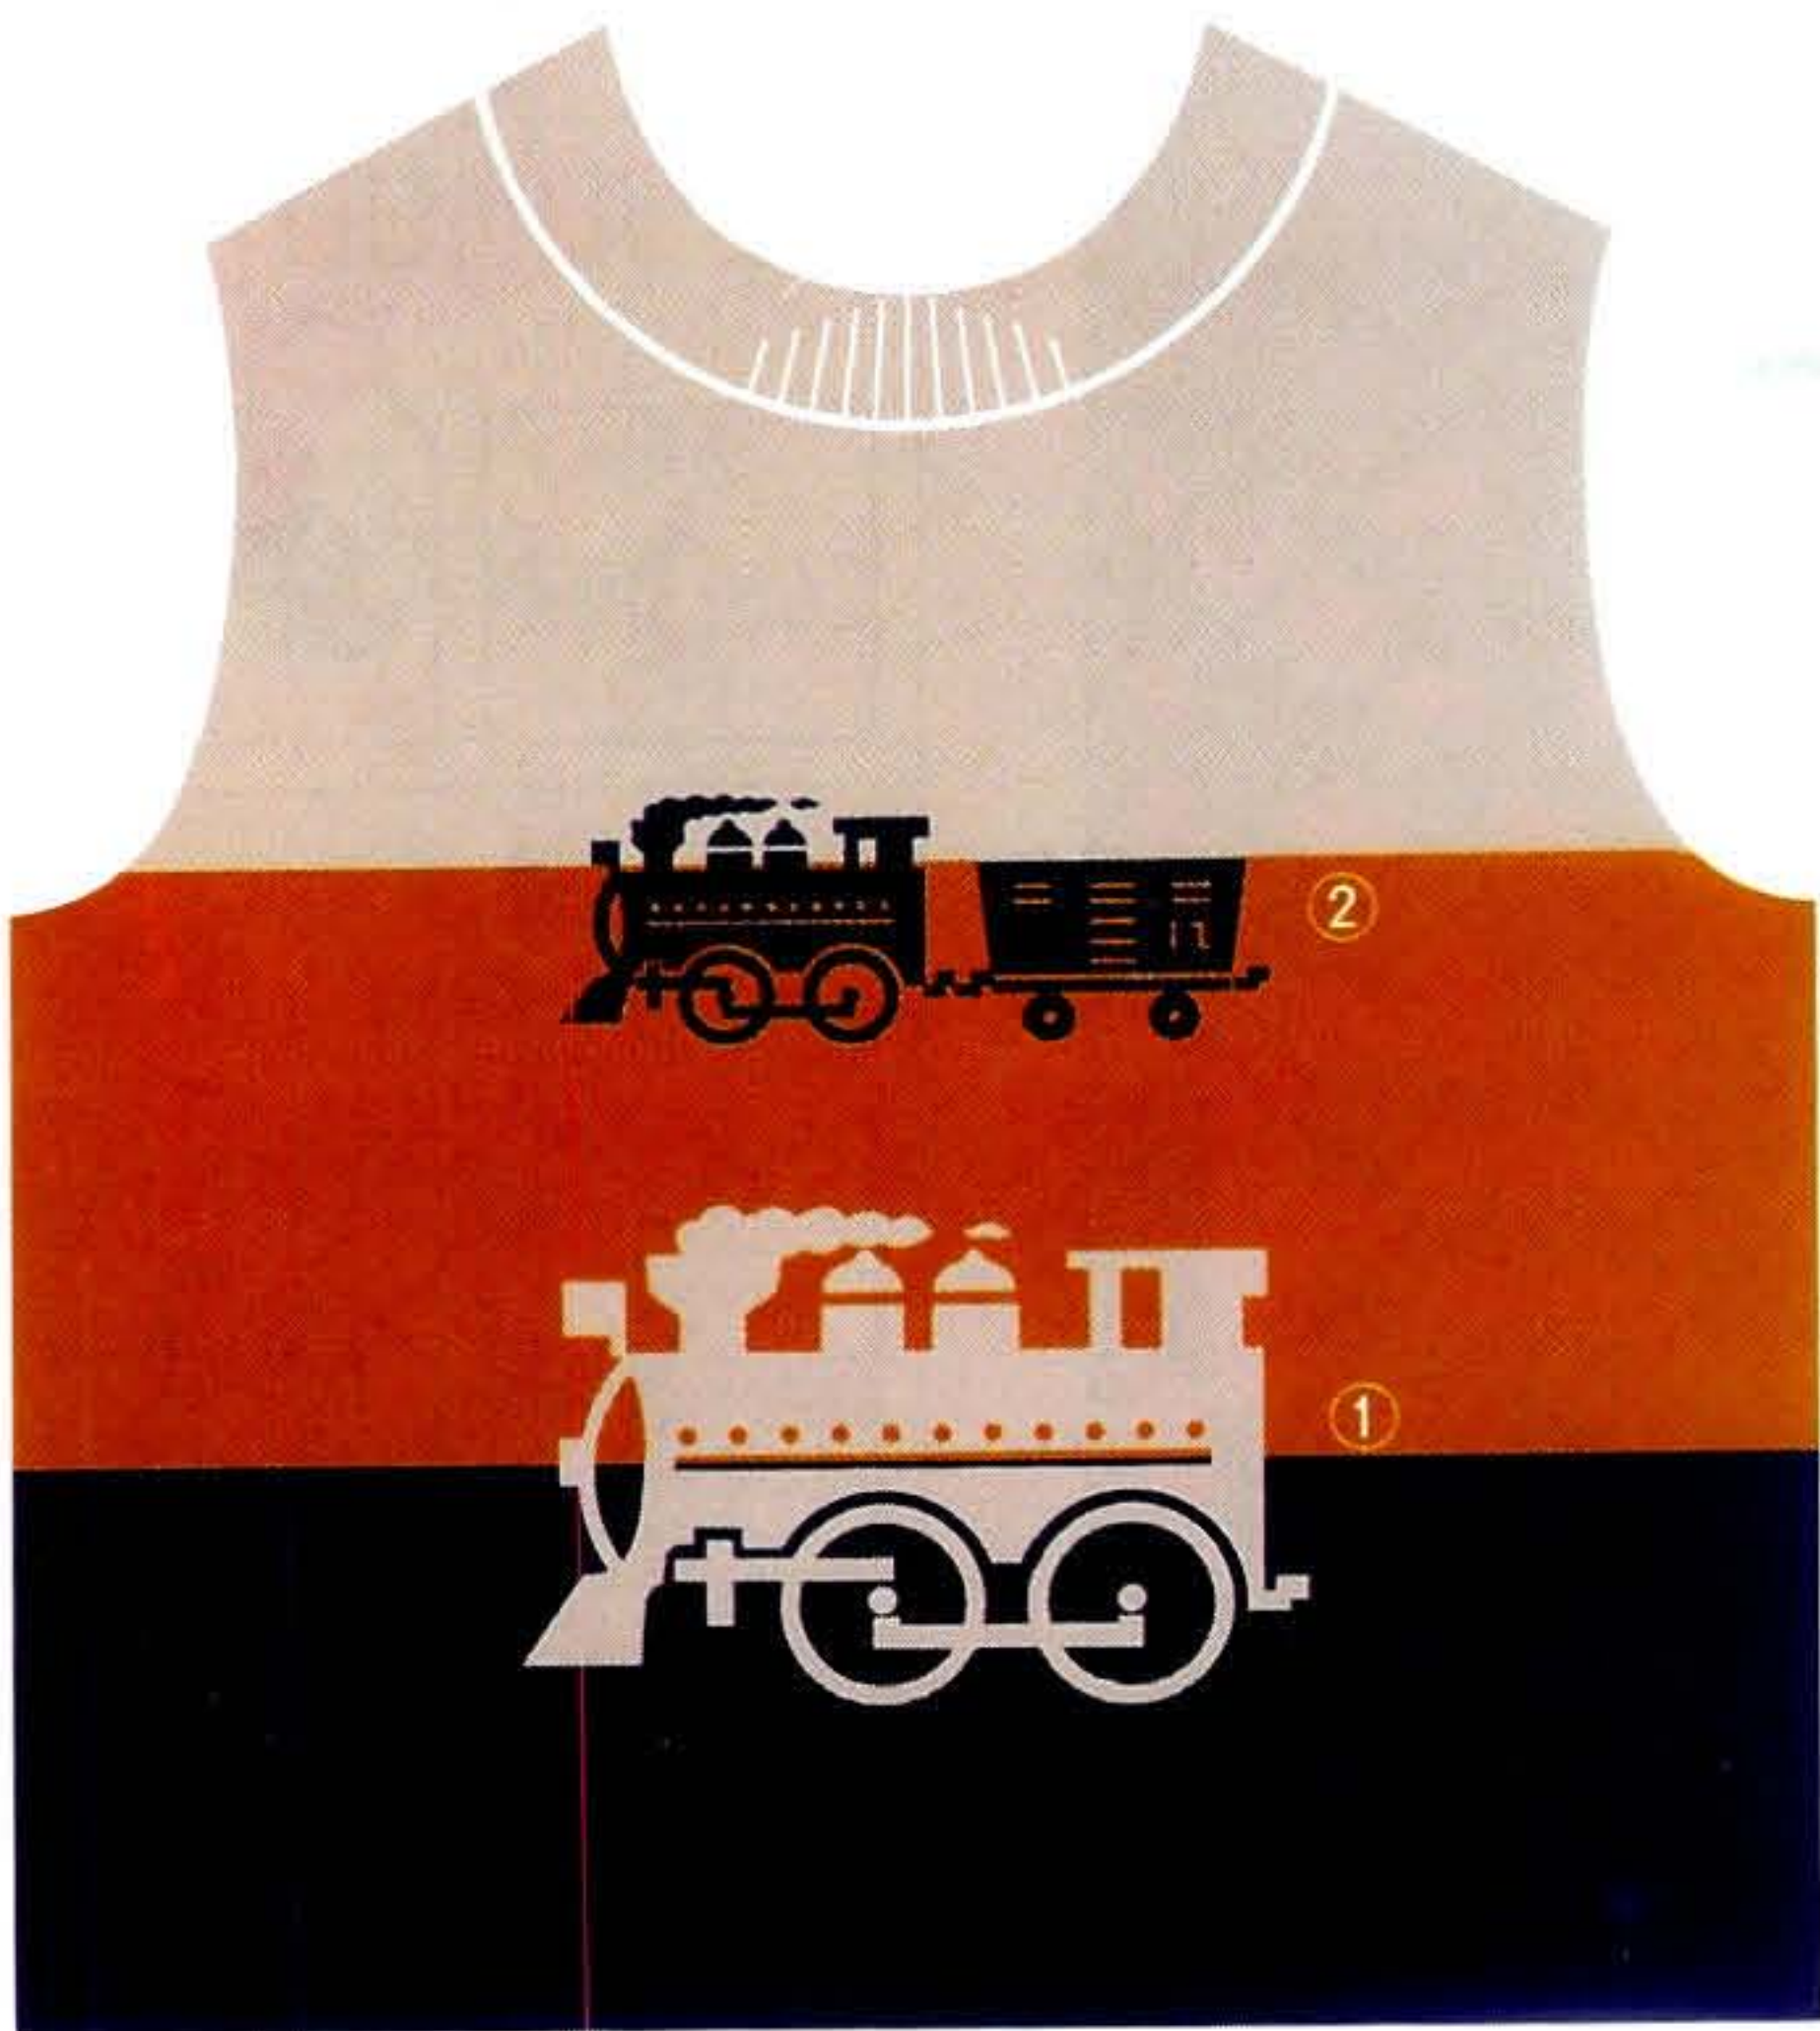 


B

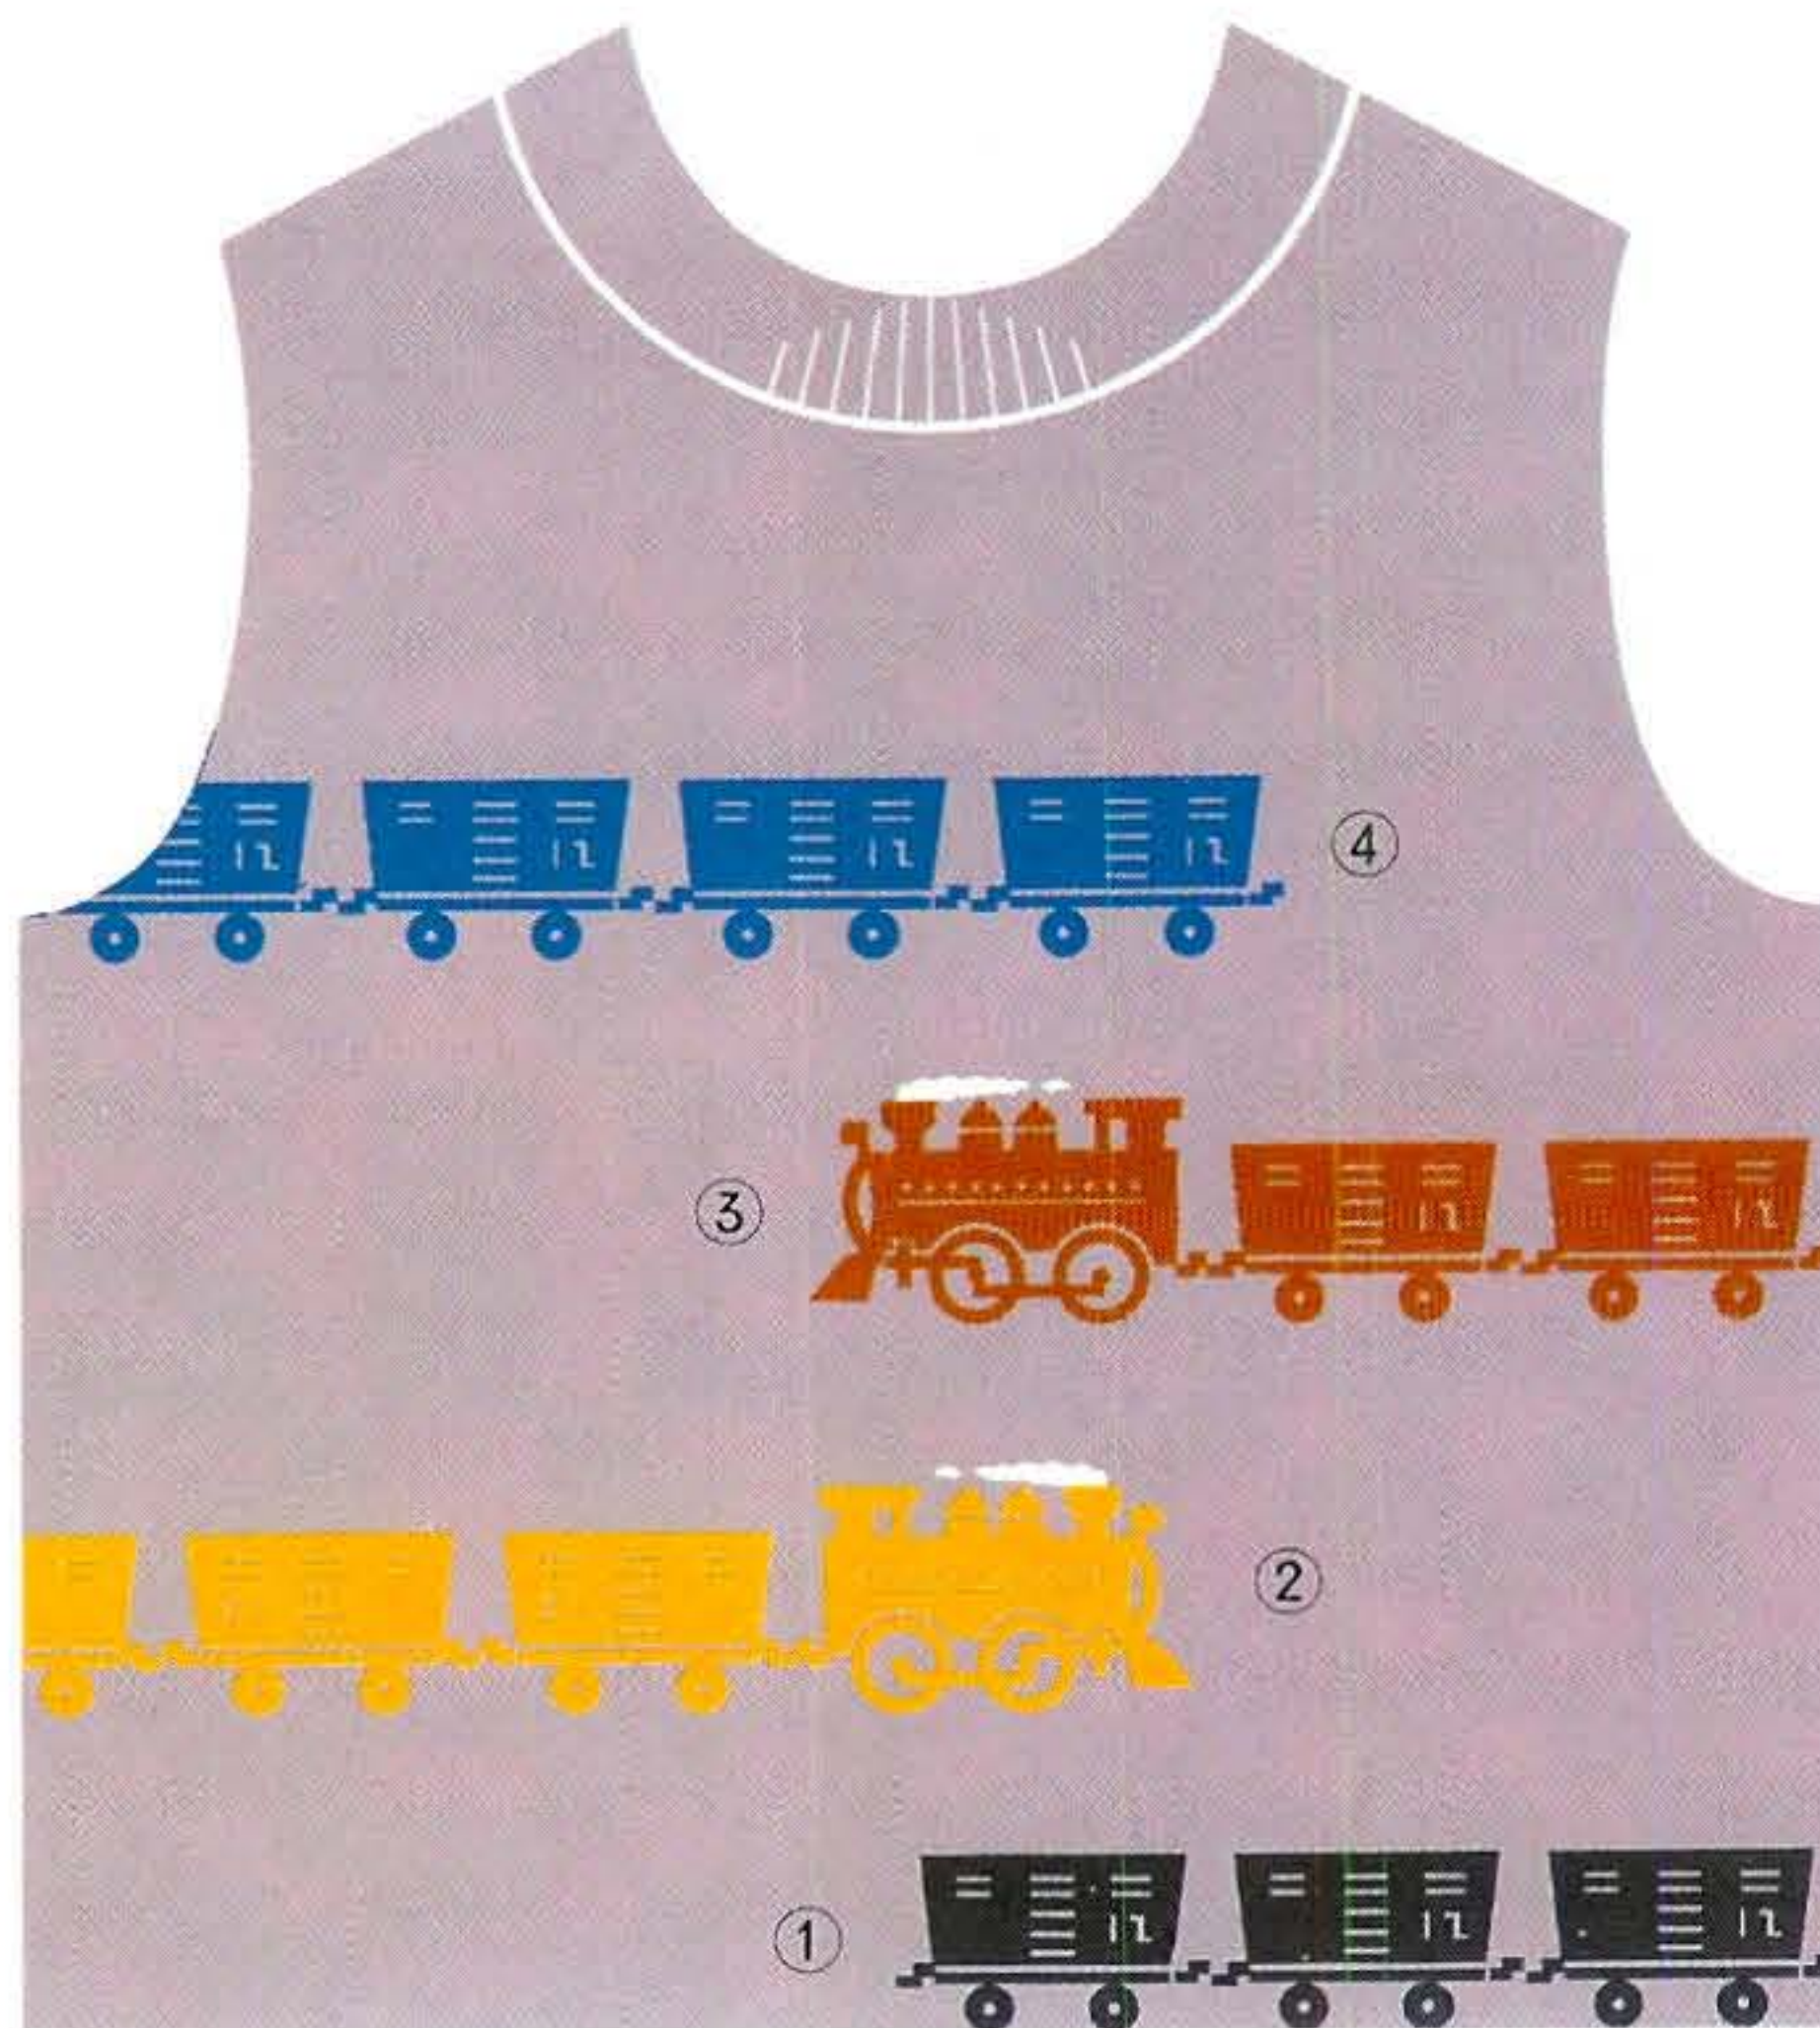 


B ③

  
B ④

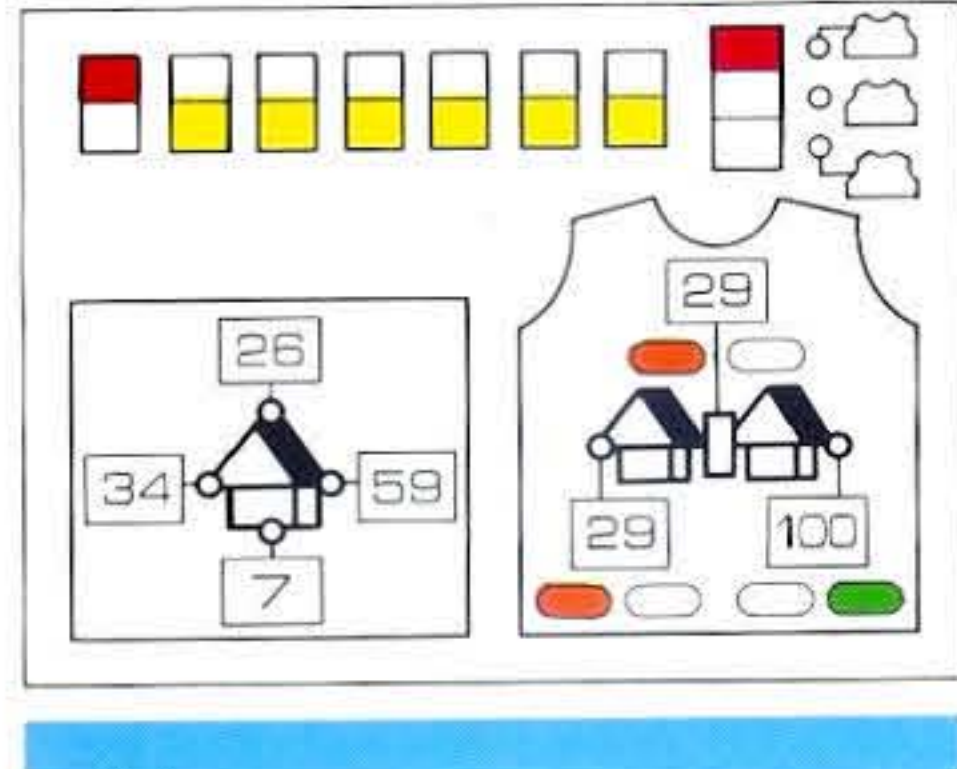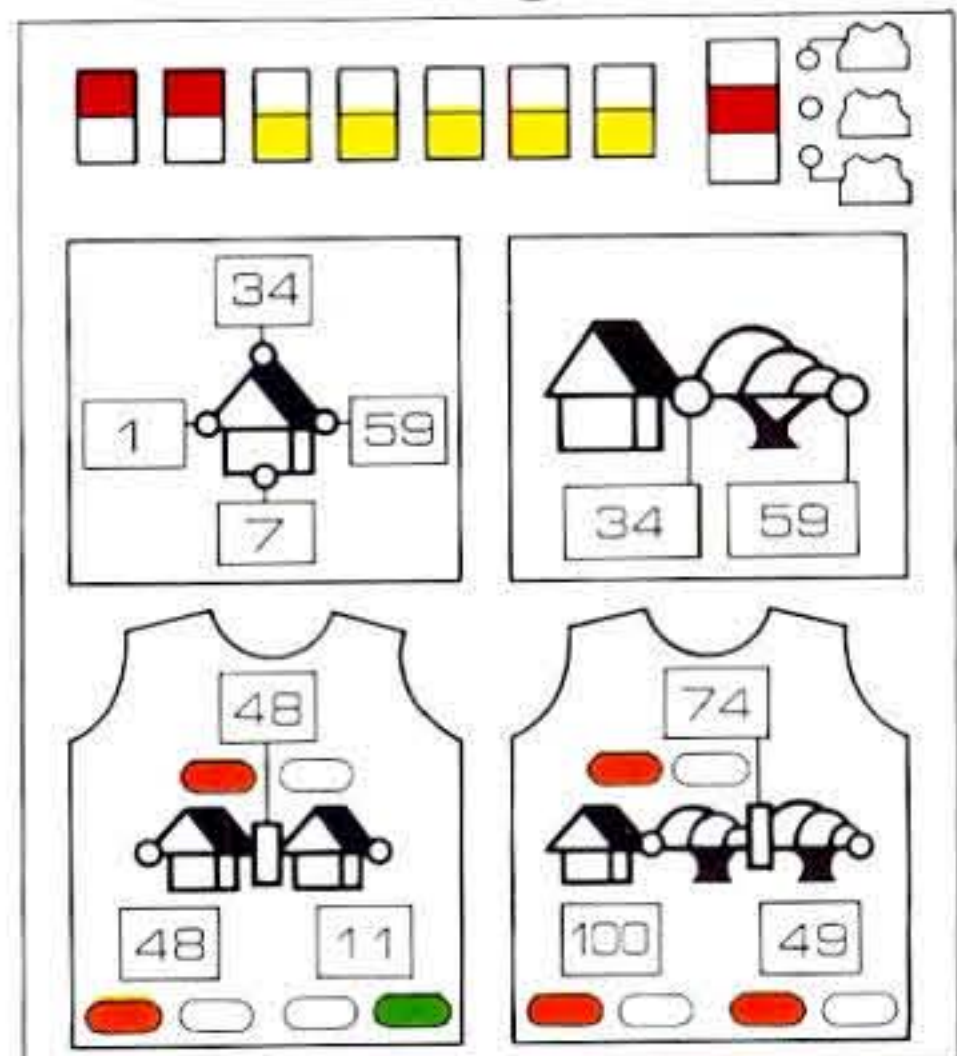


B ②





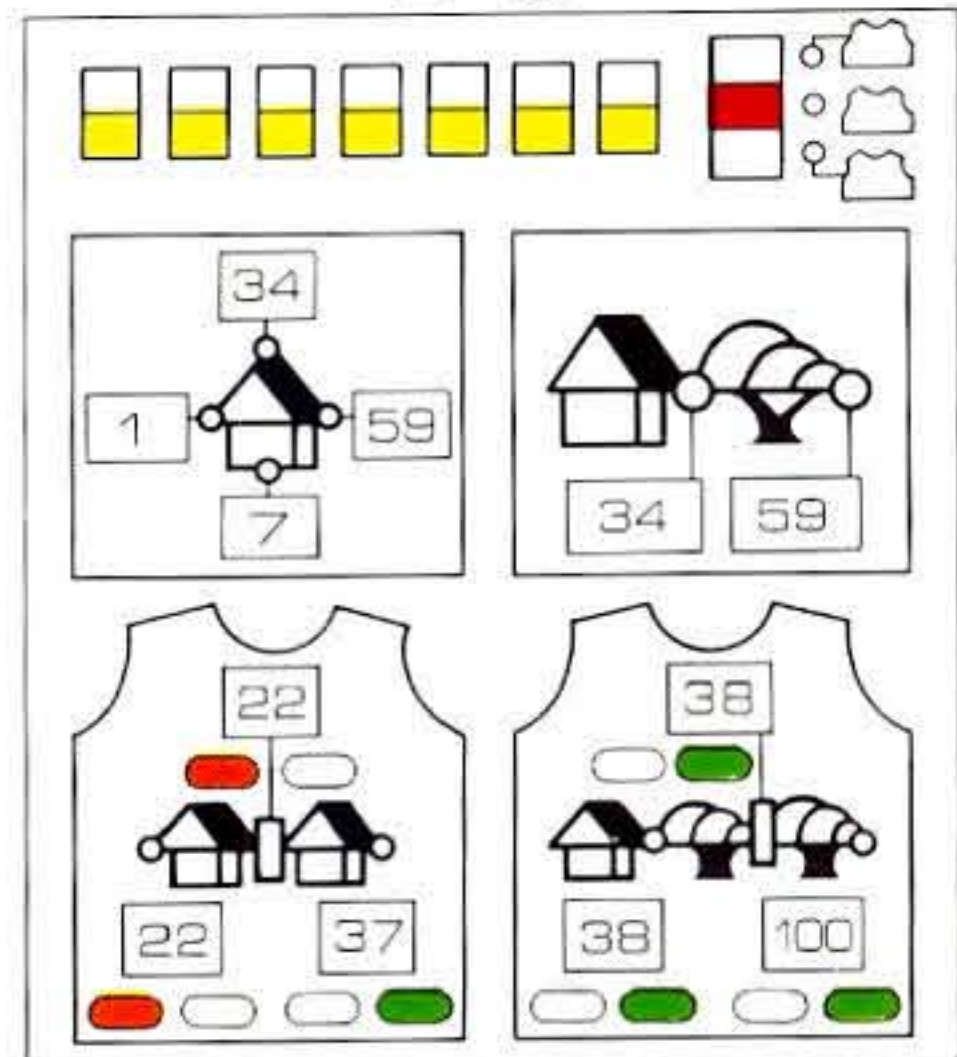 


B ①

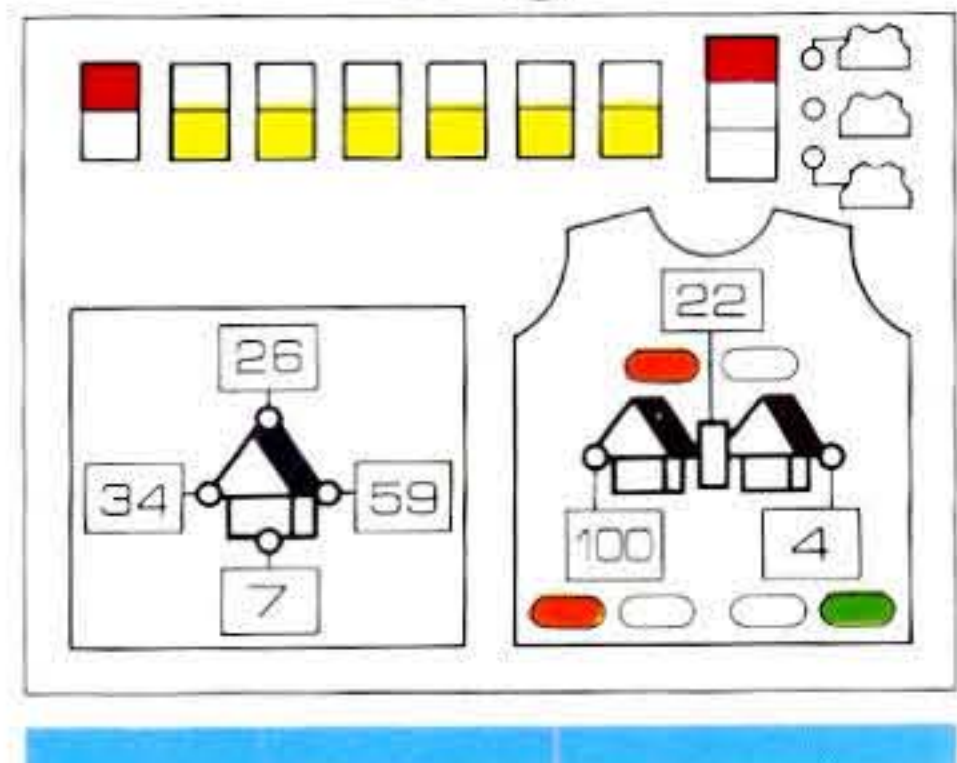 


C

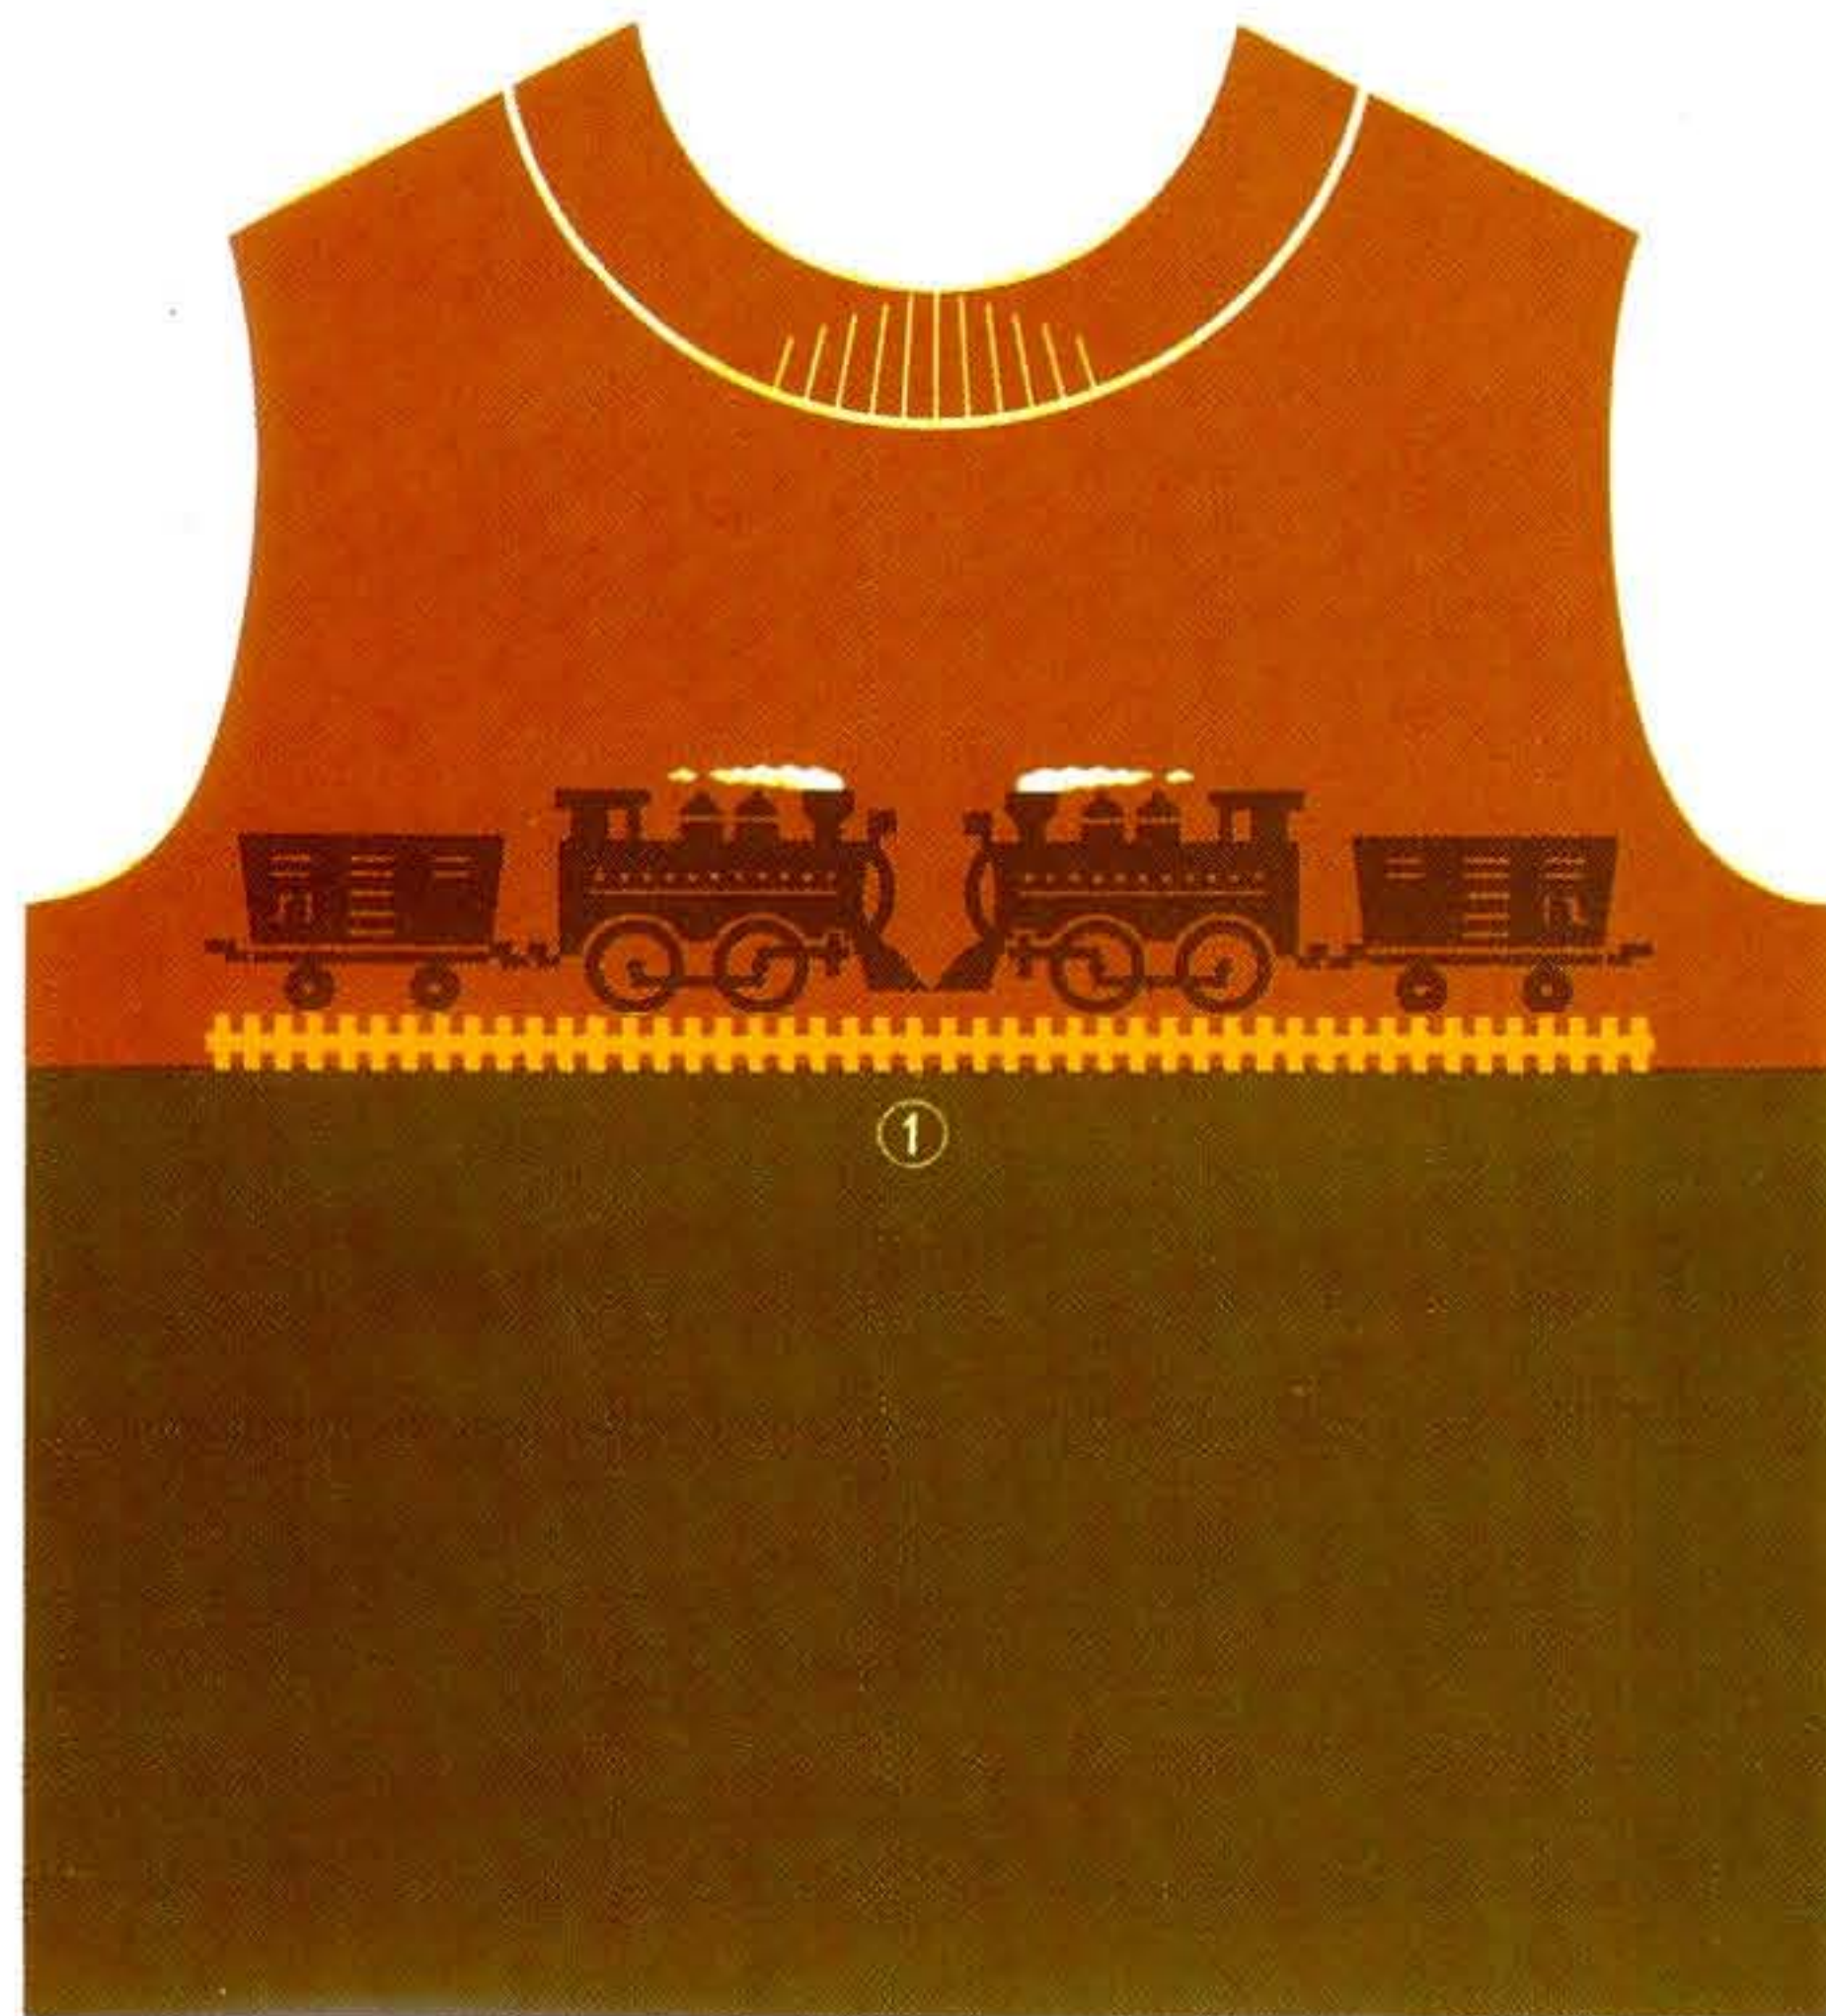 

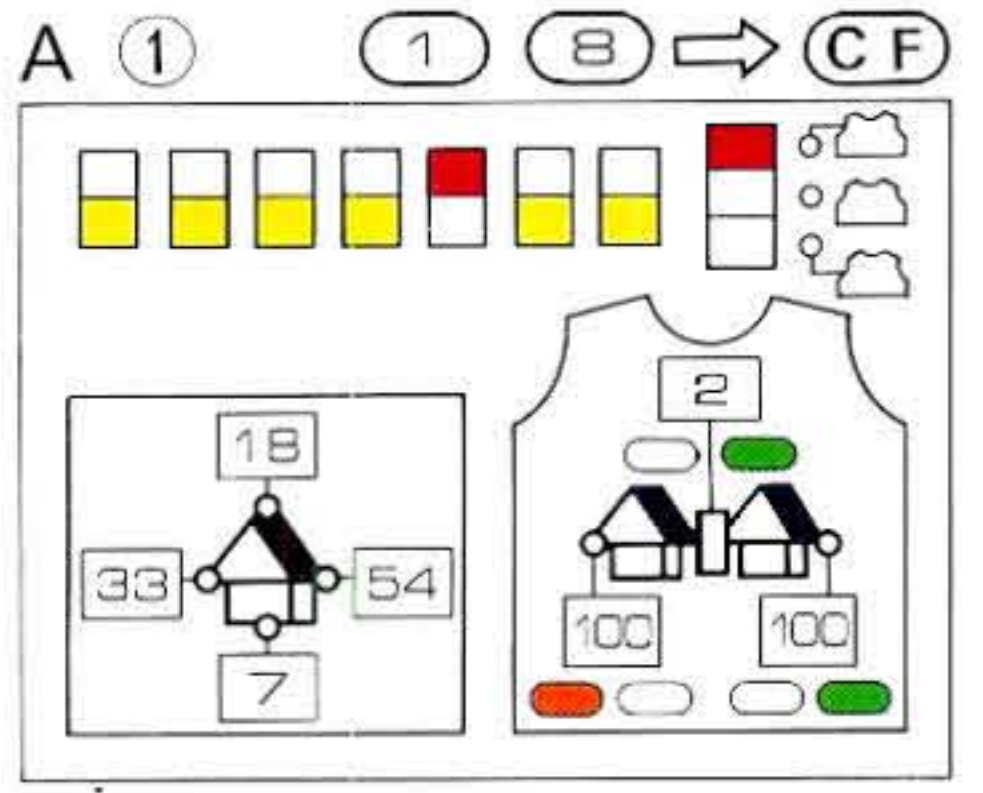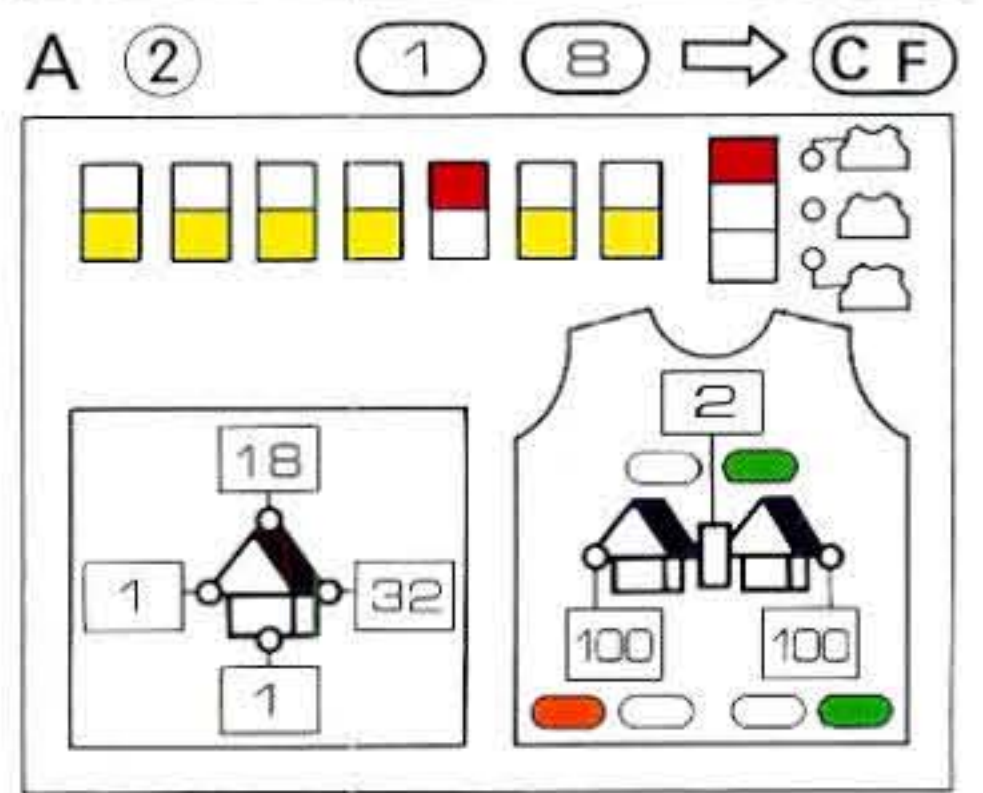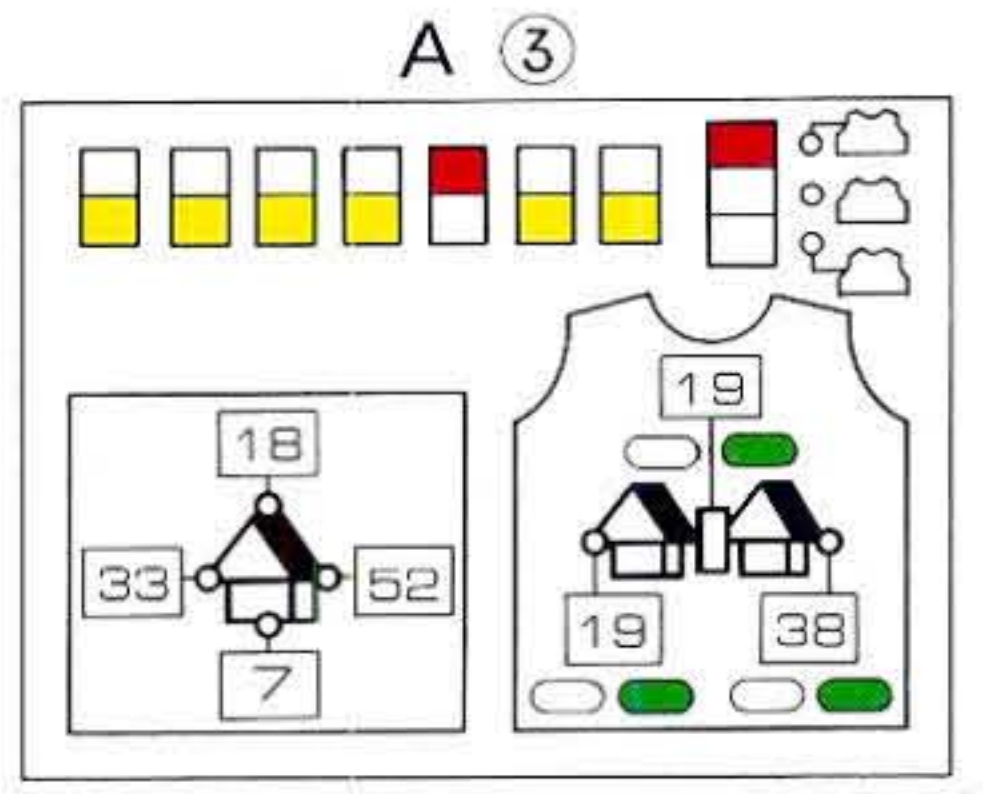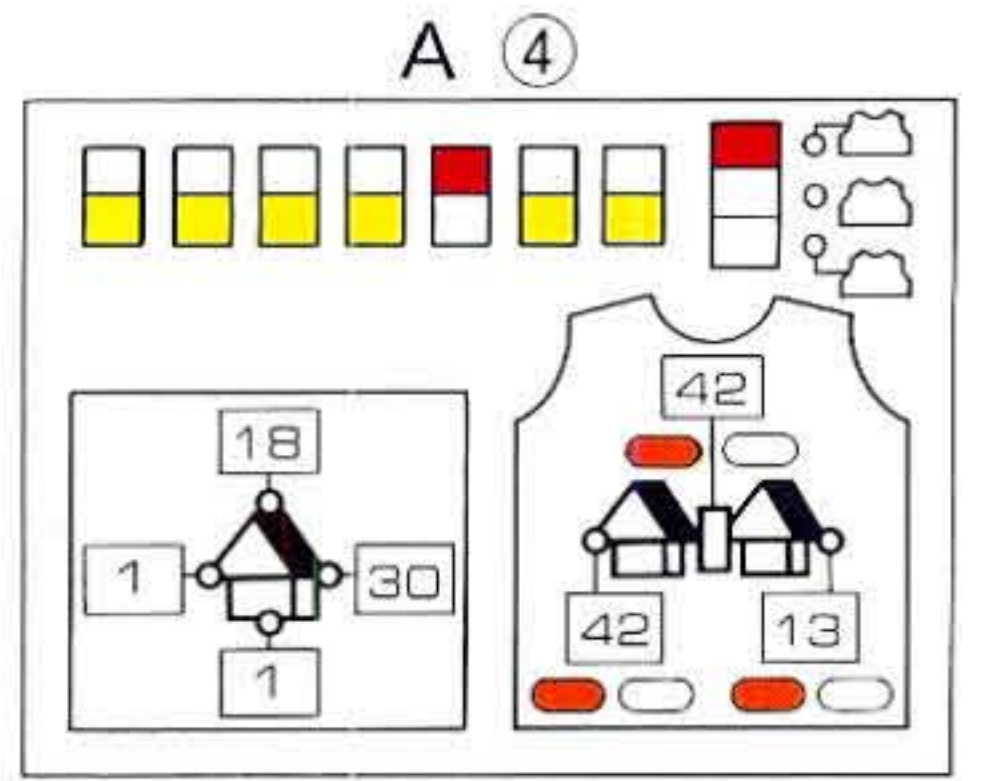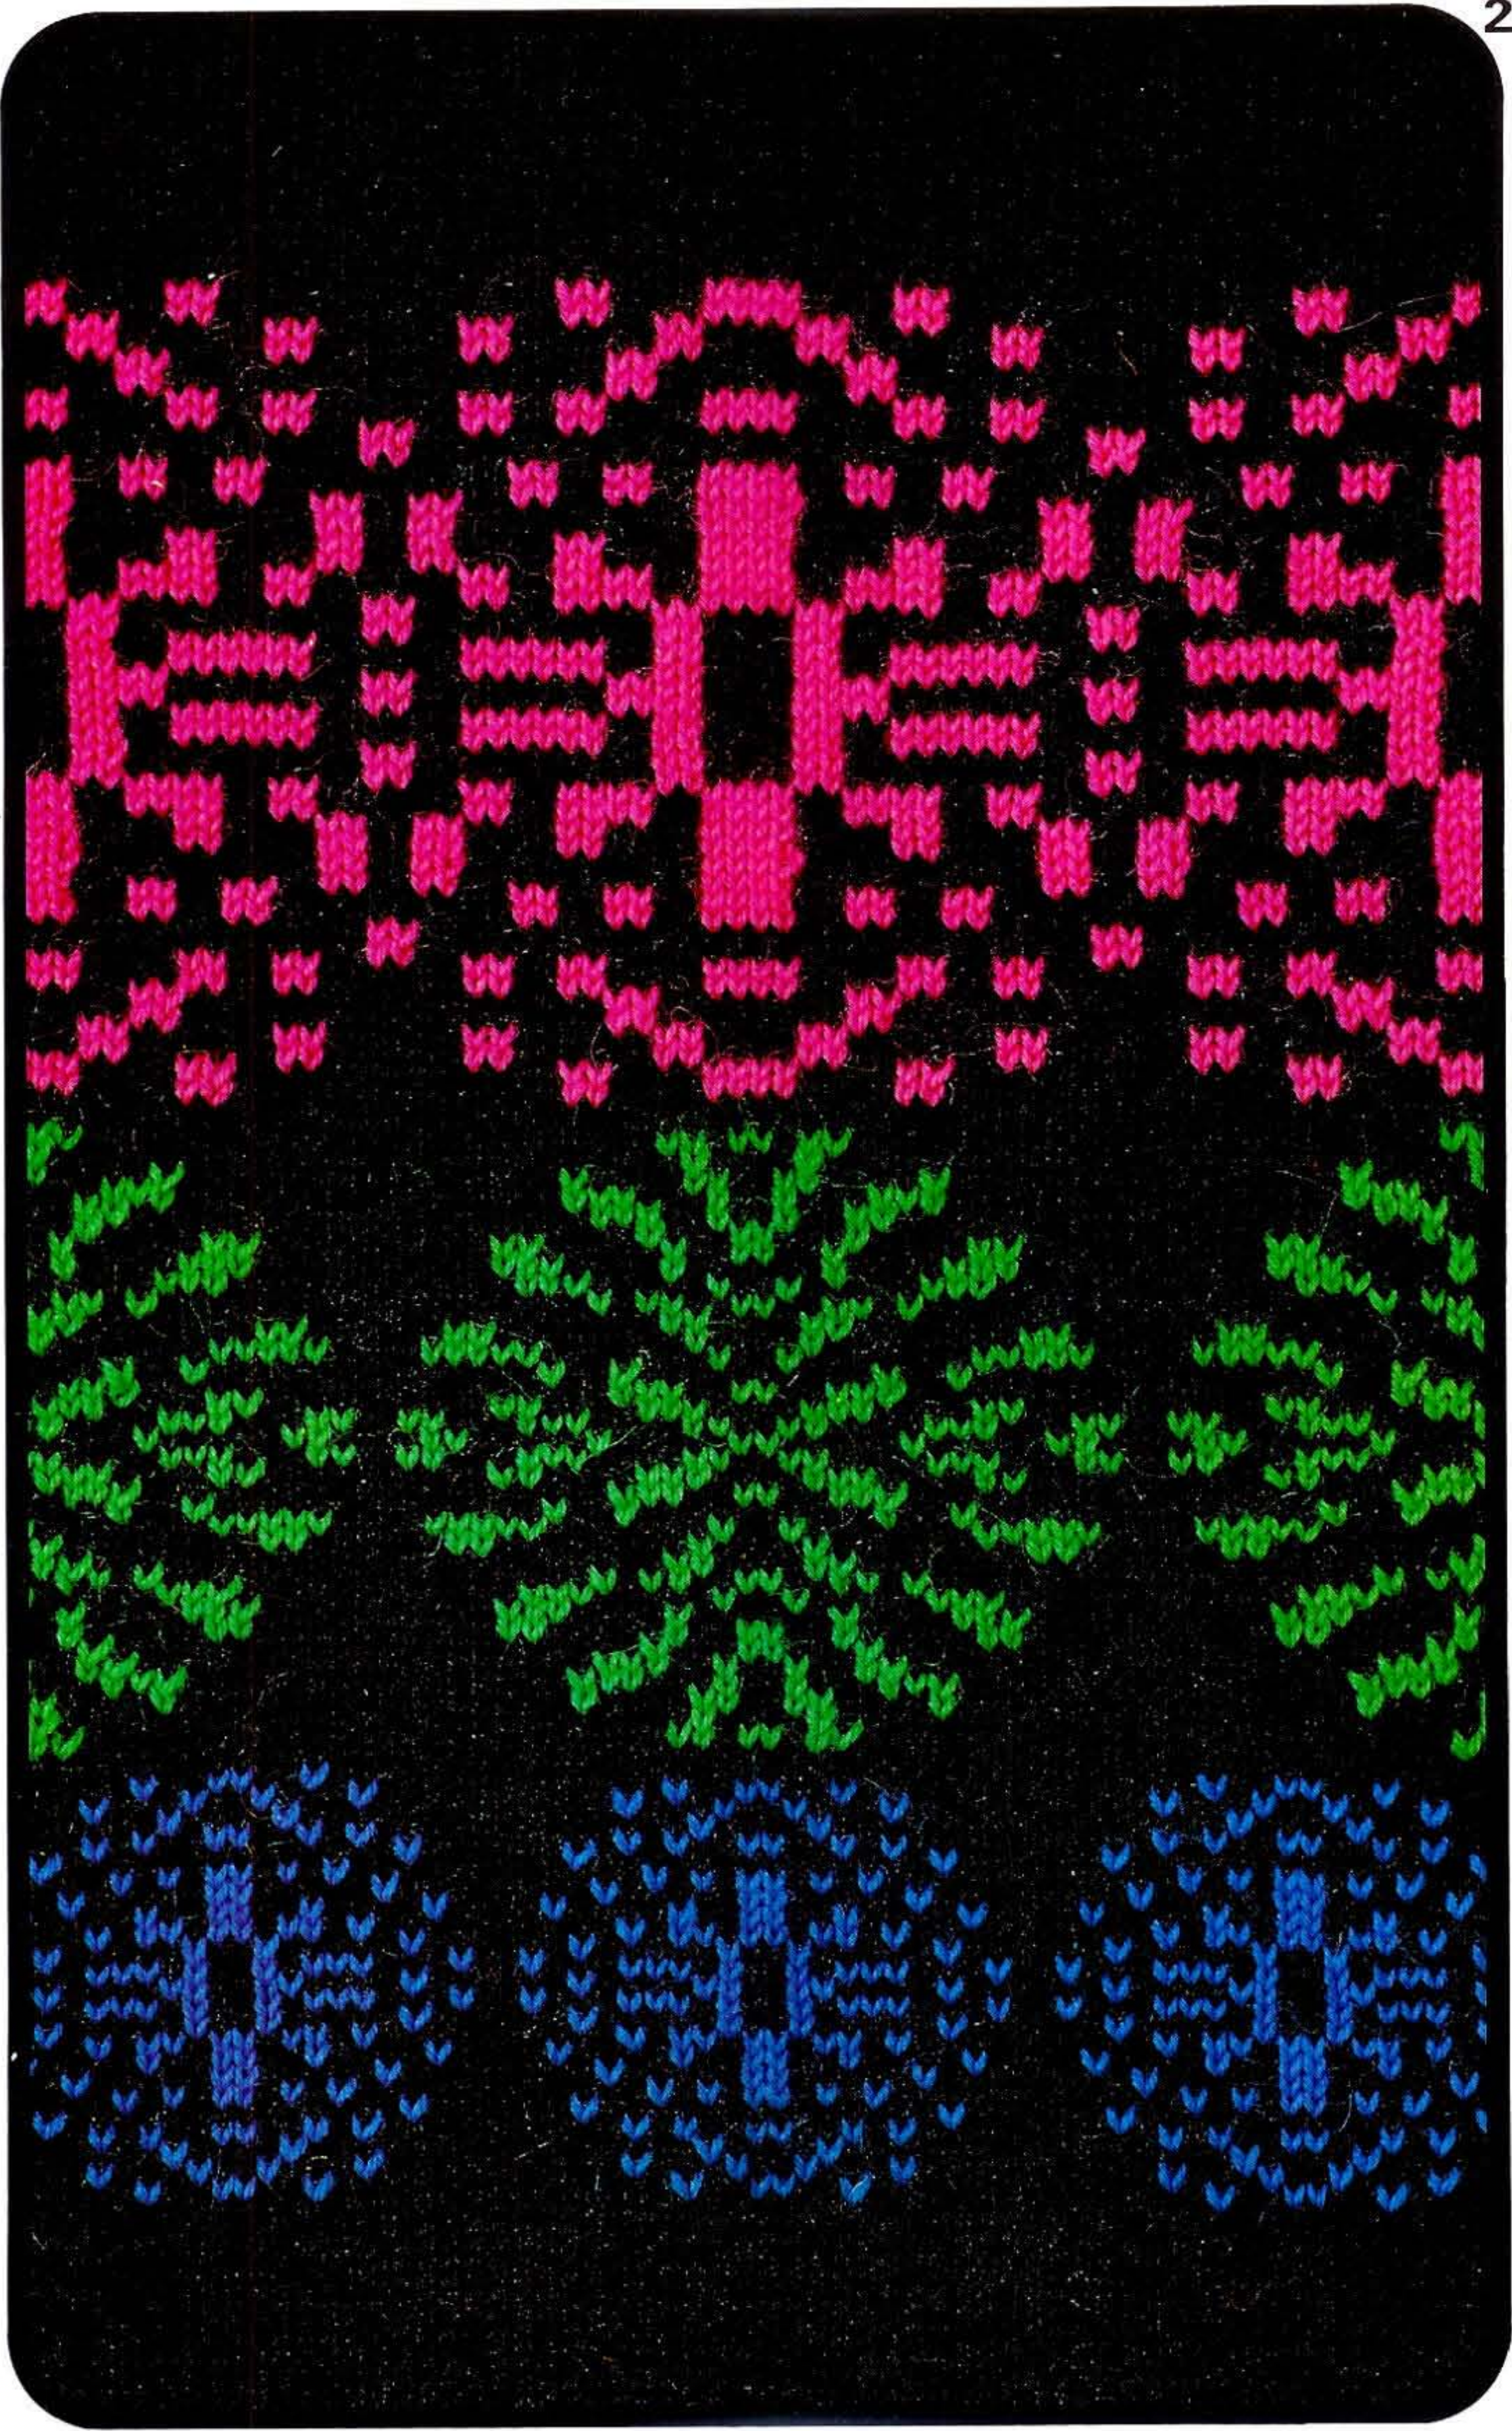     

A ②
18をインプットし (はじめ) キーを押します。

 A ①
18をインプットし (はじめ) キーを押します。

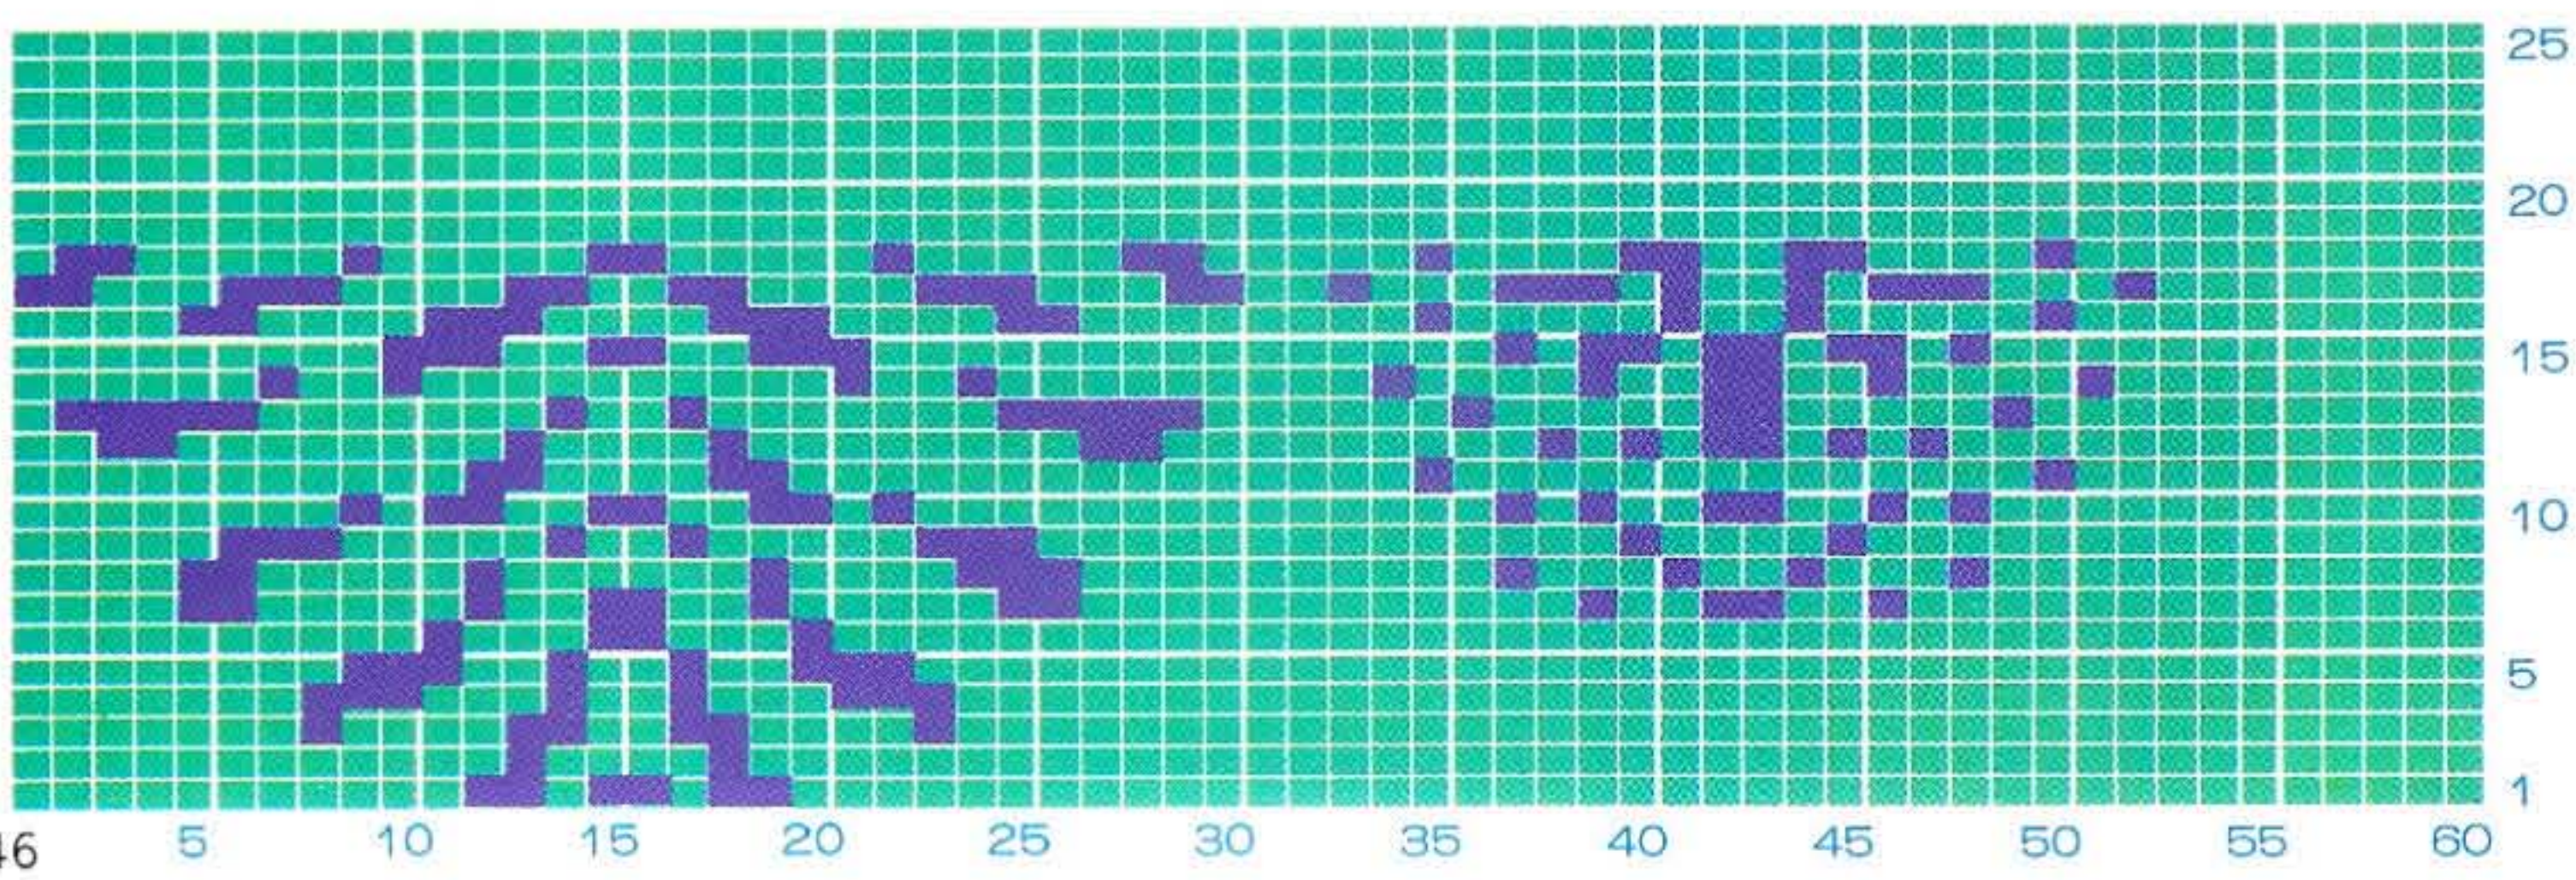


A




B



 
B ②

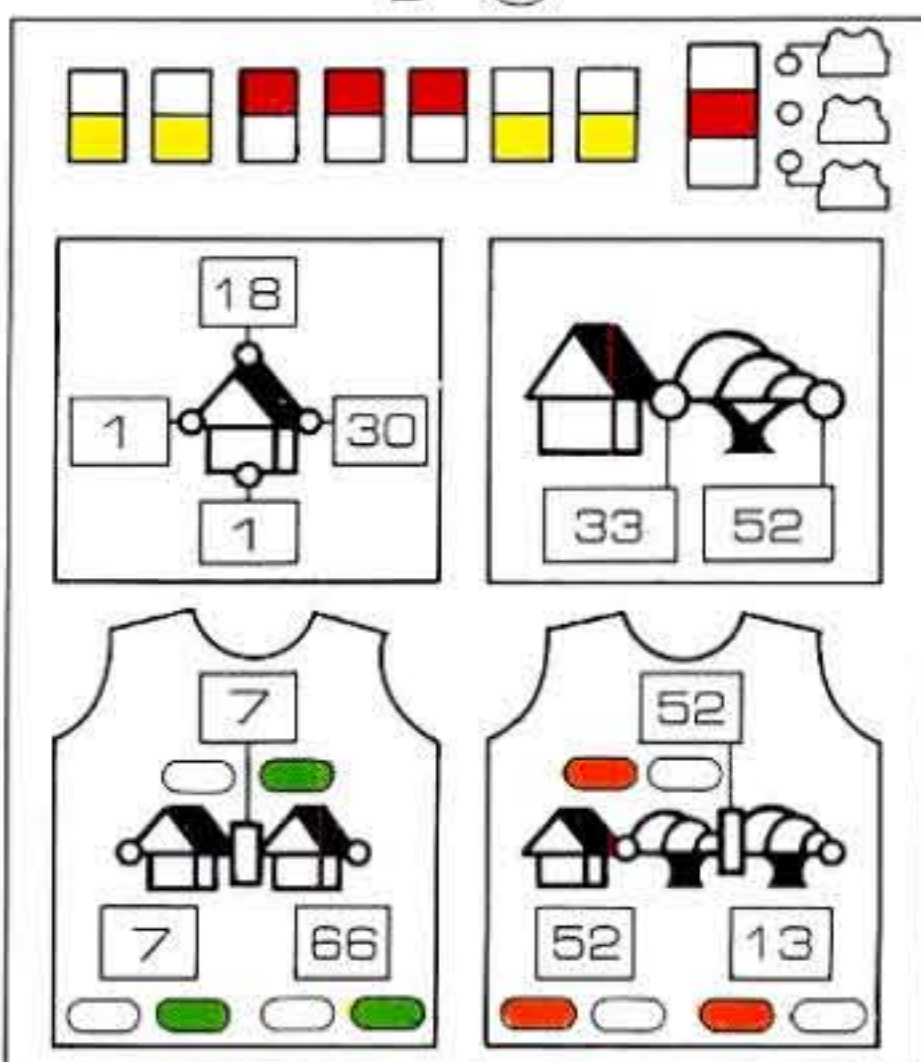


C ③

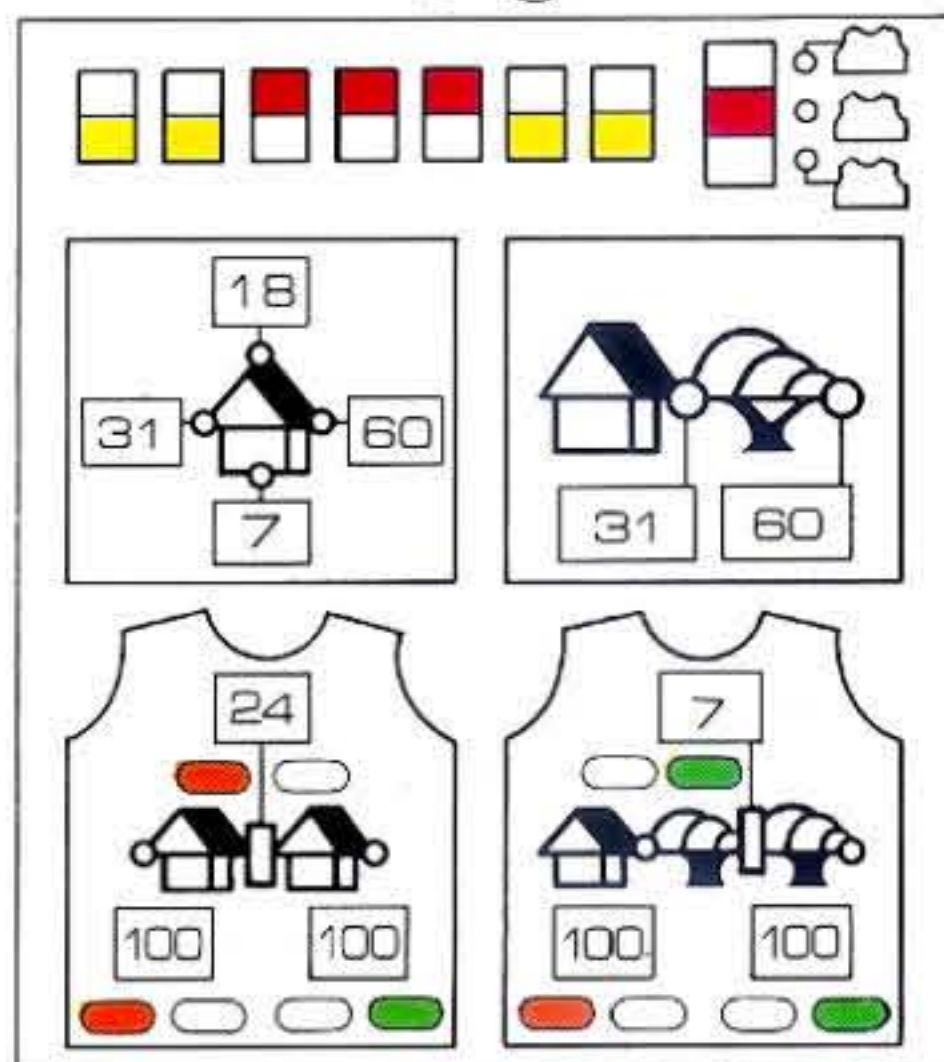 


C ④

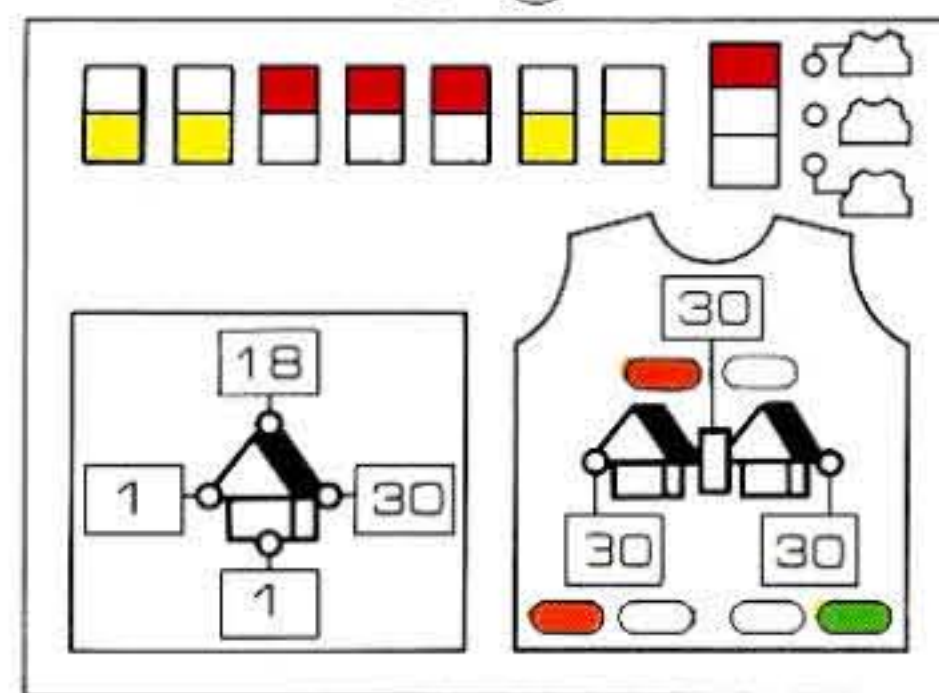 


B ①

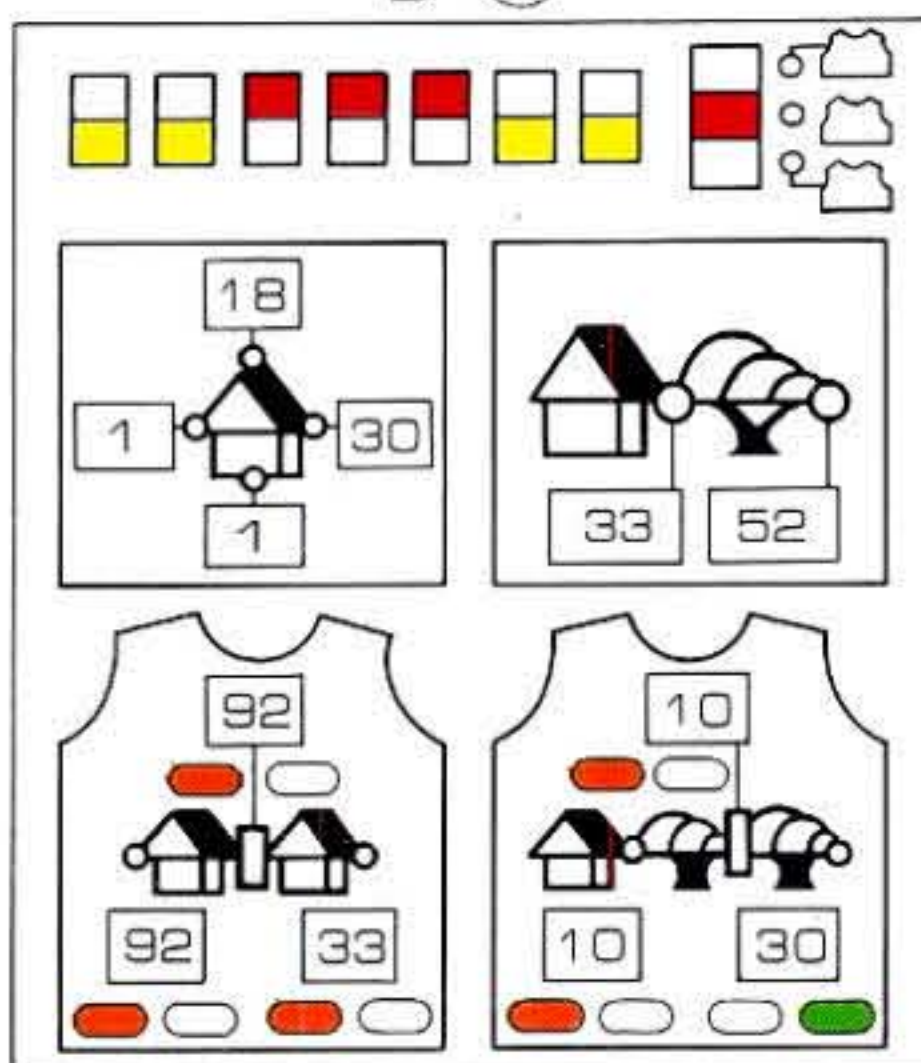 

C ②

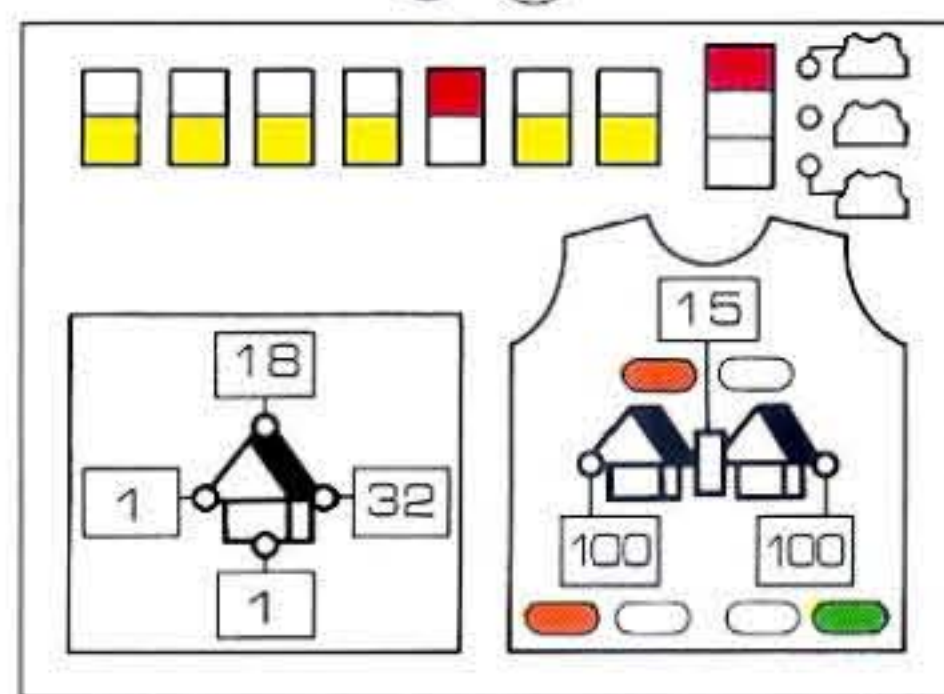 

C ①

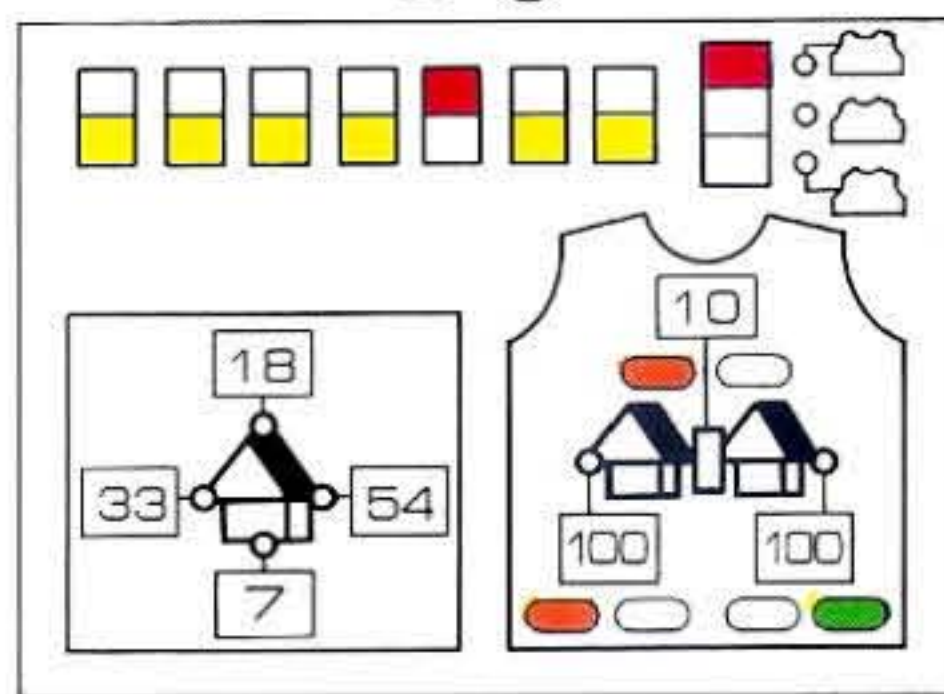 


C






 A ①-2

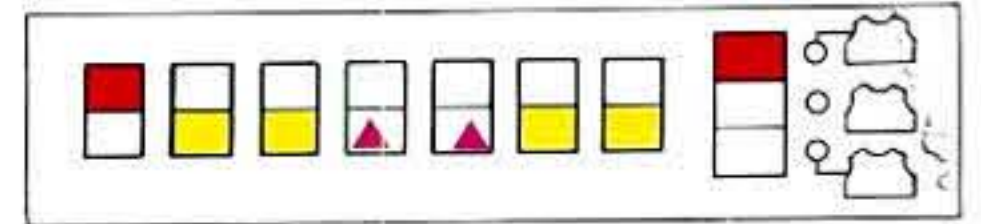


A ①-1 (2) (8) → (CF)

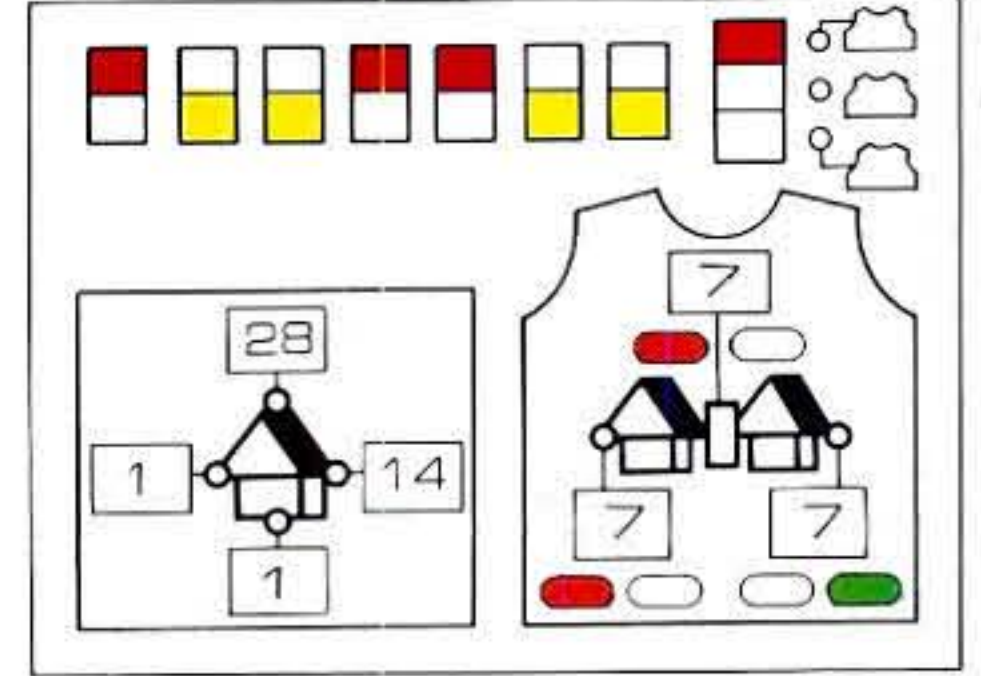 


28をインプットし(はじめ)キーを押します。

 
C ④

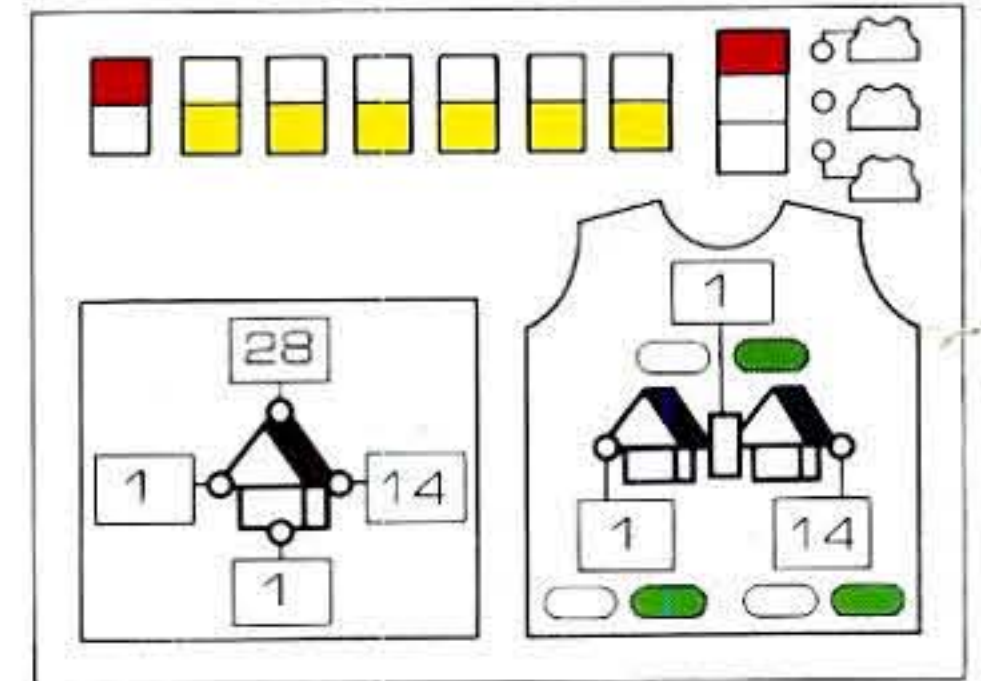



C ③

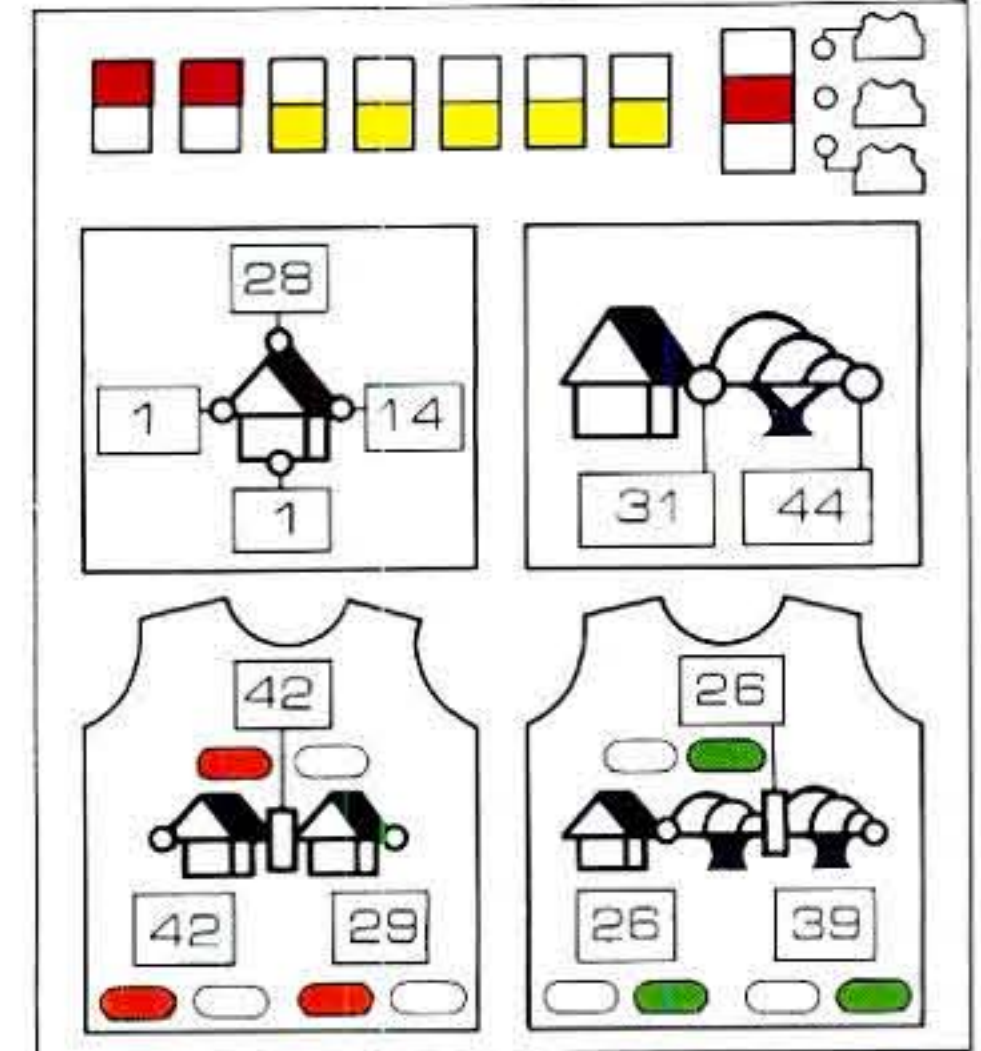 

C ②

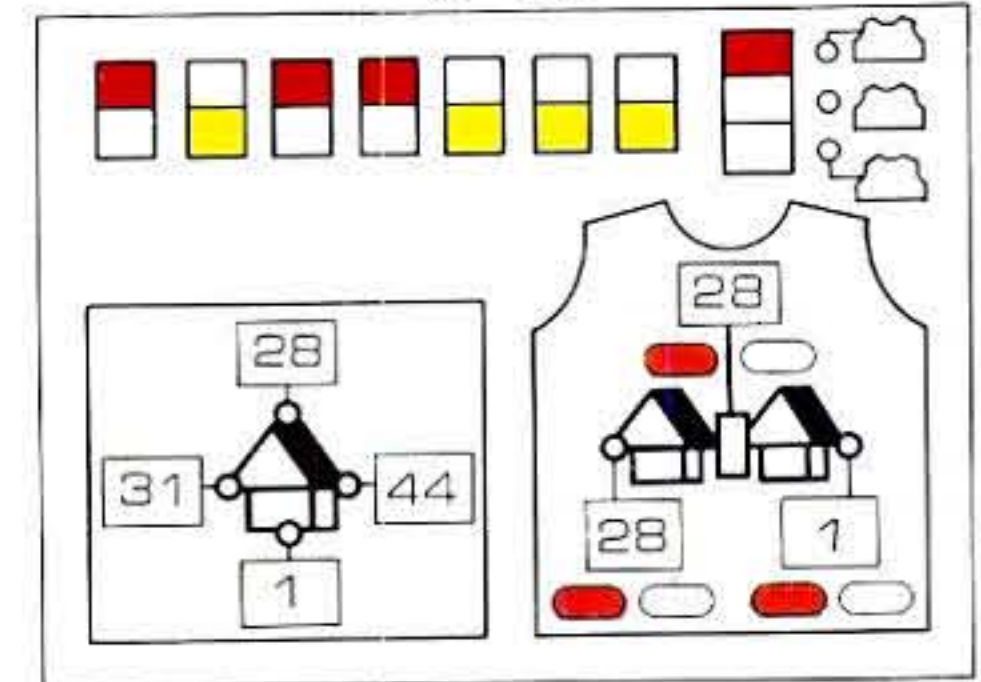 

C ①

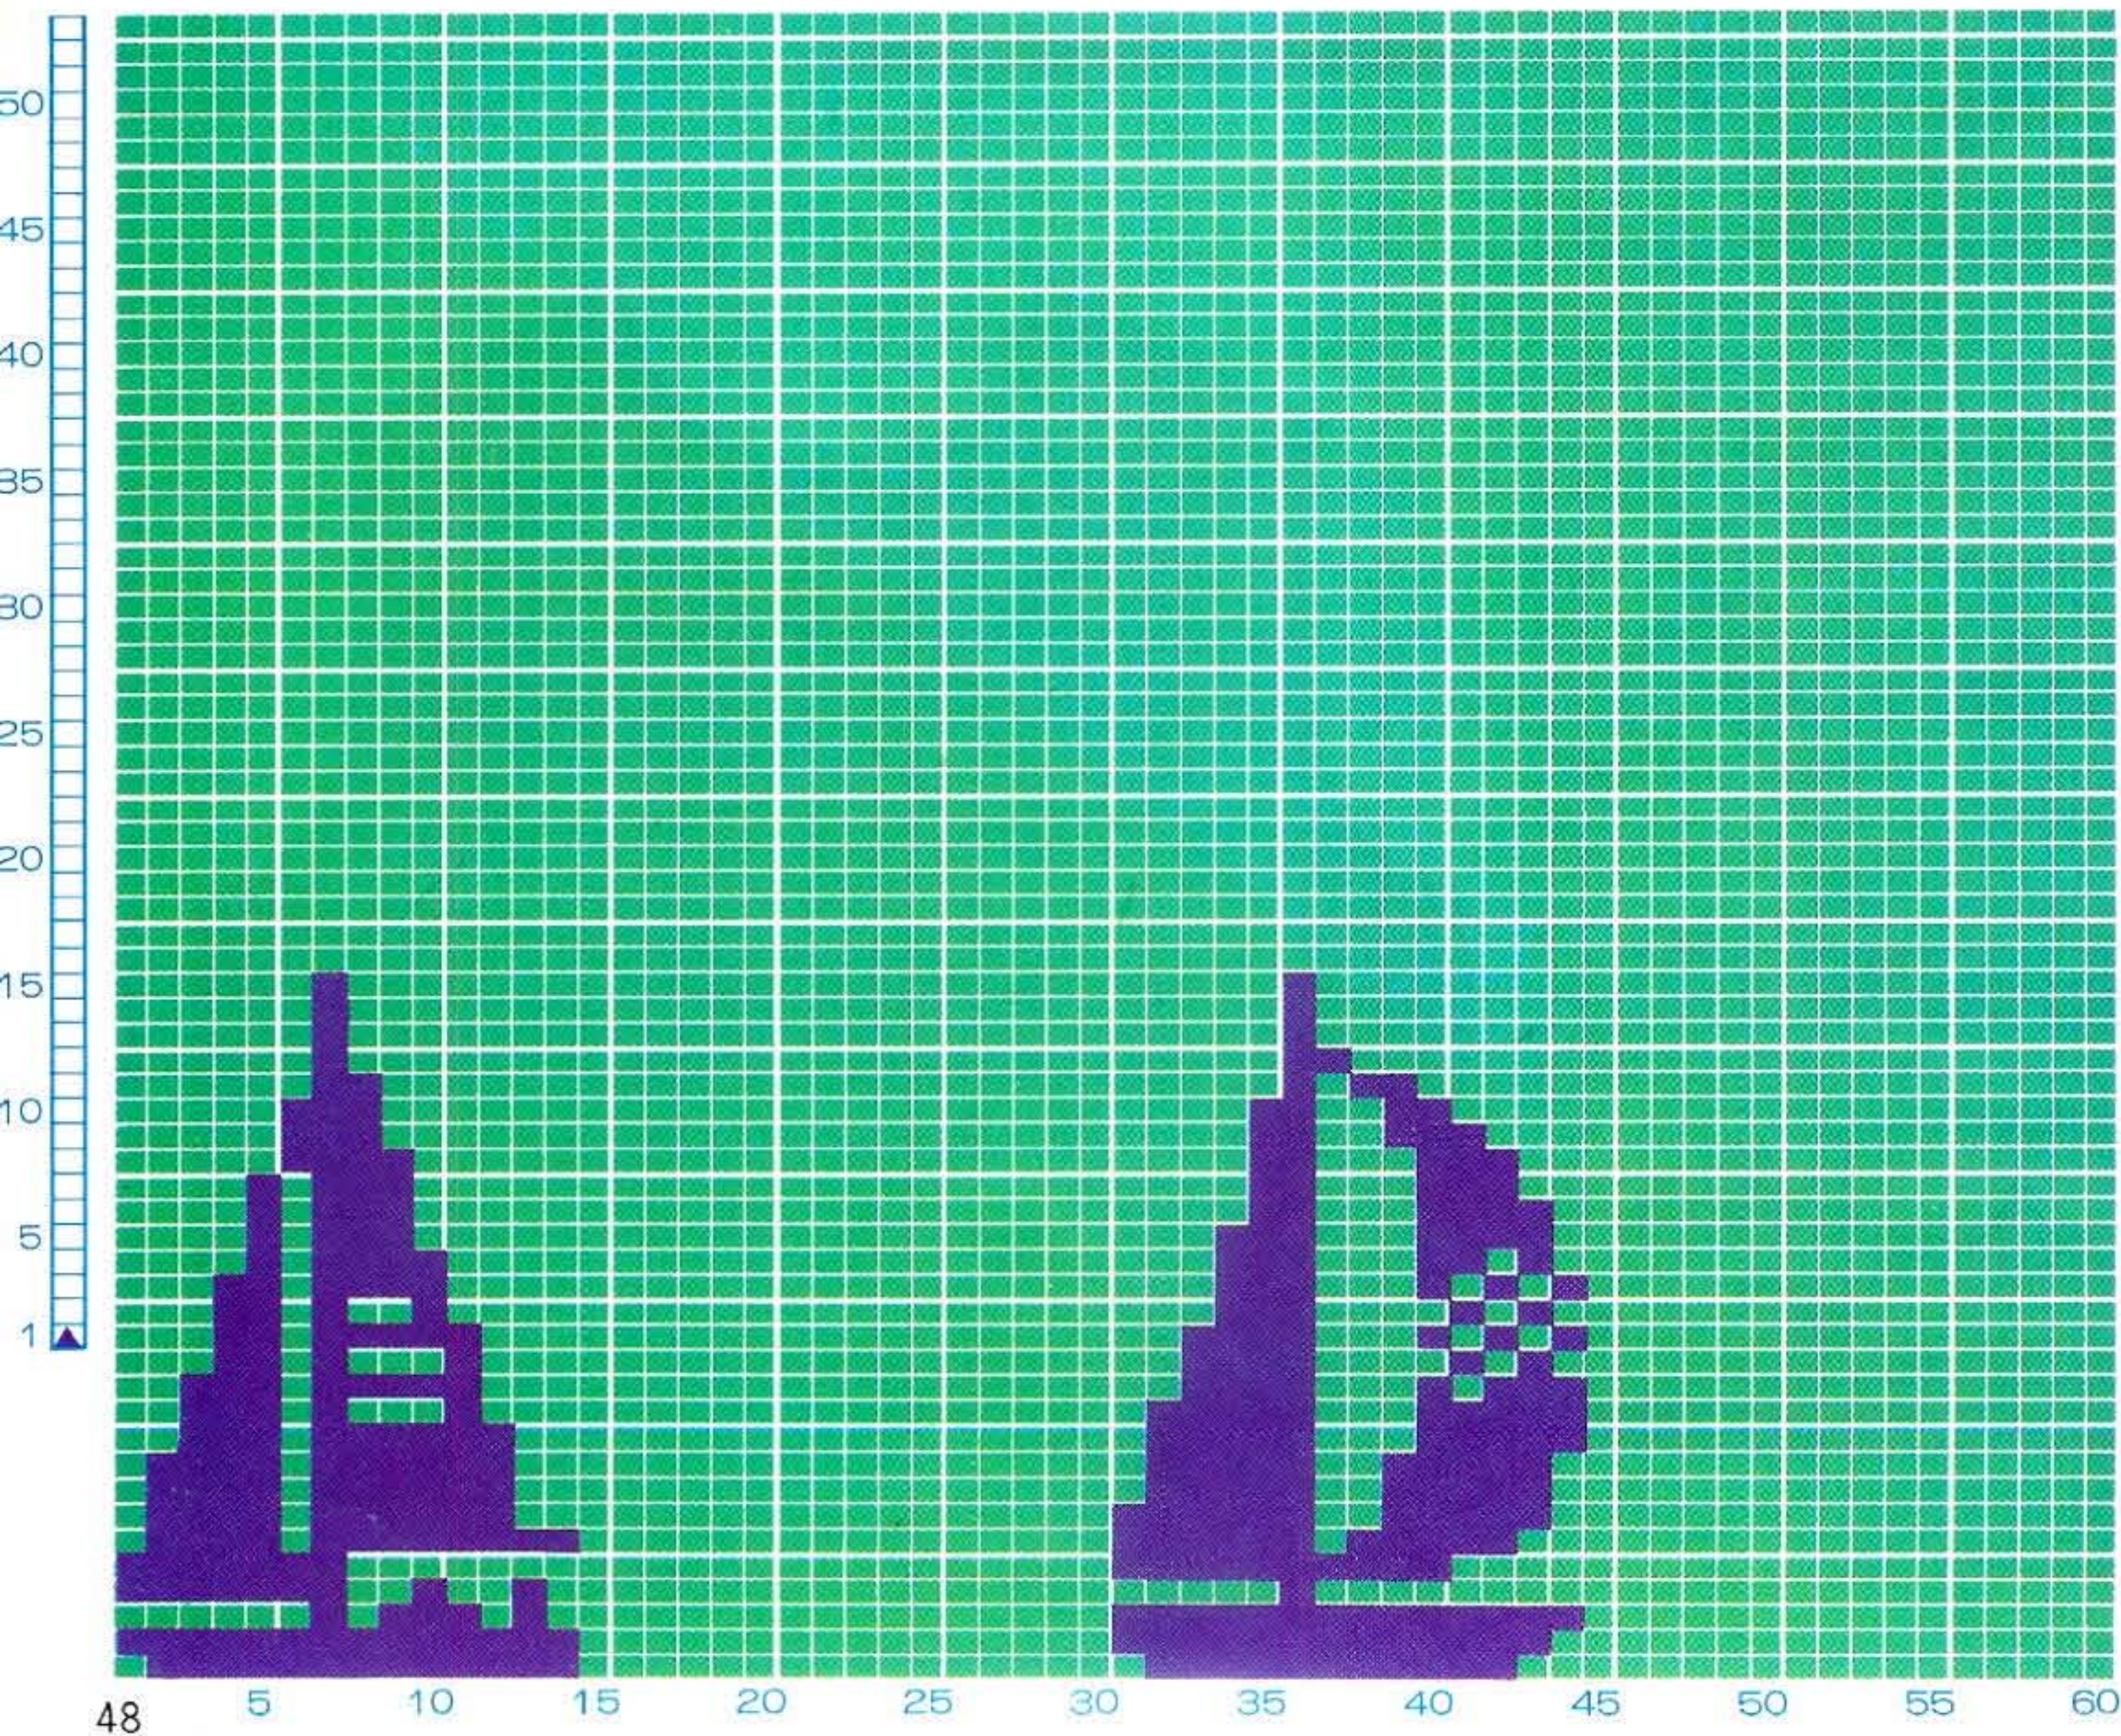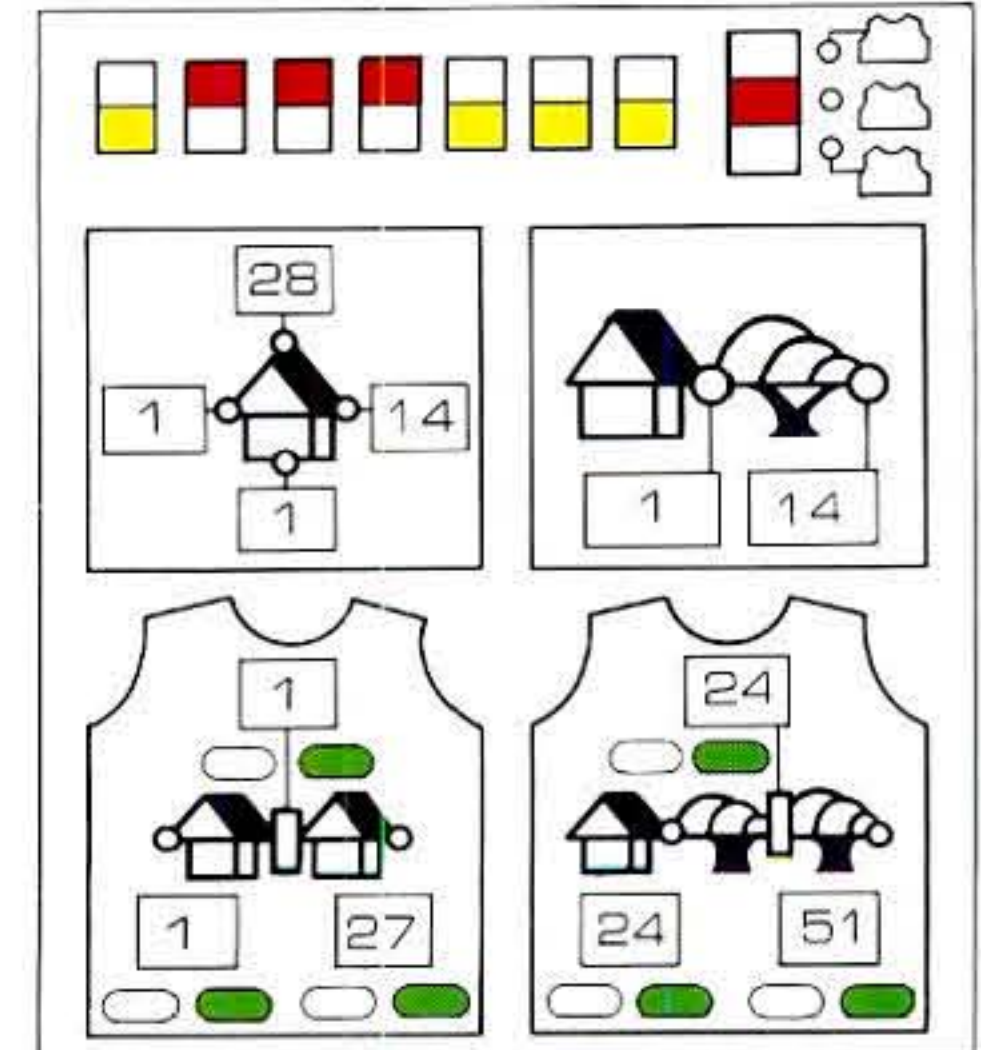  



65
60
55
50
45
40
35
30
25
20
15
10
5
1

48 5 10 15 20 25 30 35 40 45 50 55 60

A








  B

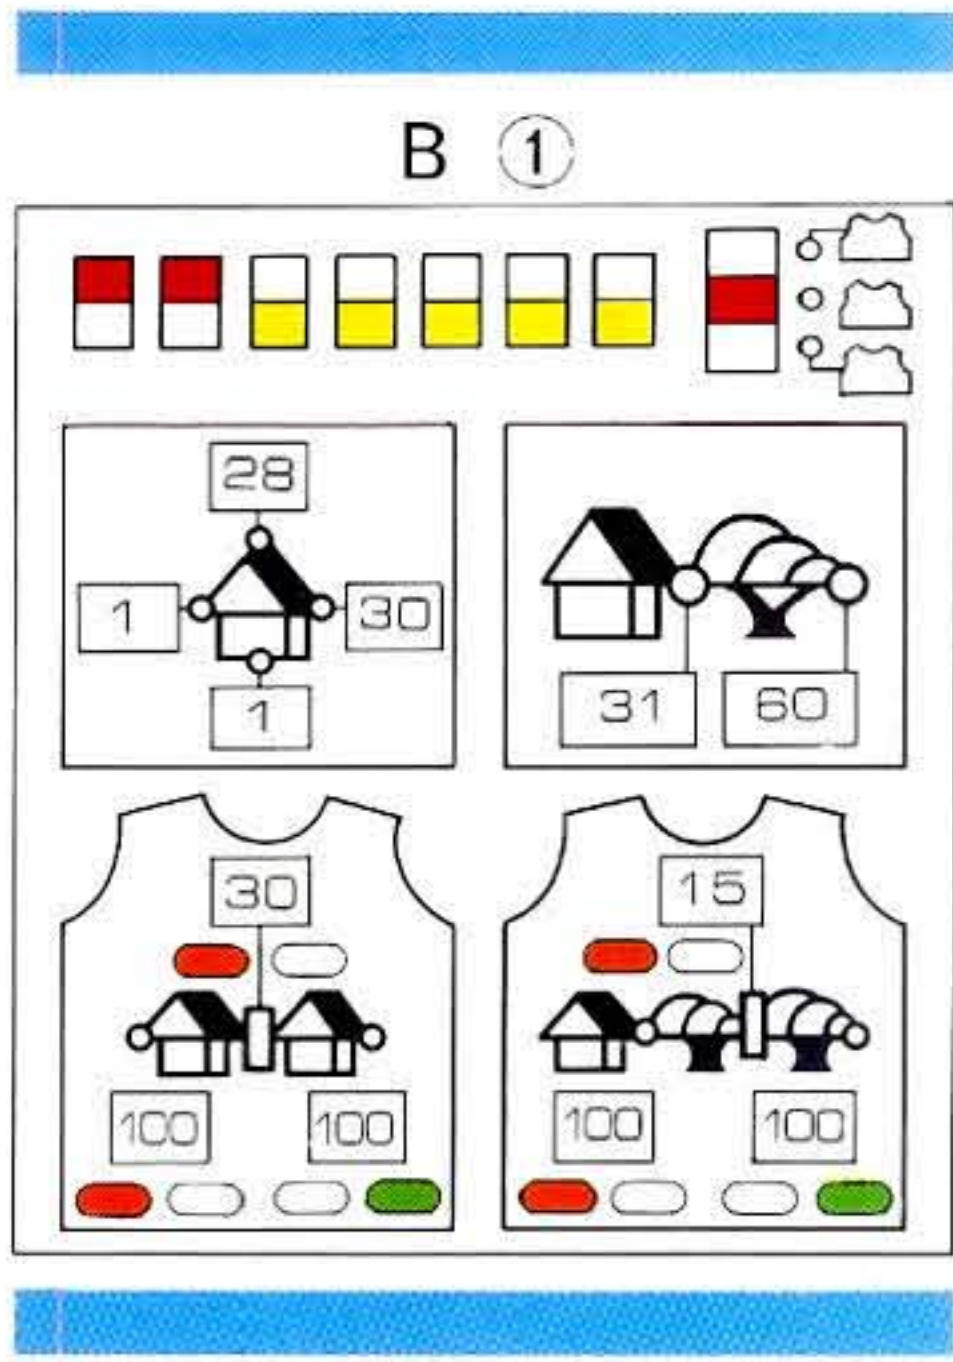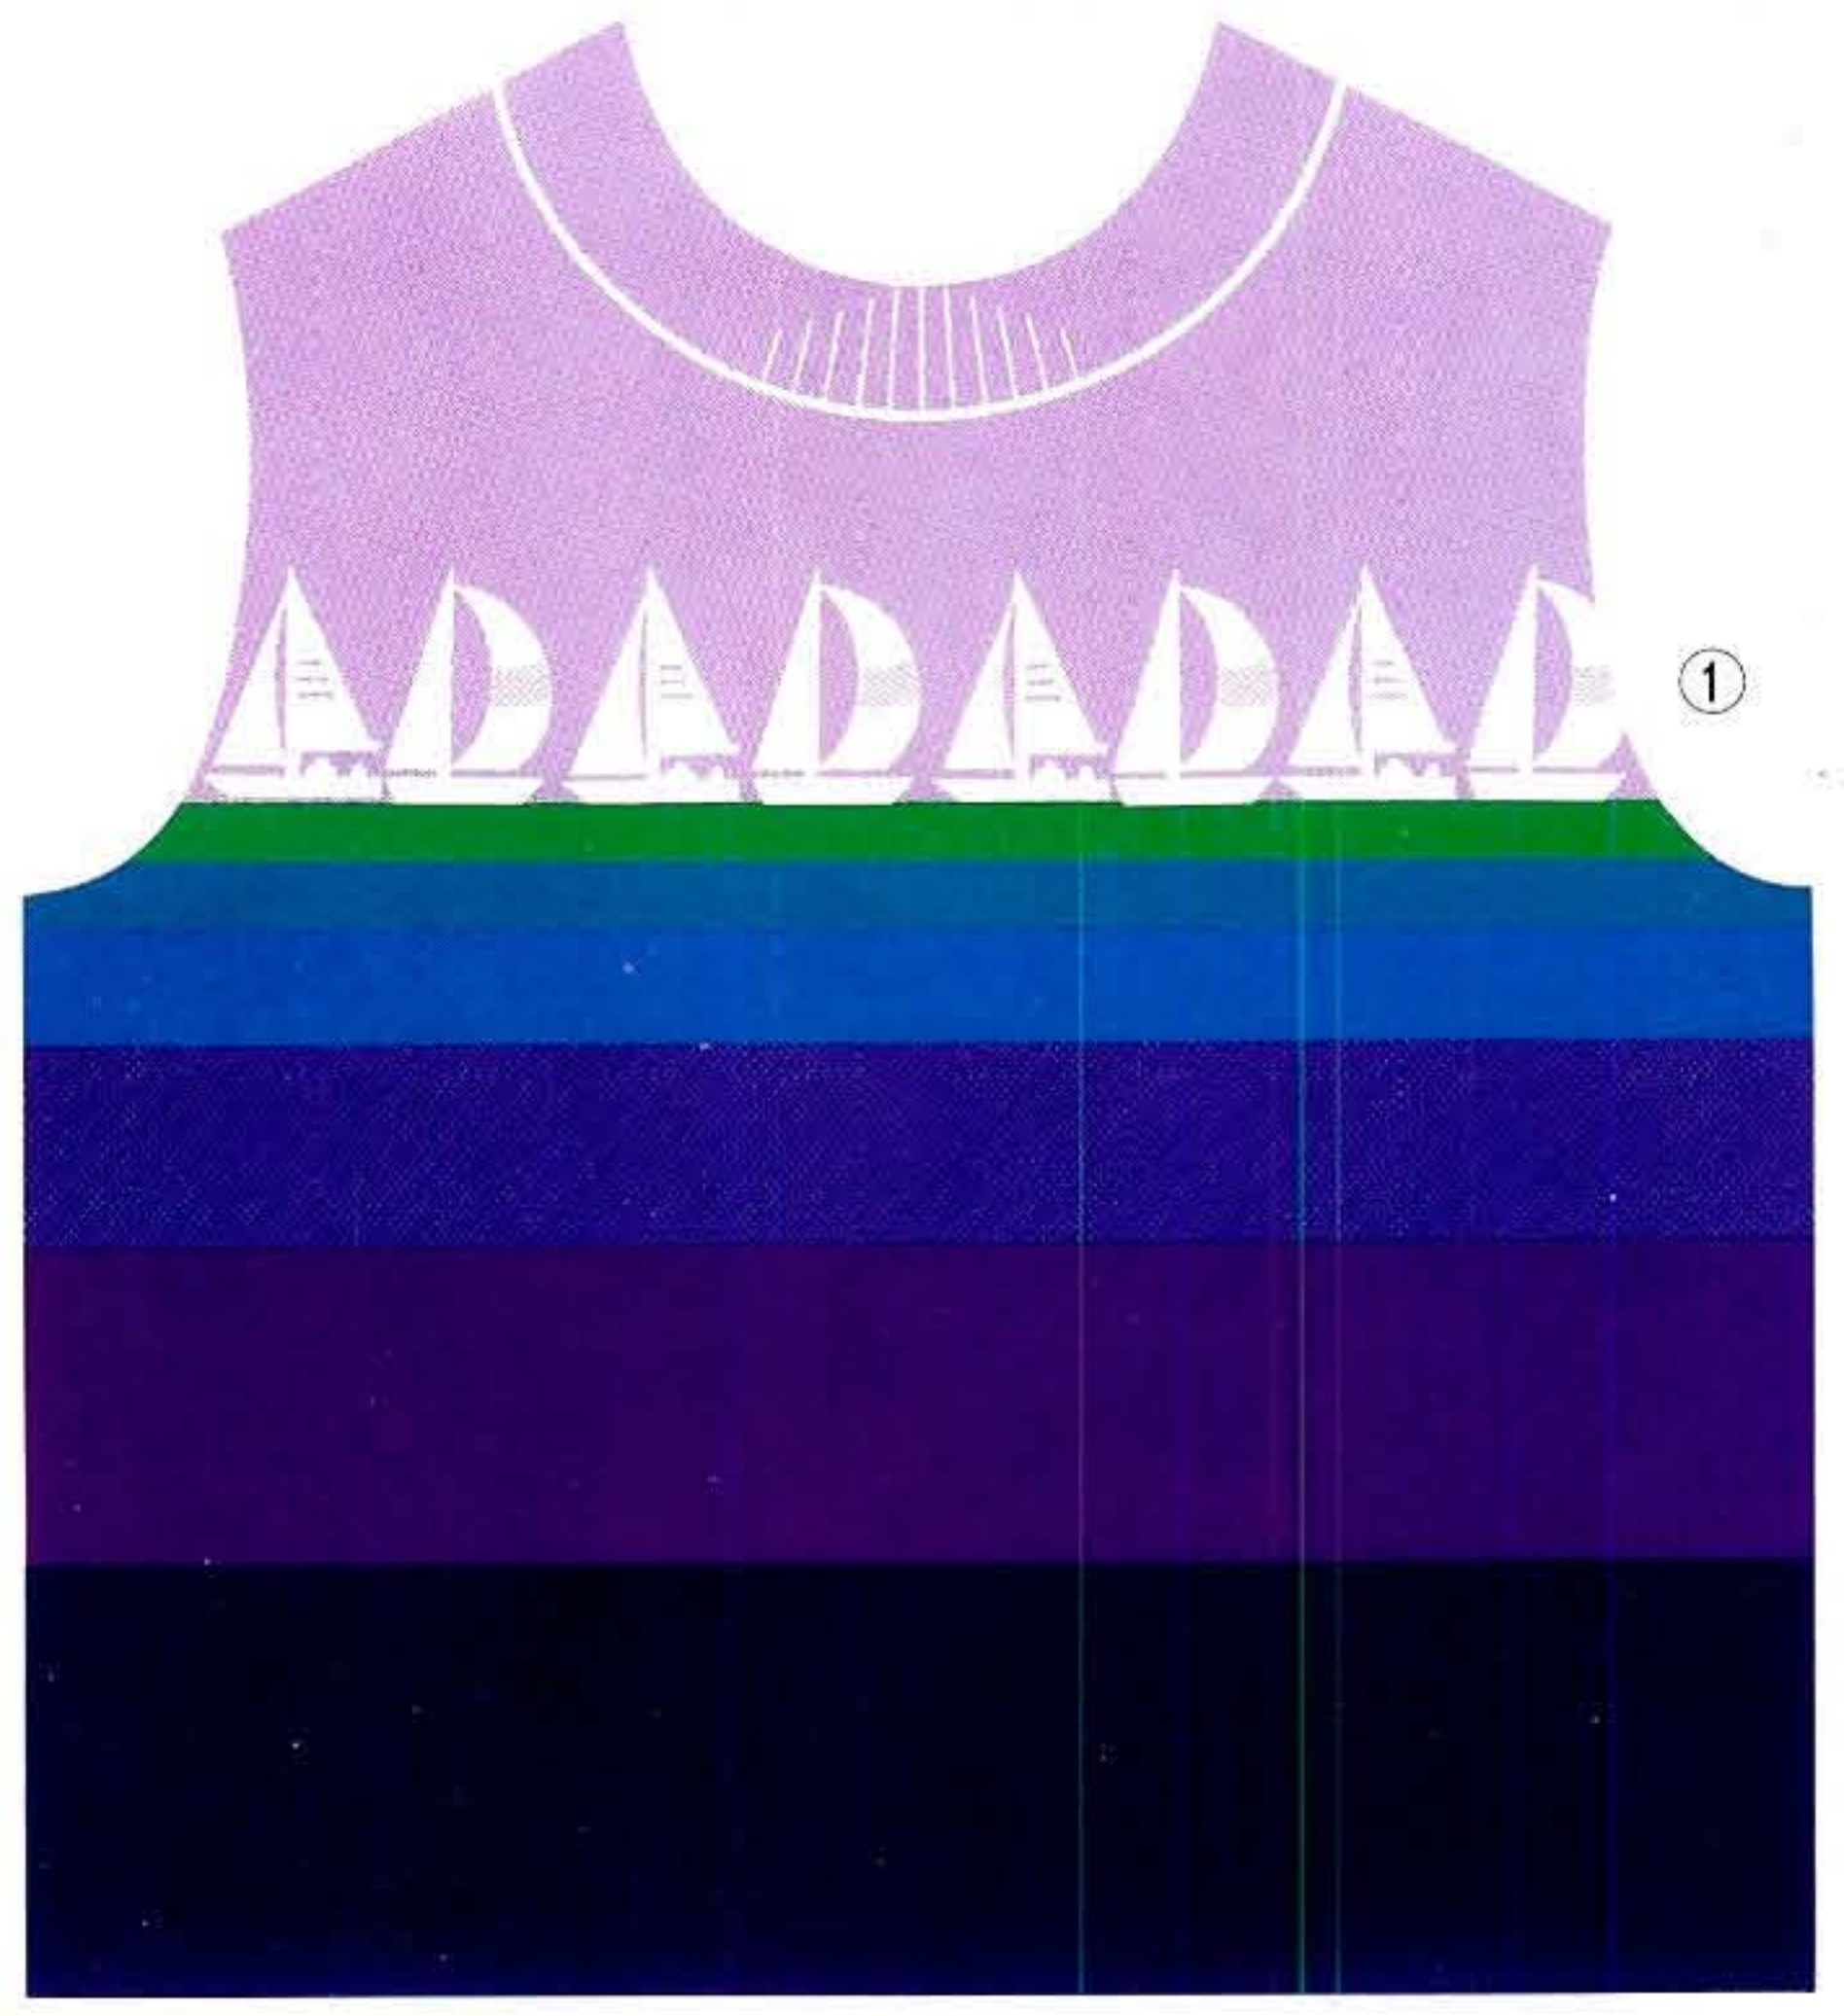

C



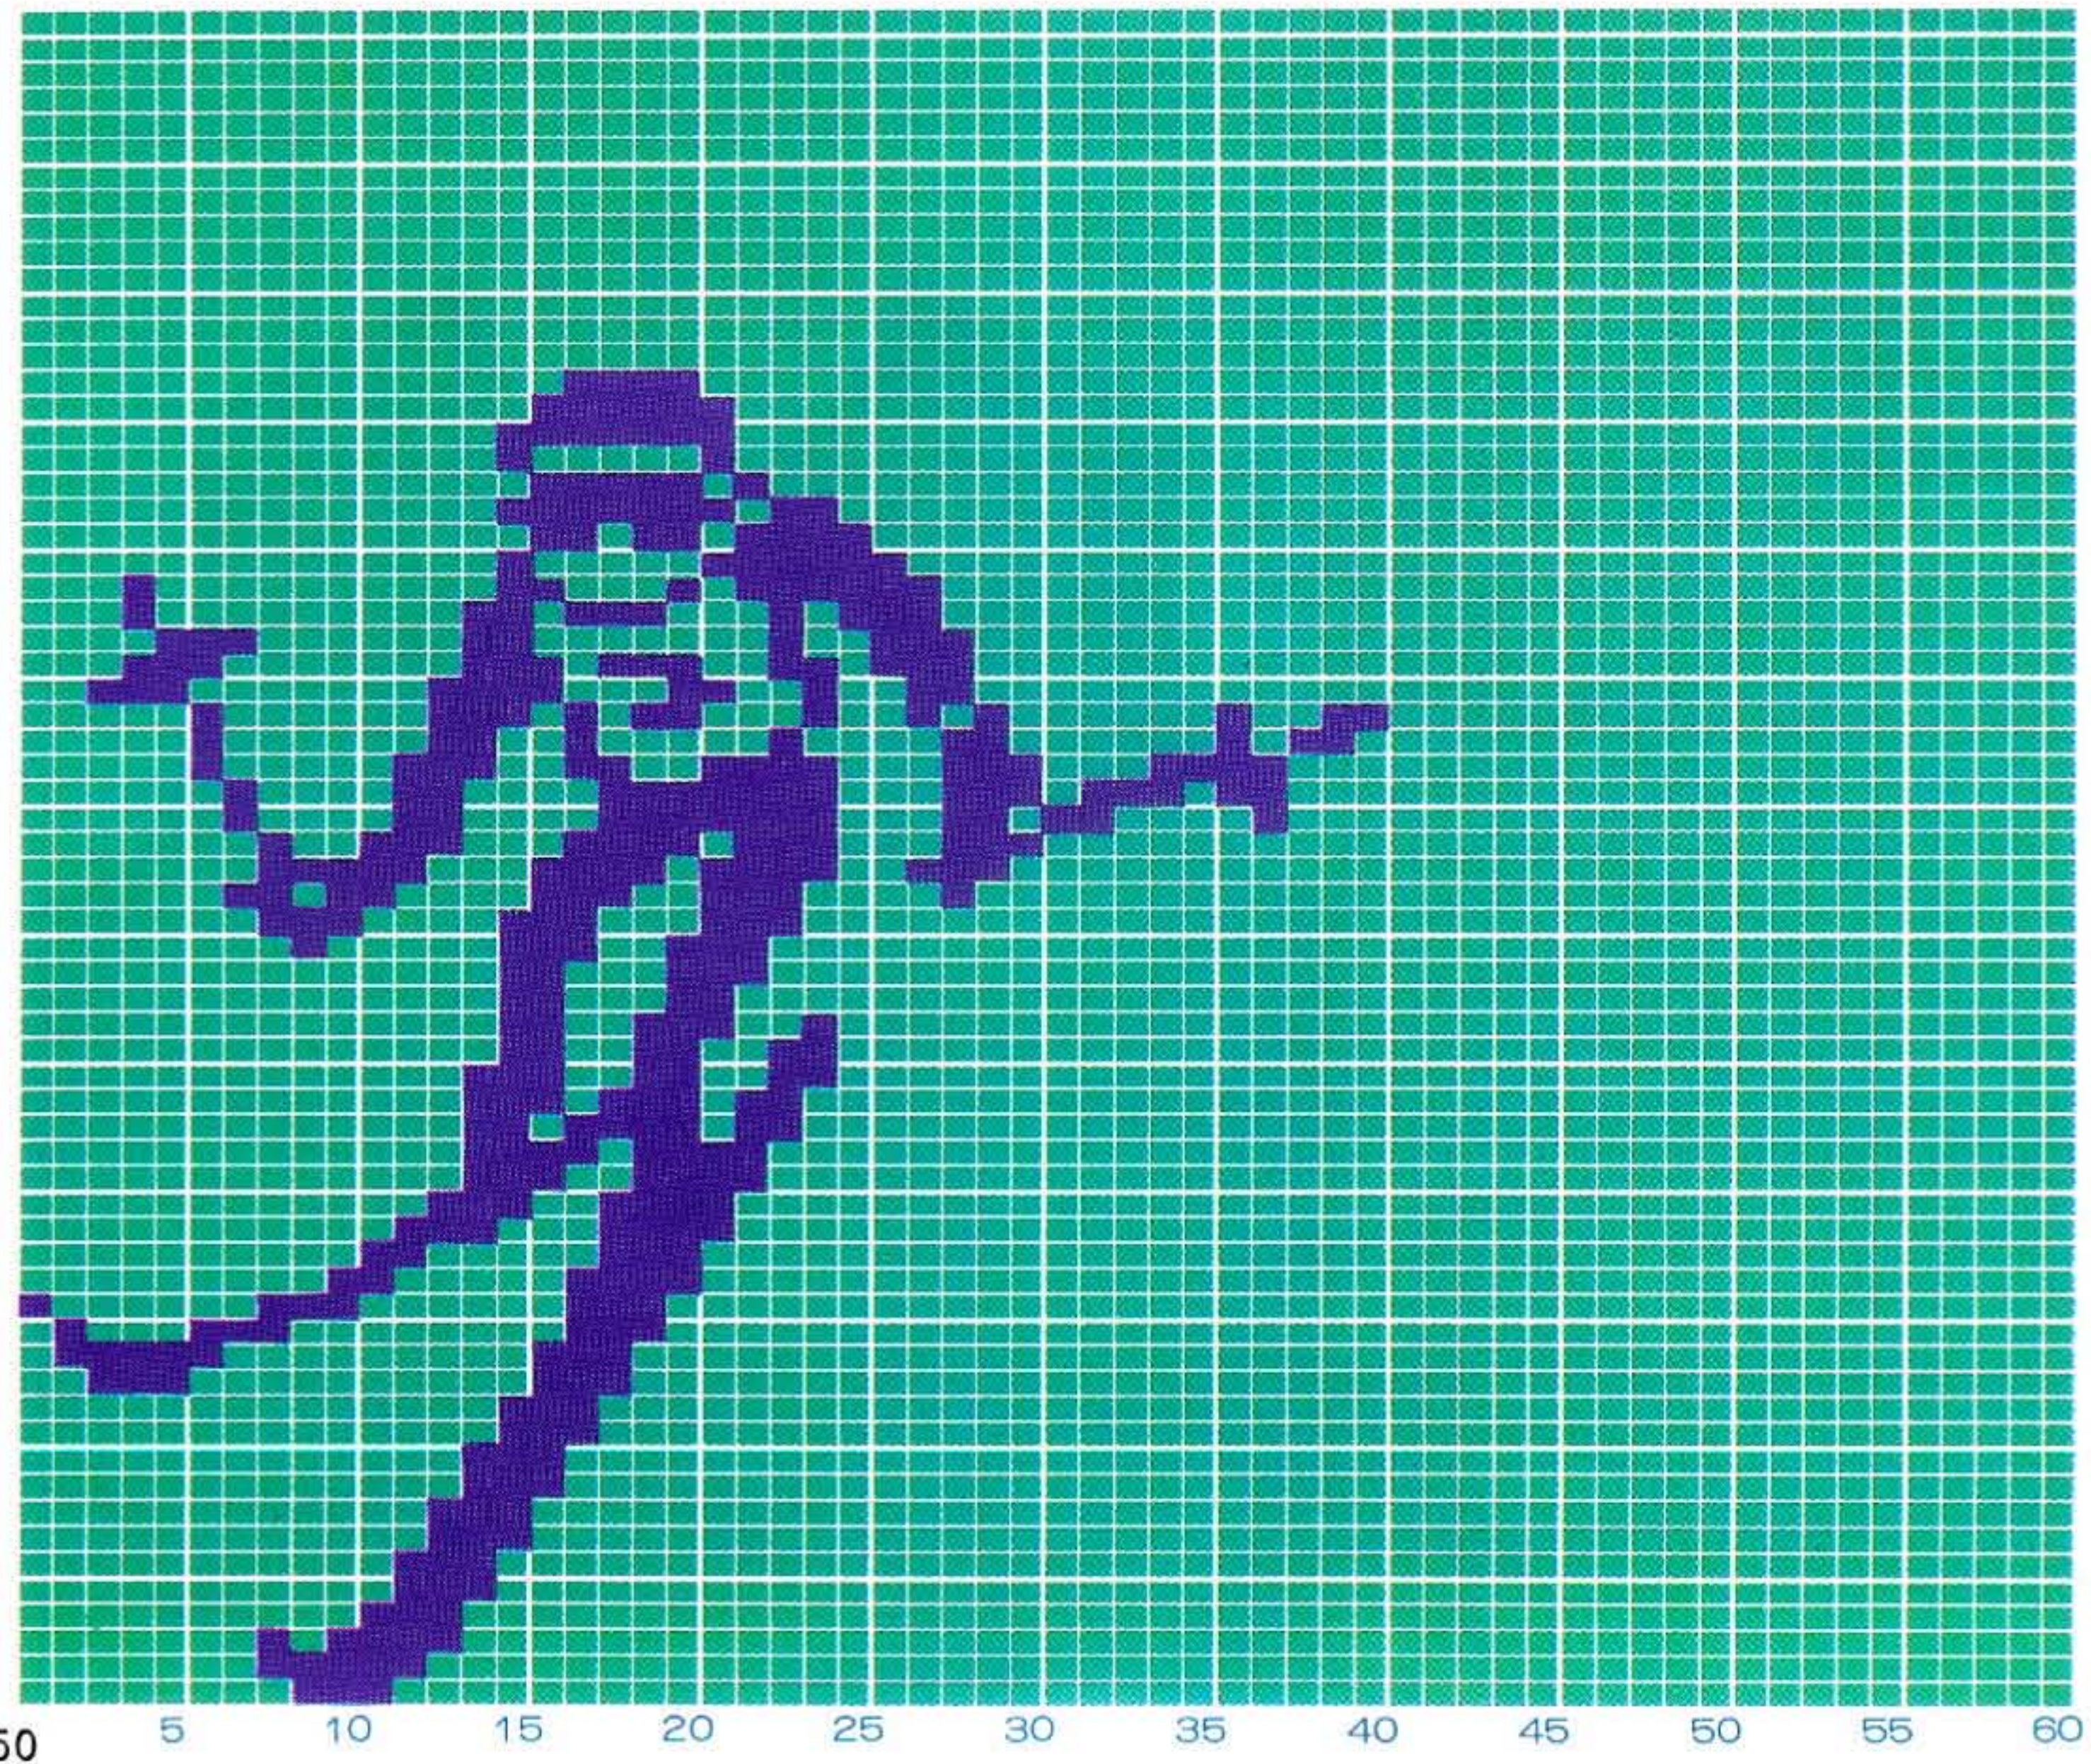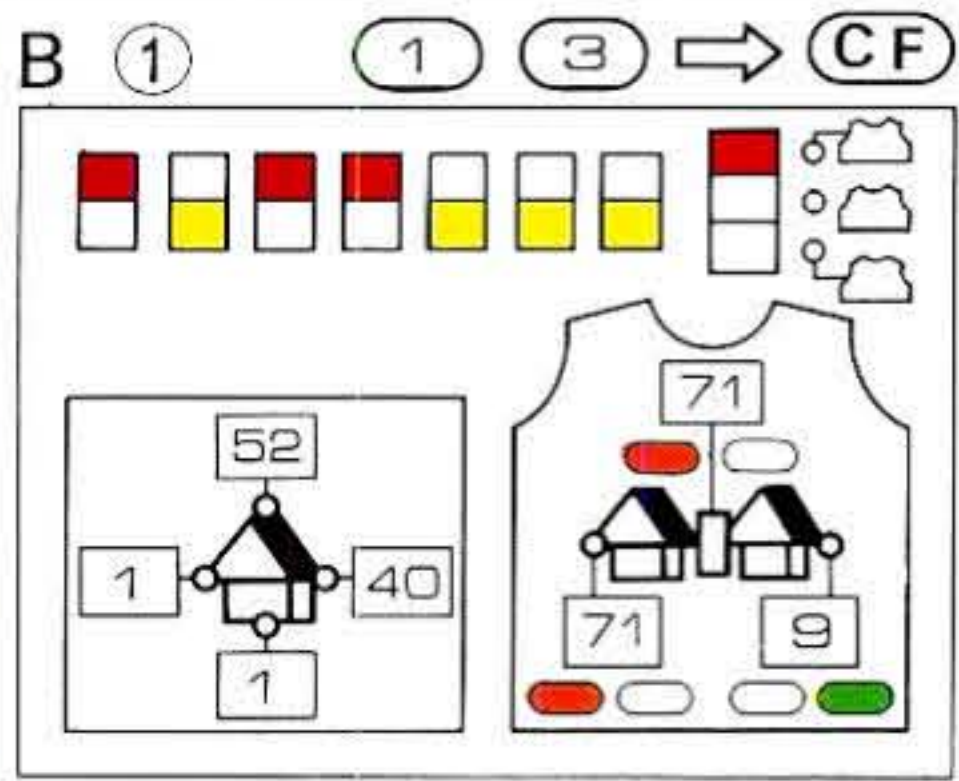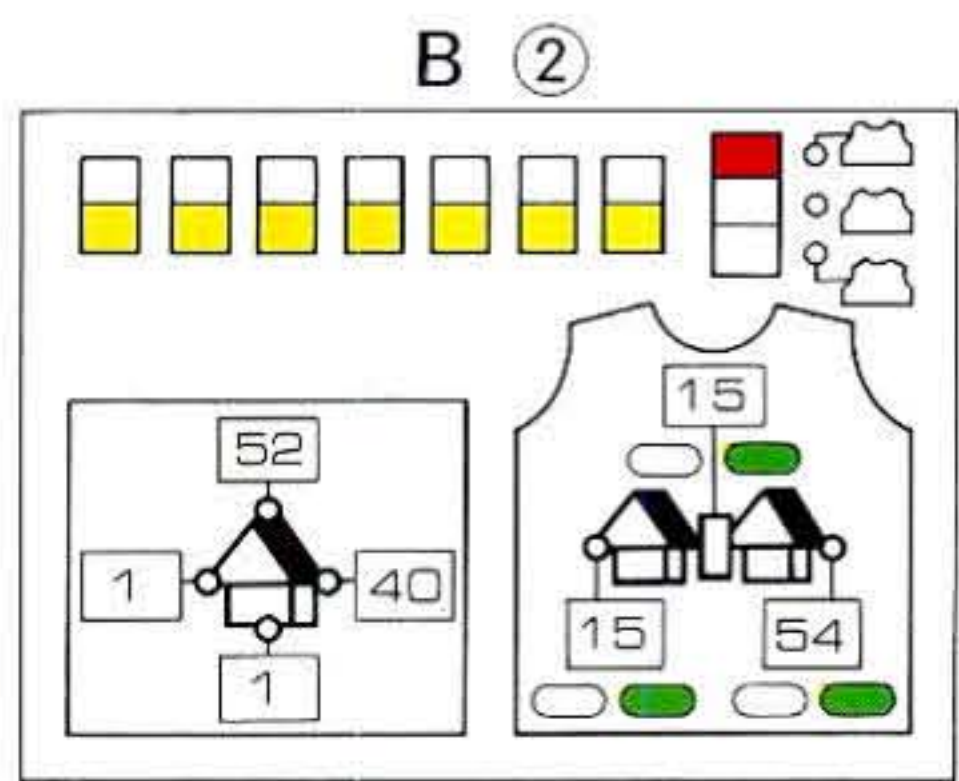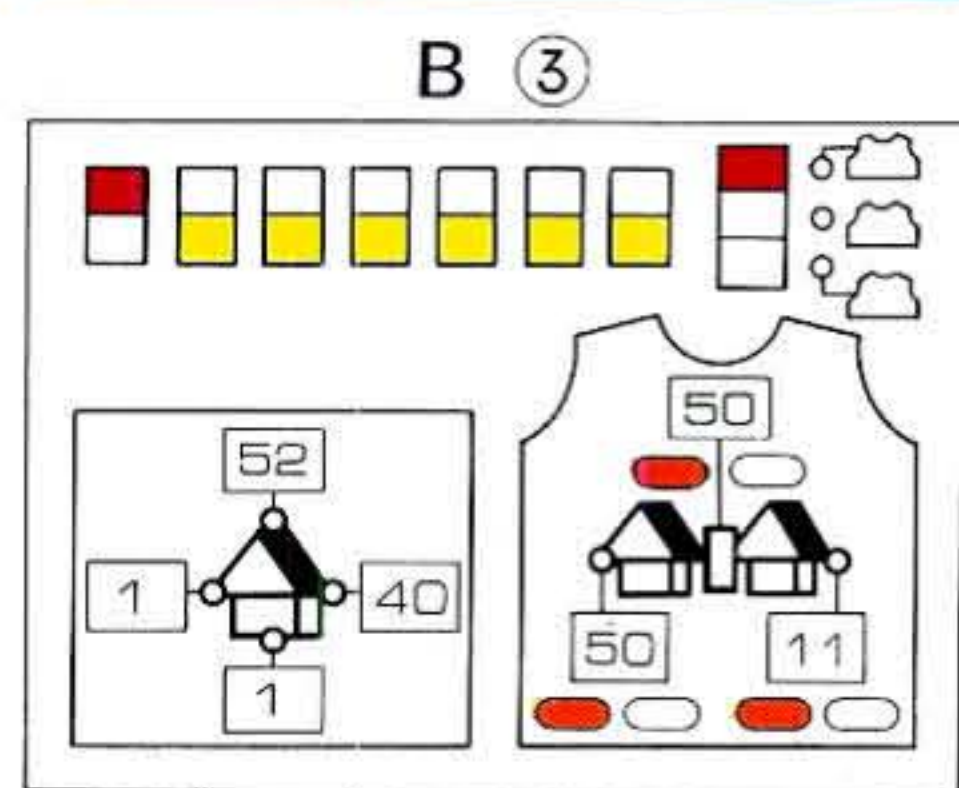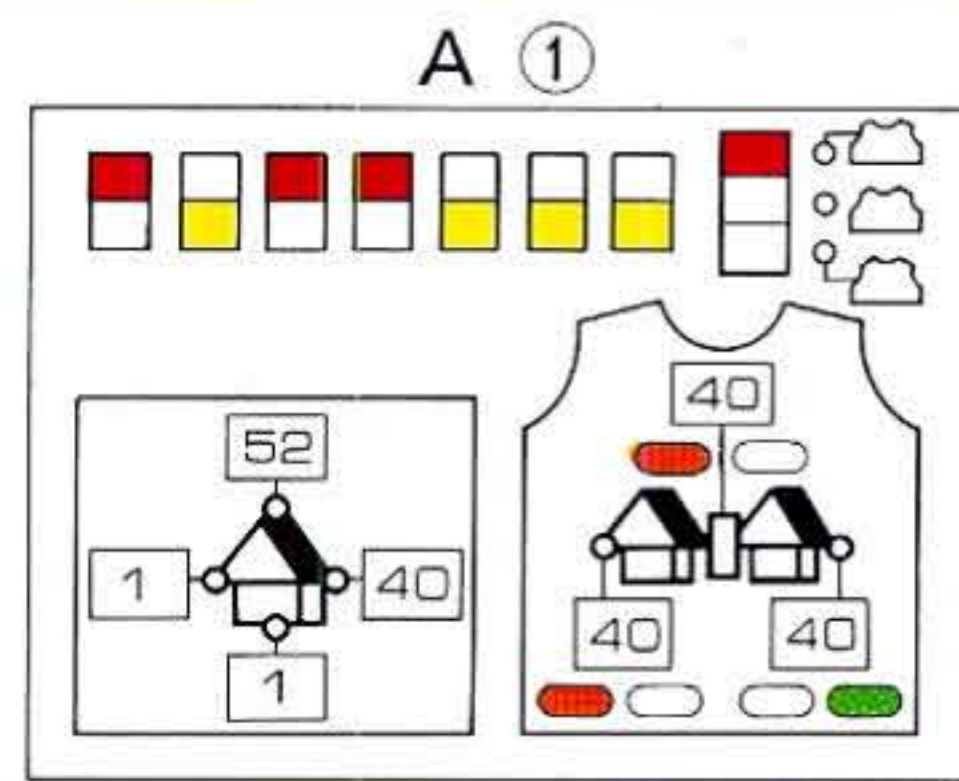     

65
60
55
50
45
40
35
30
25
20
15
10
5
1

B ①
13をインプットし はじめ キーを押します

50 5 10 15 20 25 30 35 40 45 50 55 60

 
A

 
 
 
 
 


B



C

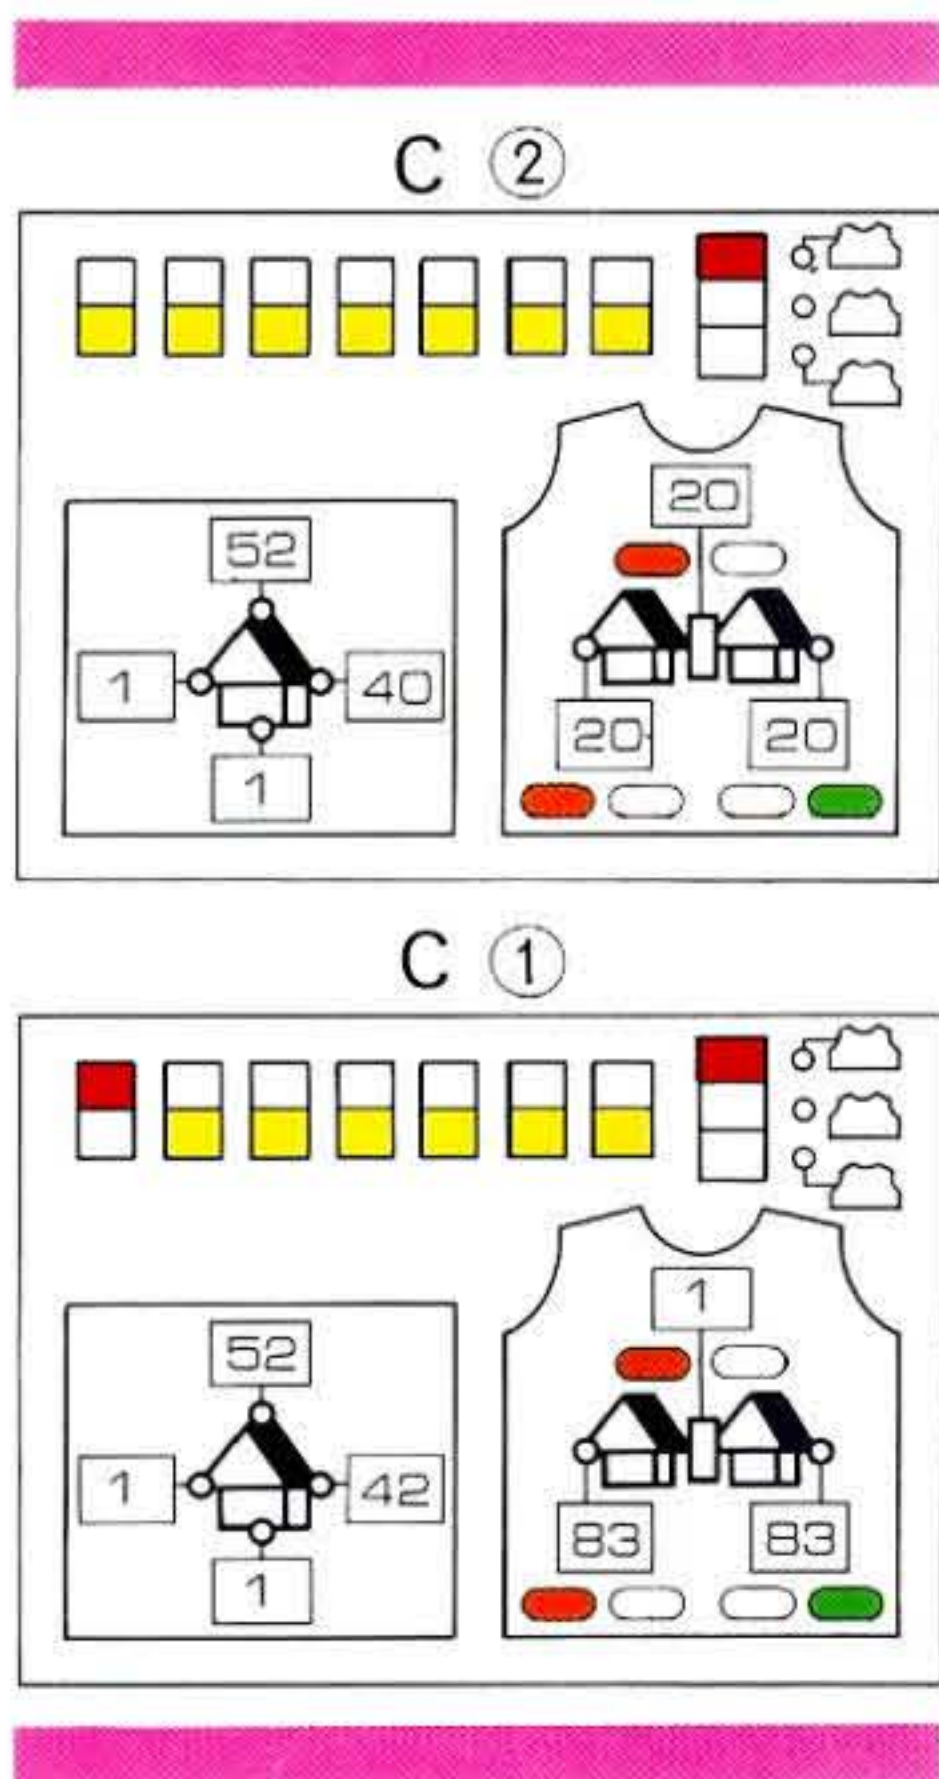

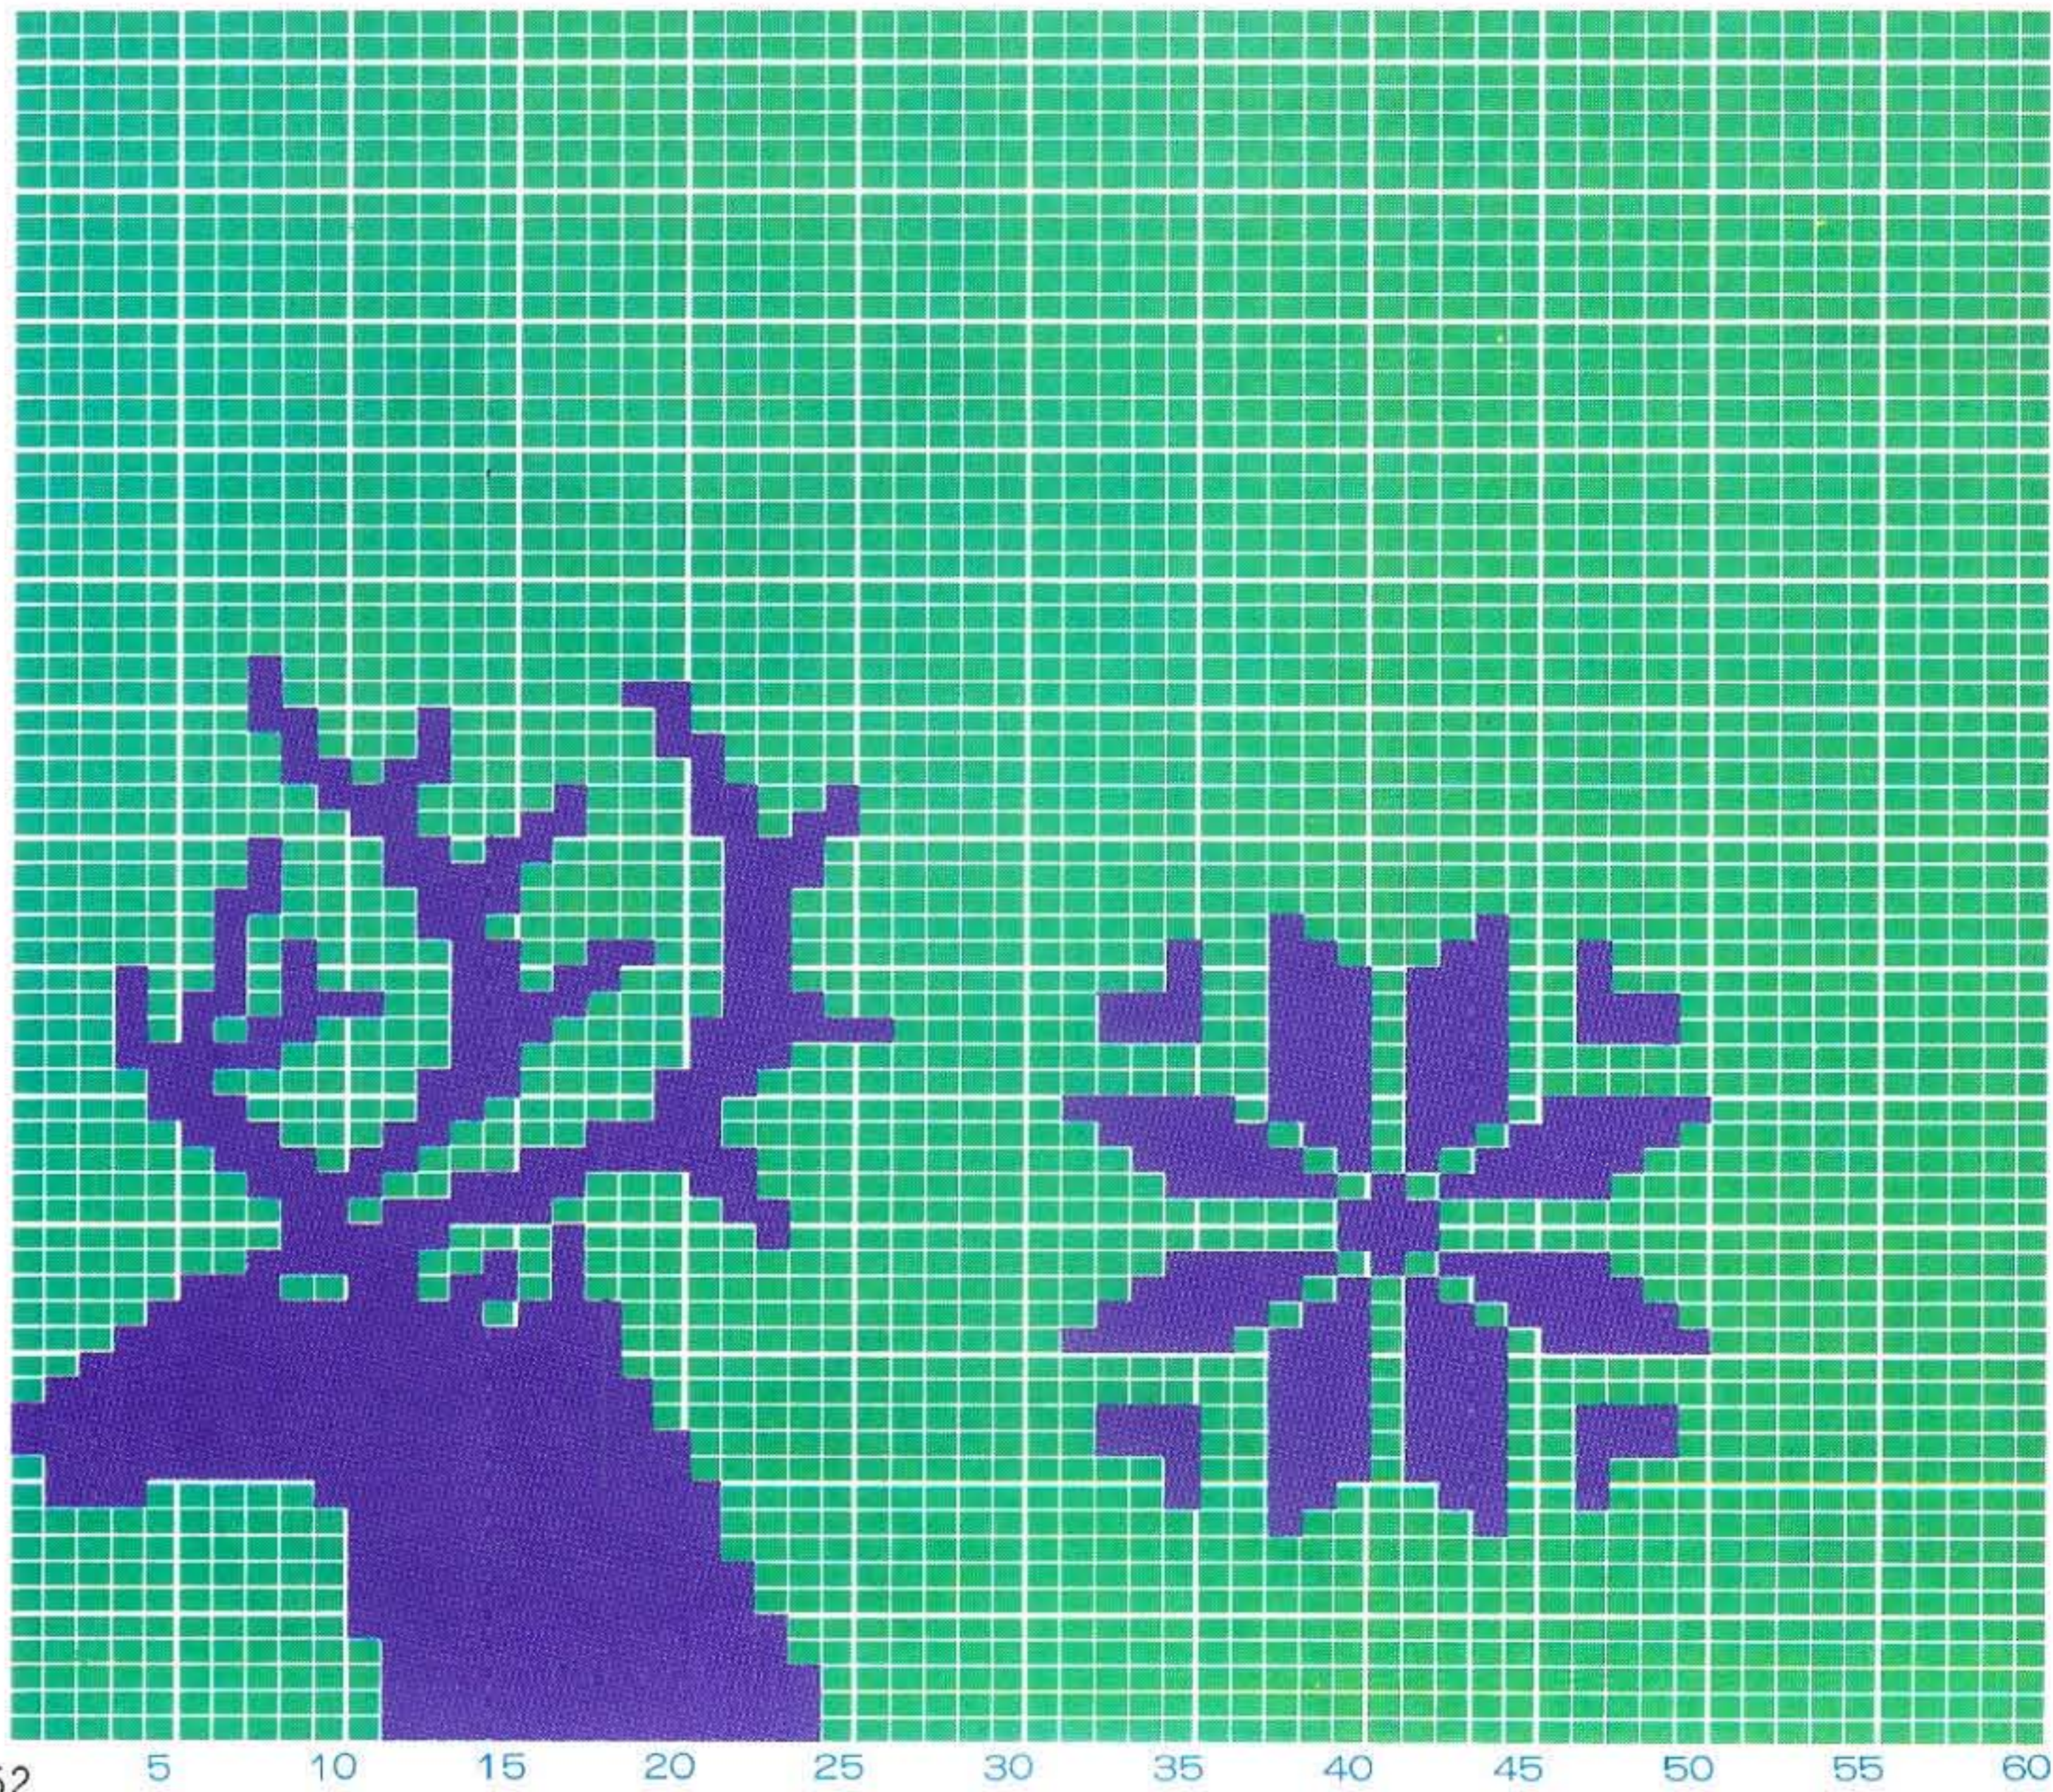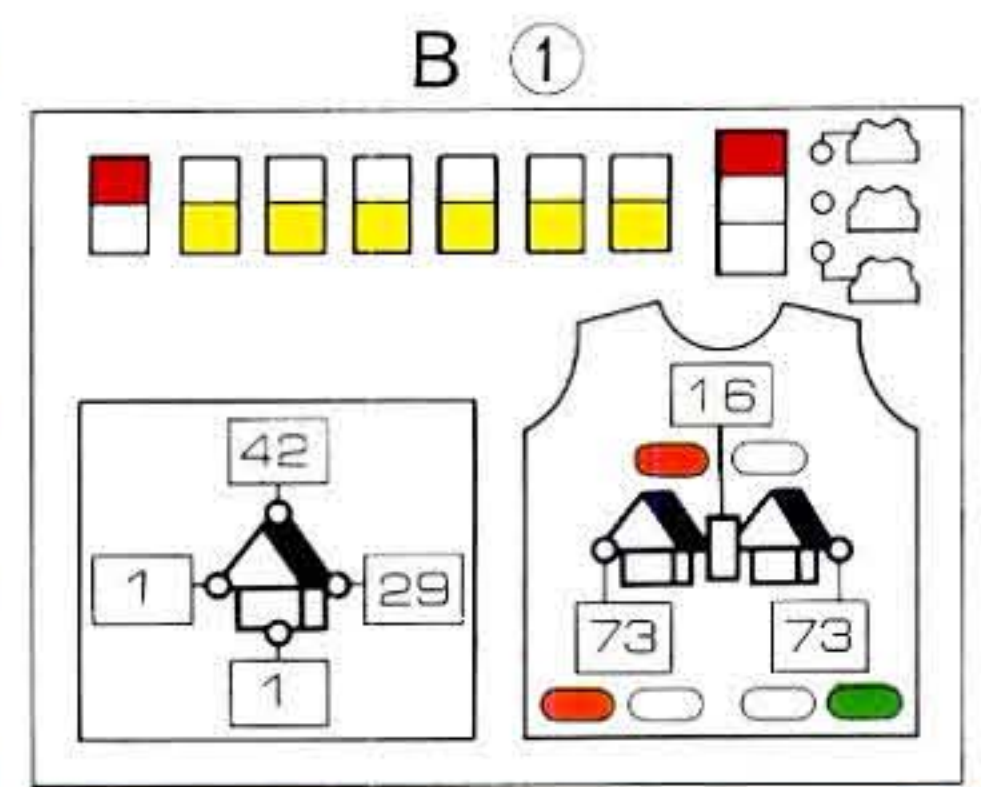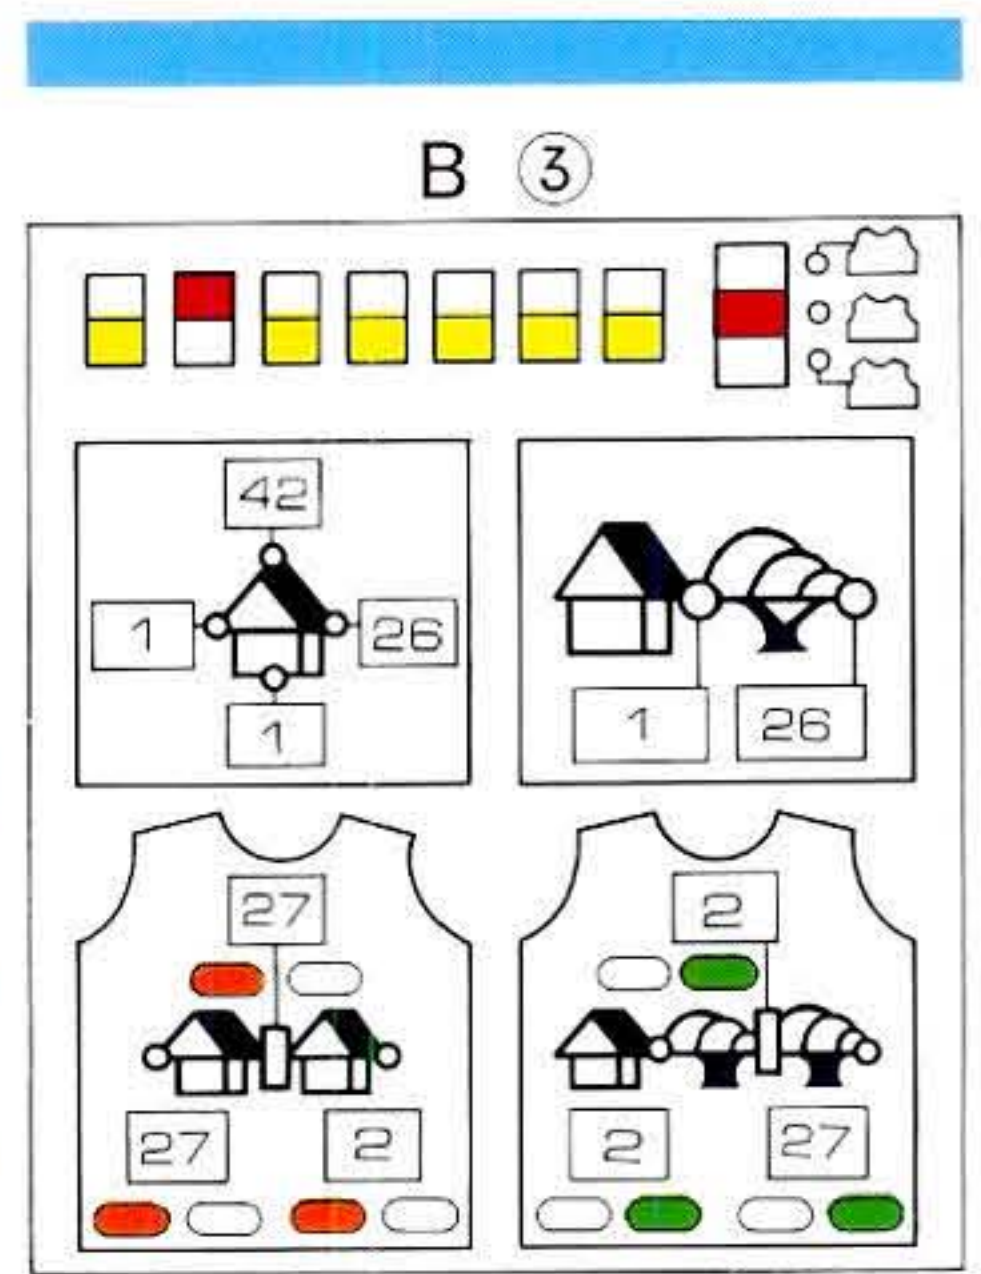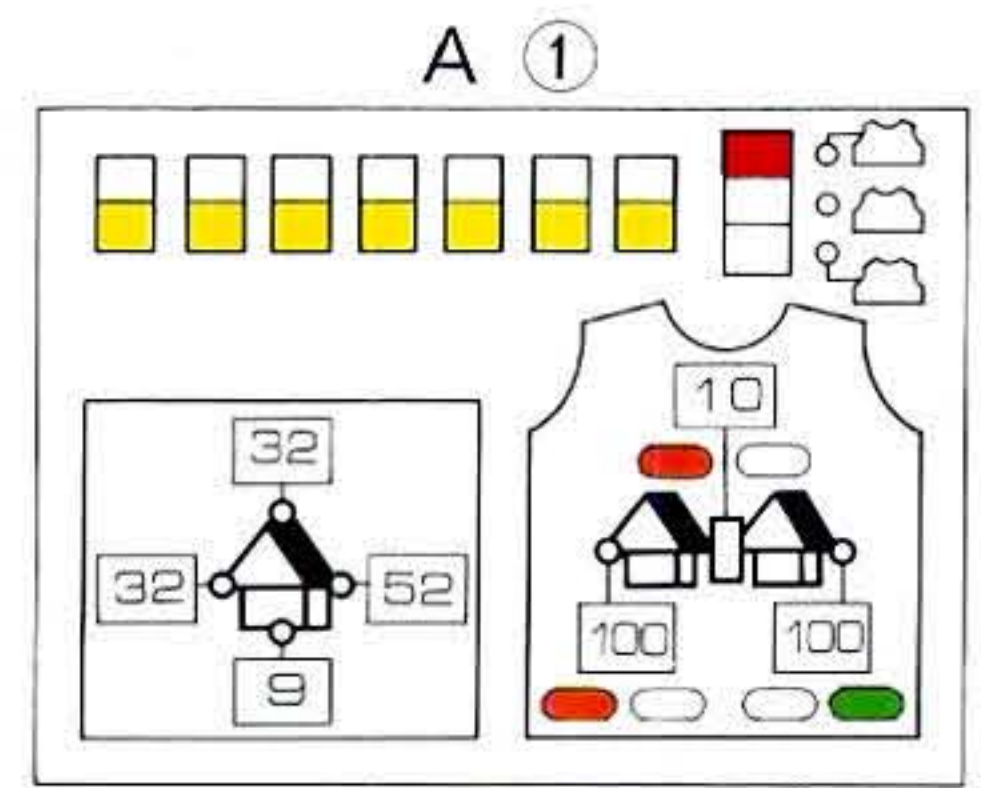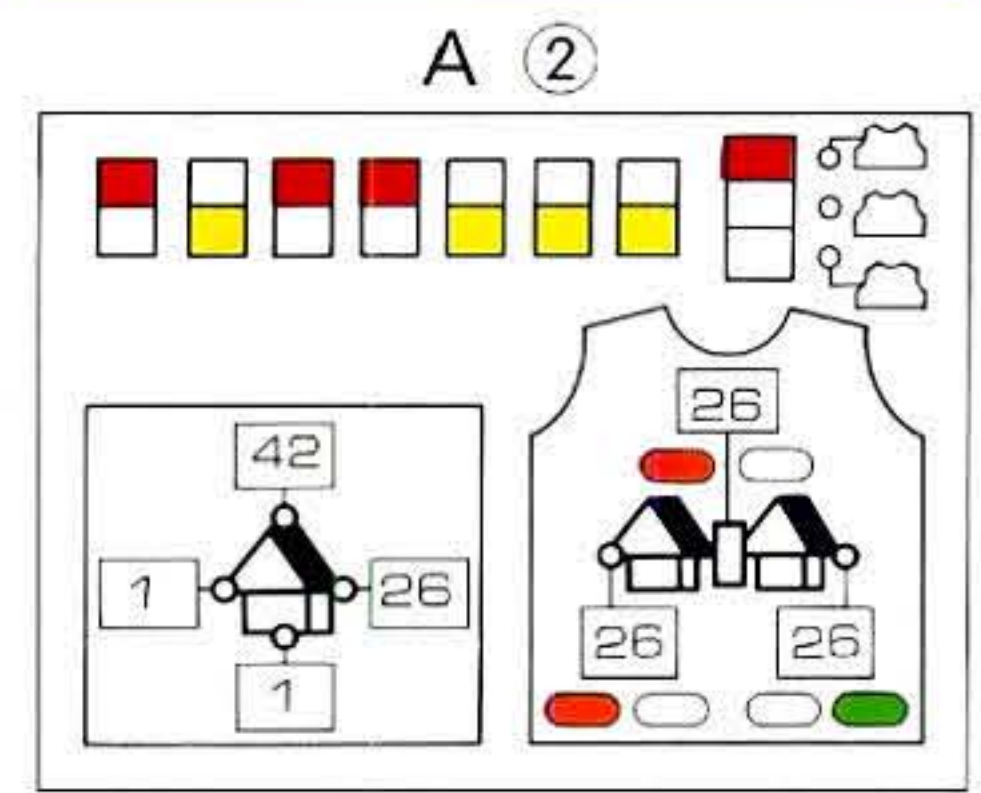


A



B









 B ②の操作表はA ①と同じです。
 B ② Programming : same as for A ①

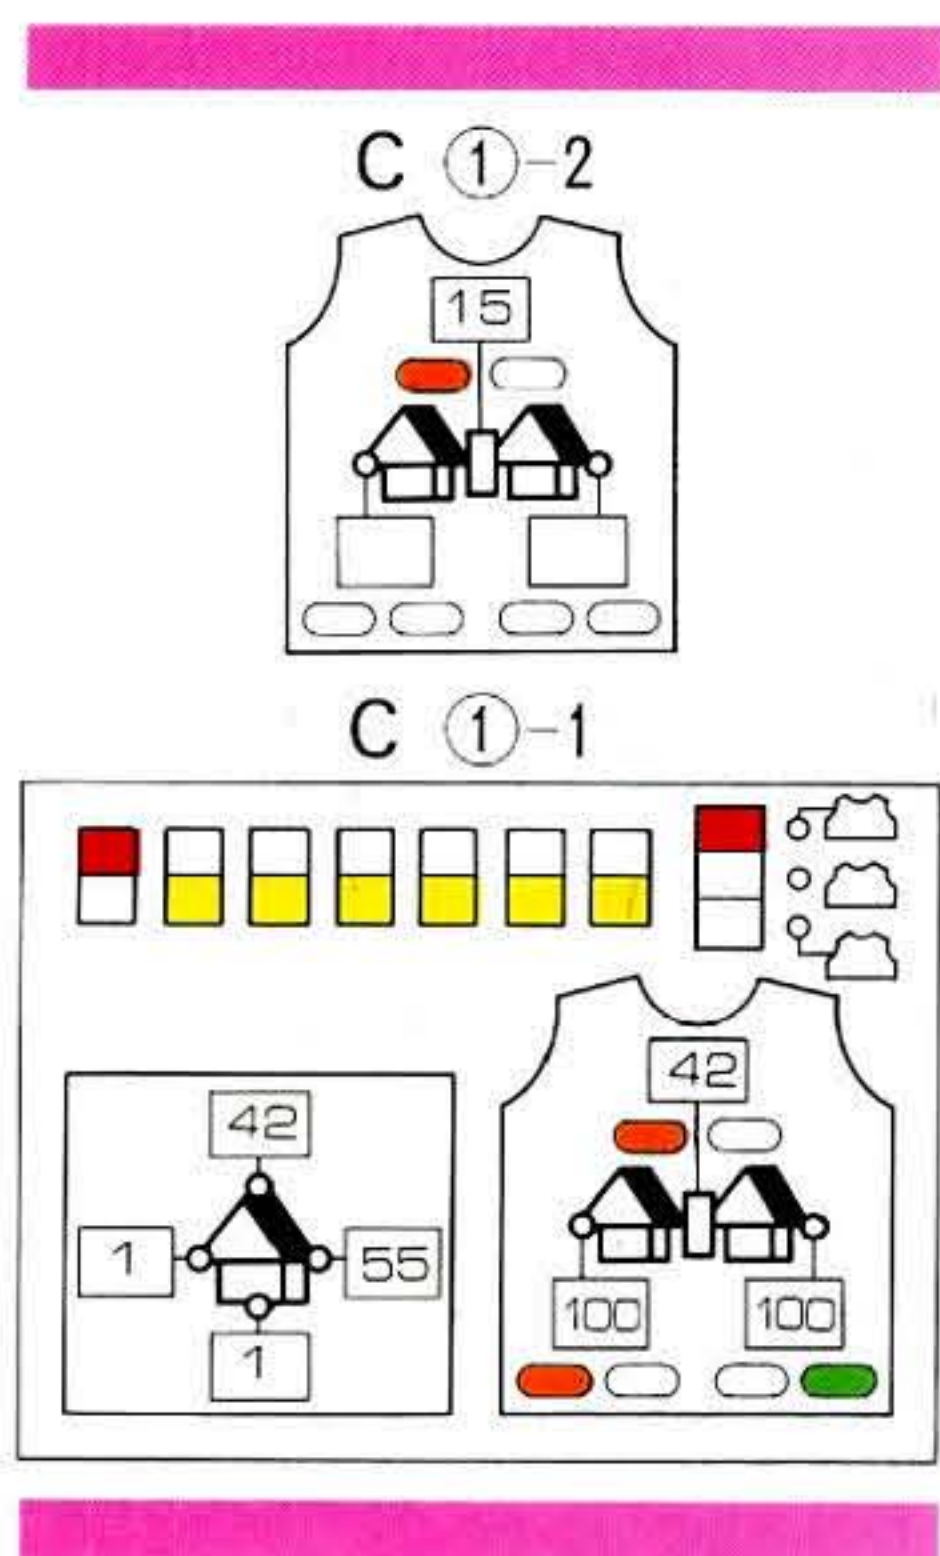

C



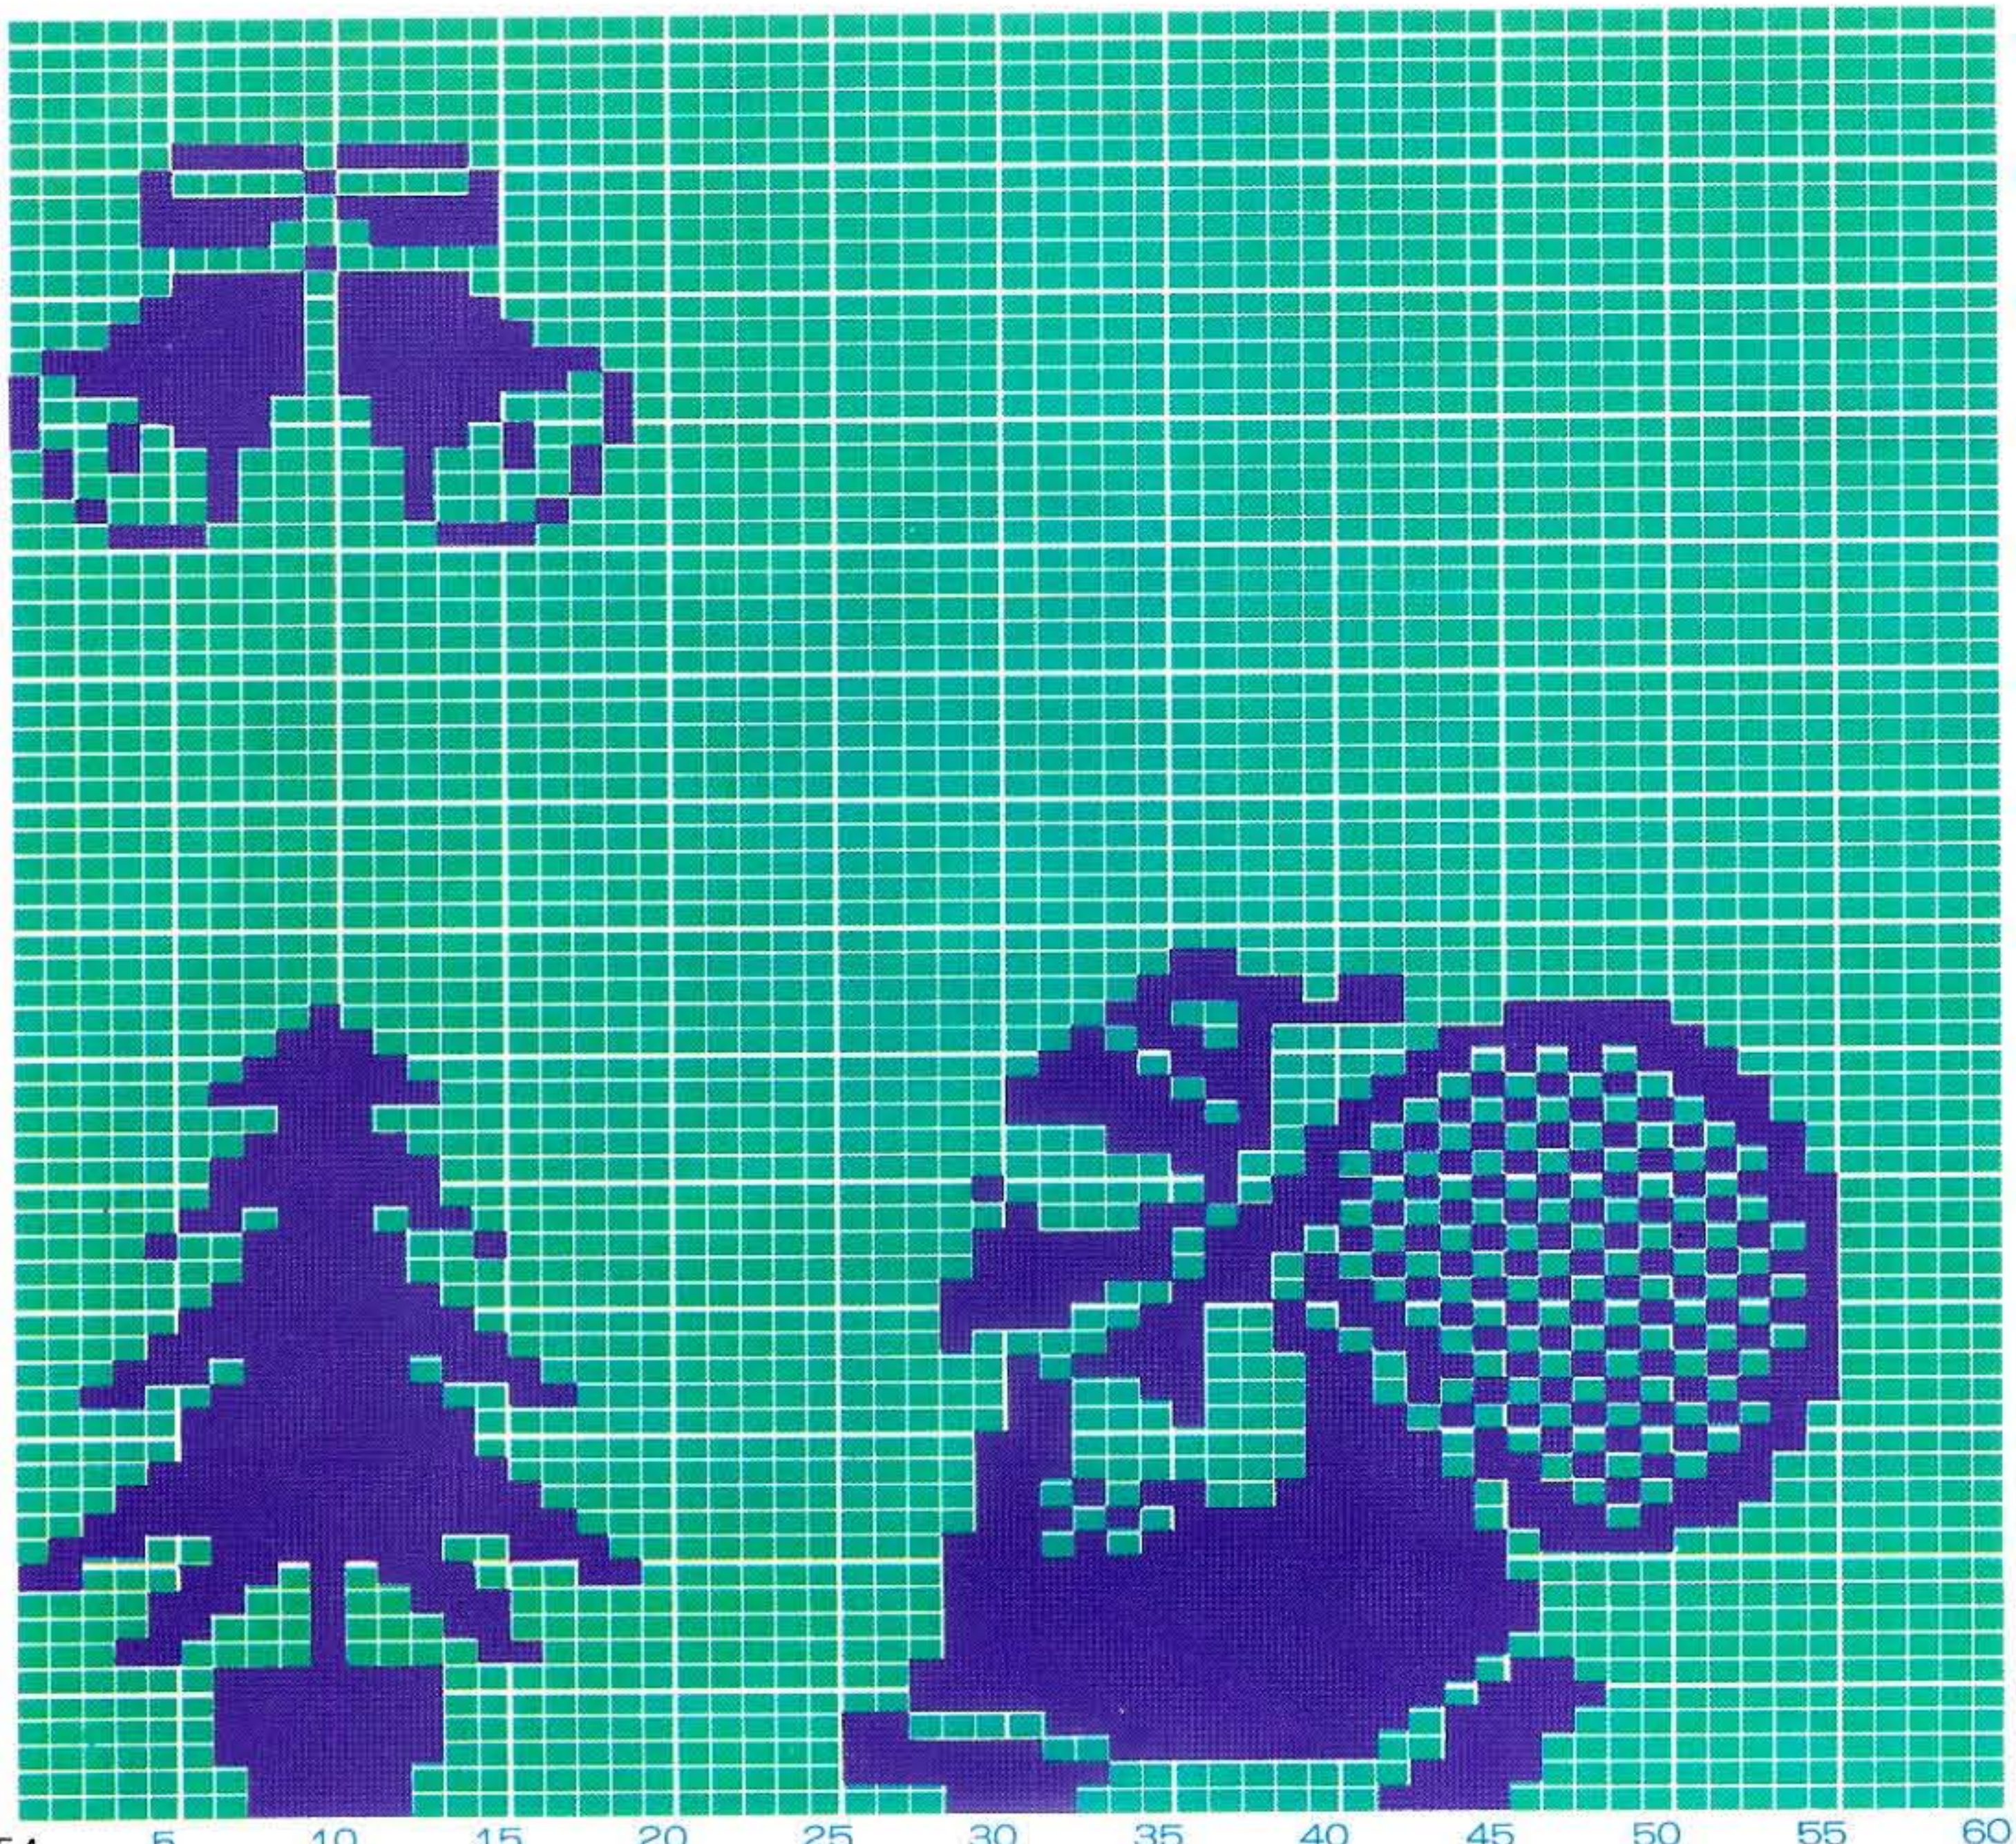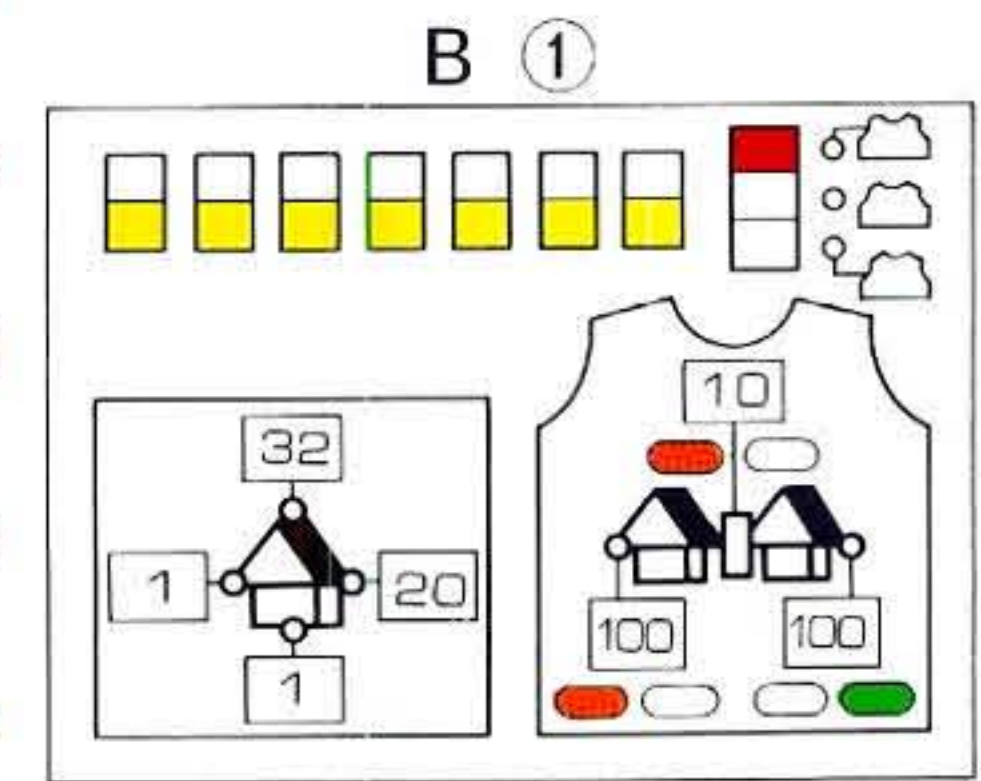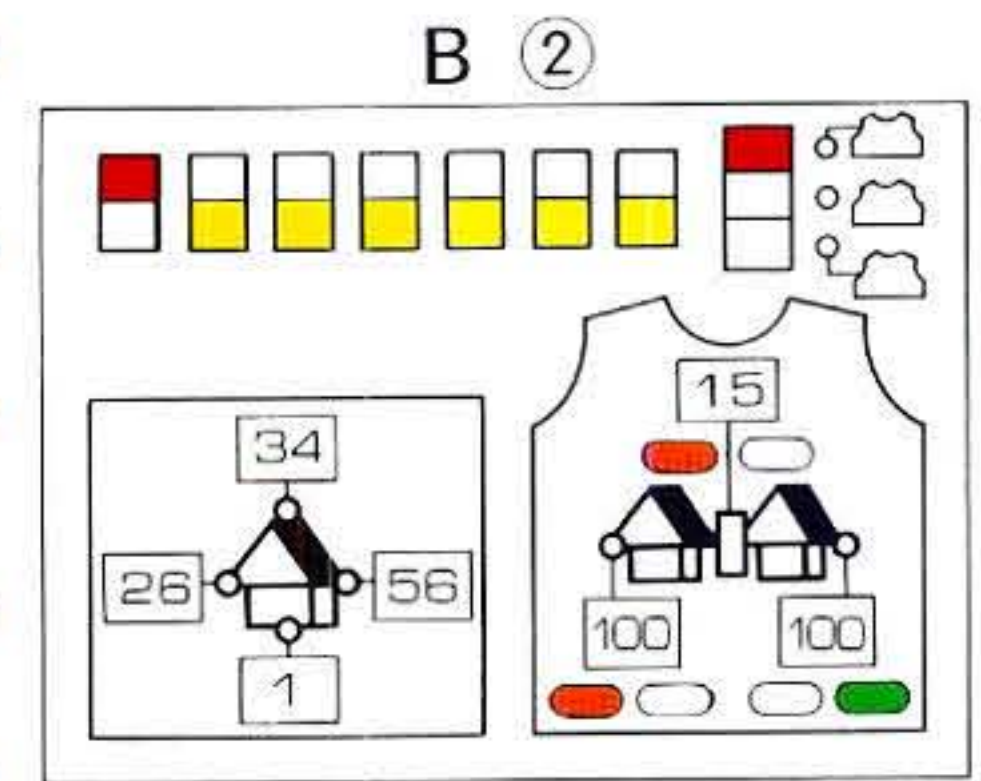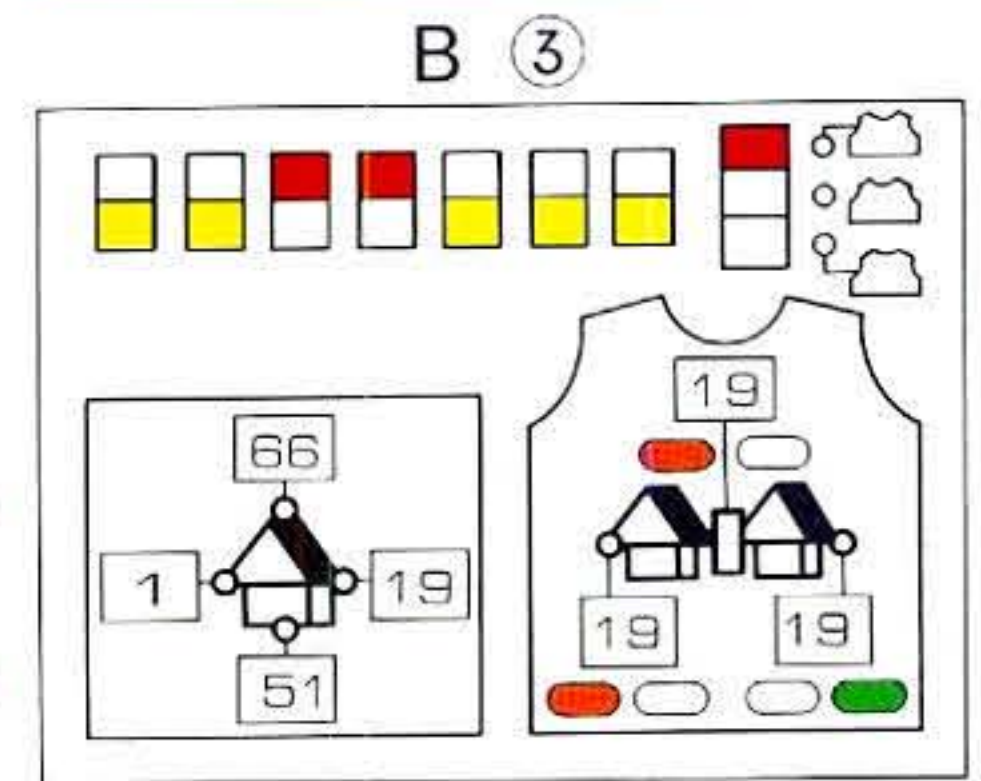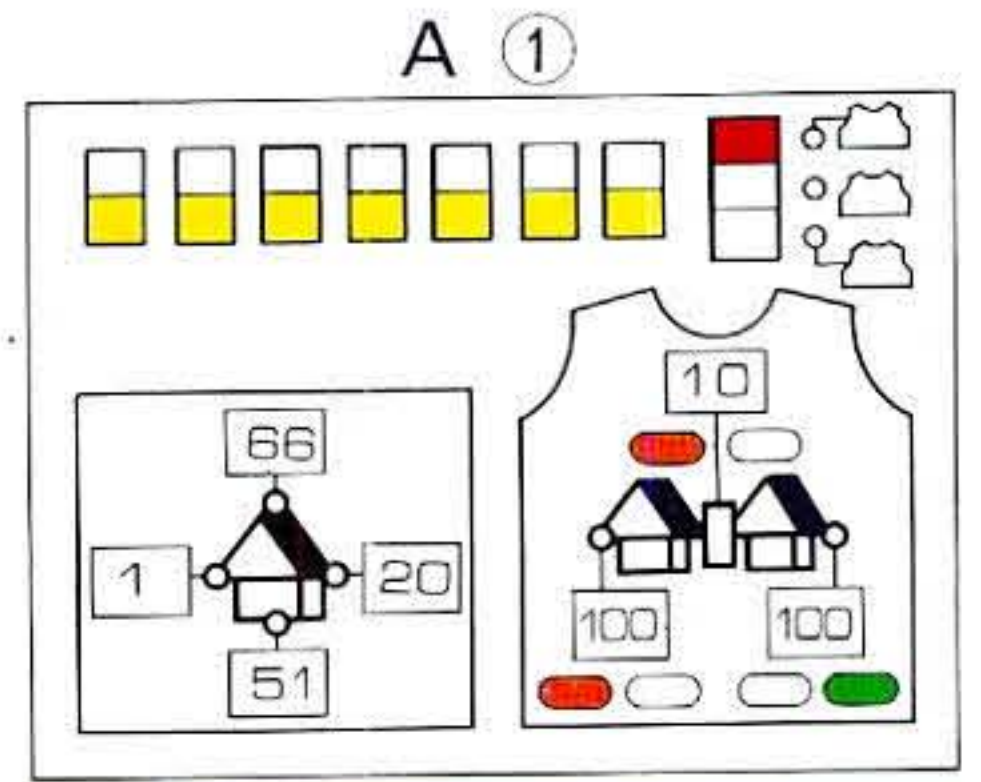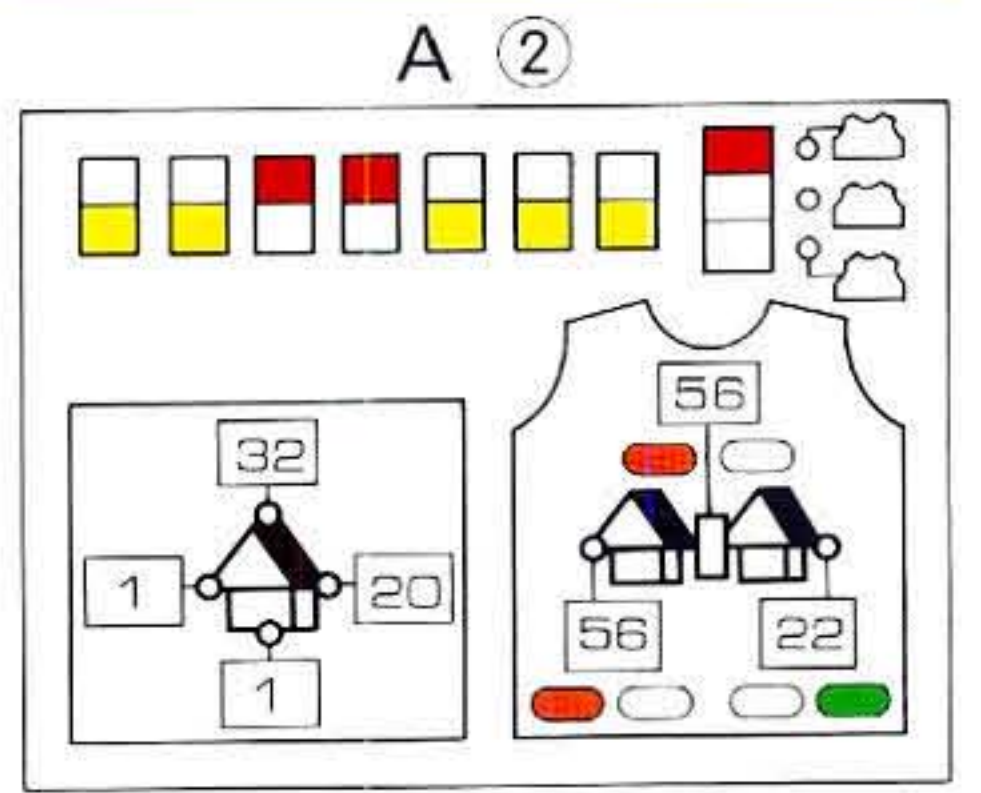      

A



B



C③の操作表はA①と同じです。

C②の操作表はB②と同じです。

C①の操作表はA①と同じです。

C ③ Programming : same as for A ①

C ② Programming : same as for B ②

C ① Programming : same as for A ①

 
C




A




B






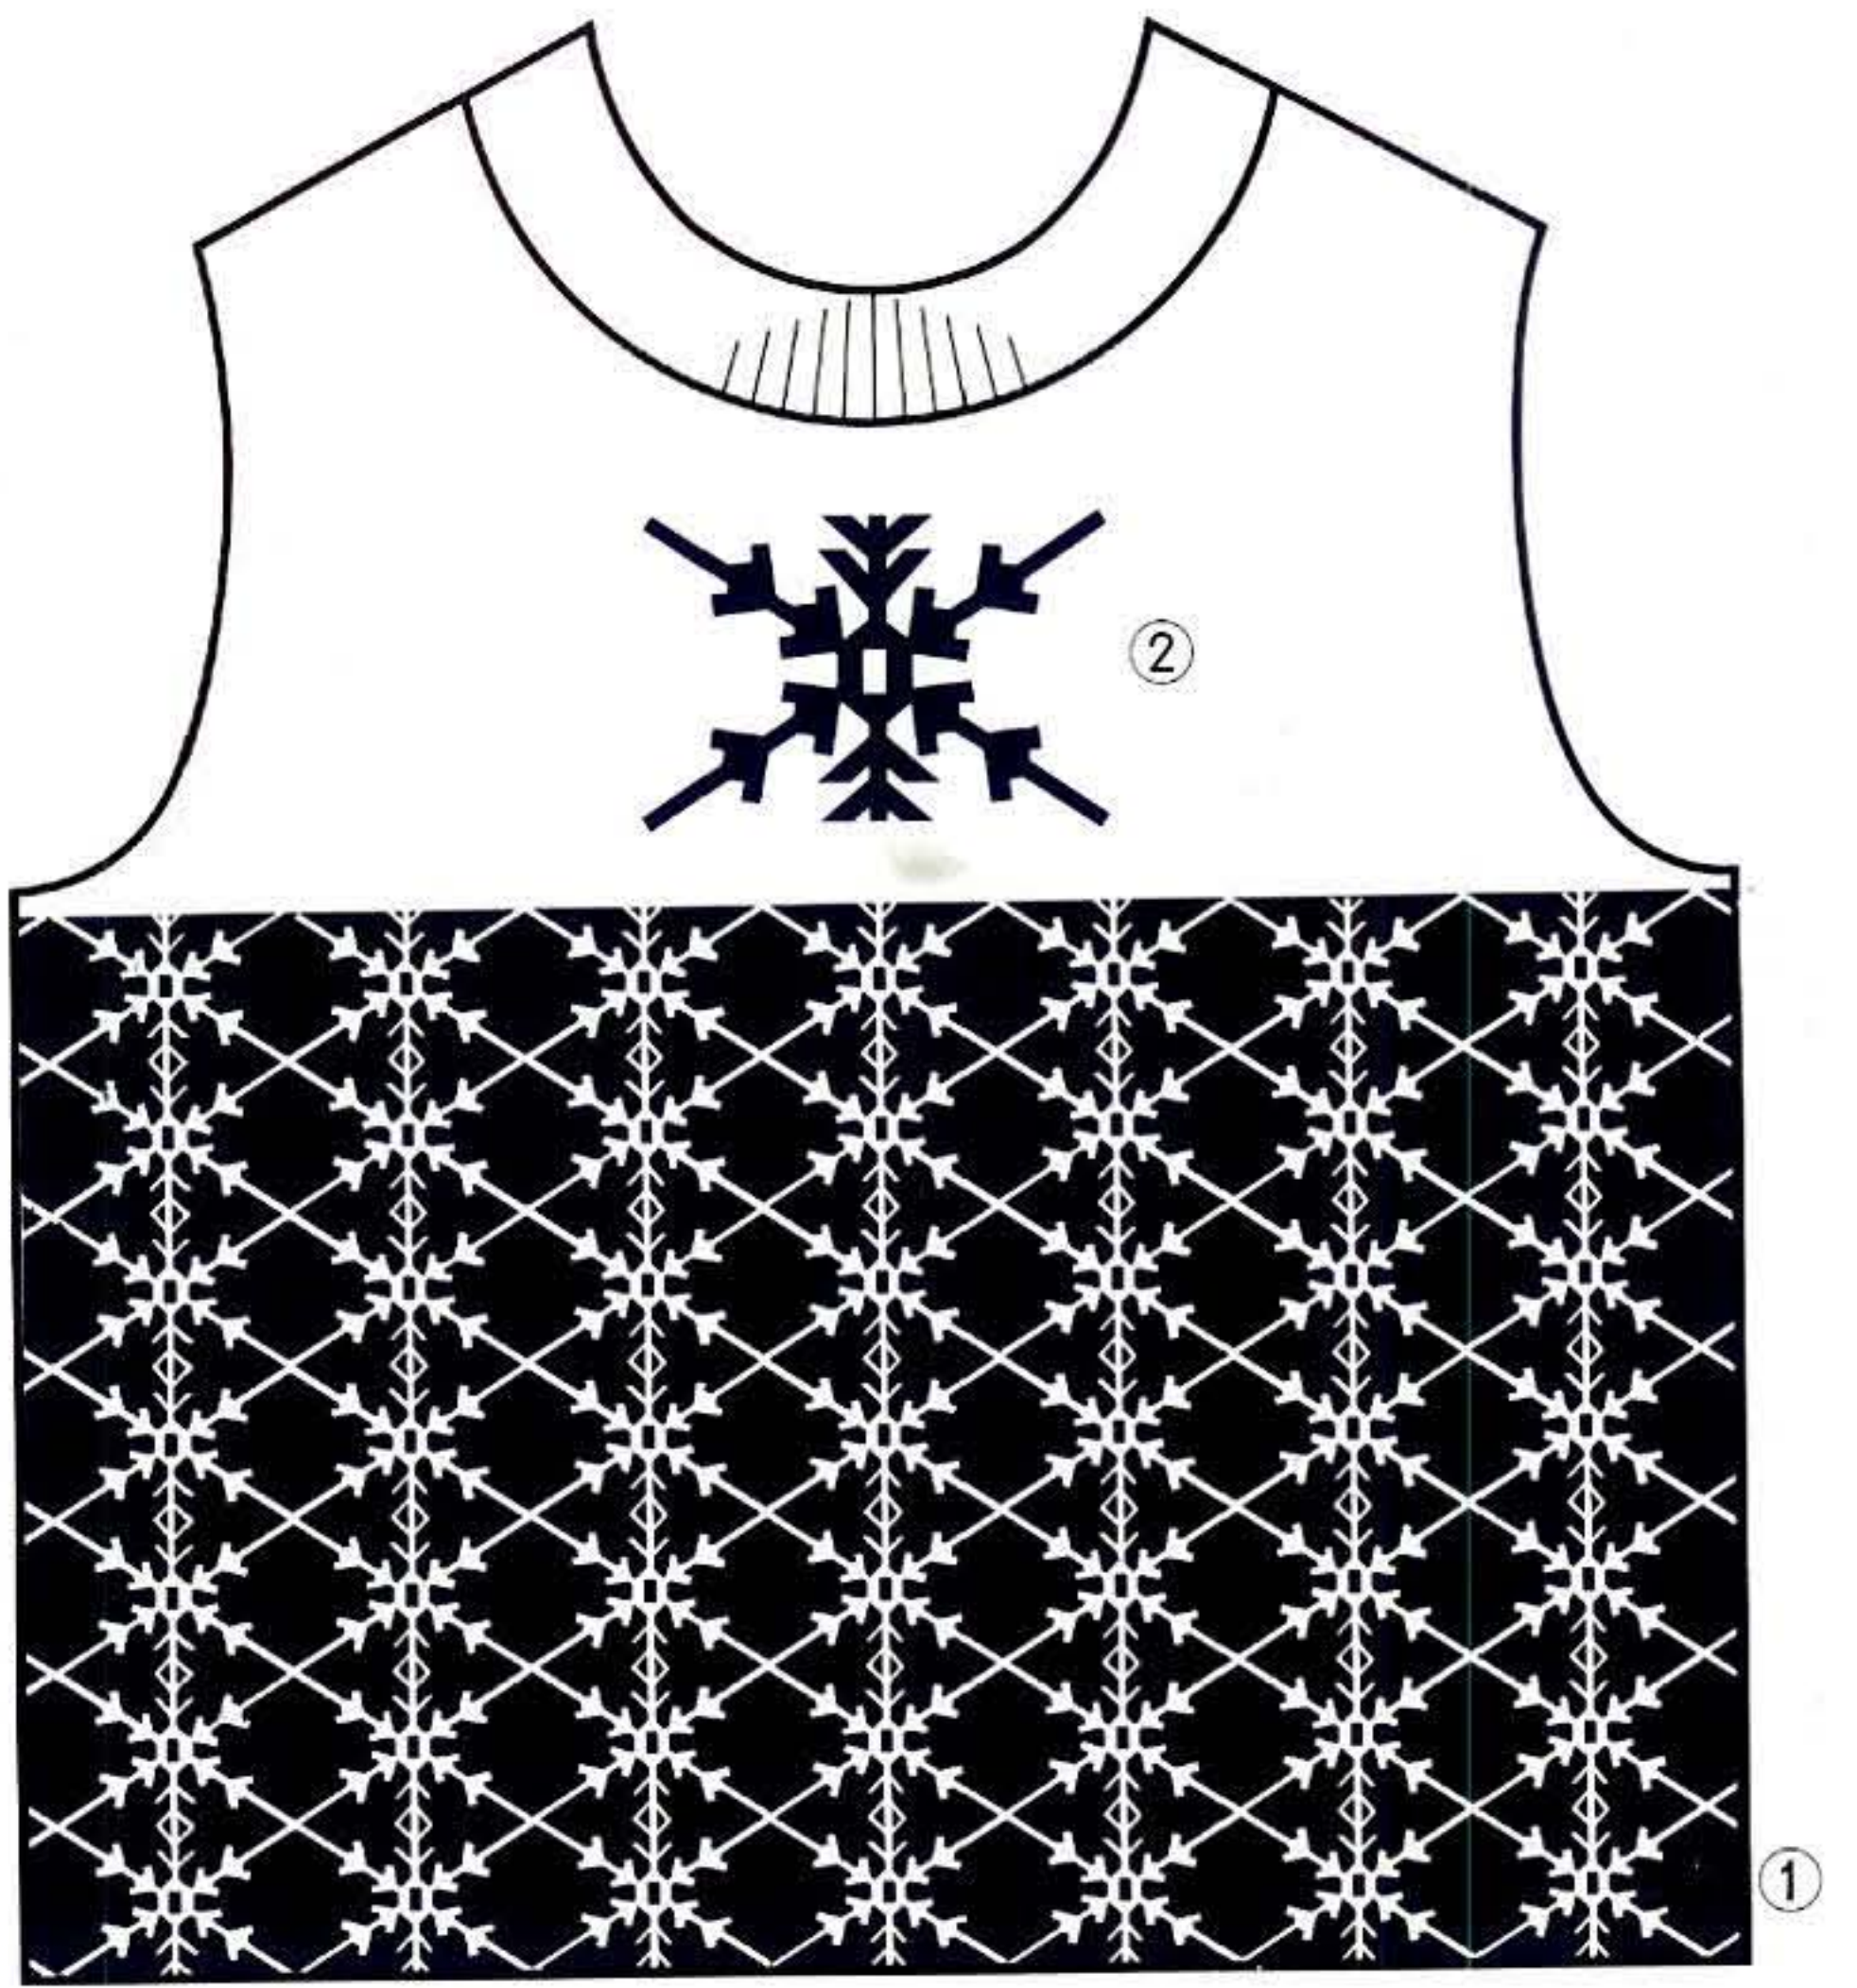






 
B ②の操作表はA ④と同じです。
 B ② Programming : same as for A ④




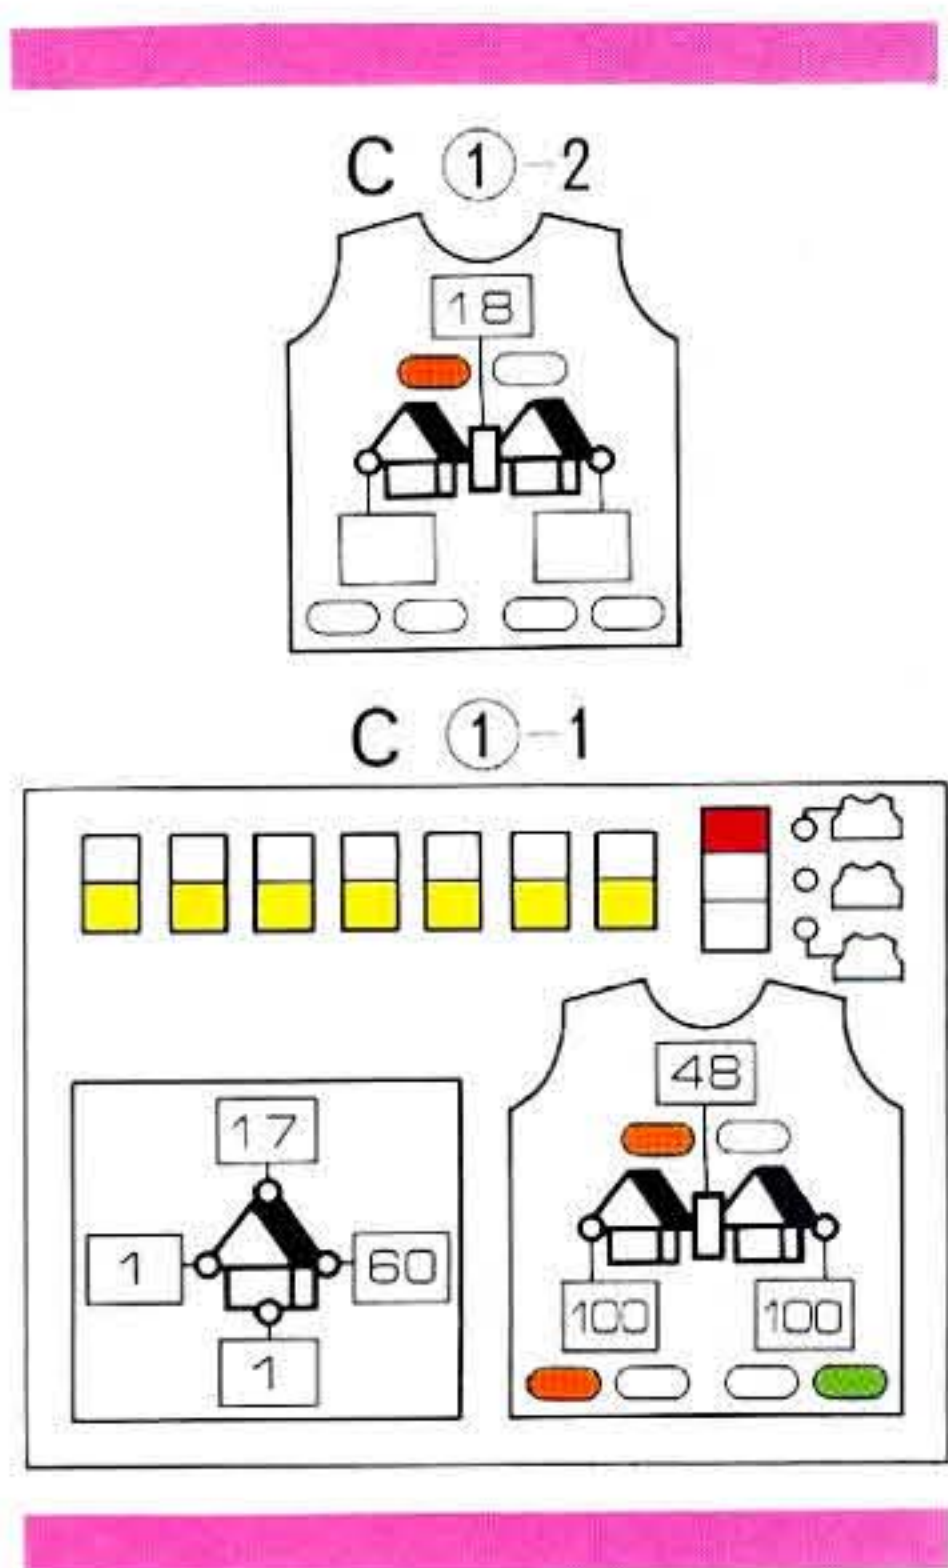


C

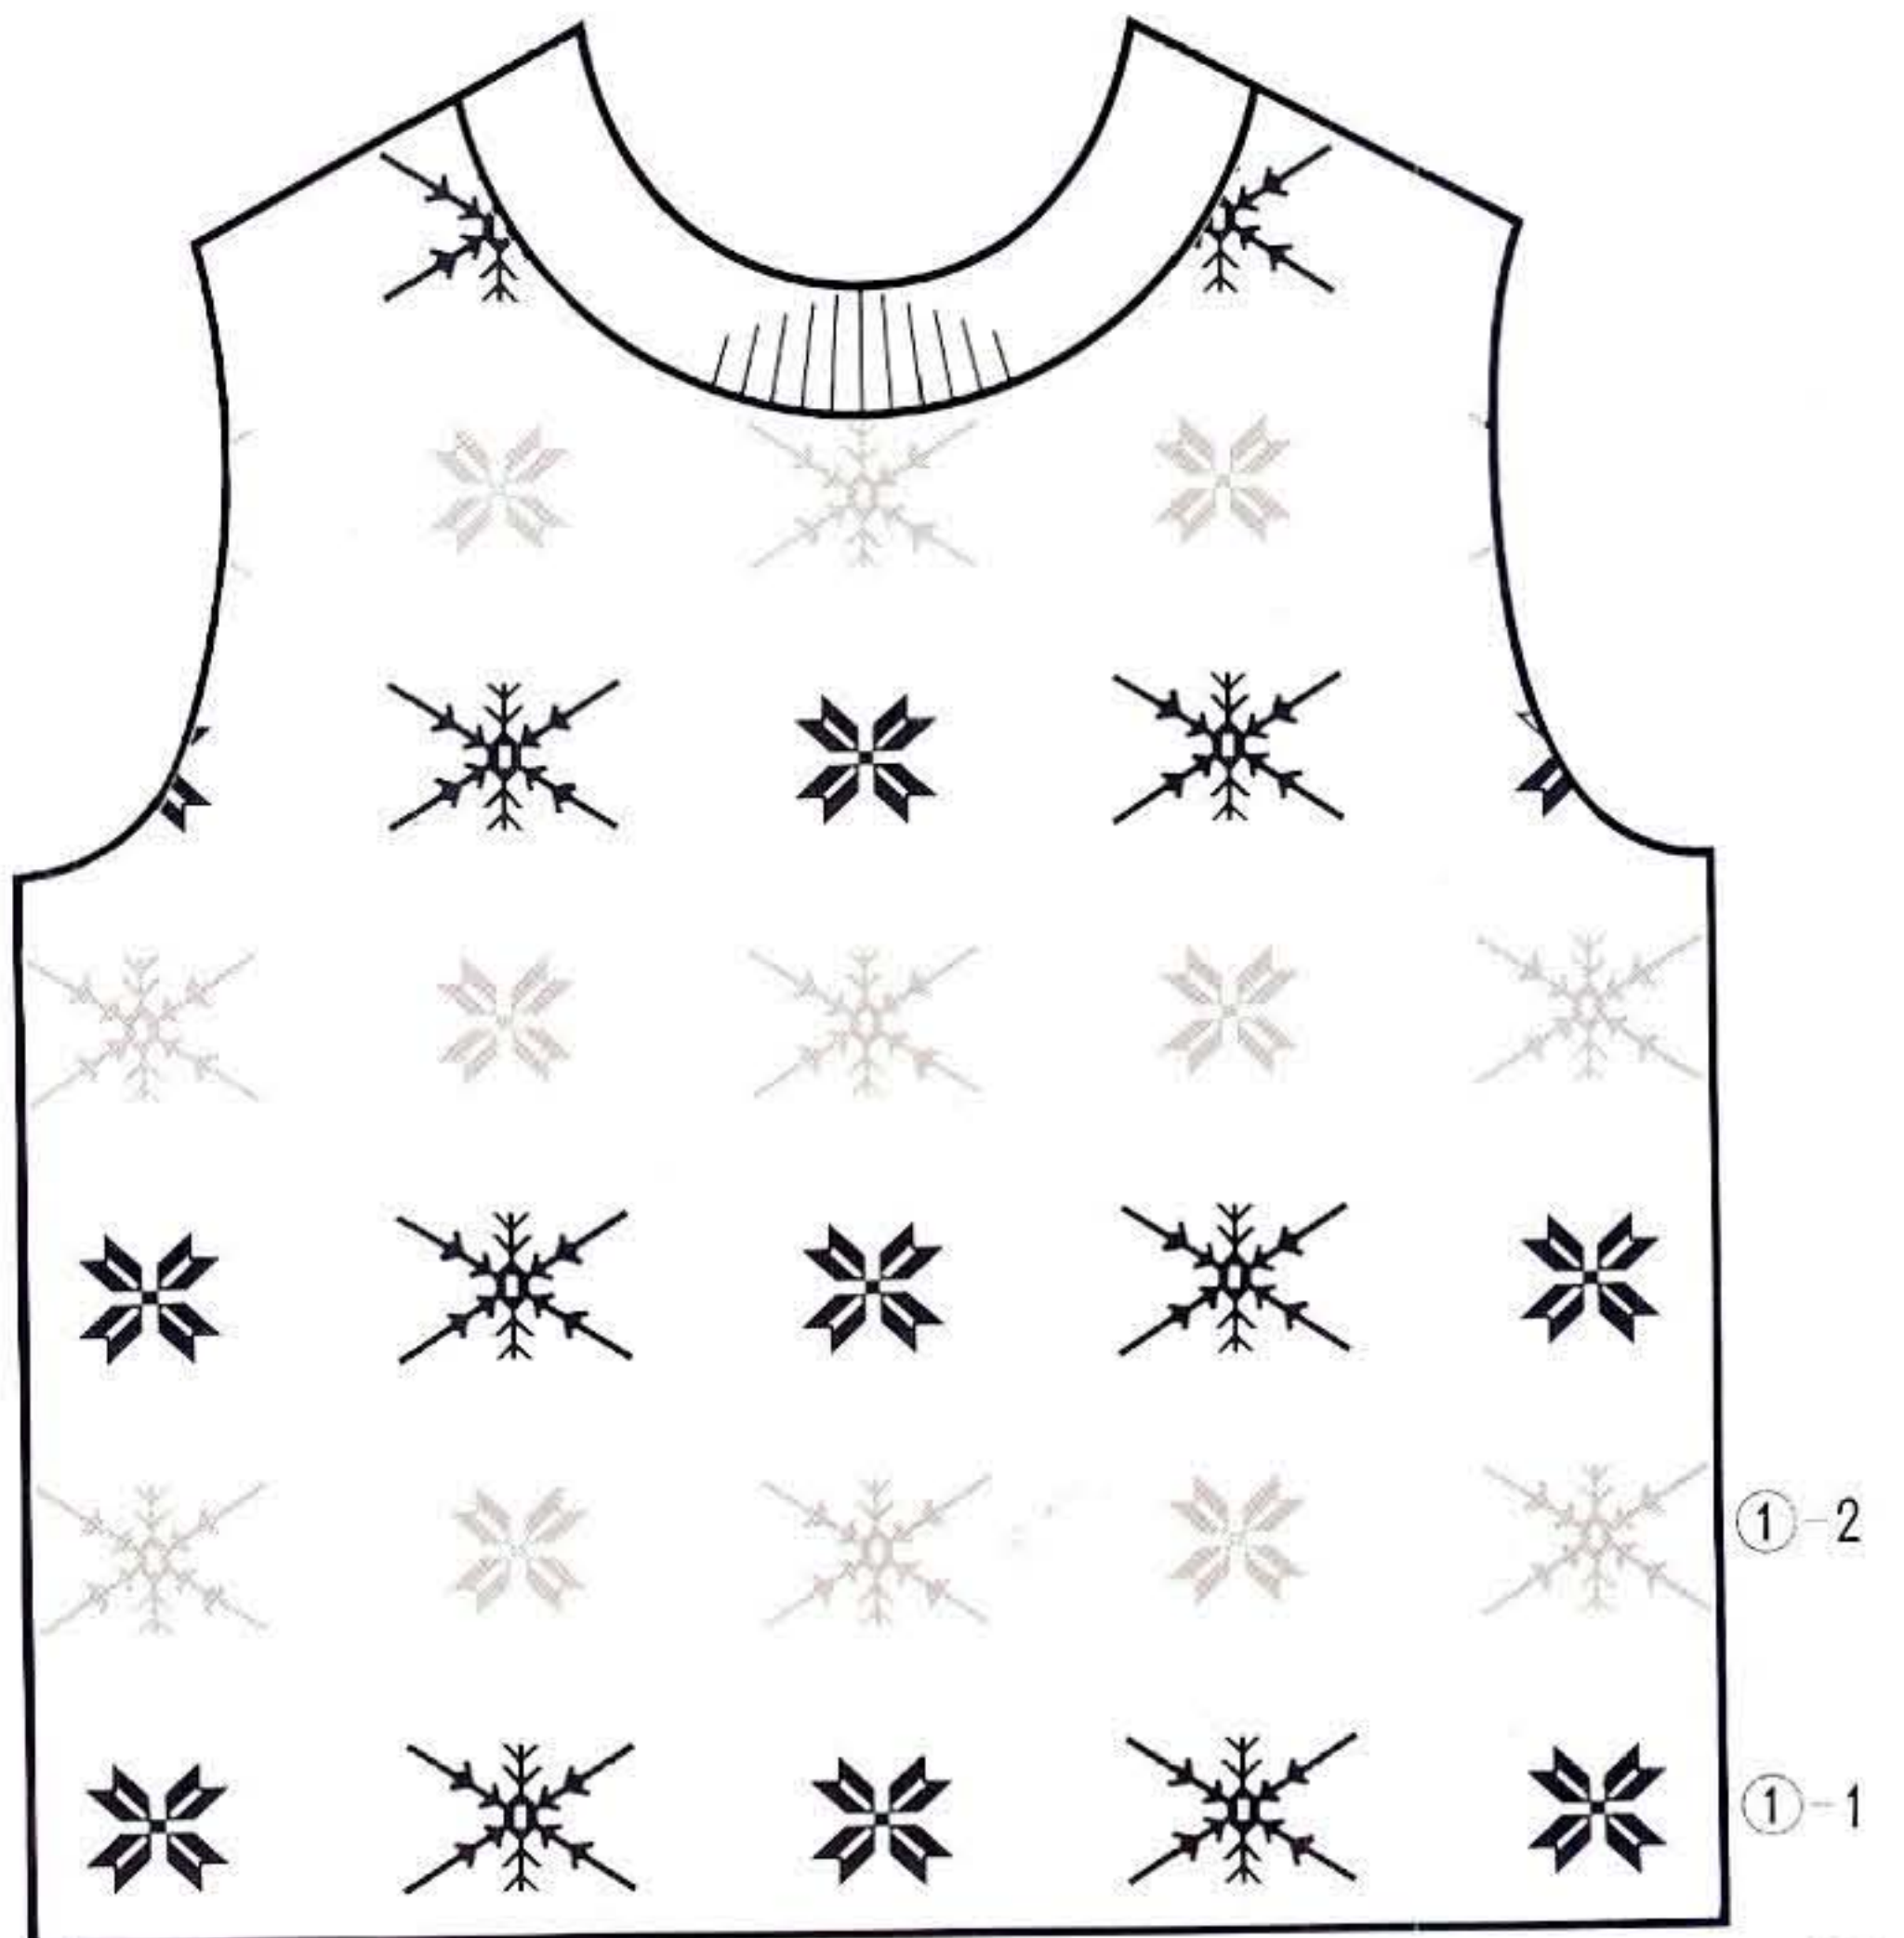 


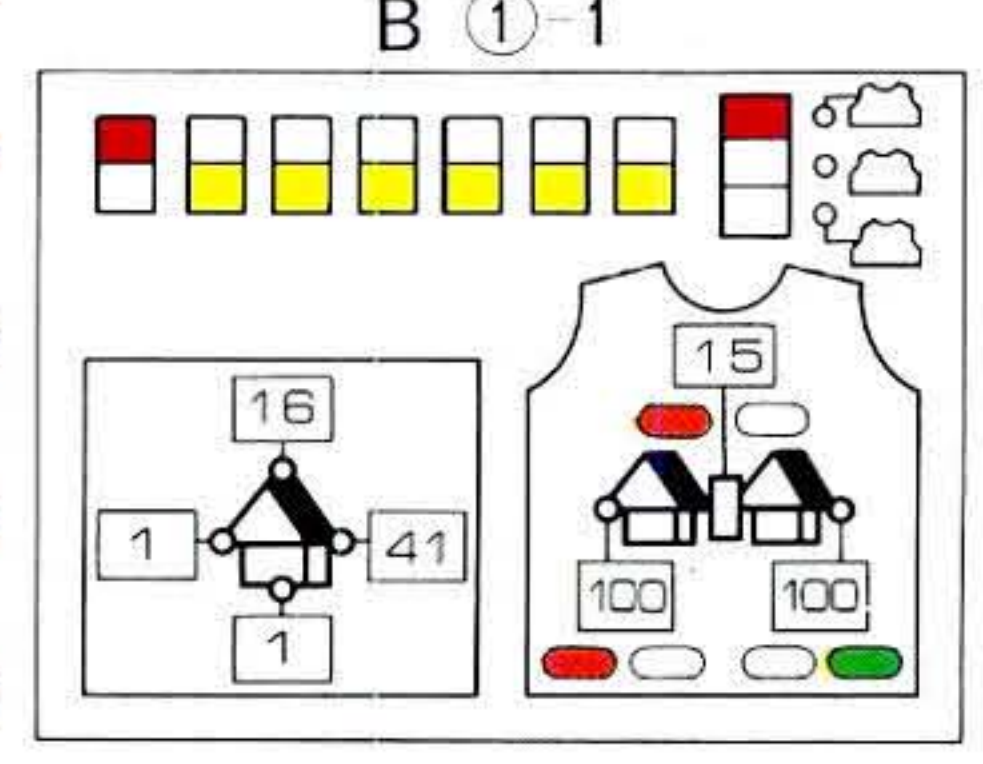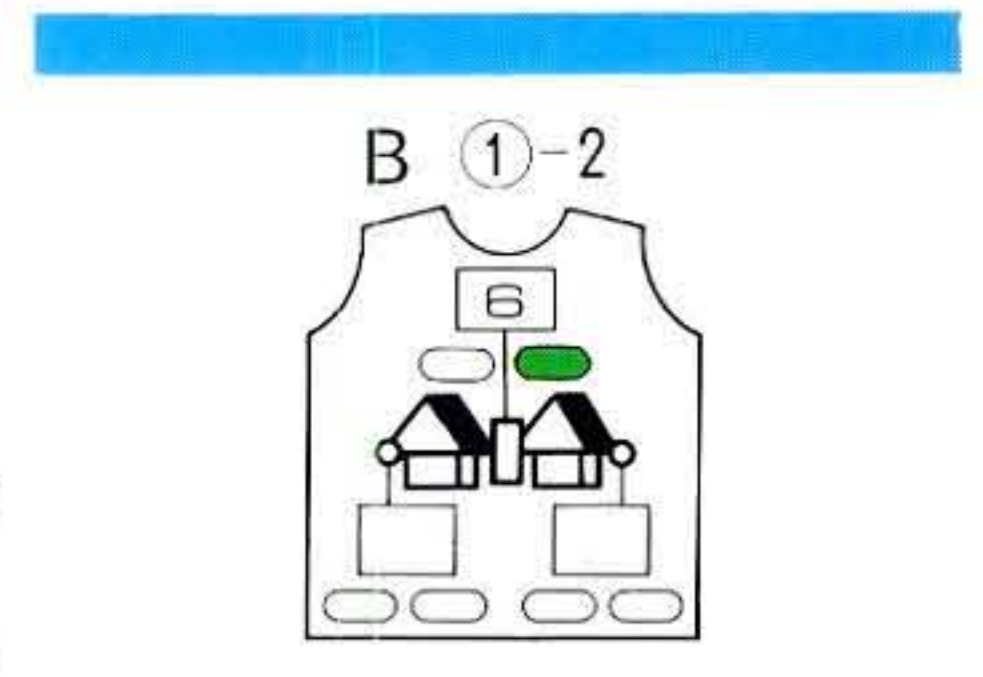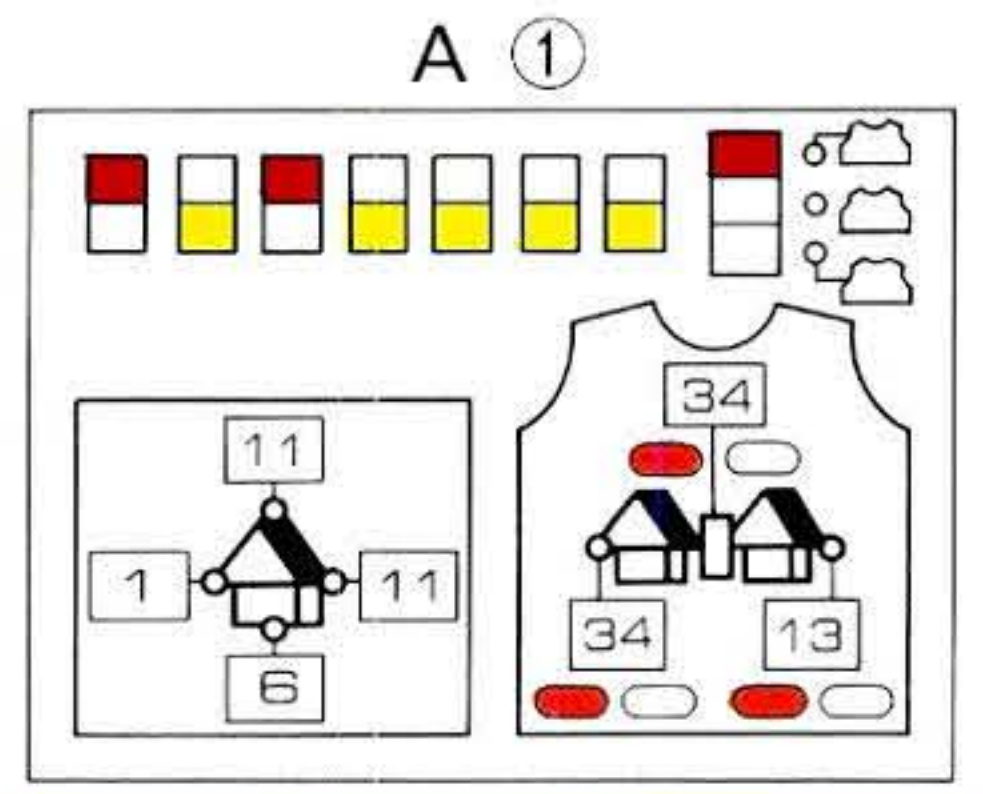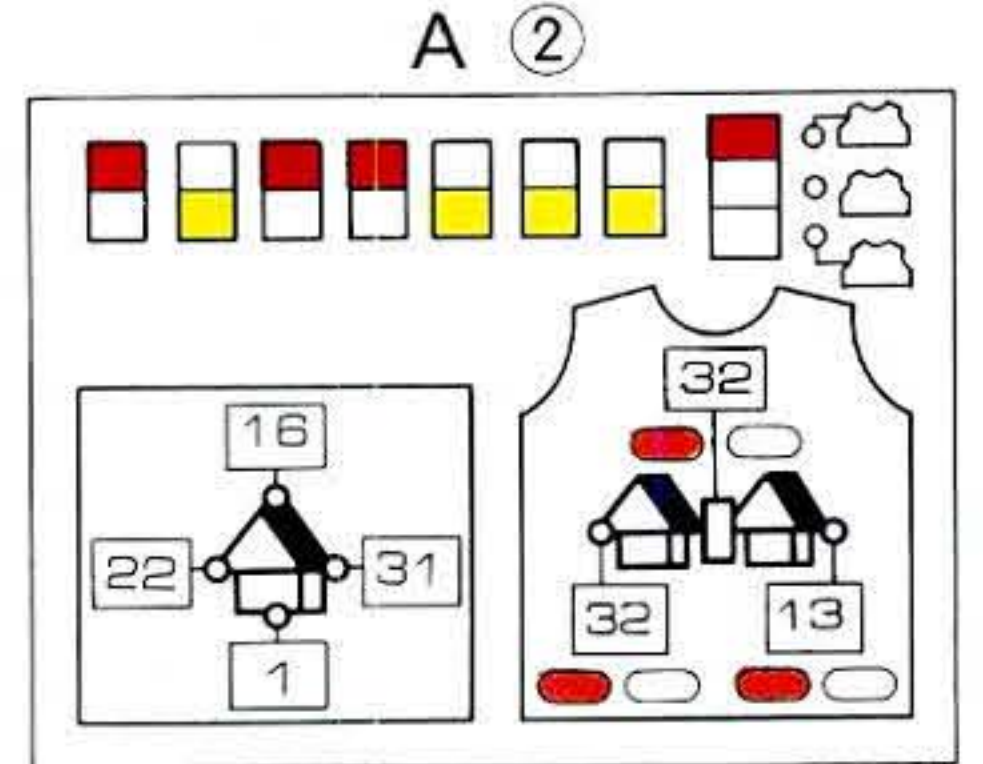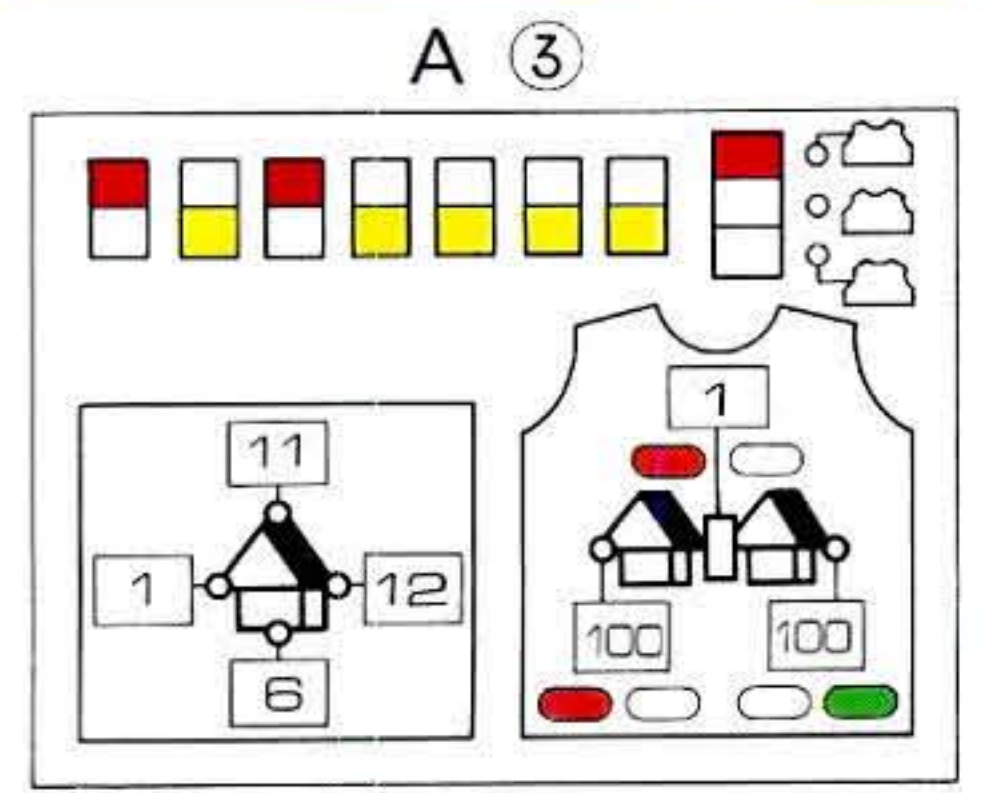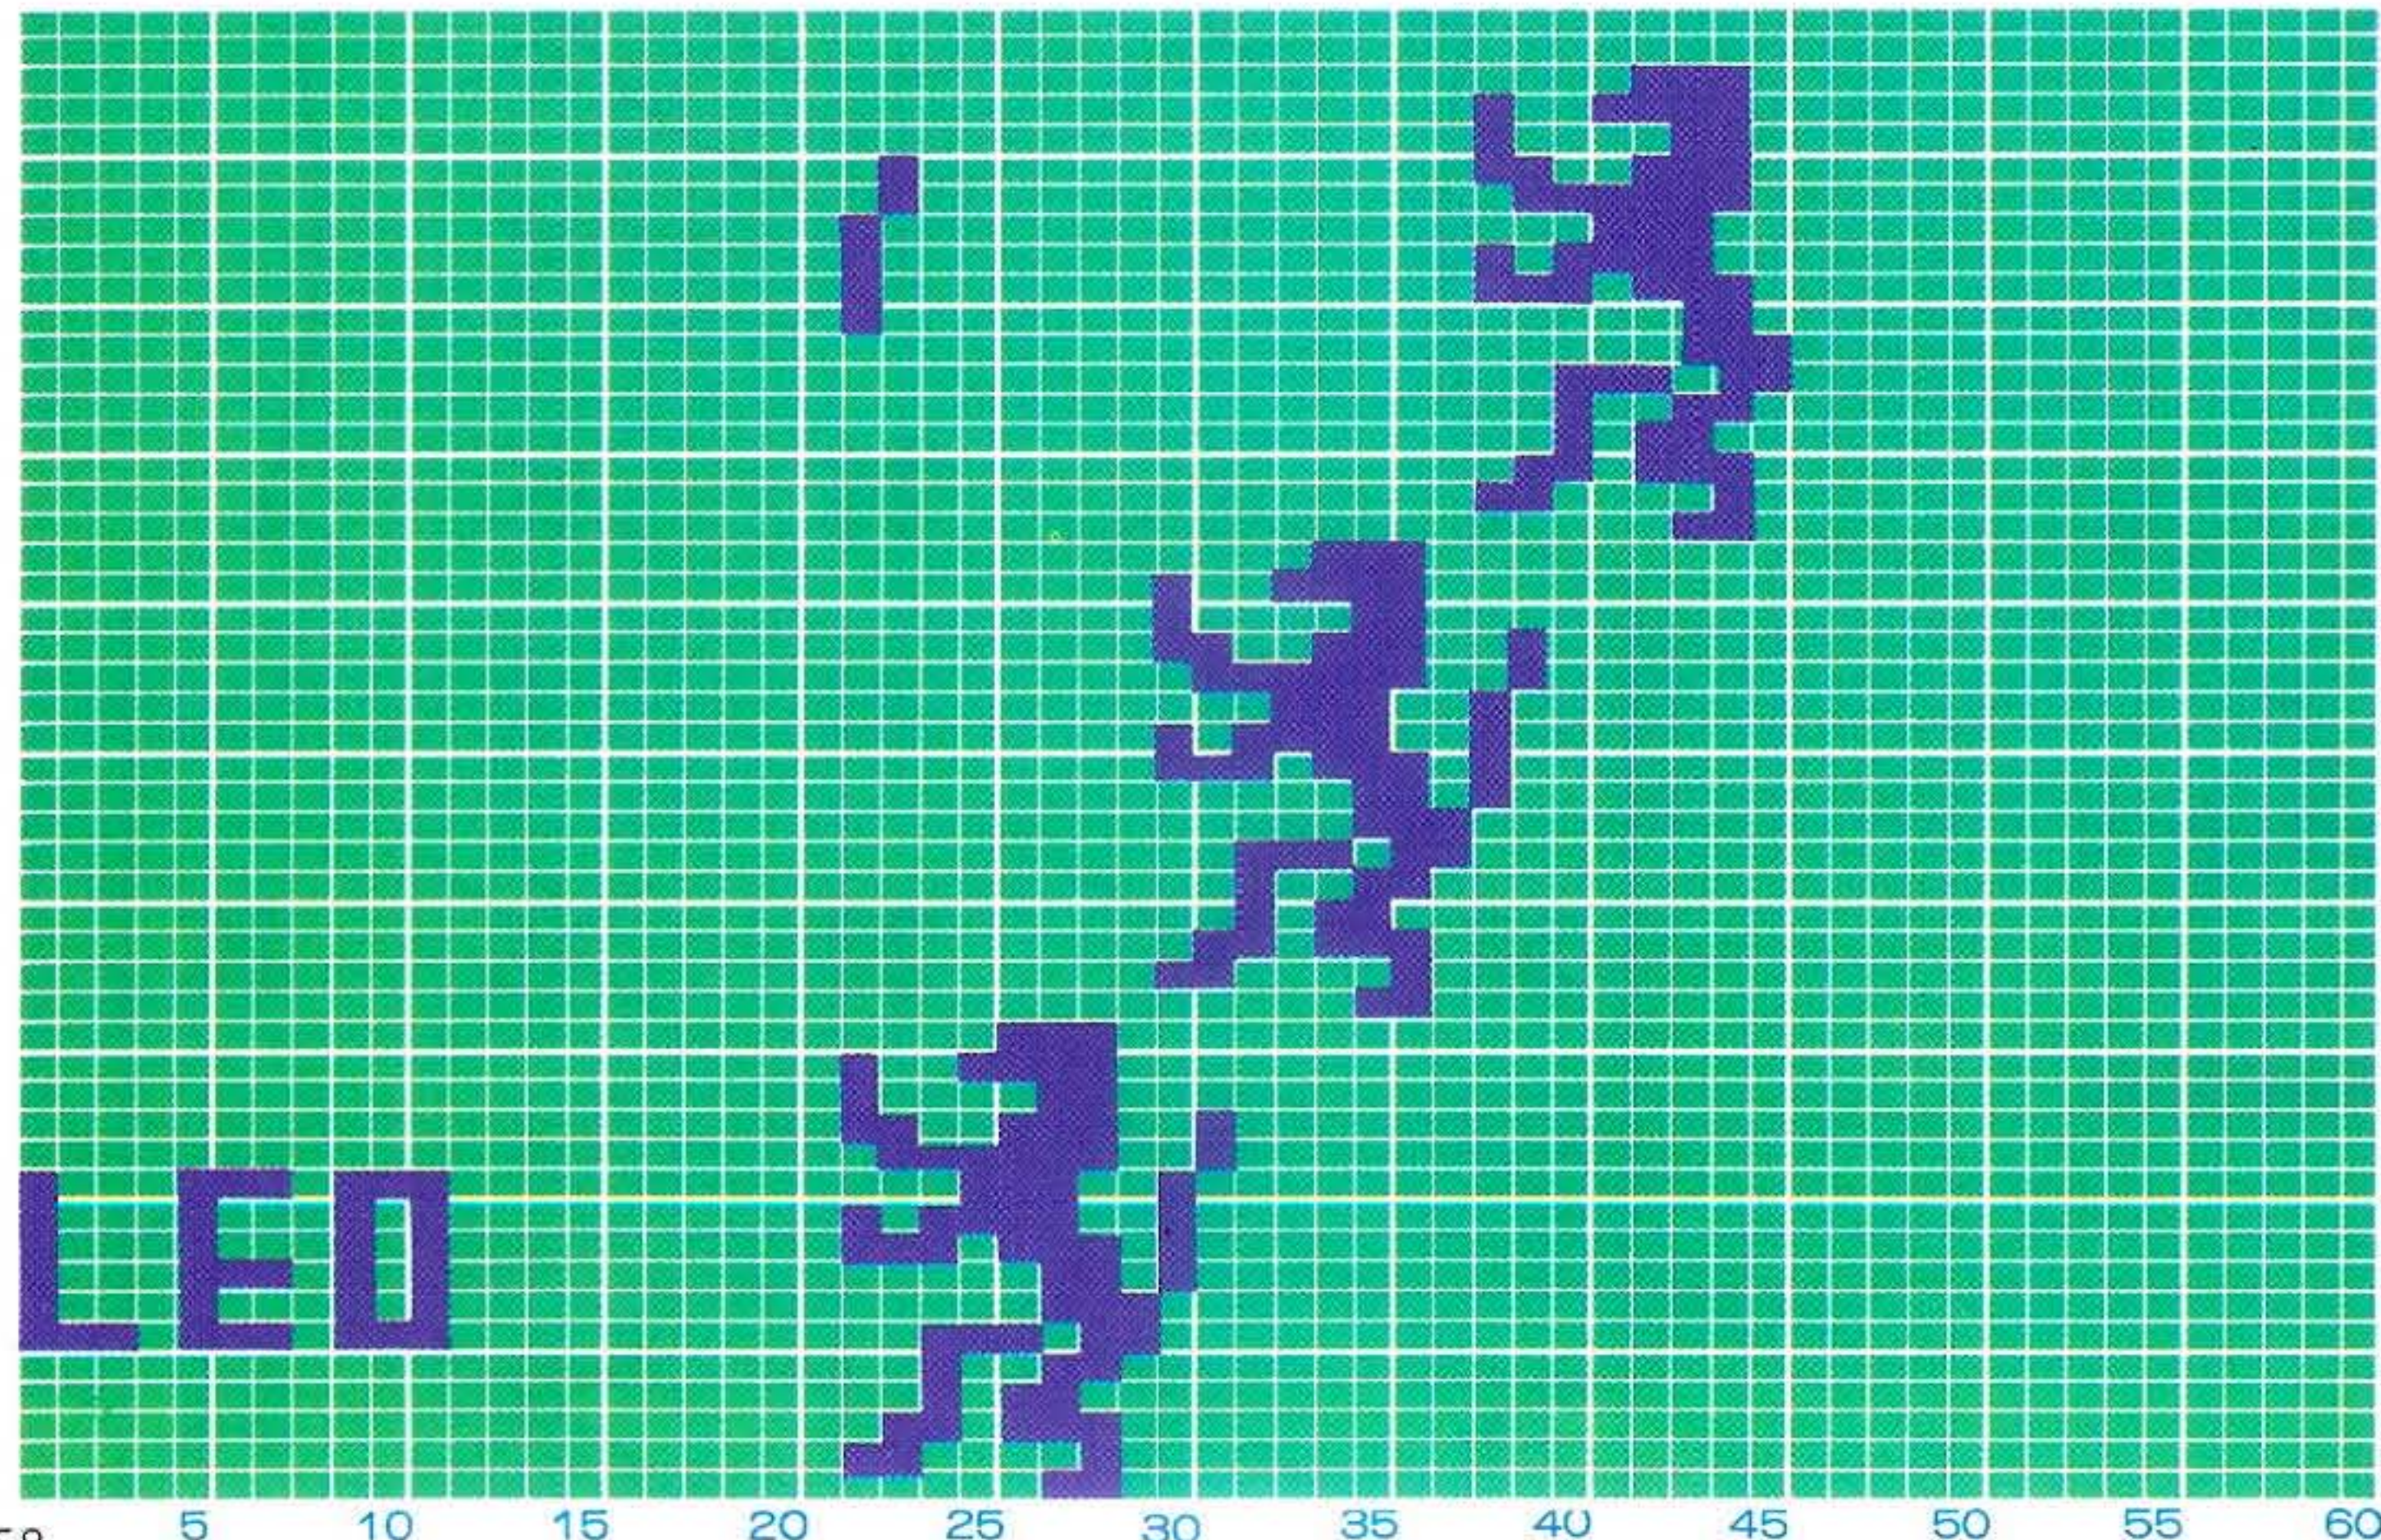      

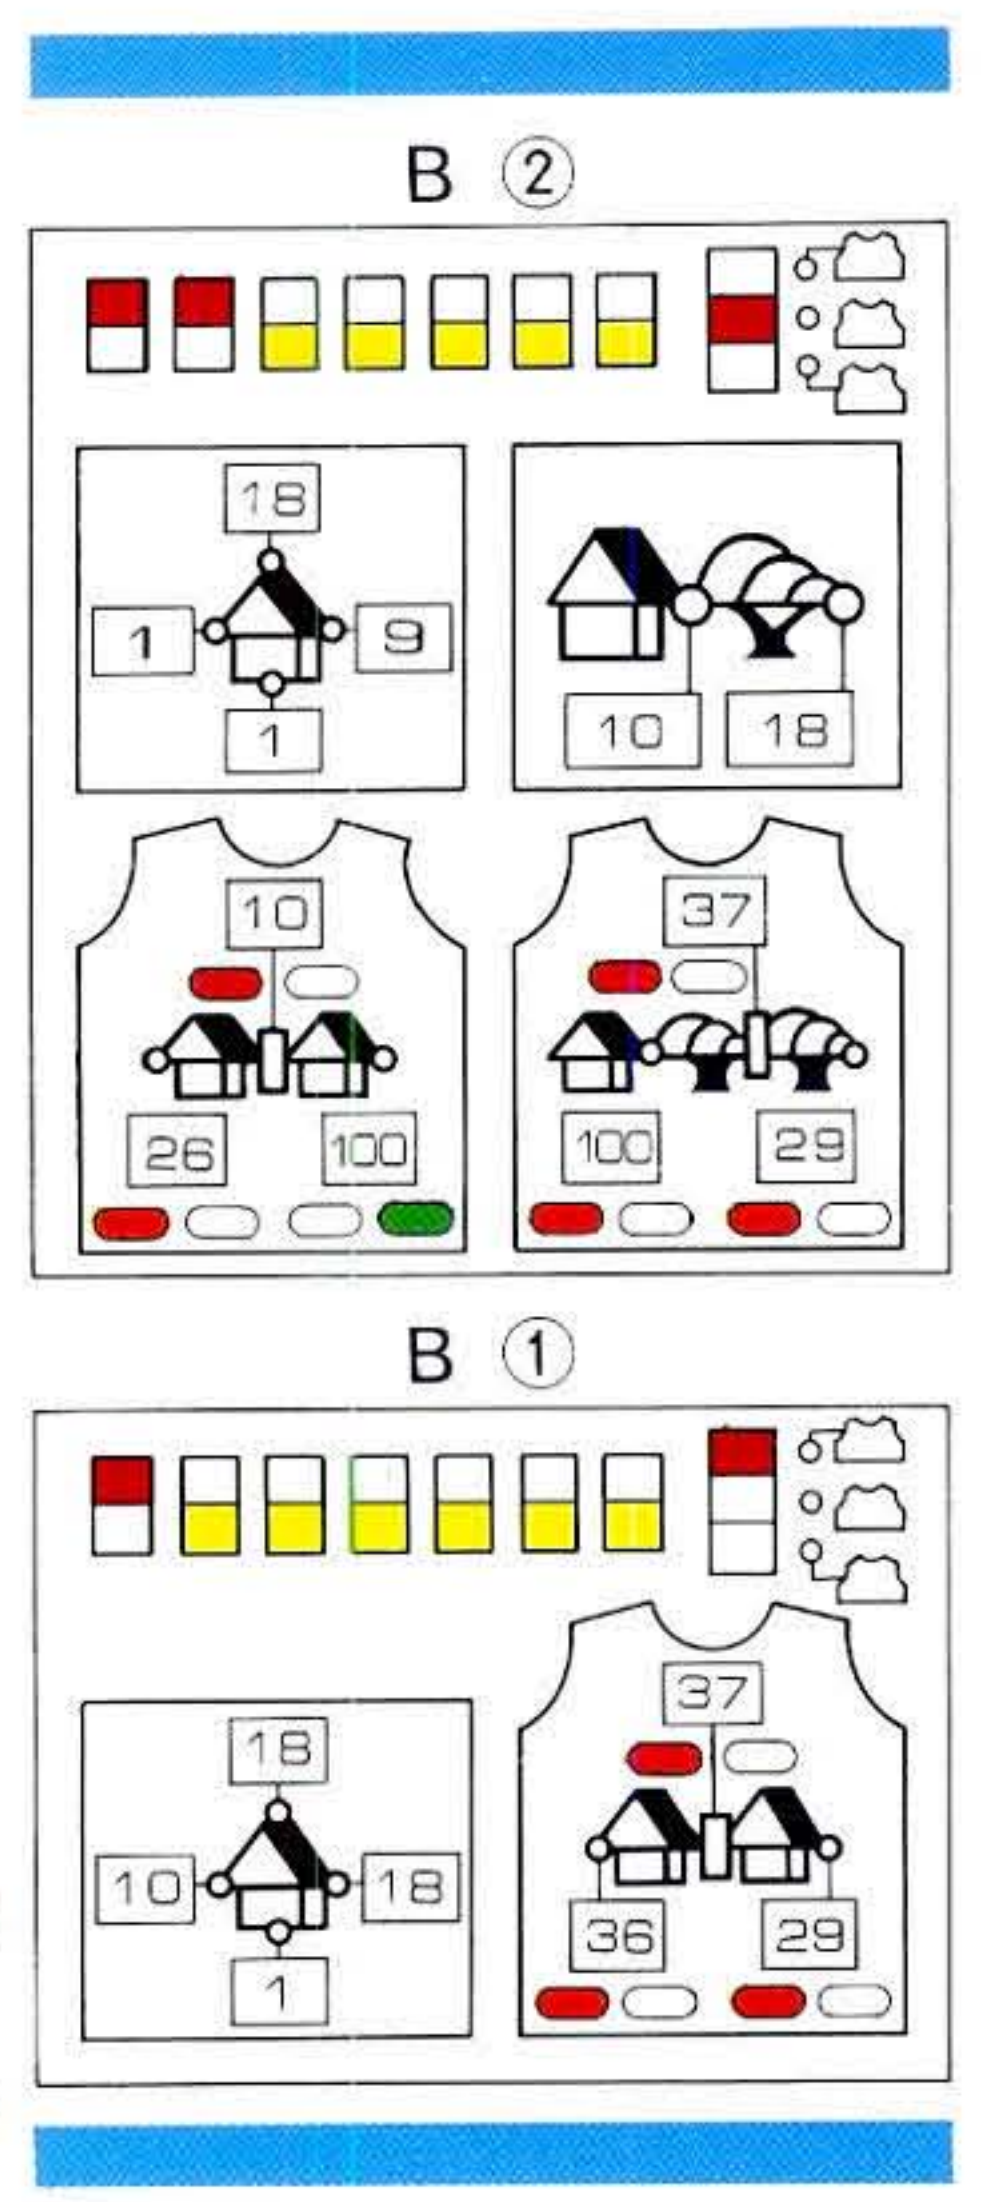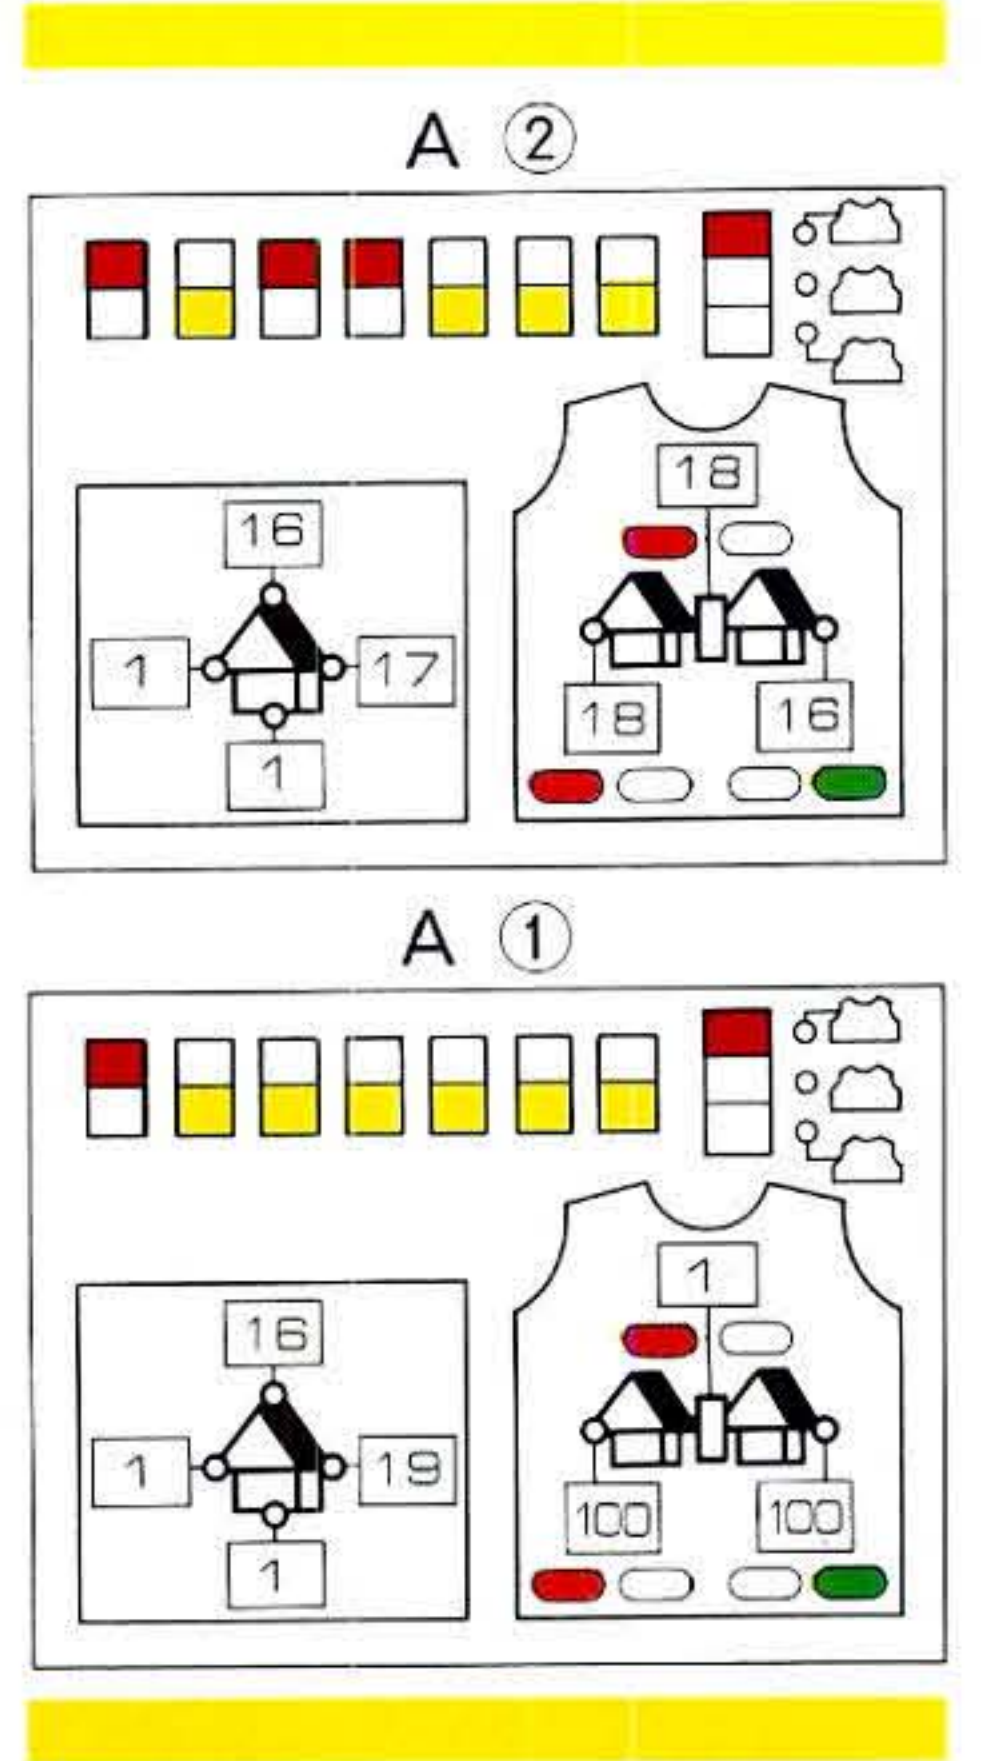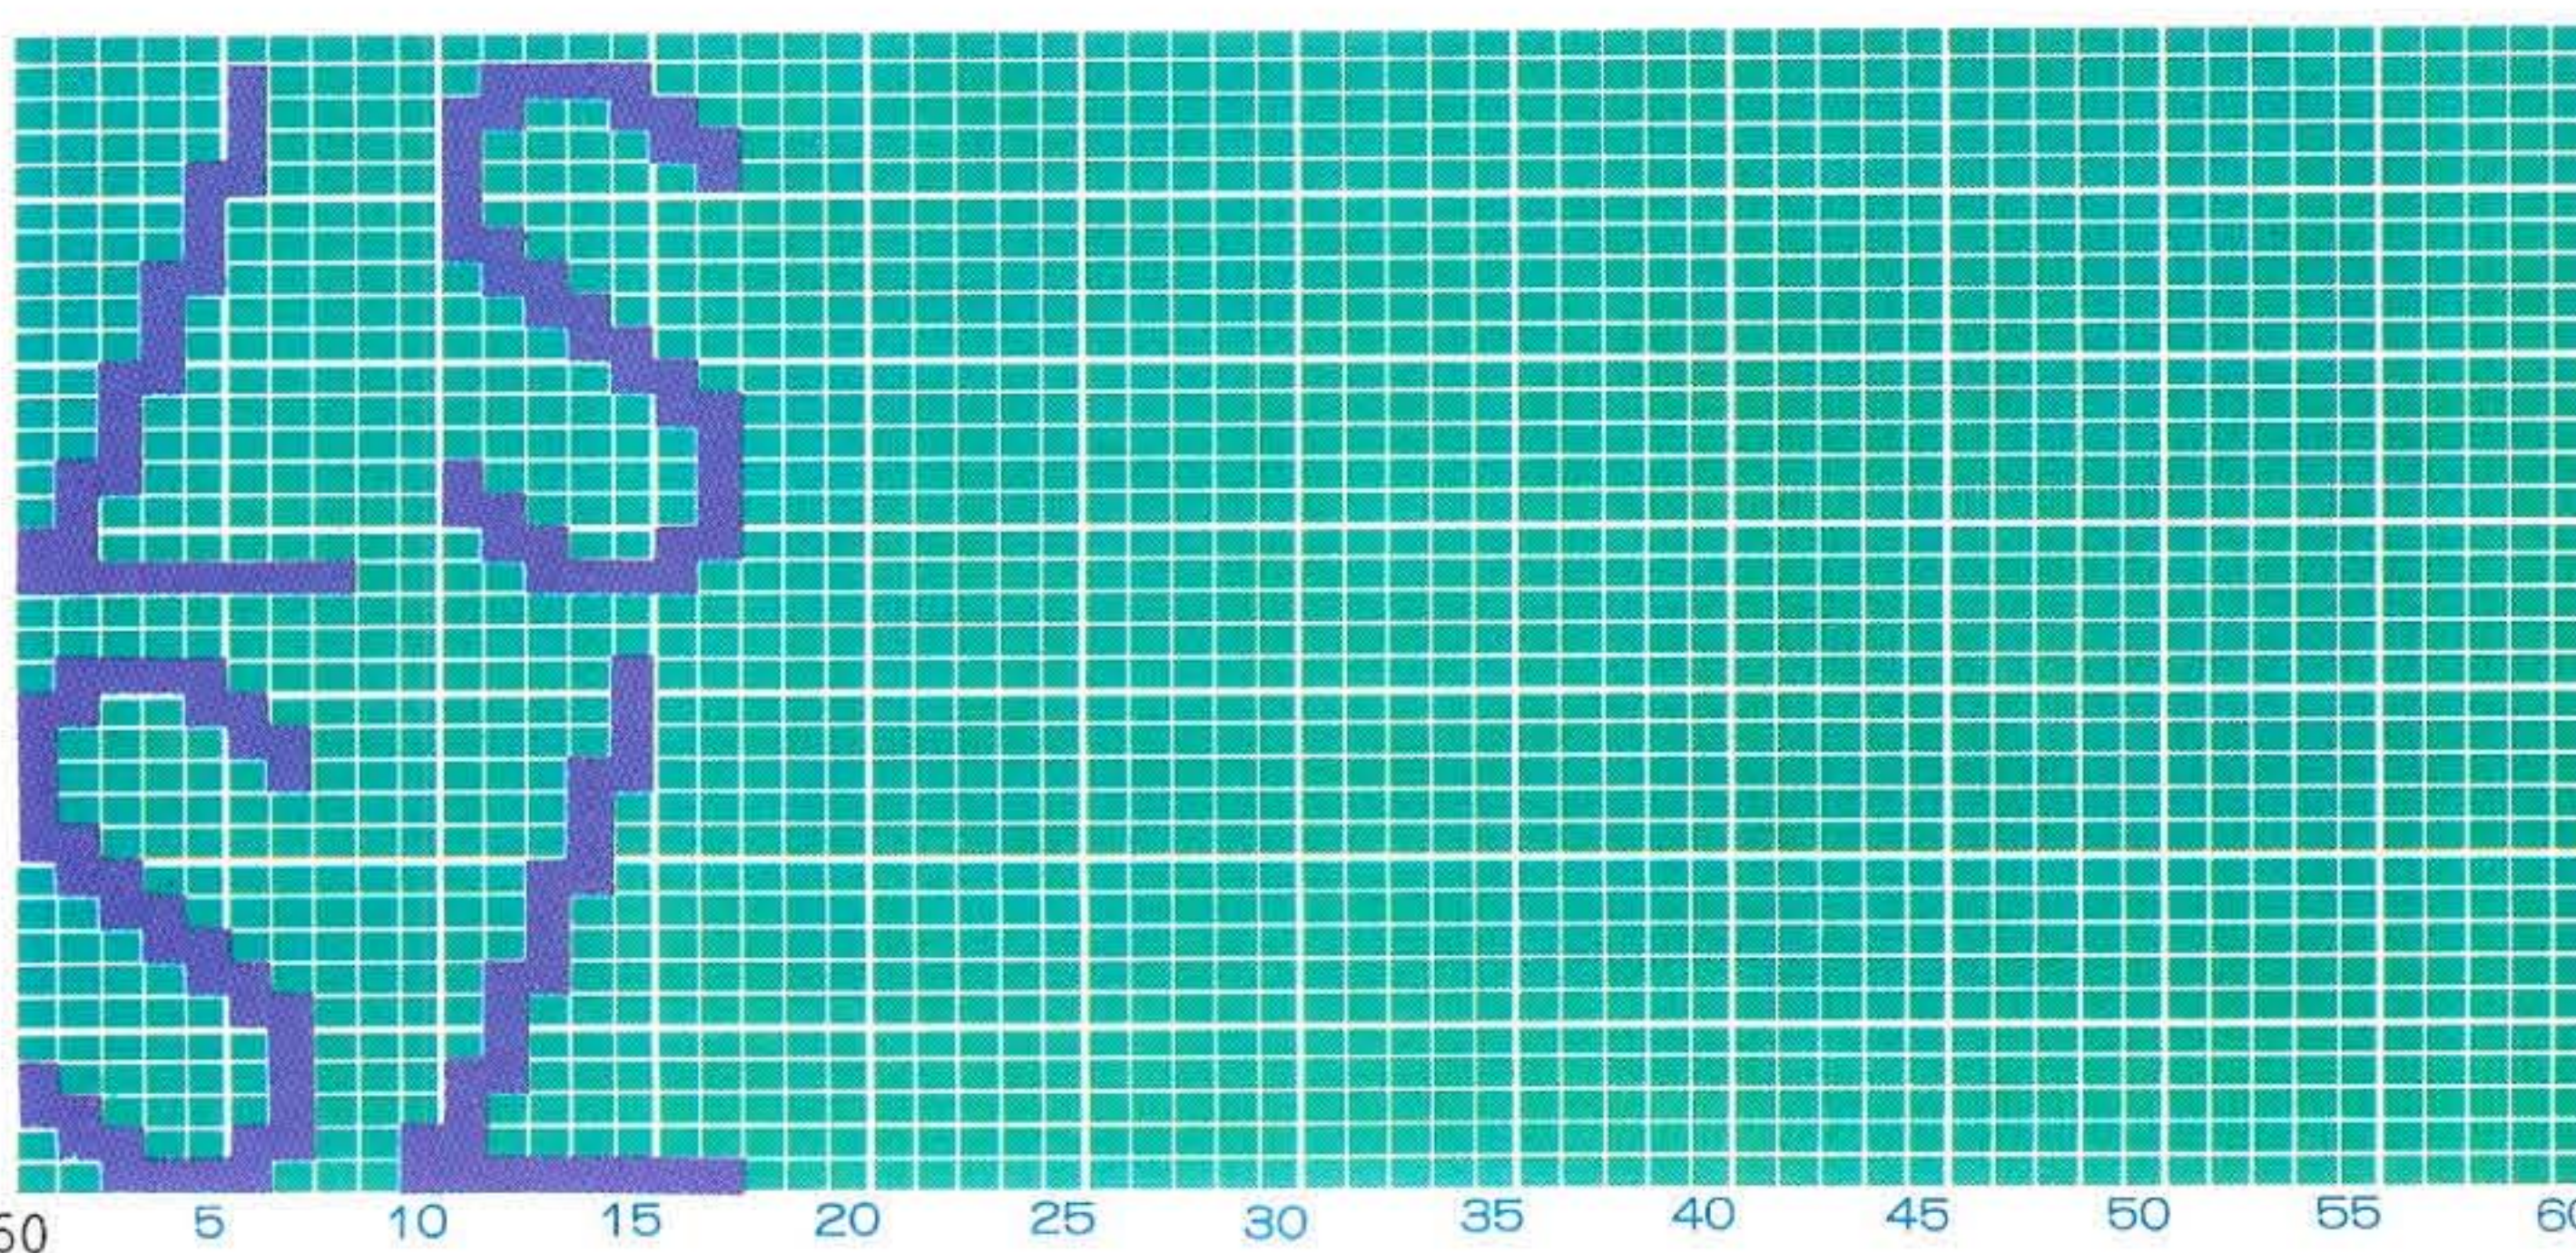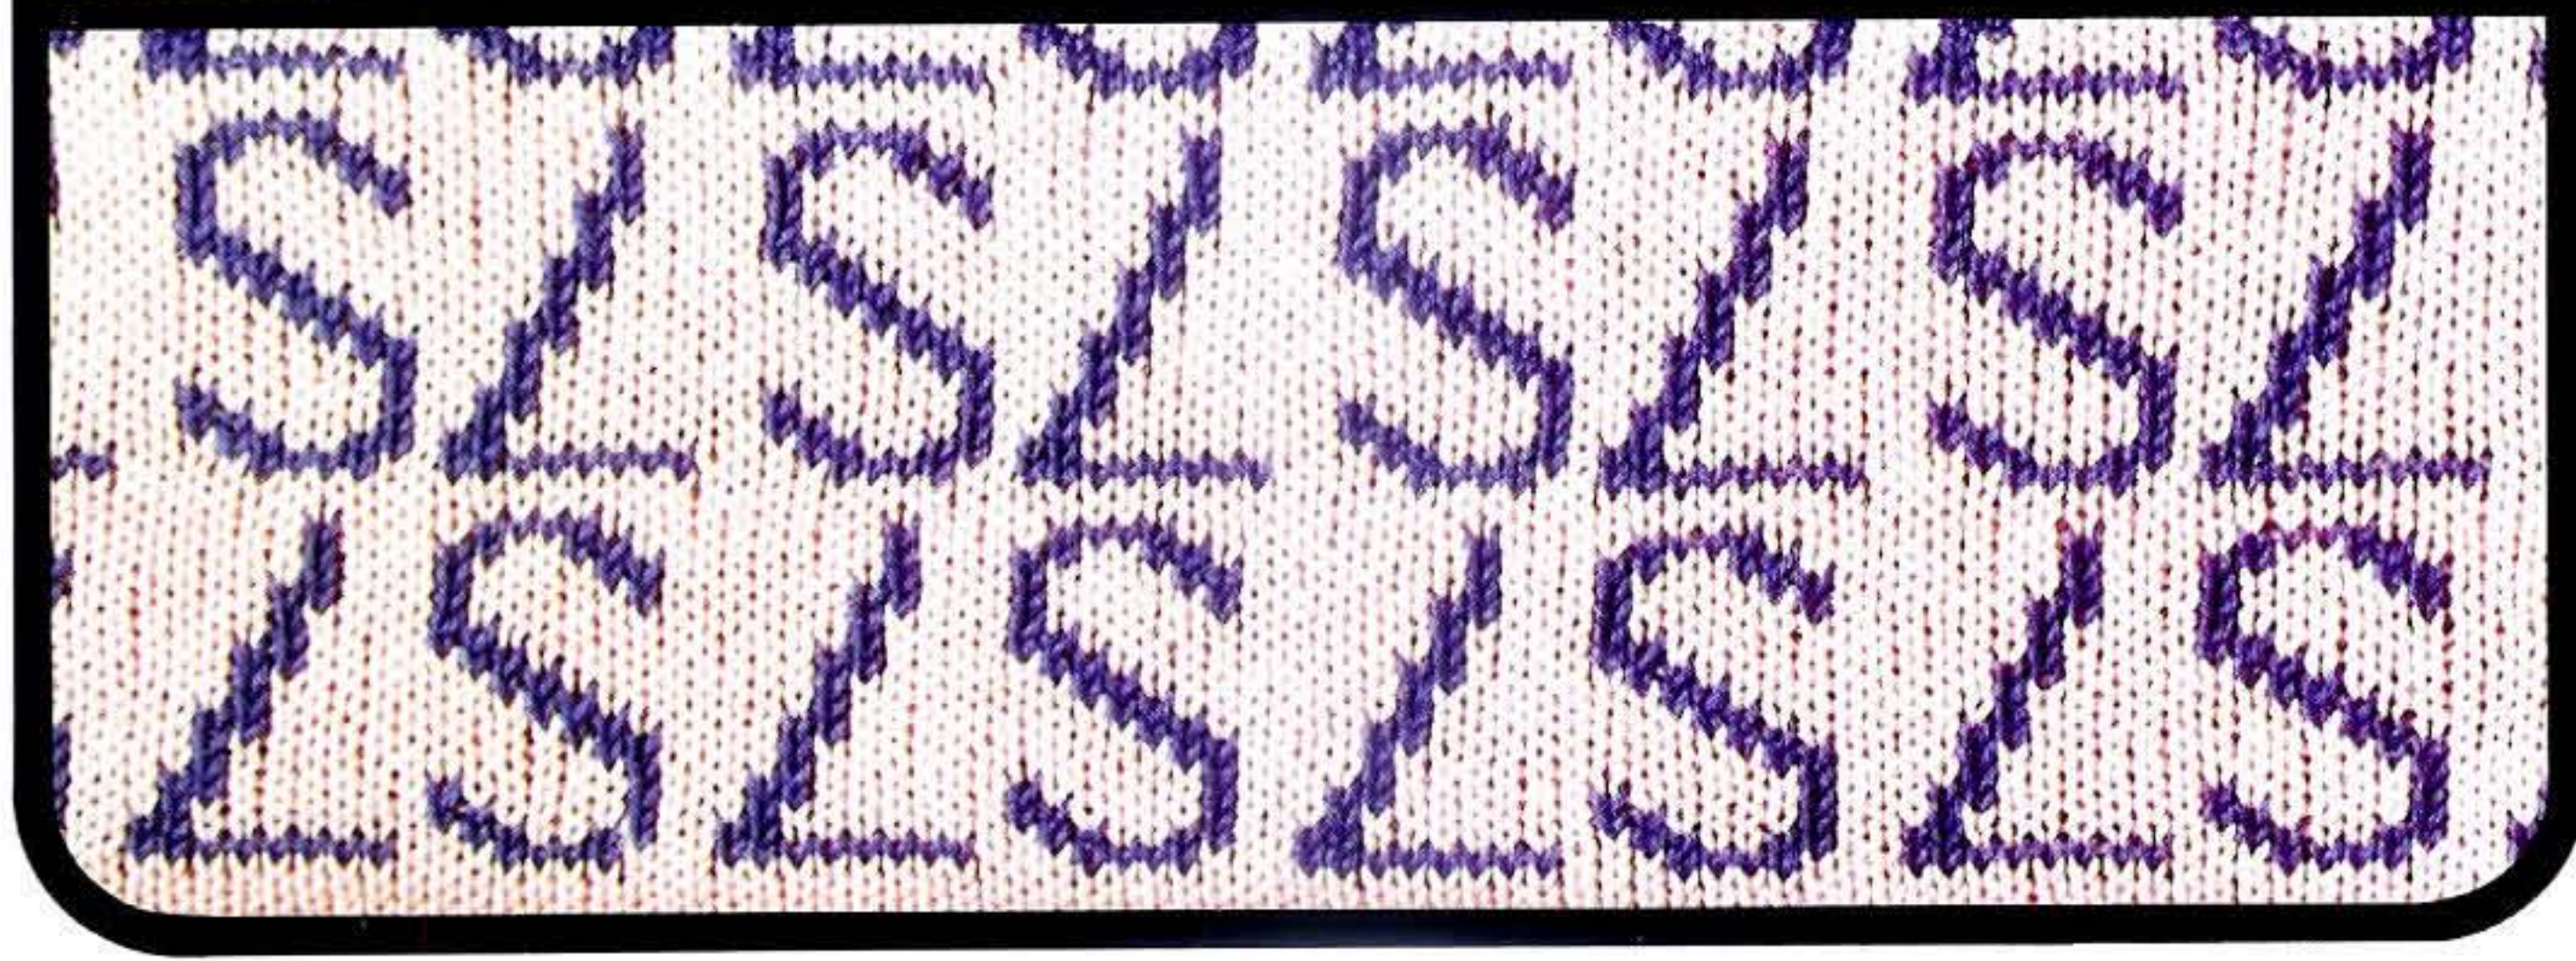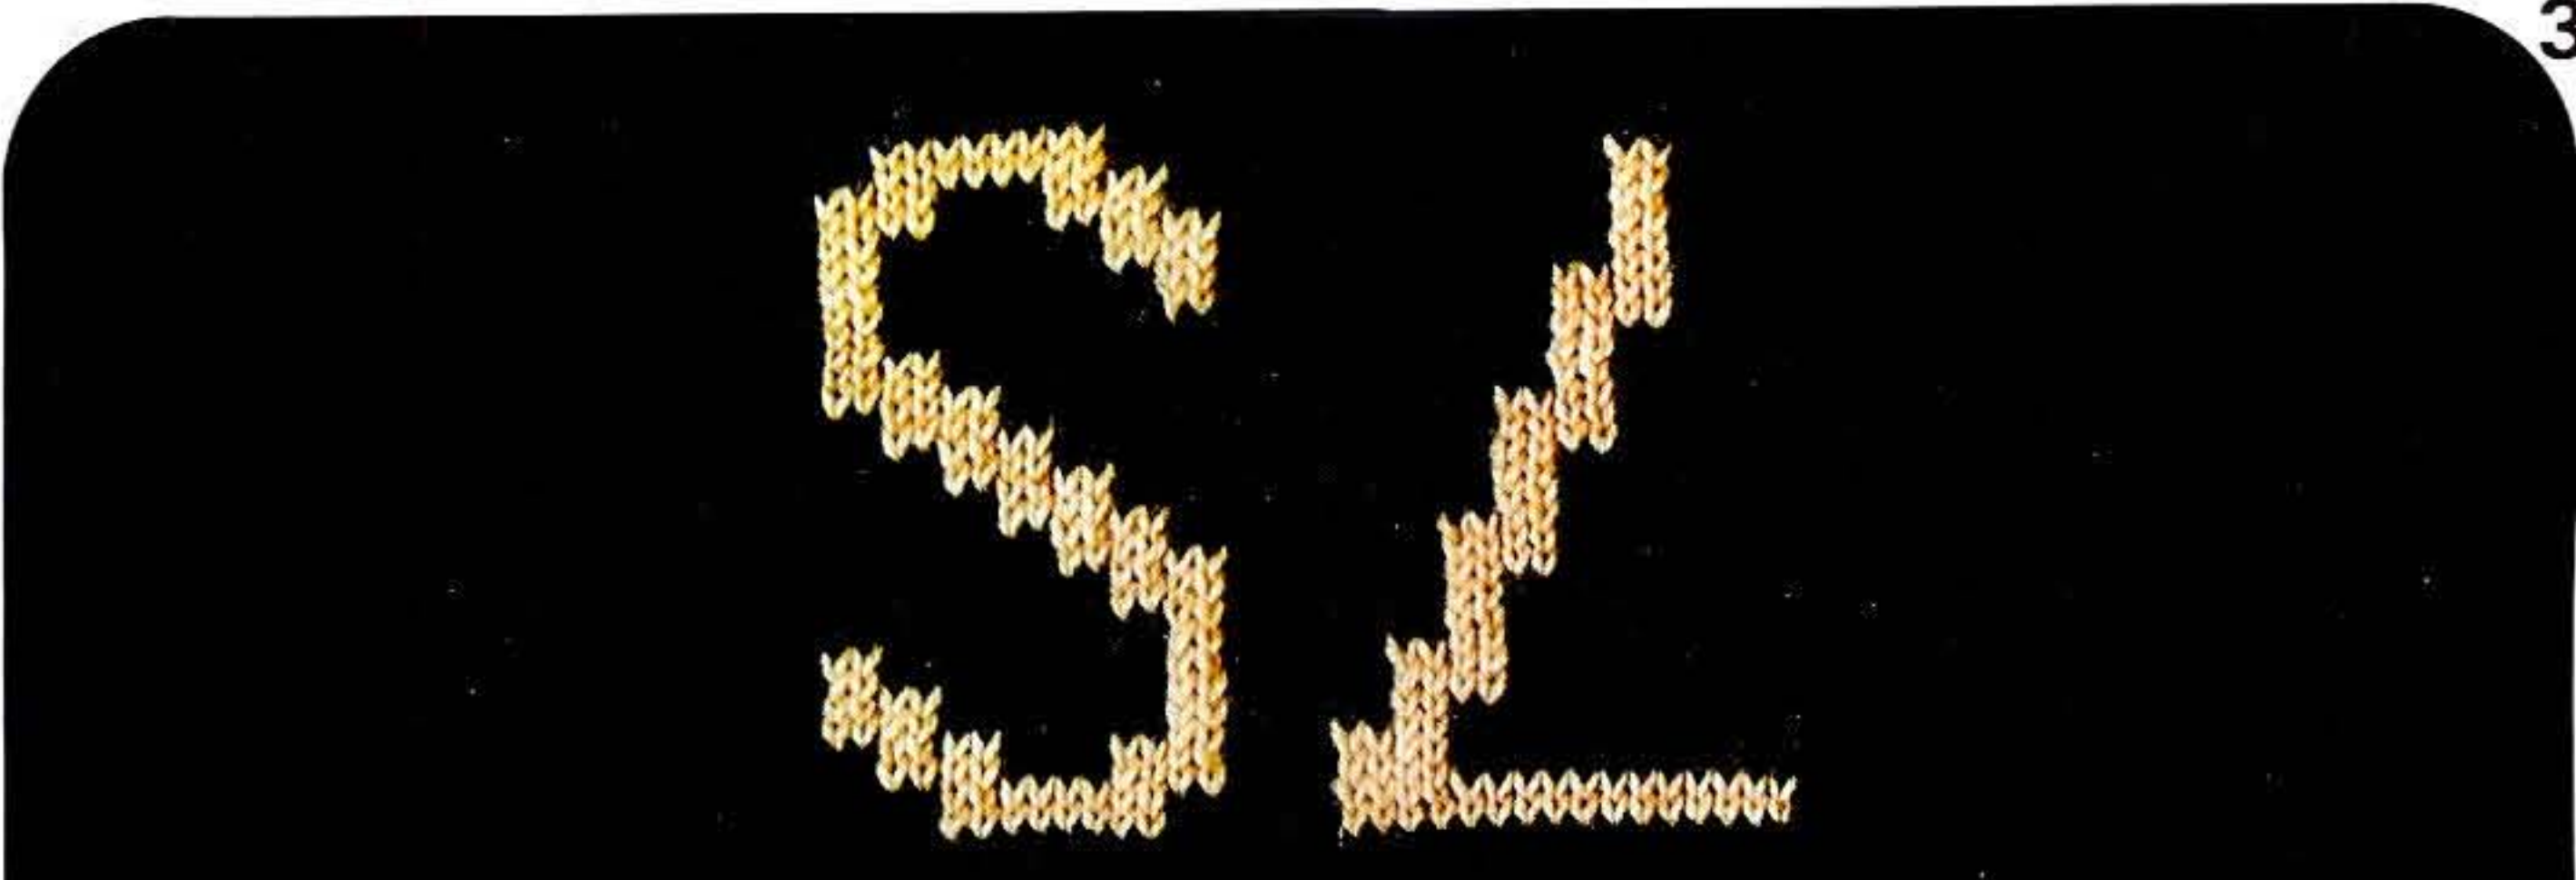     


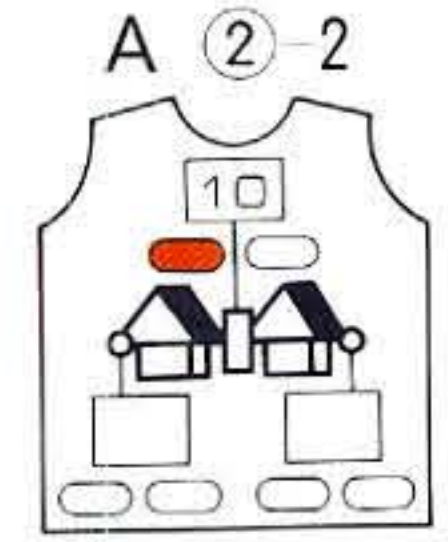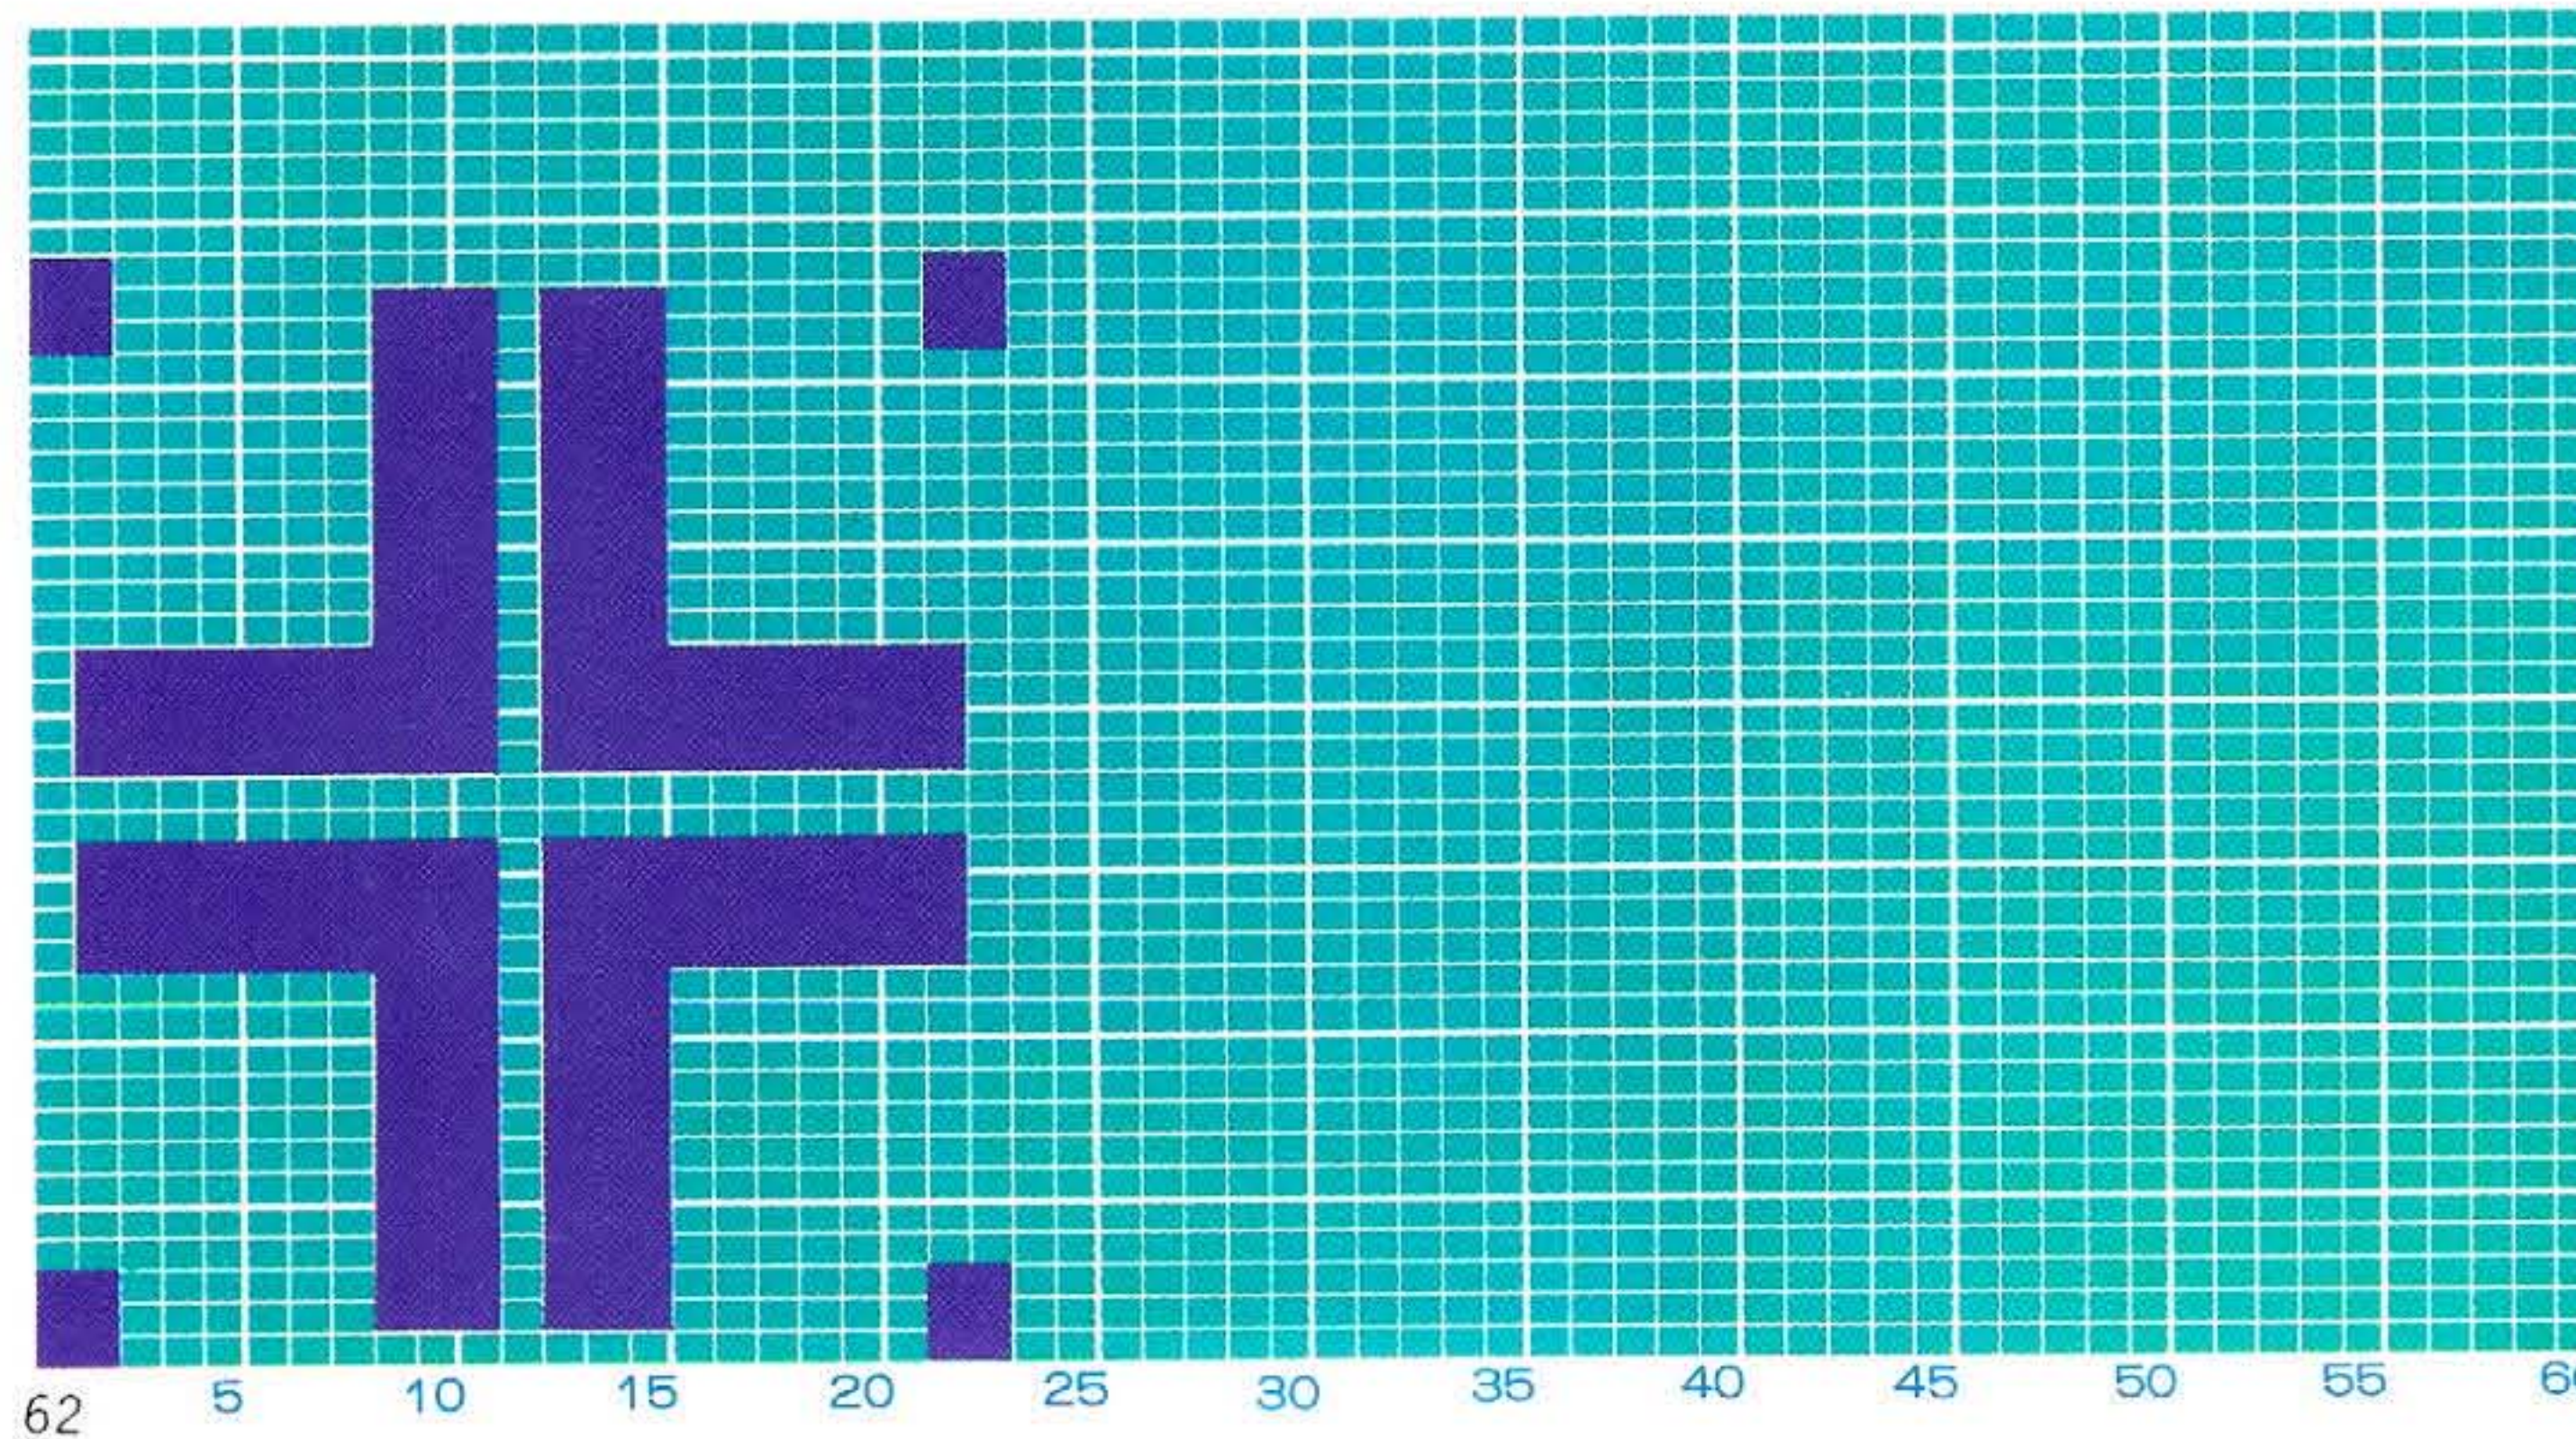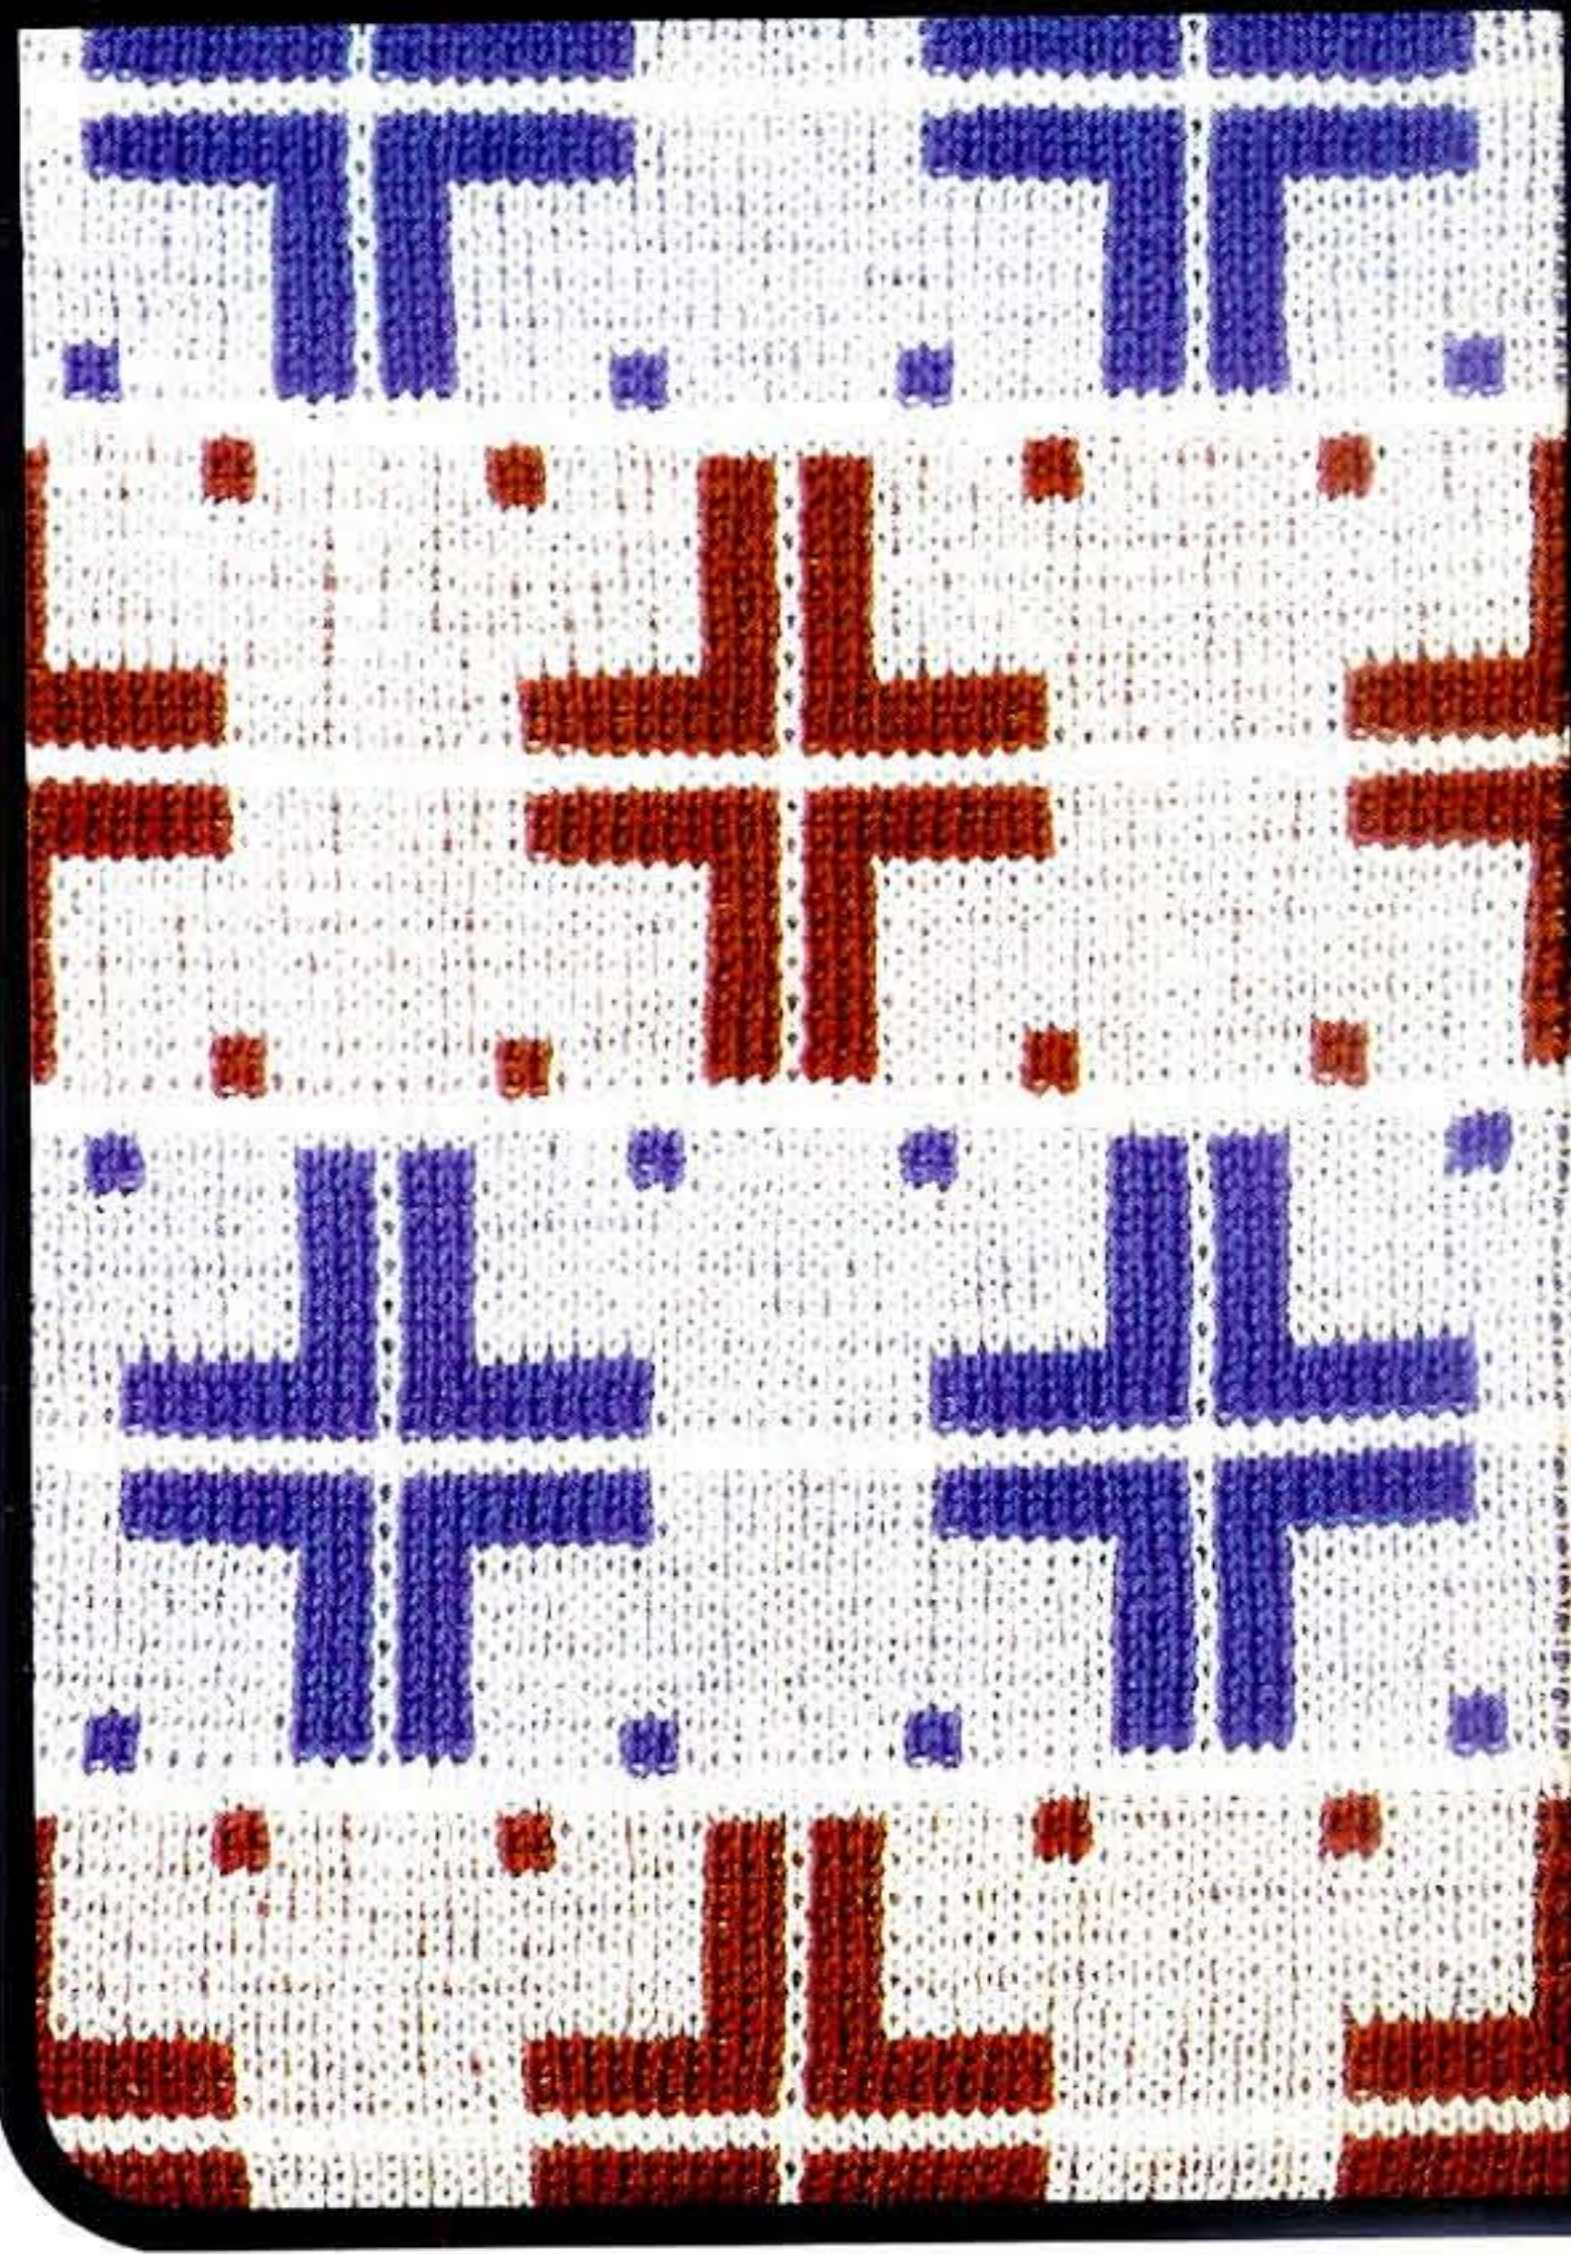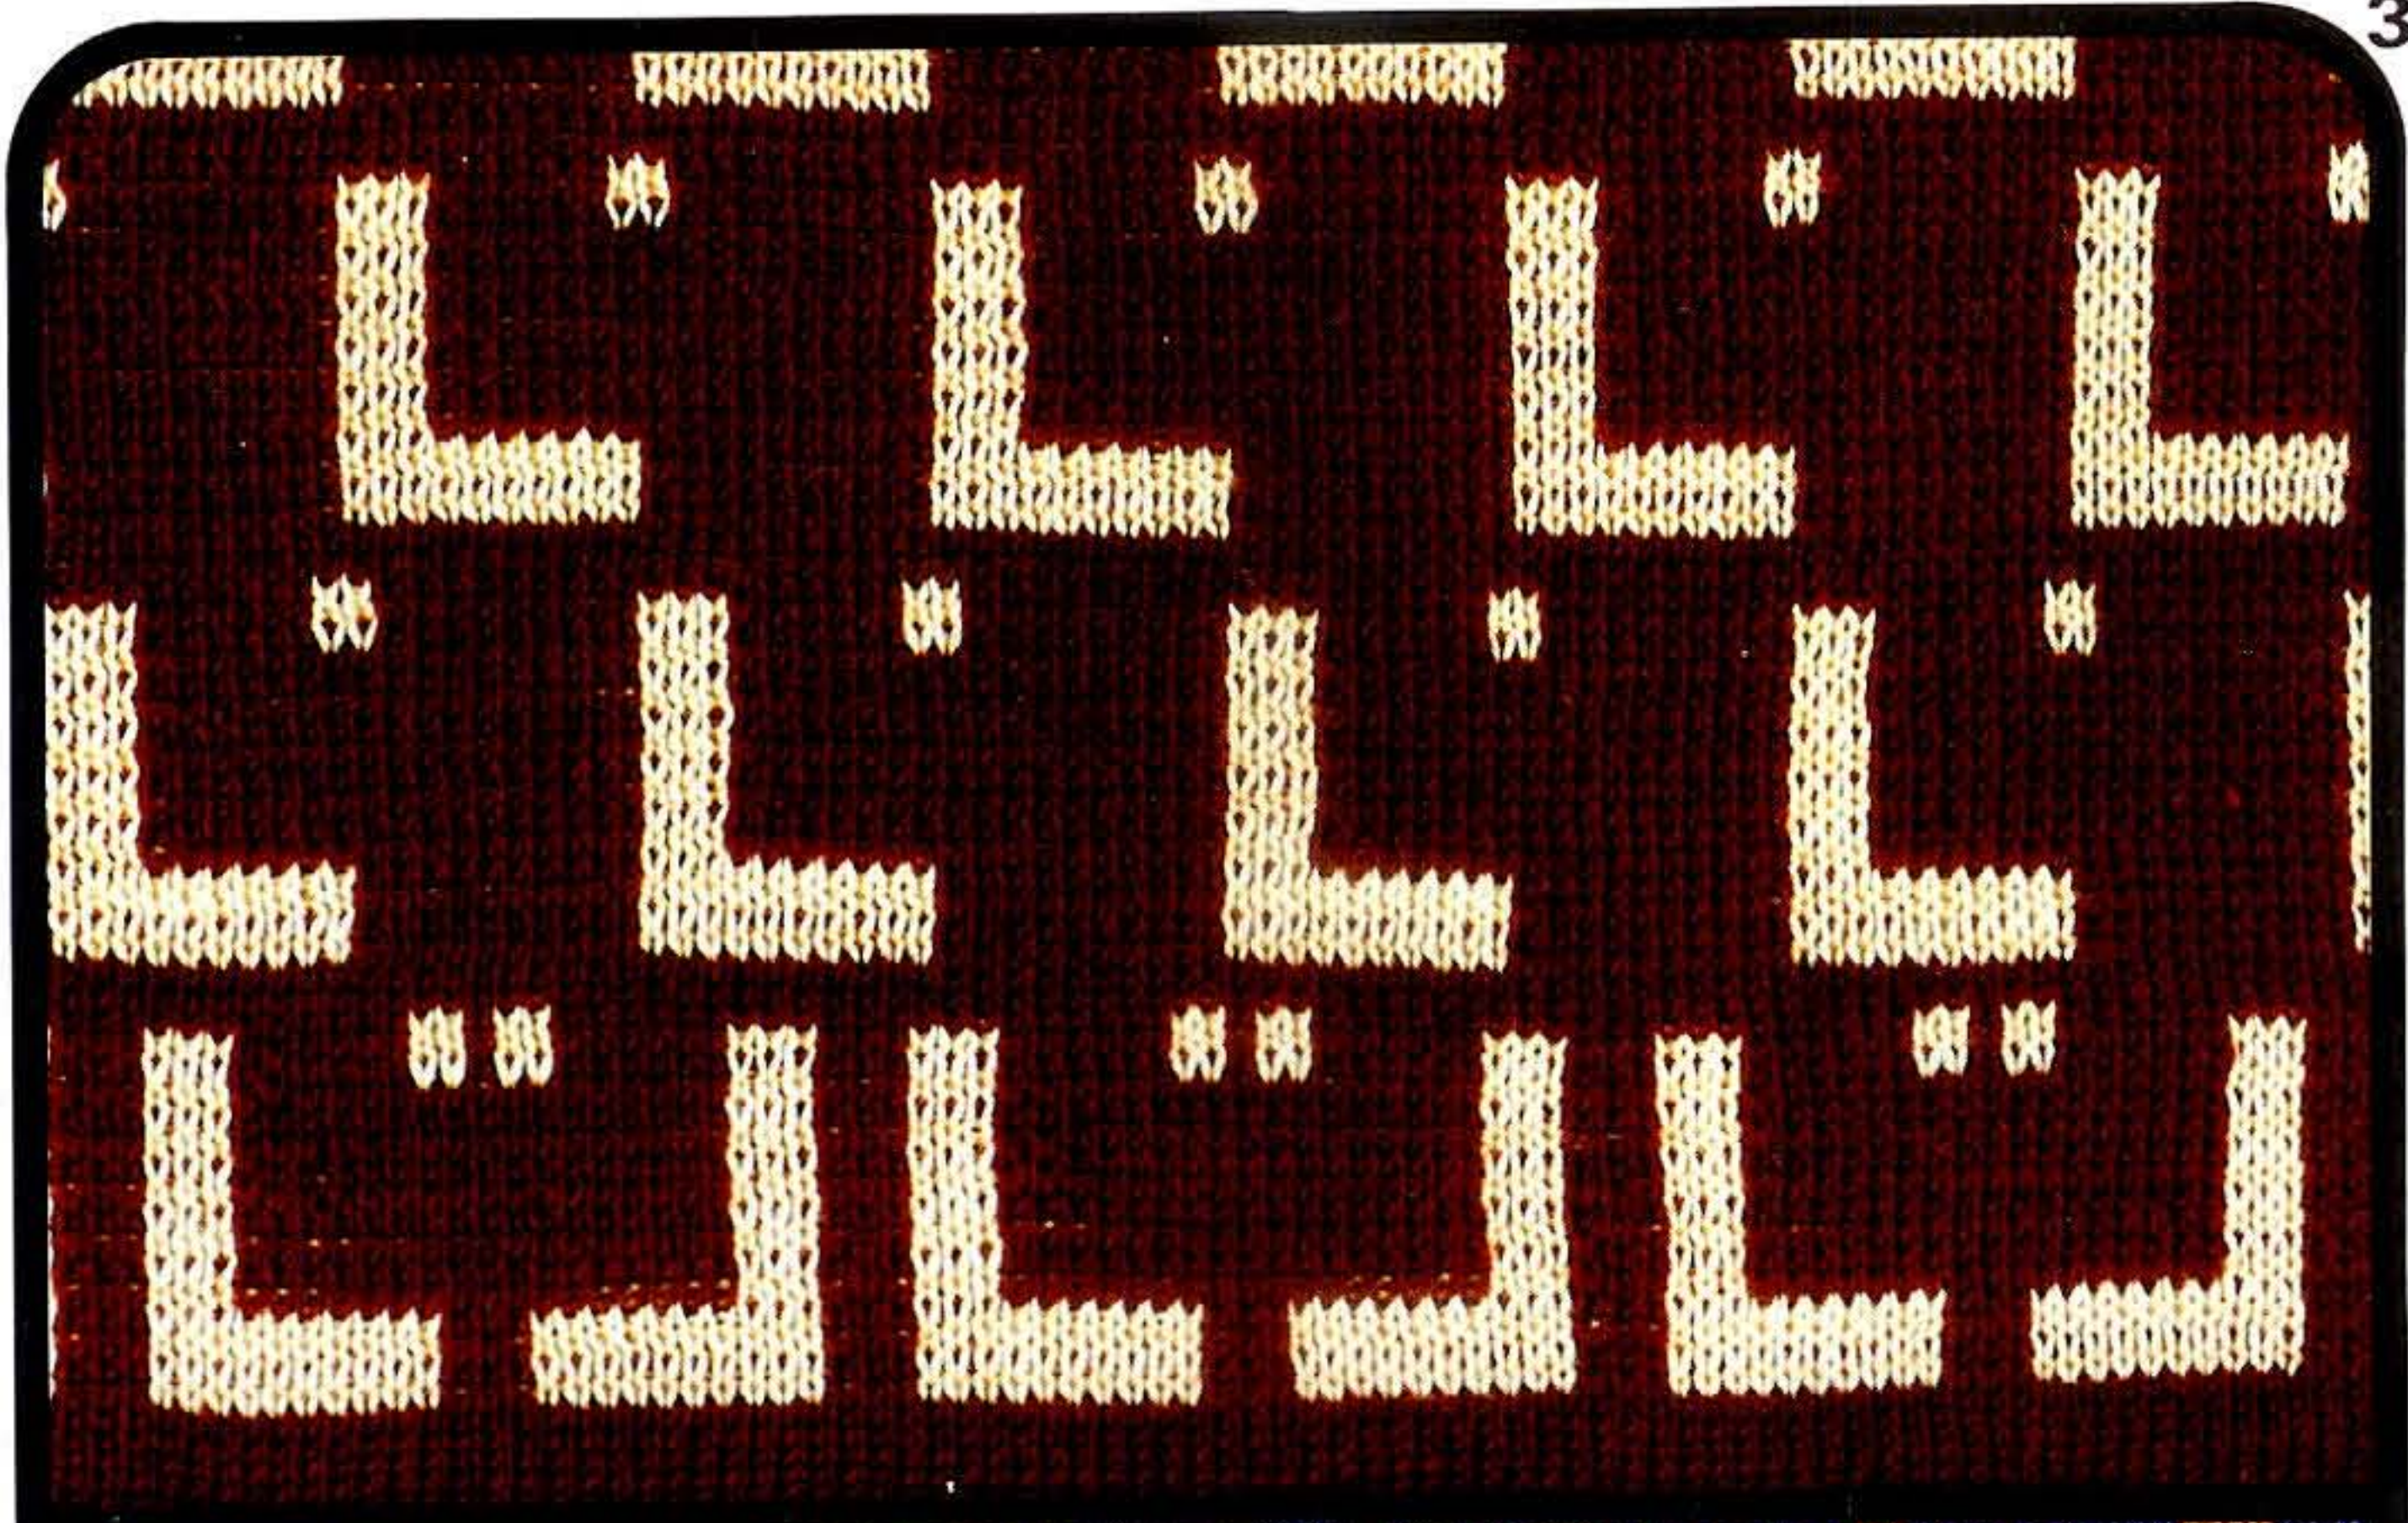    

A ②-1

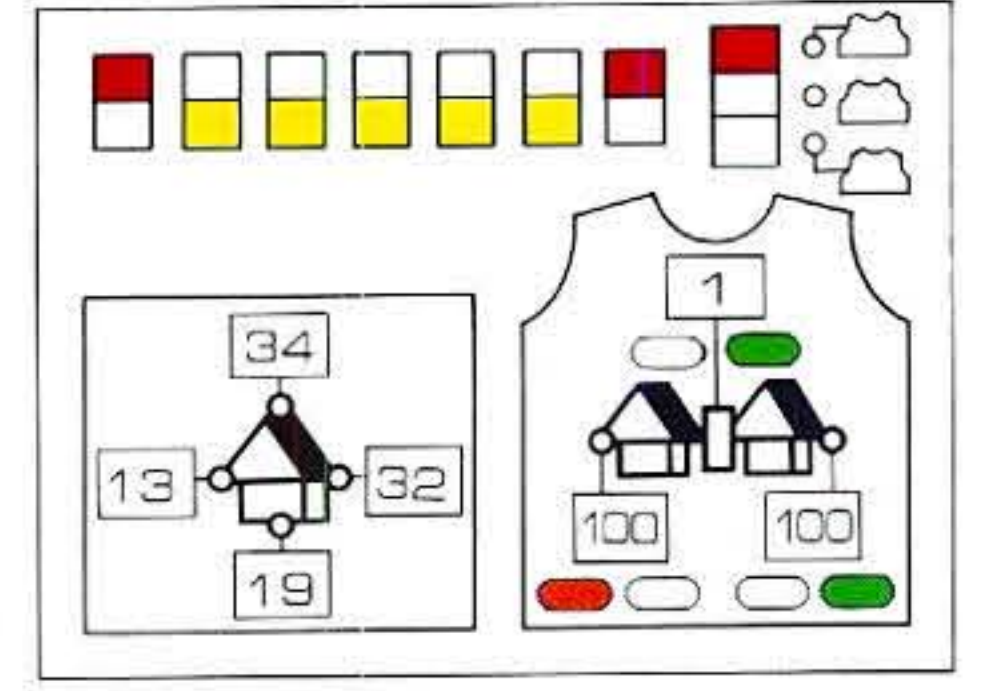 


A ①

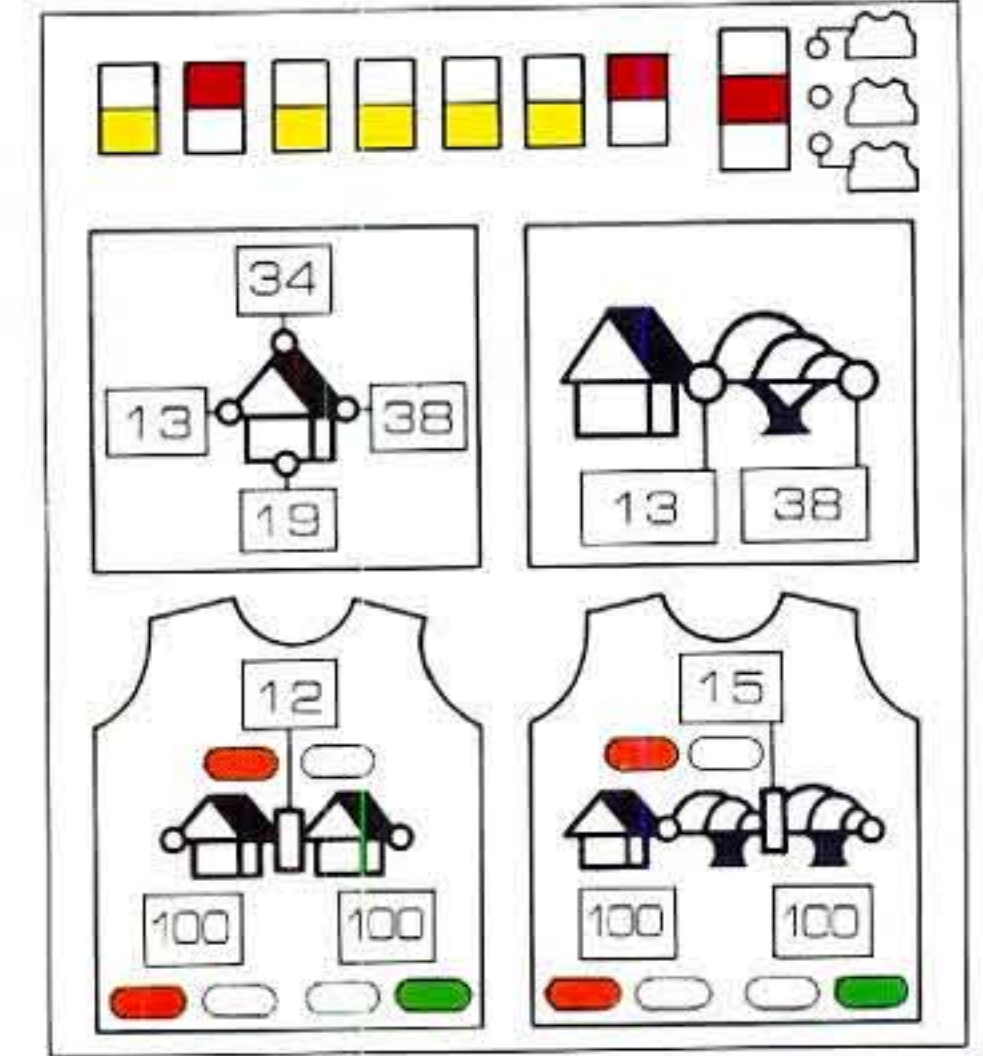 

B ①-2



 B ①-1

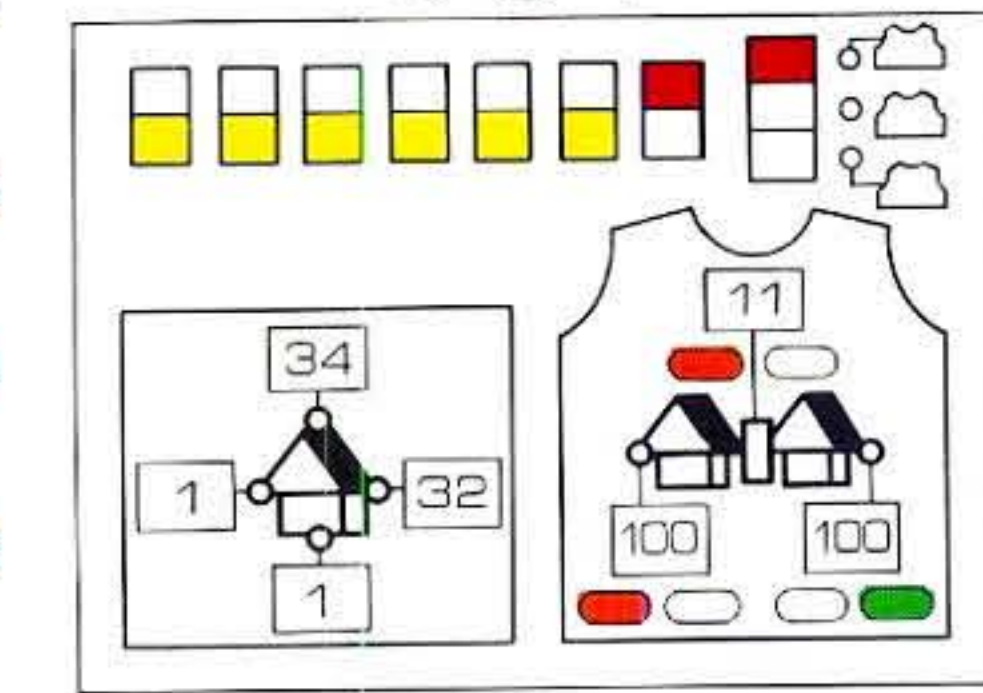

A



 
②-2
②-1
①

B



①-2
①-1


C ①

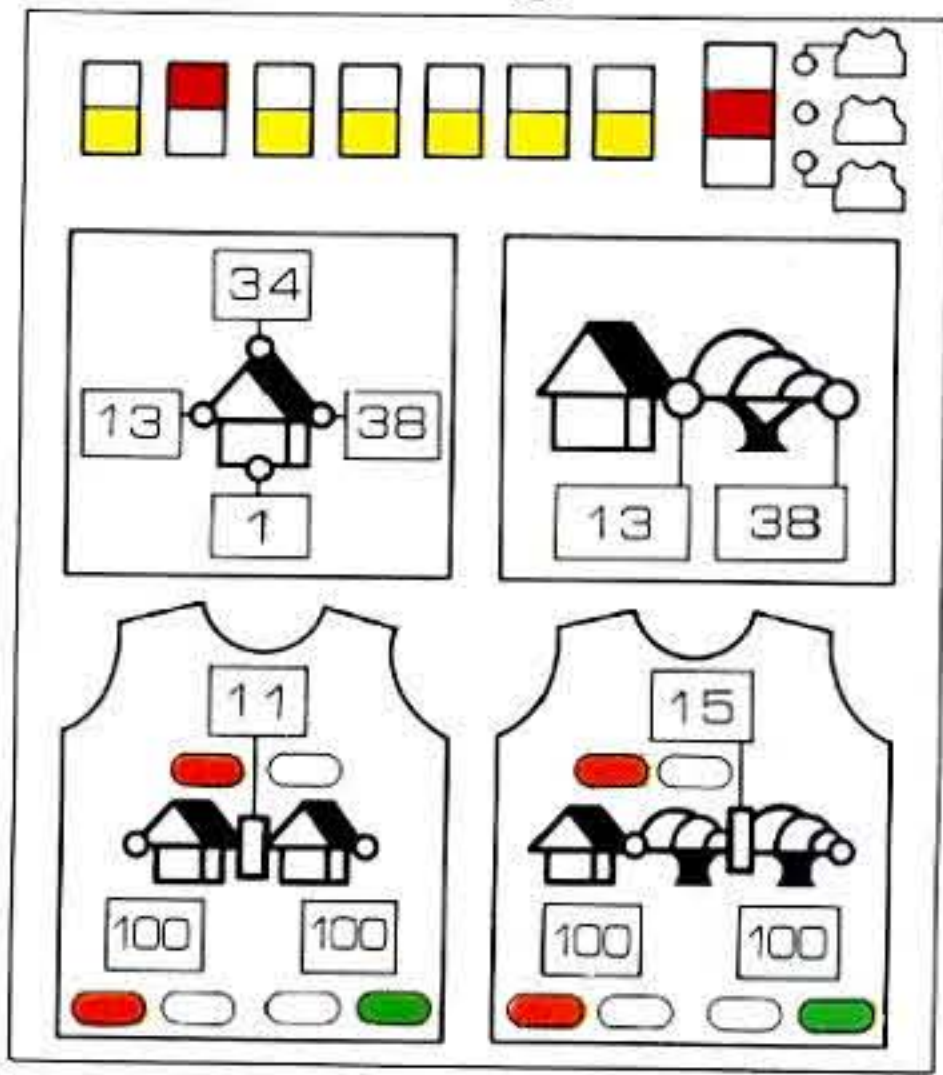

C




 ①

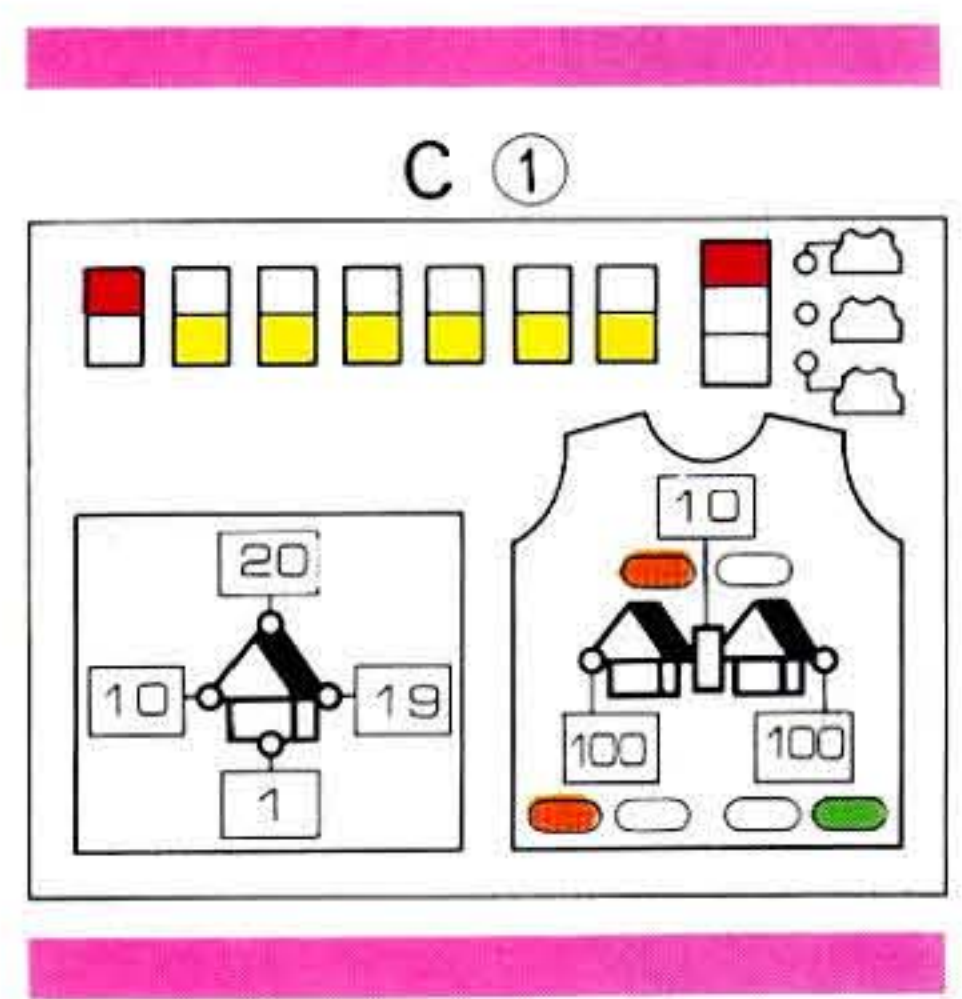





A ⑤

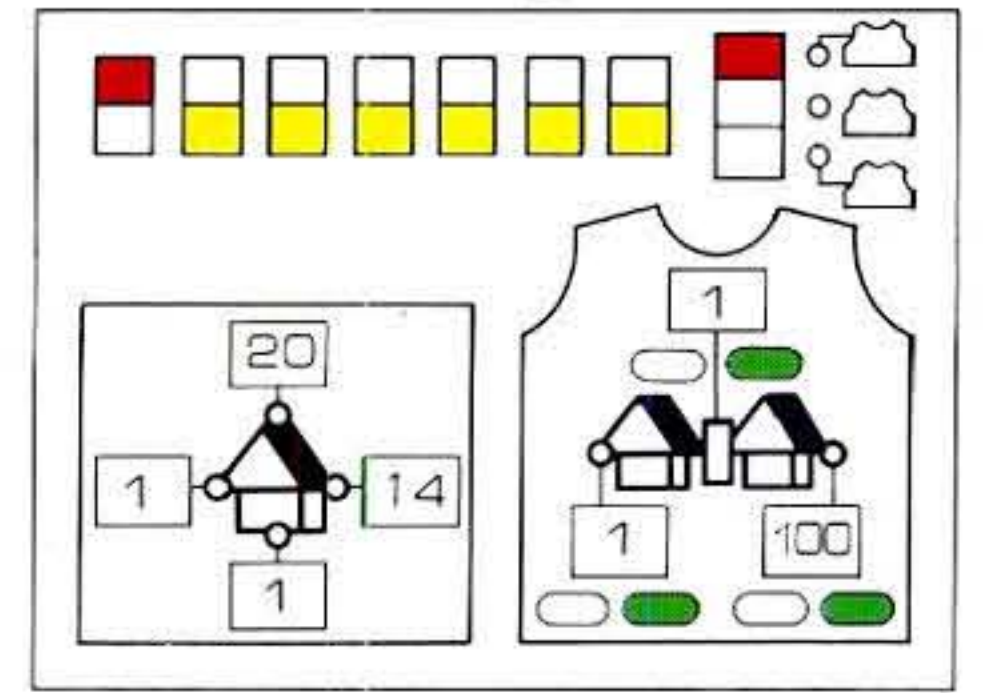 


A ④

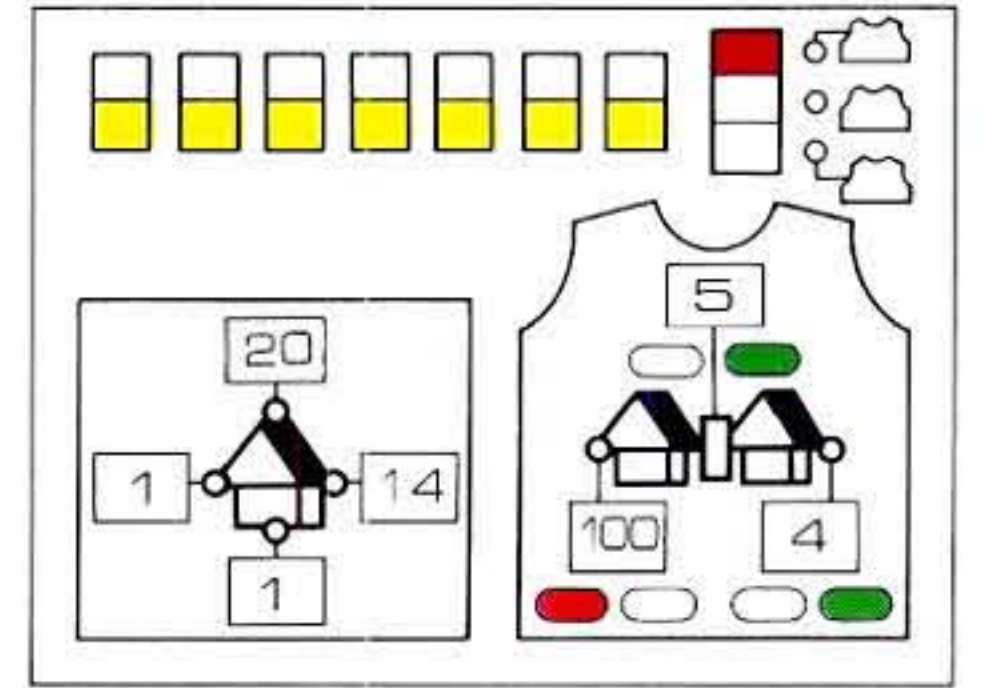 



A ③

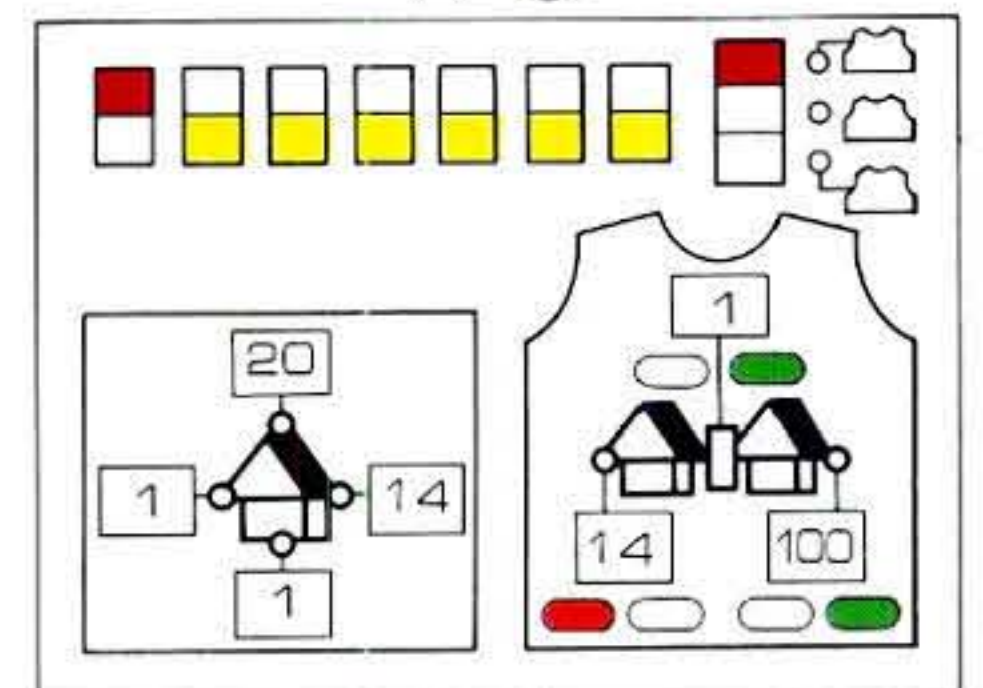 


A ②

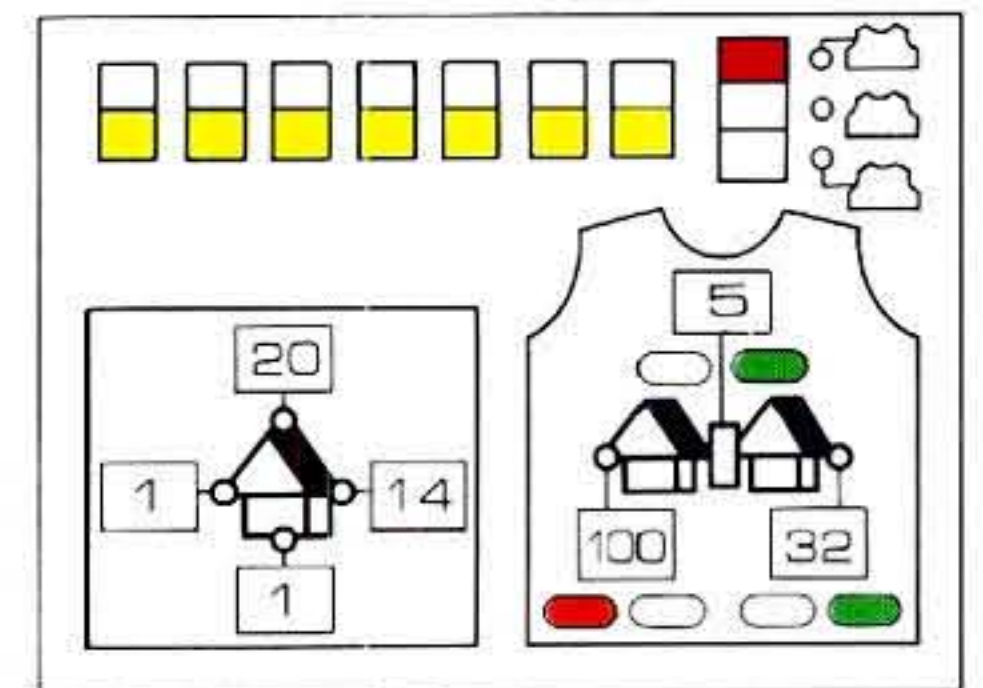 





A ①

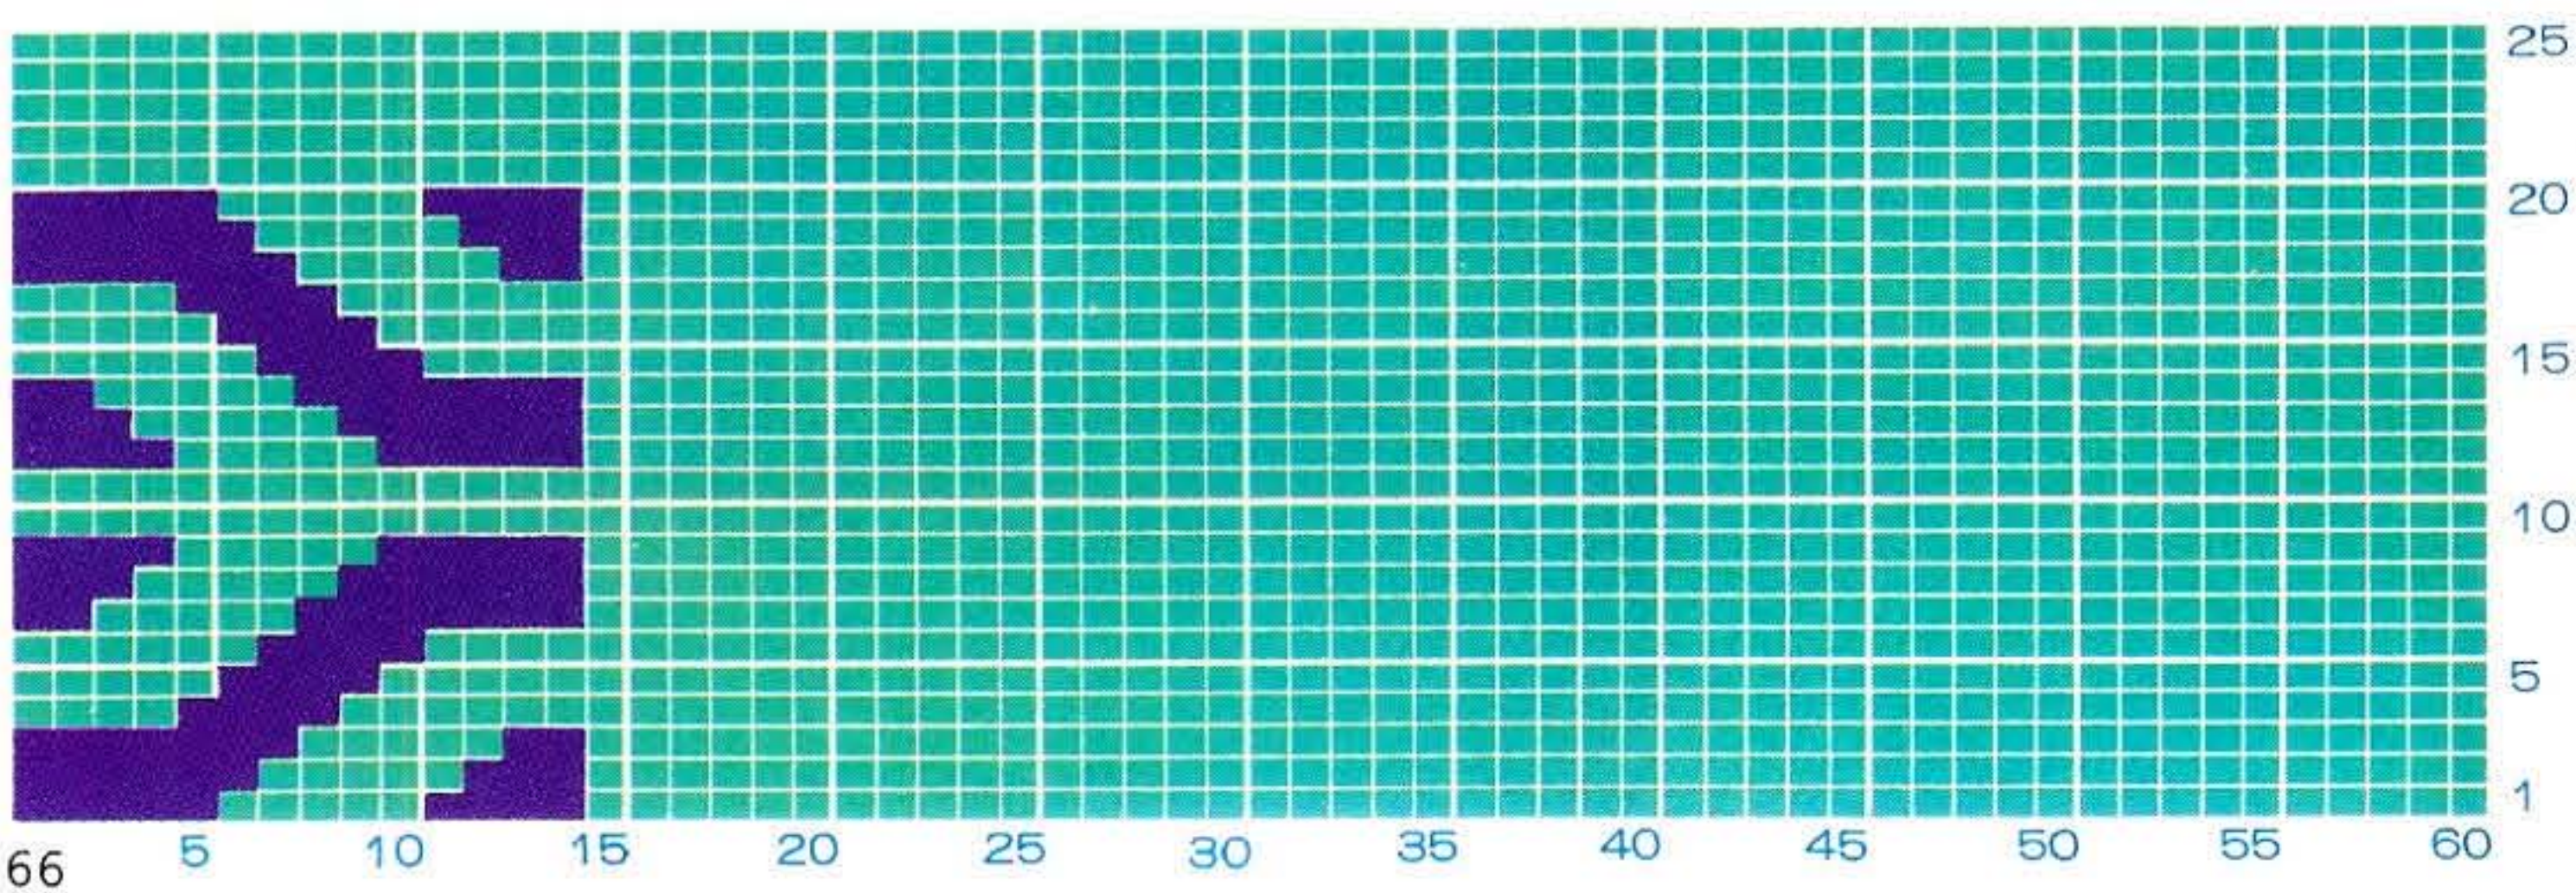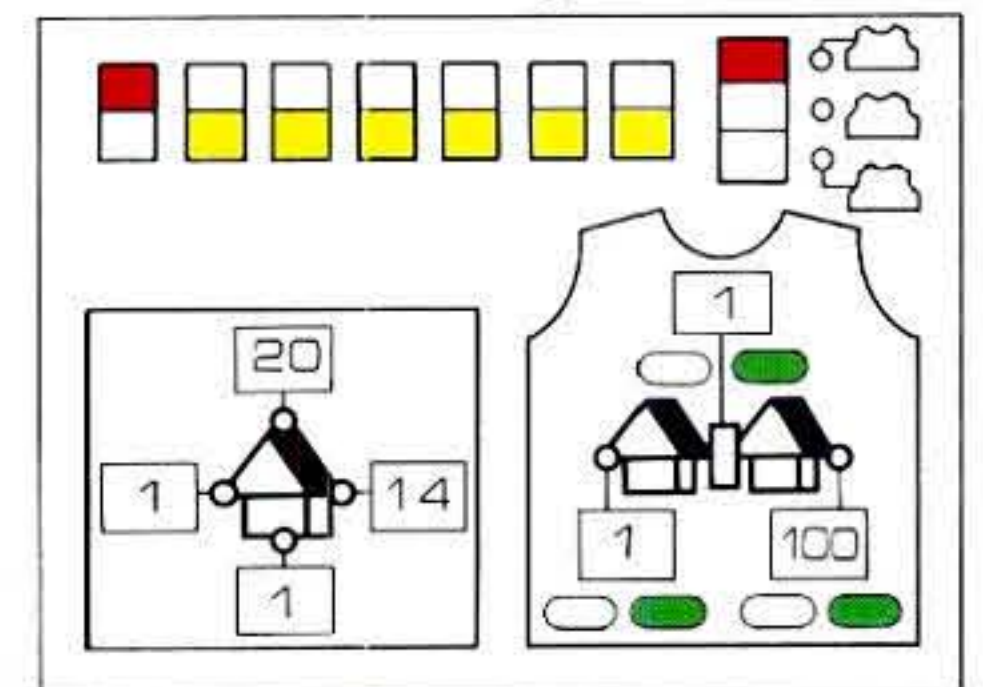  

A

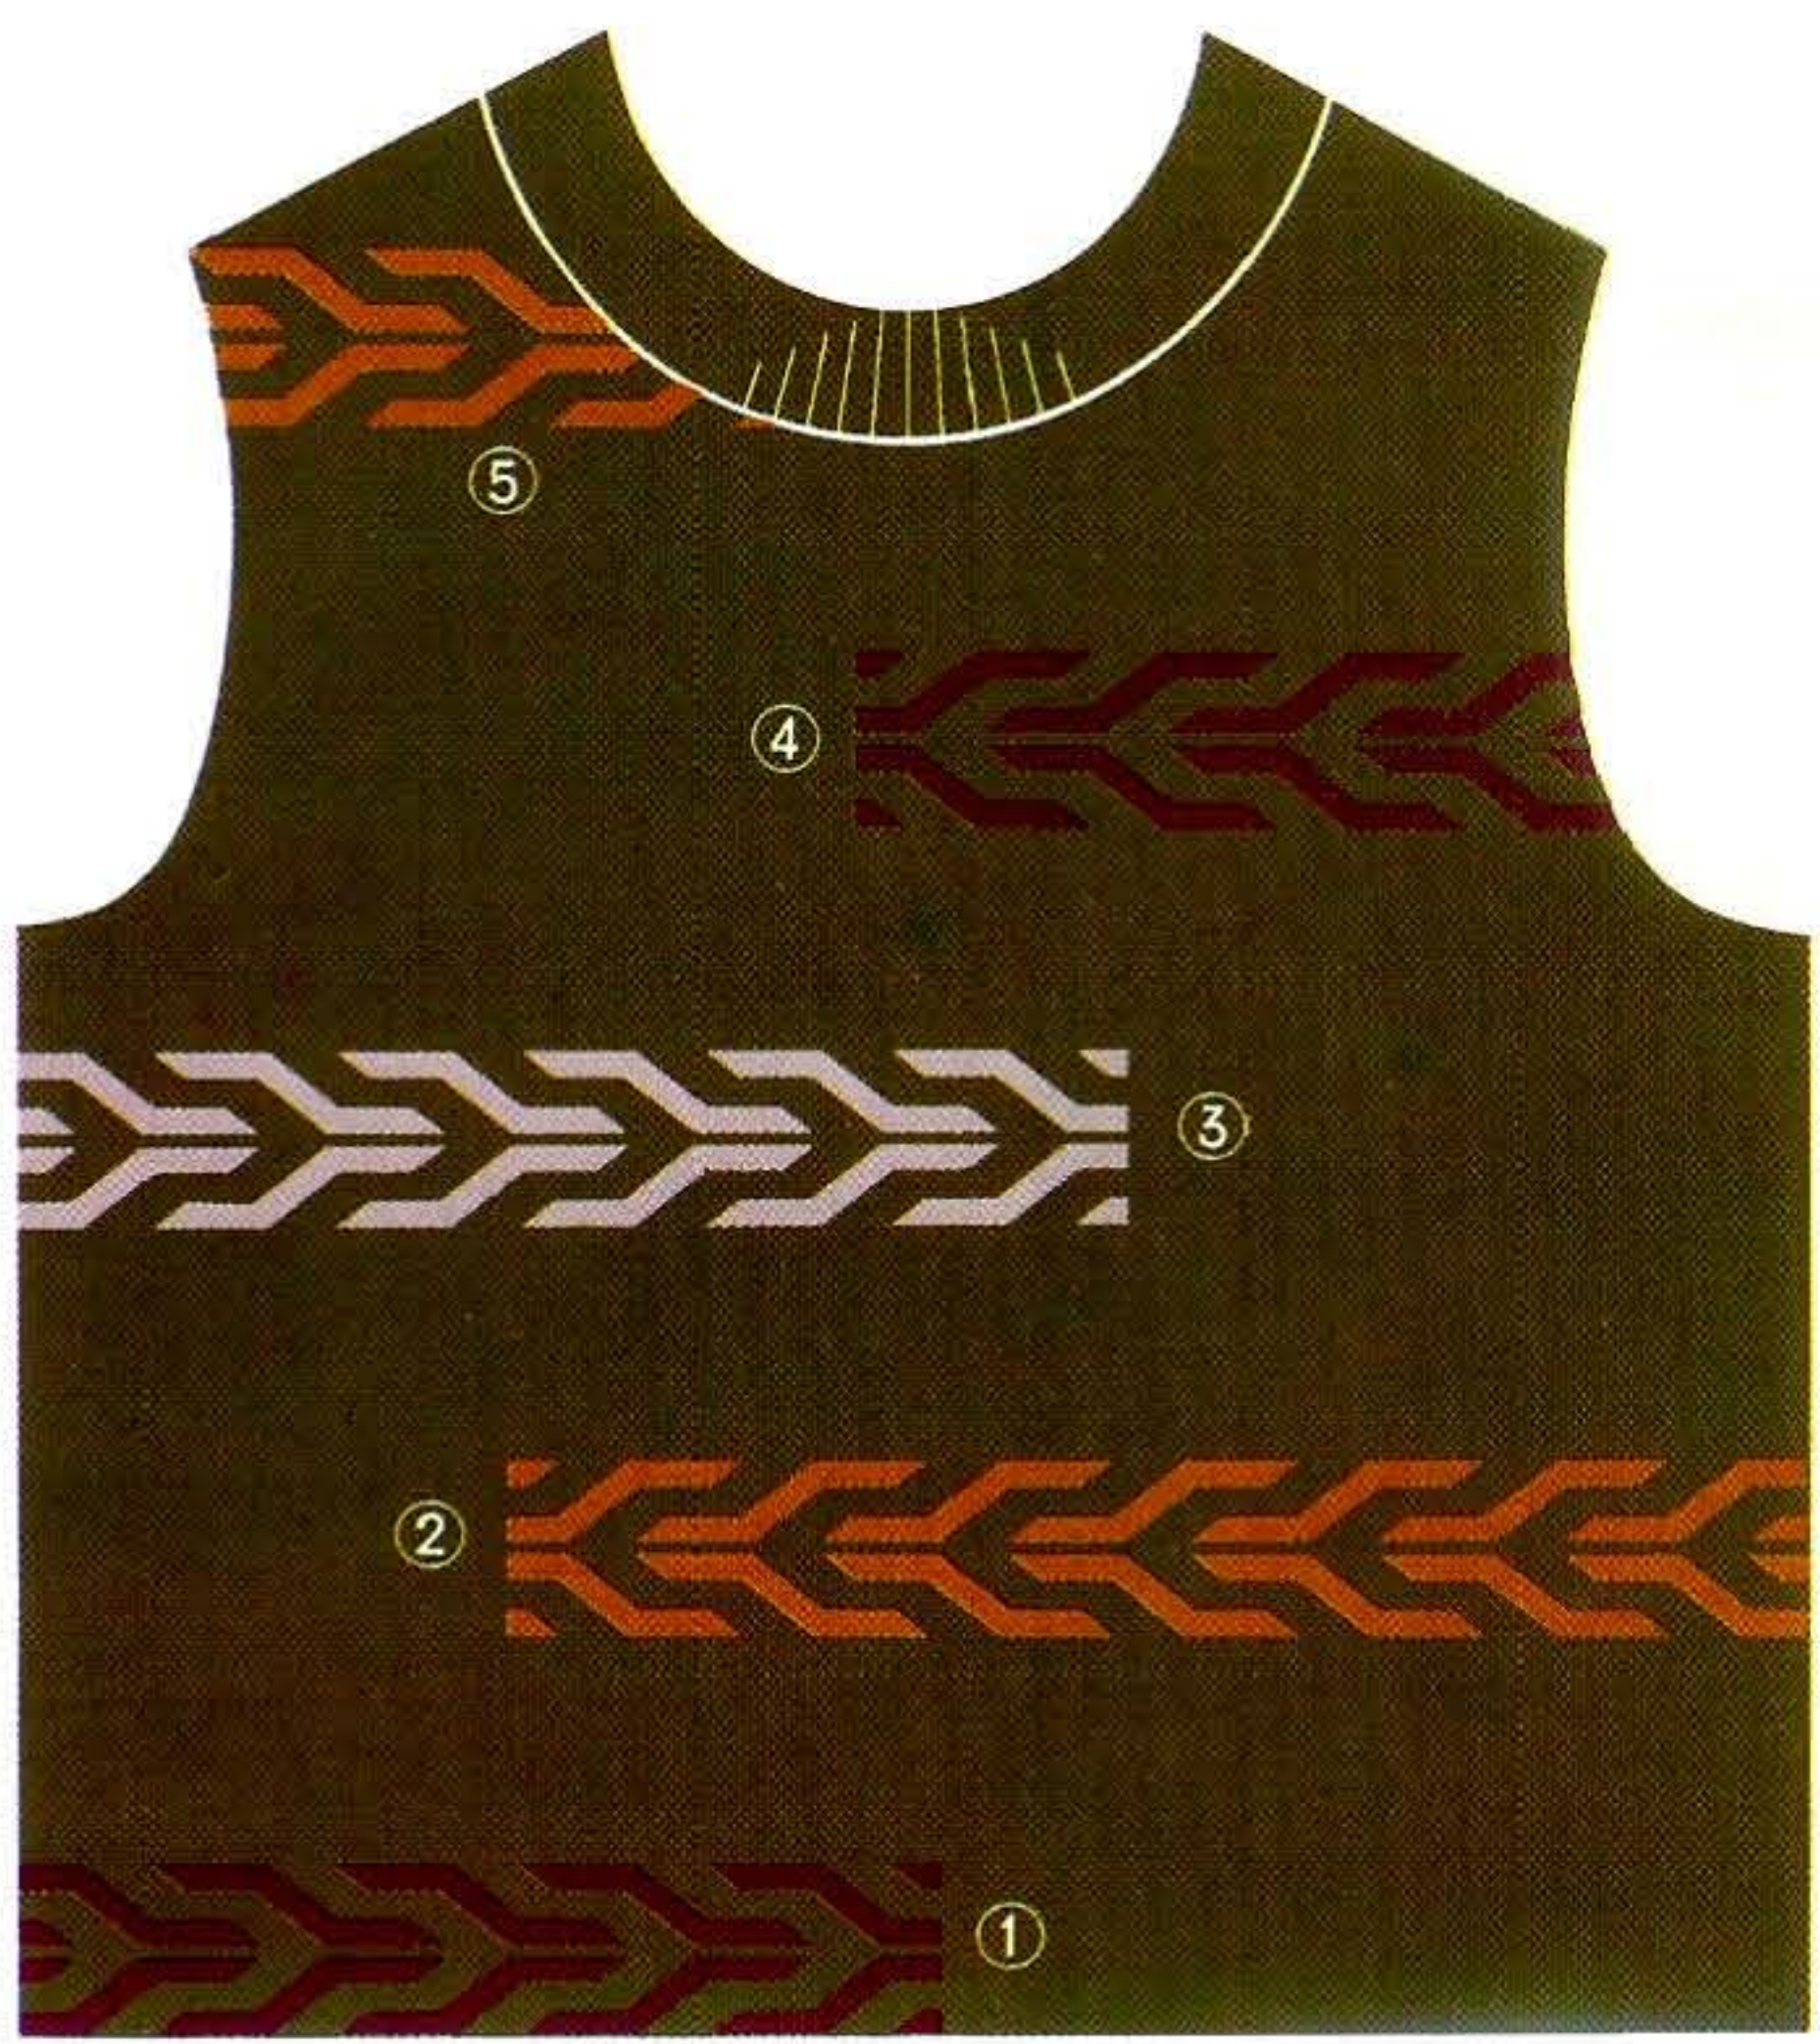 






B

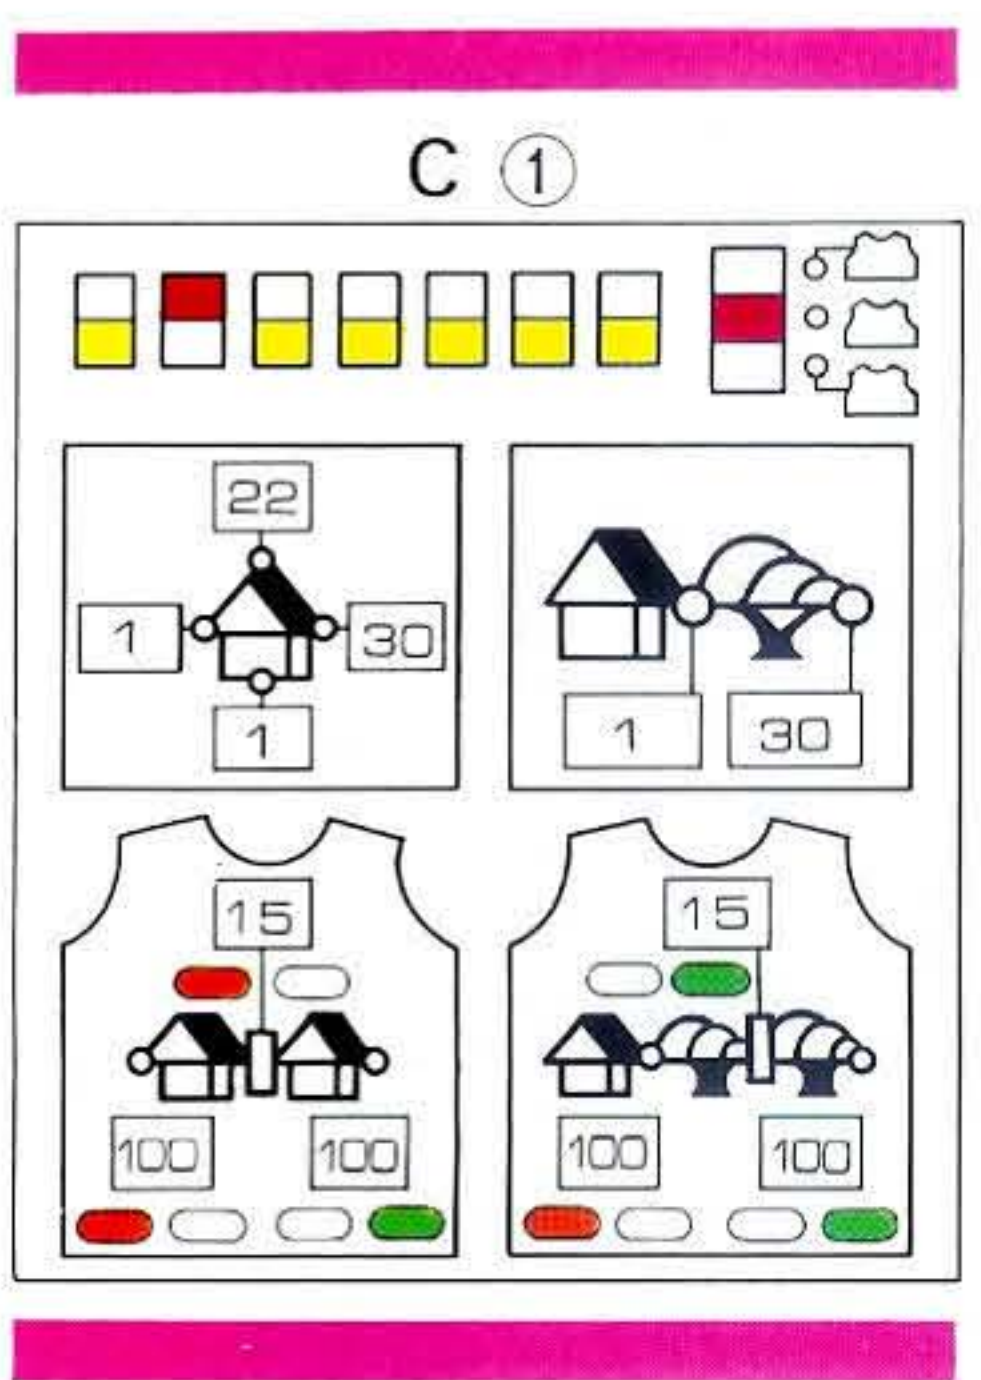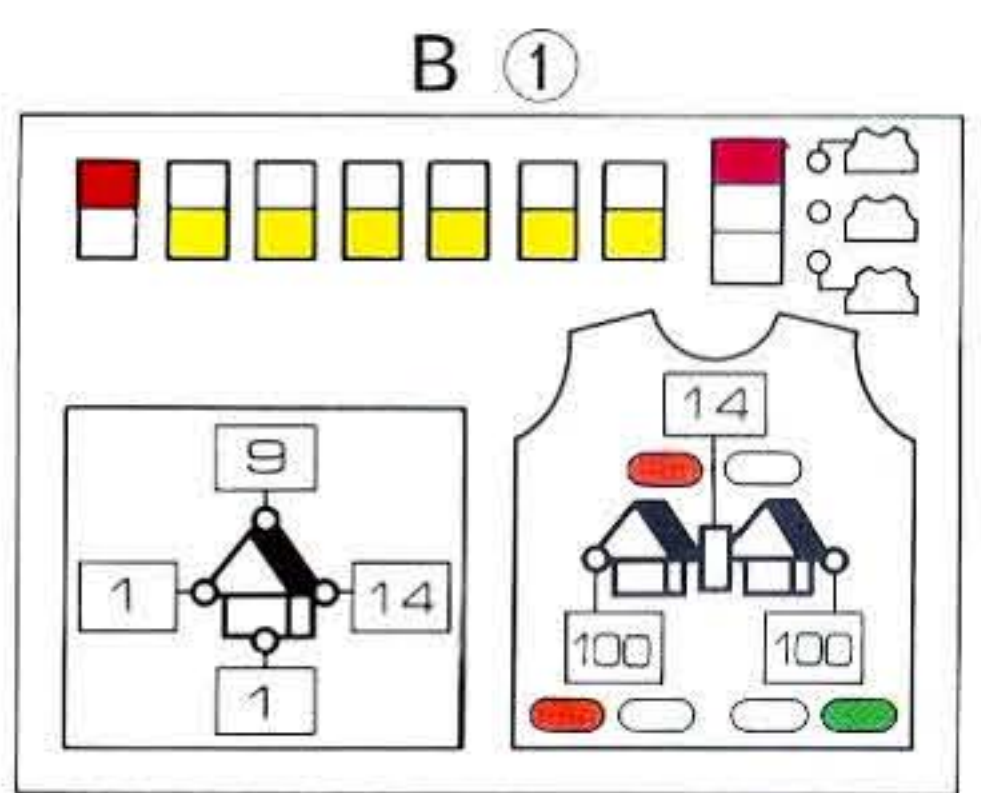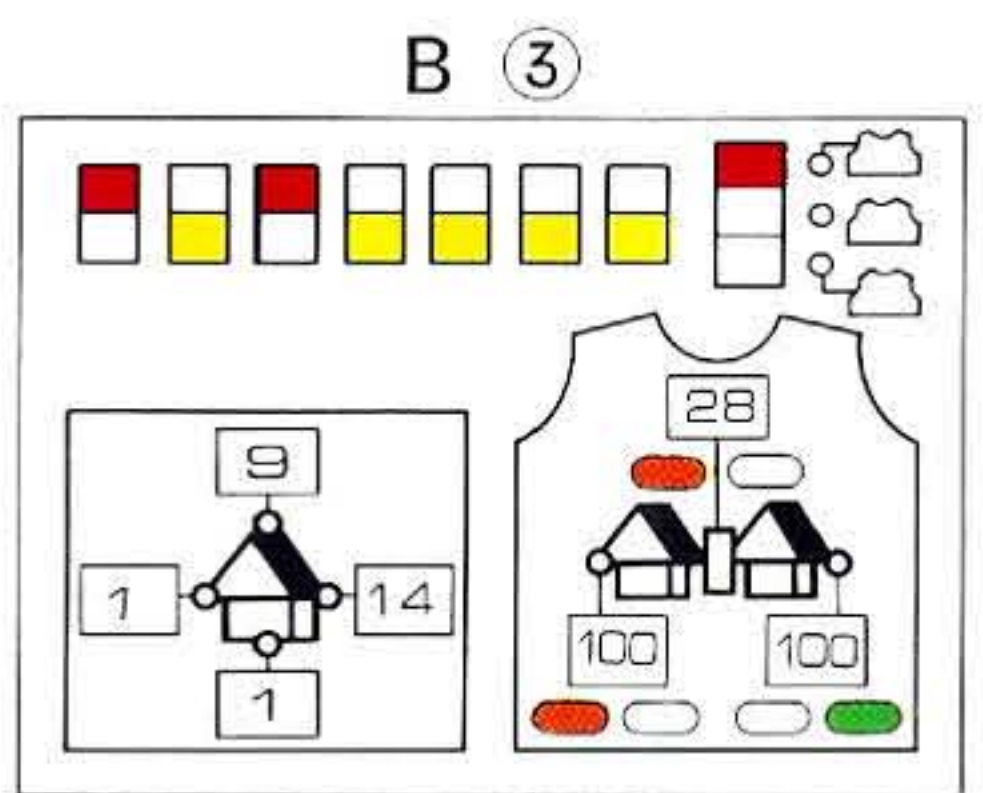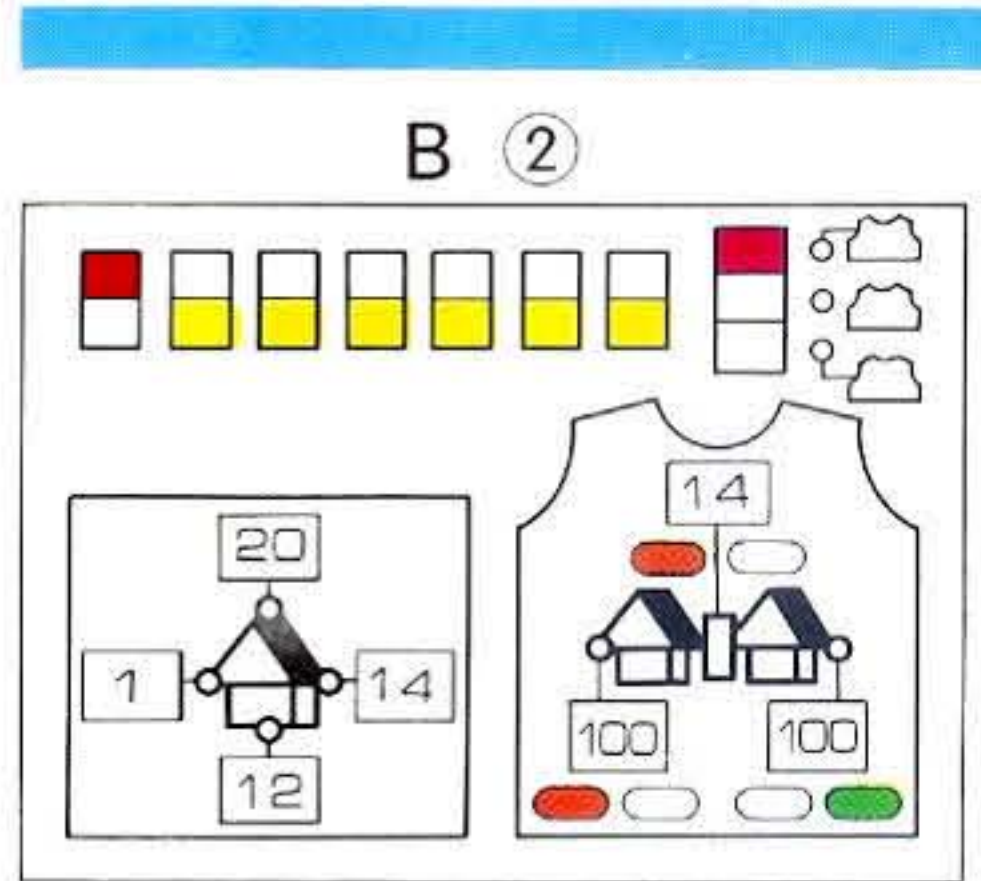    

C



     ①

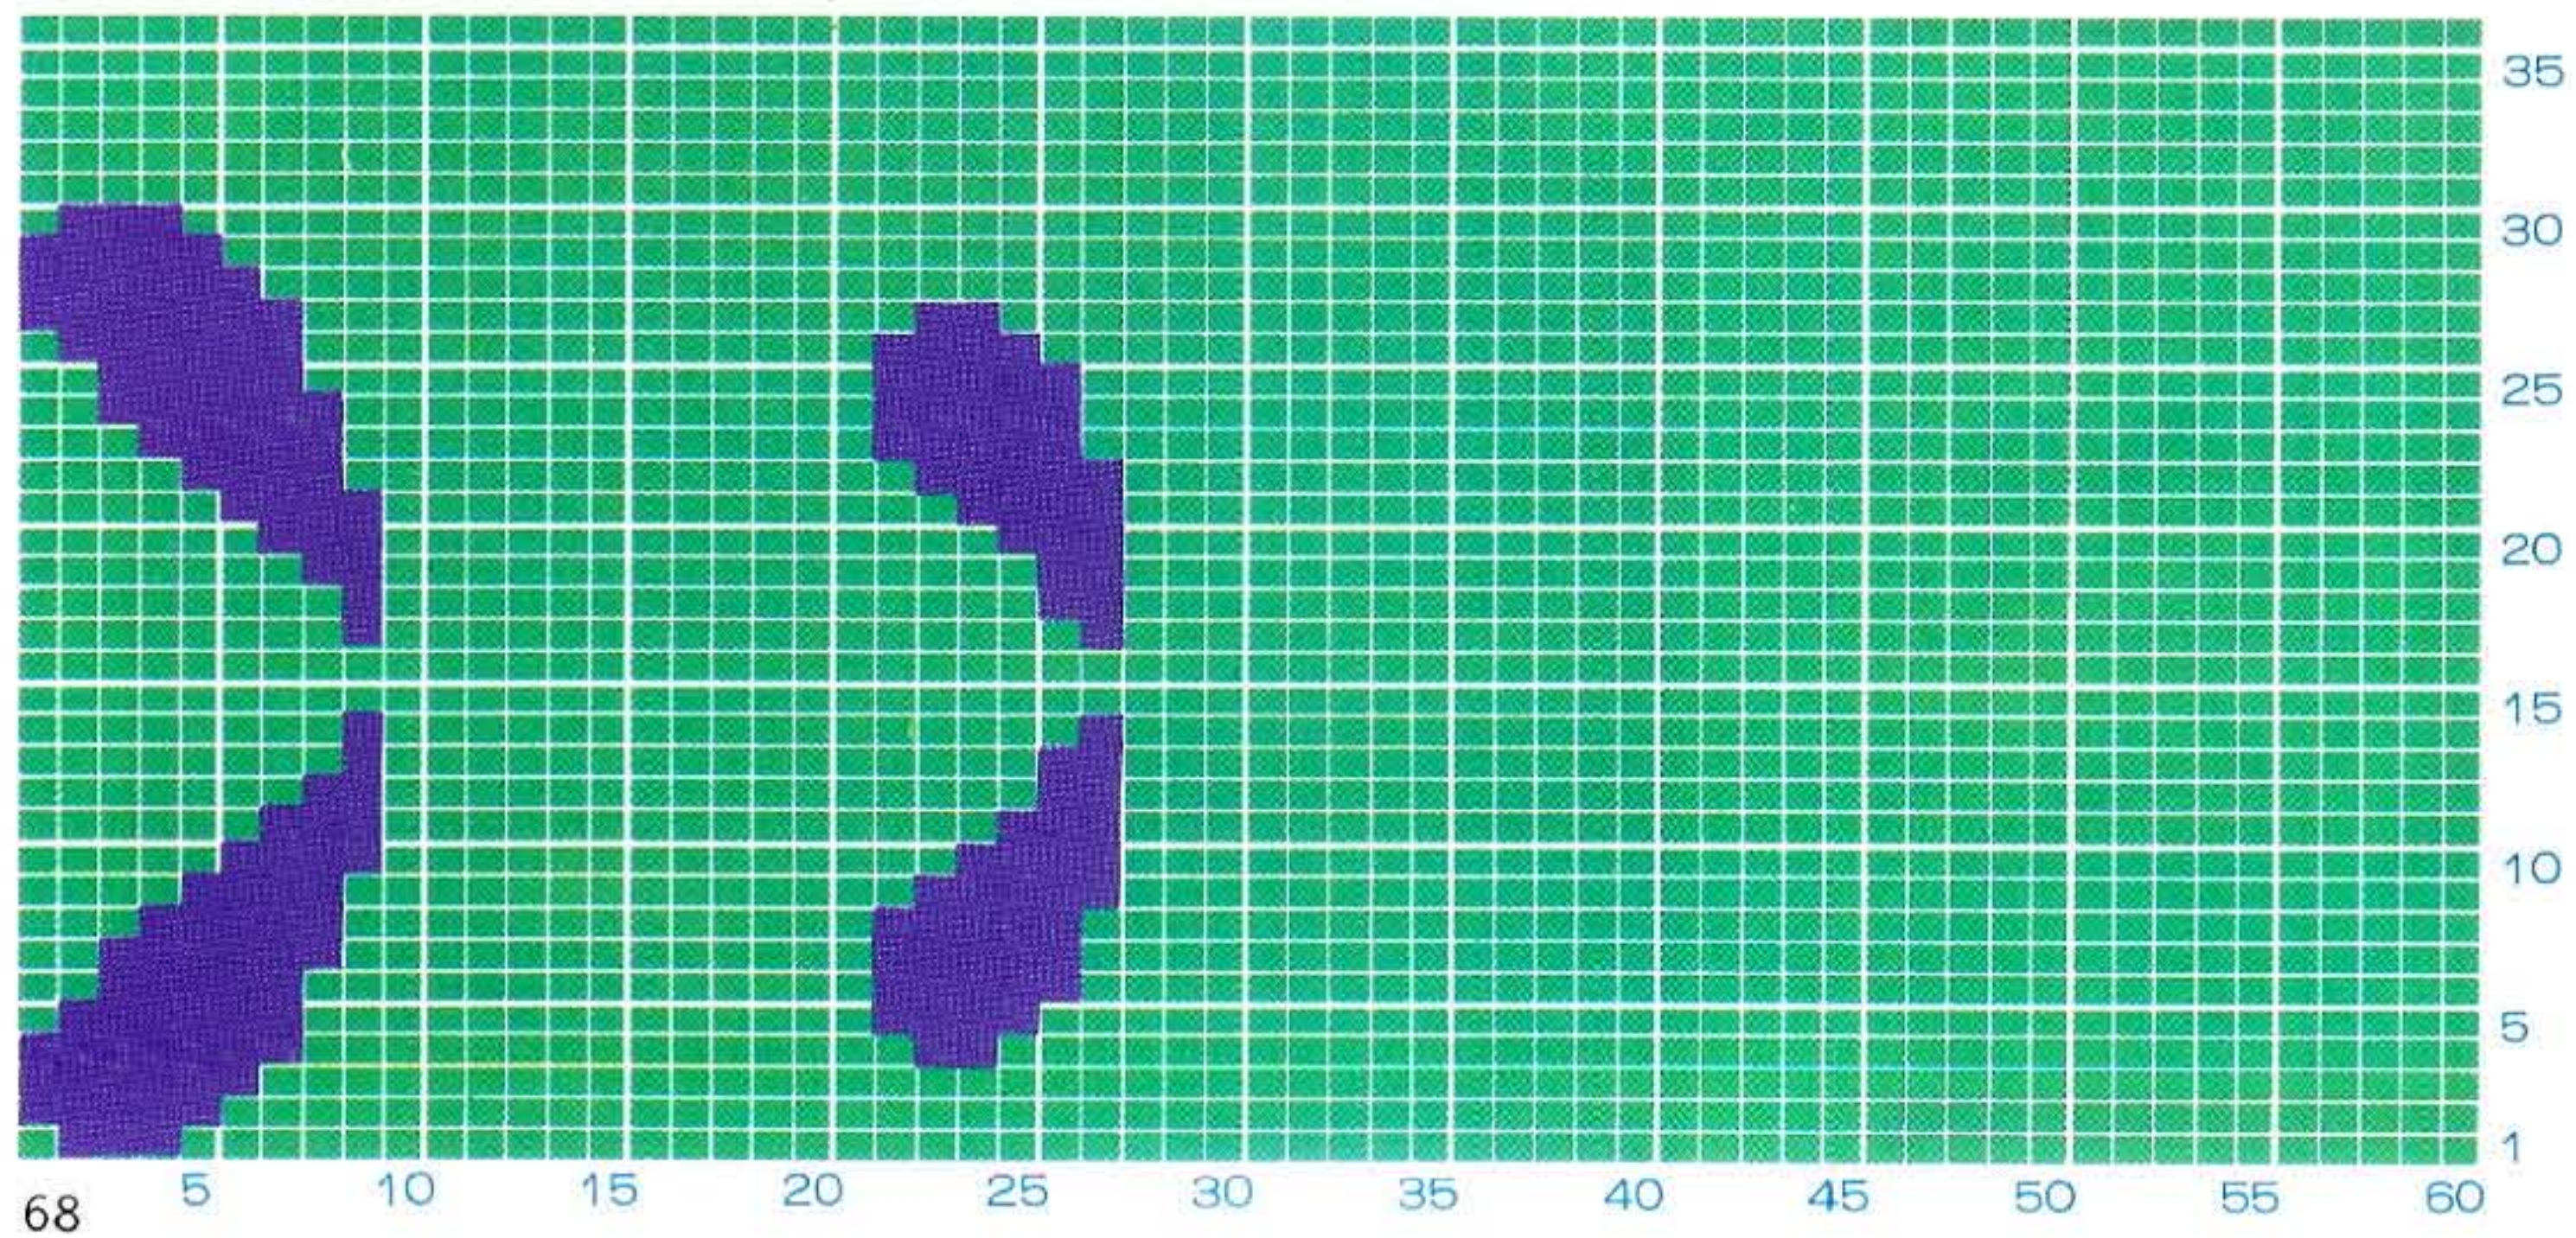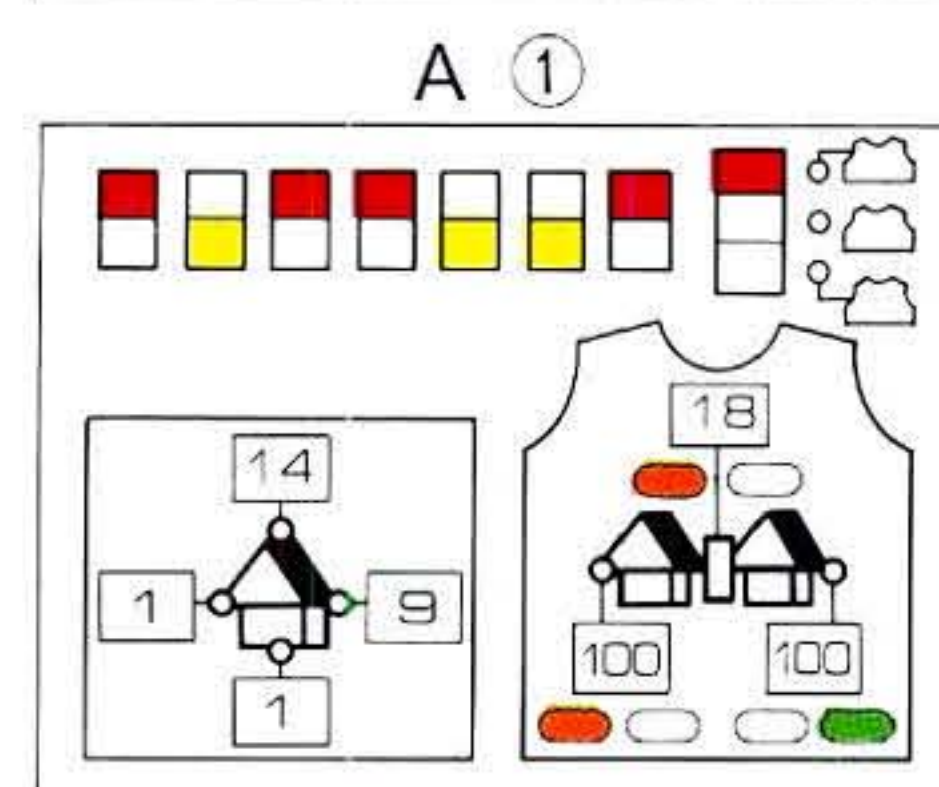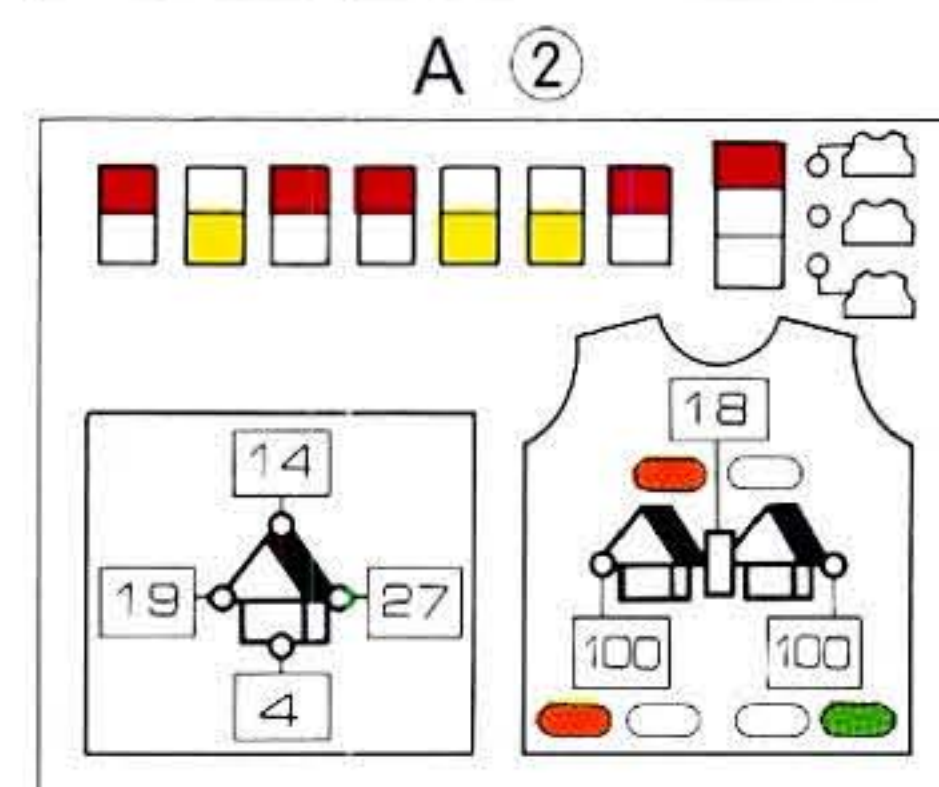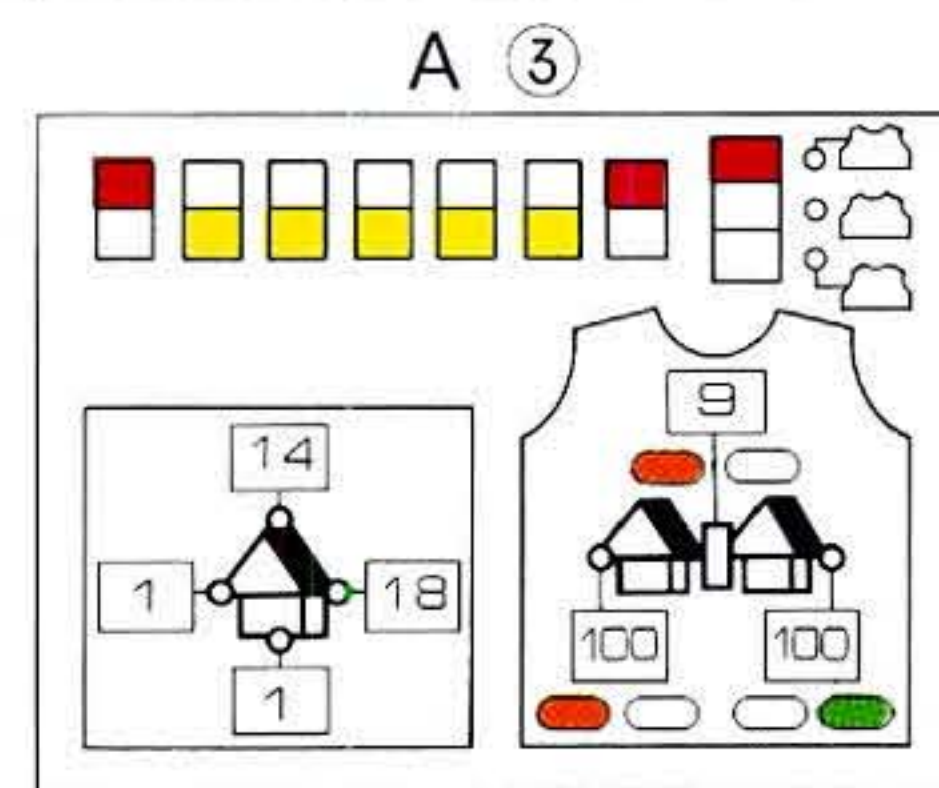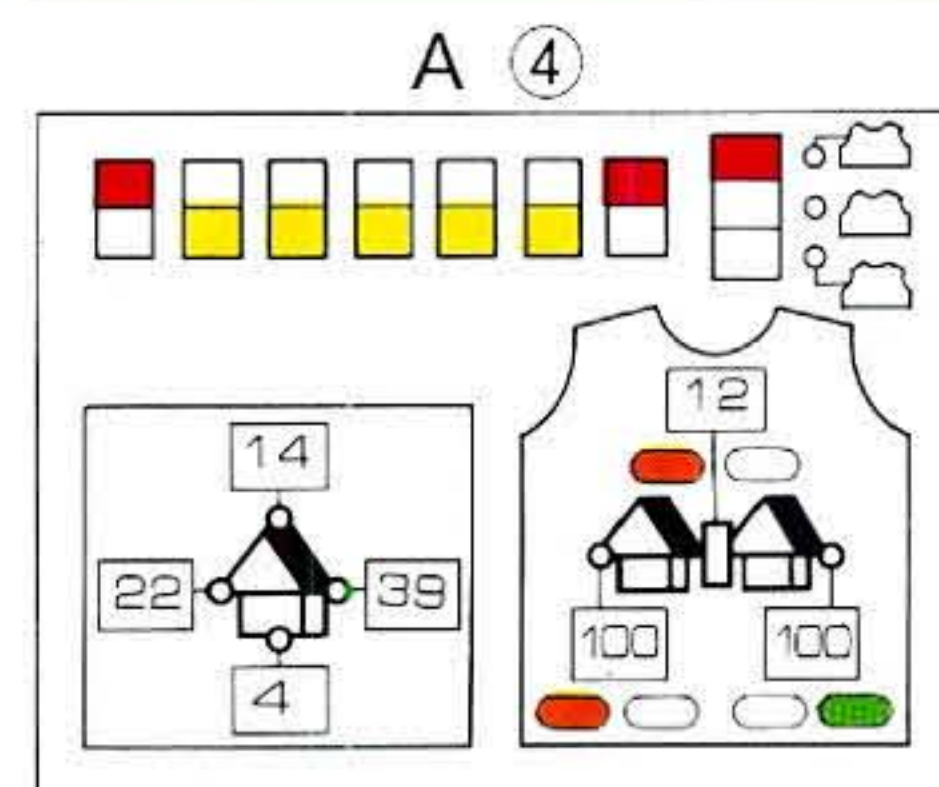


A



B



 
B ①







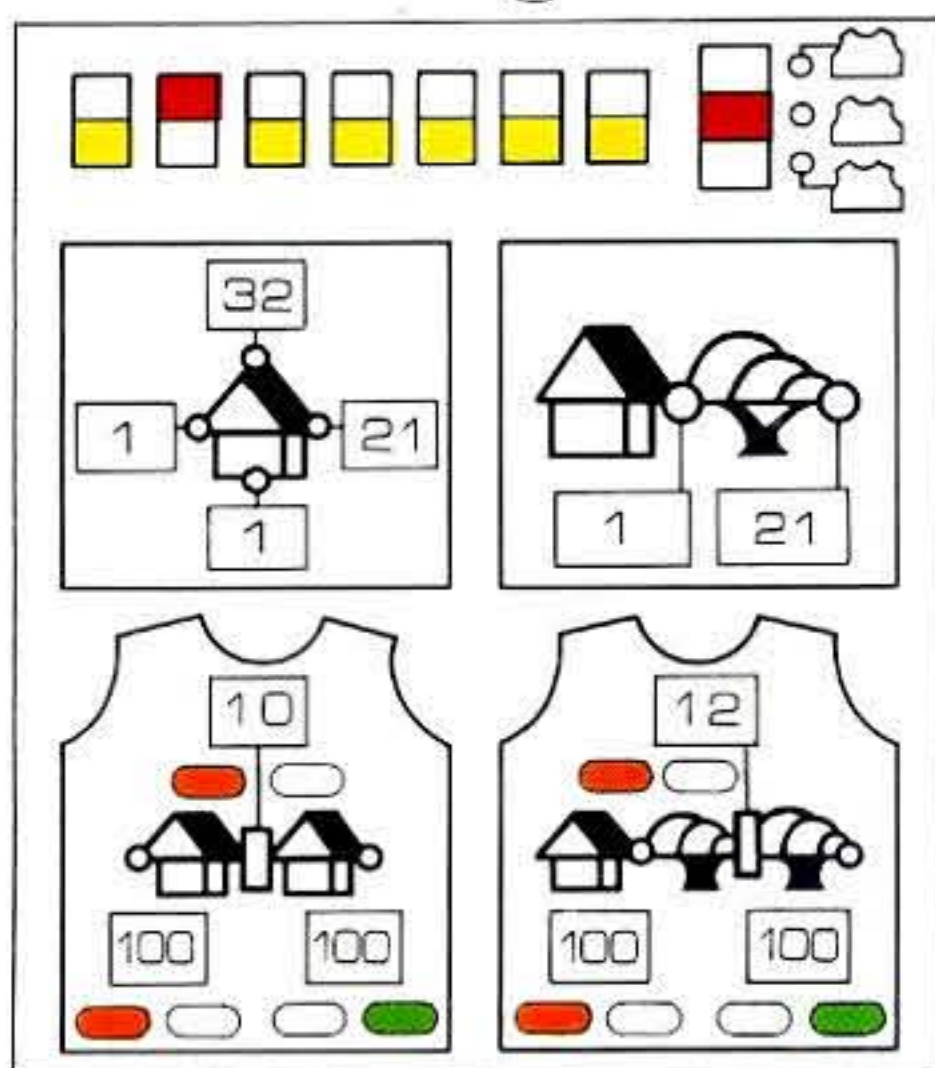


C



       
 
C ①


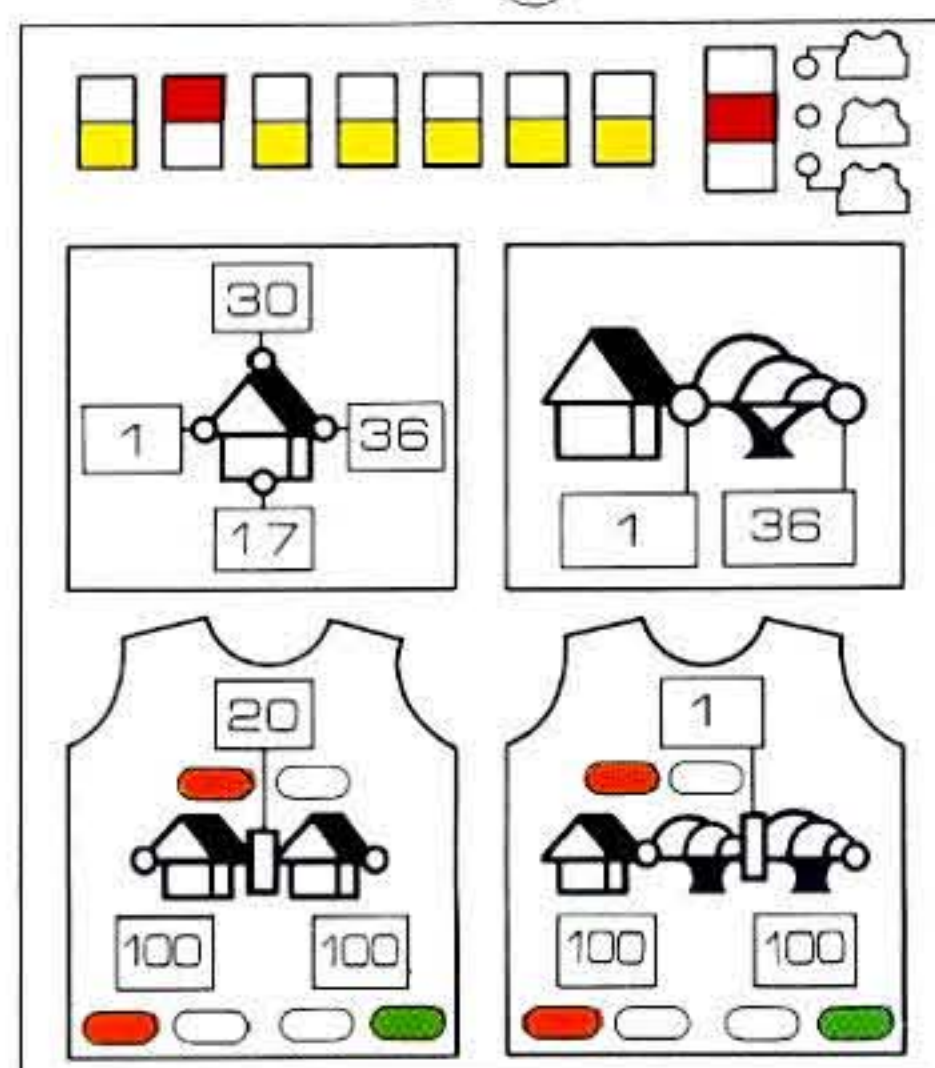


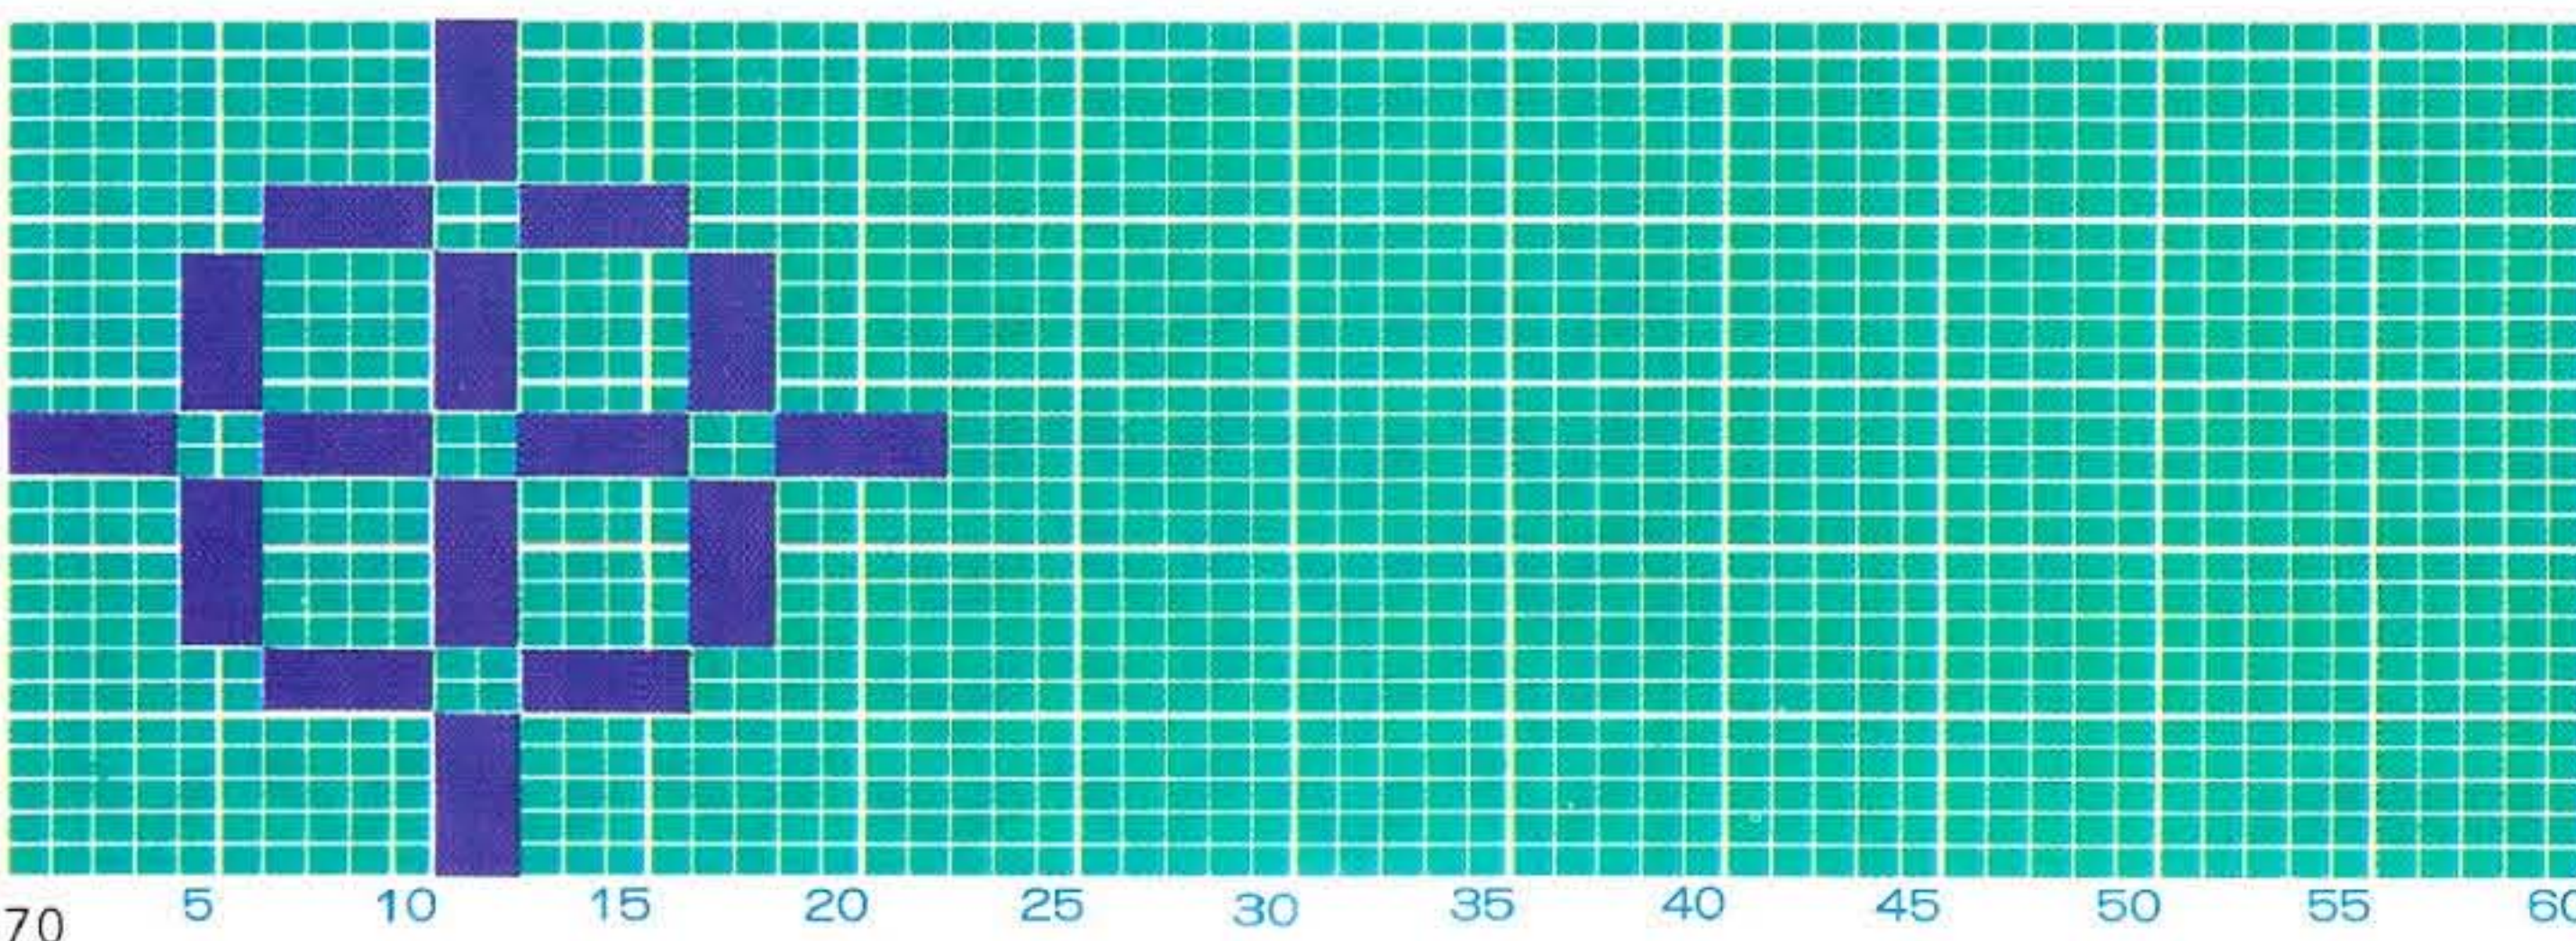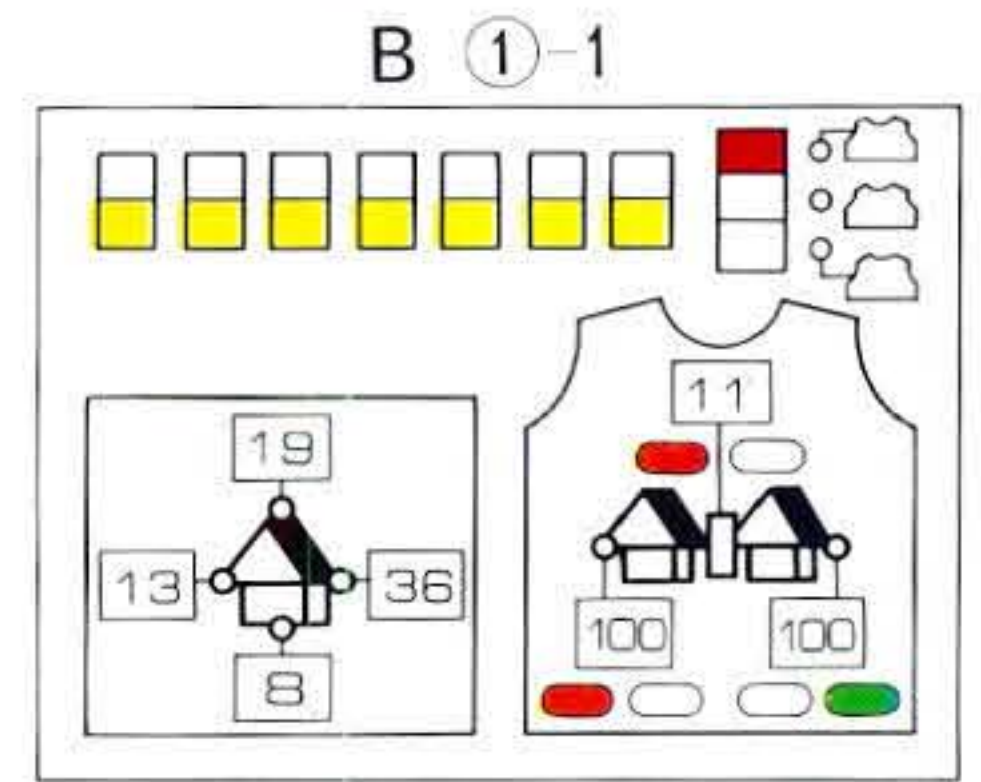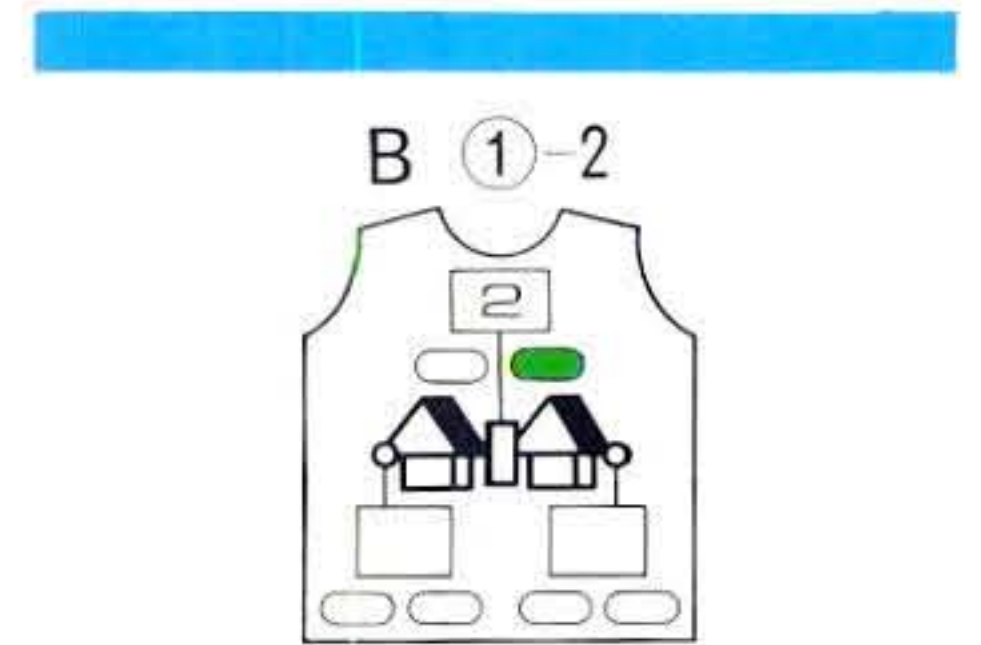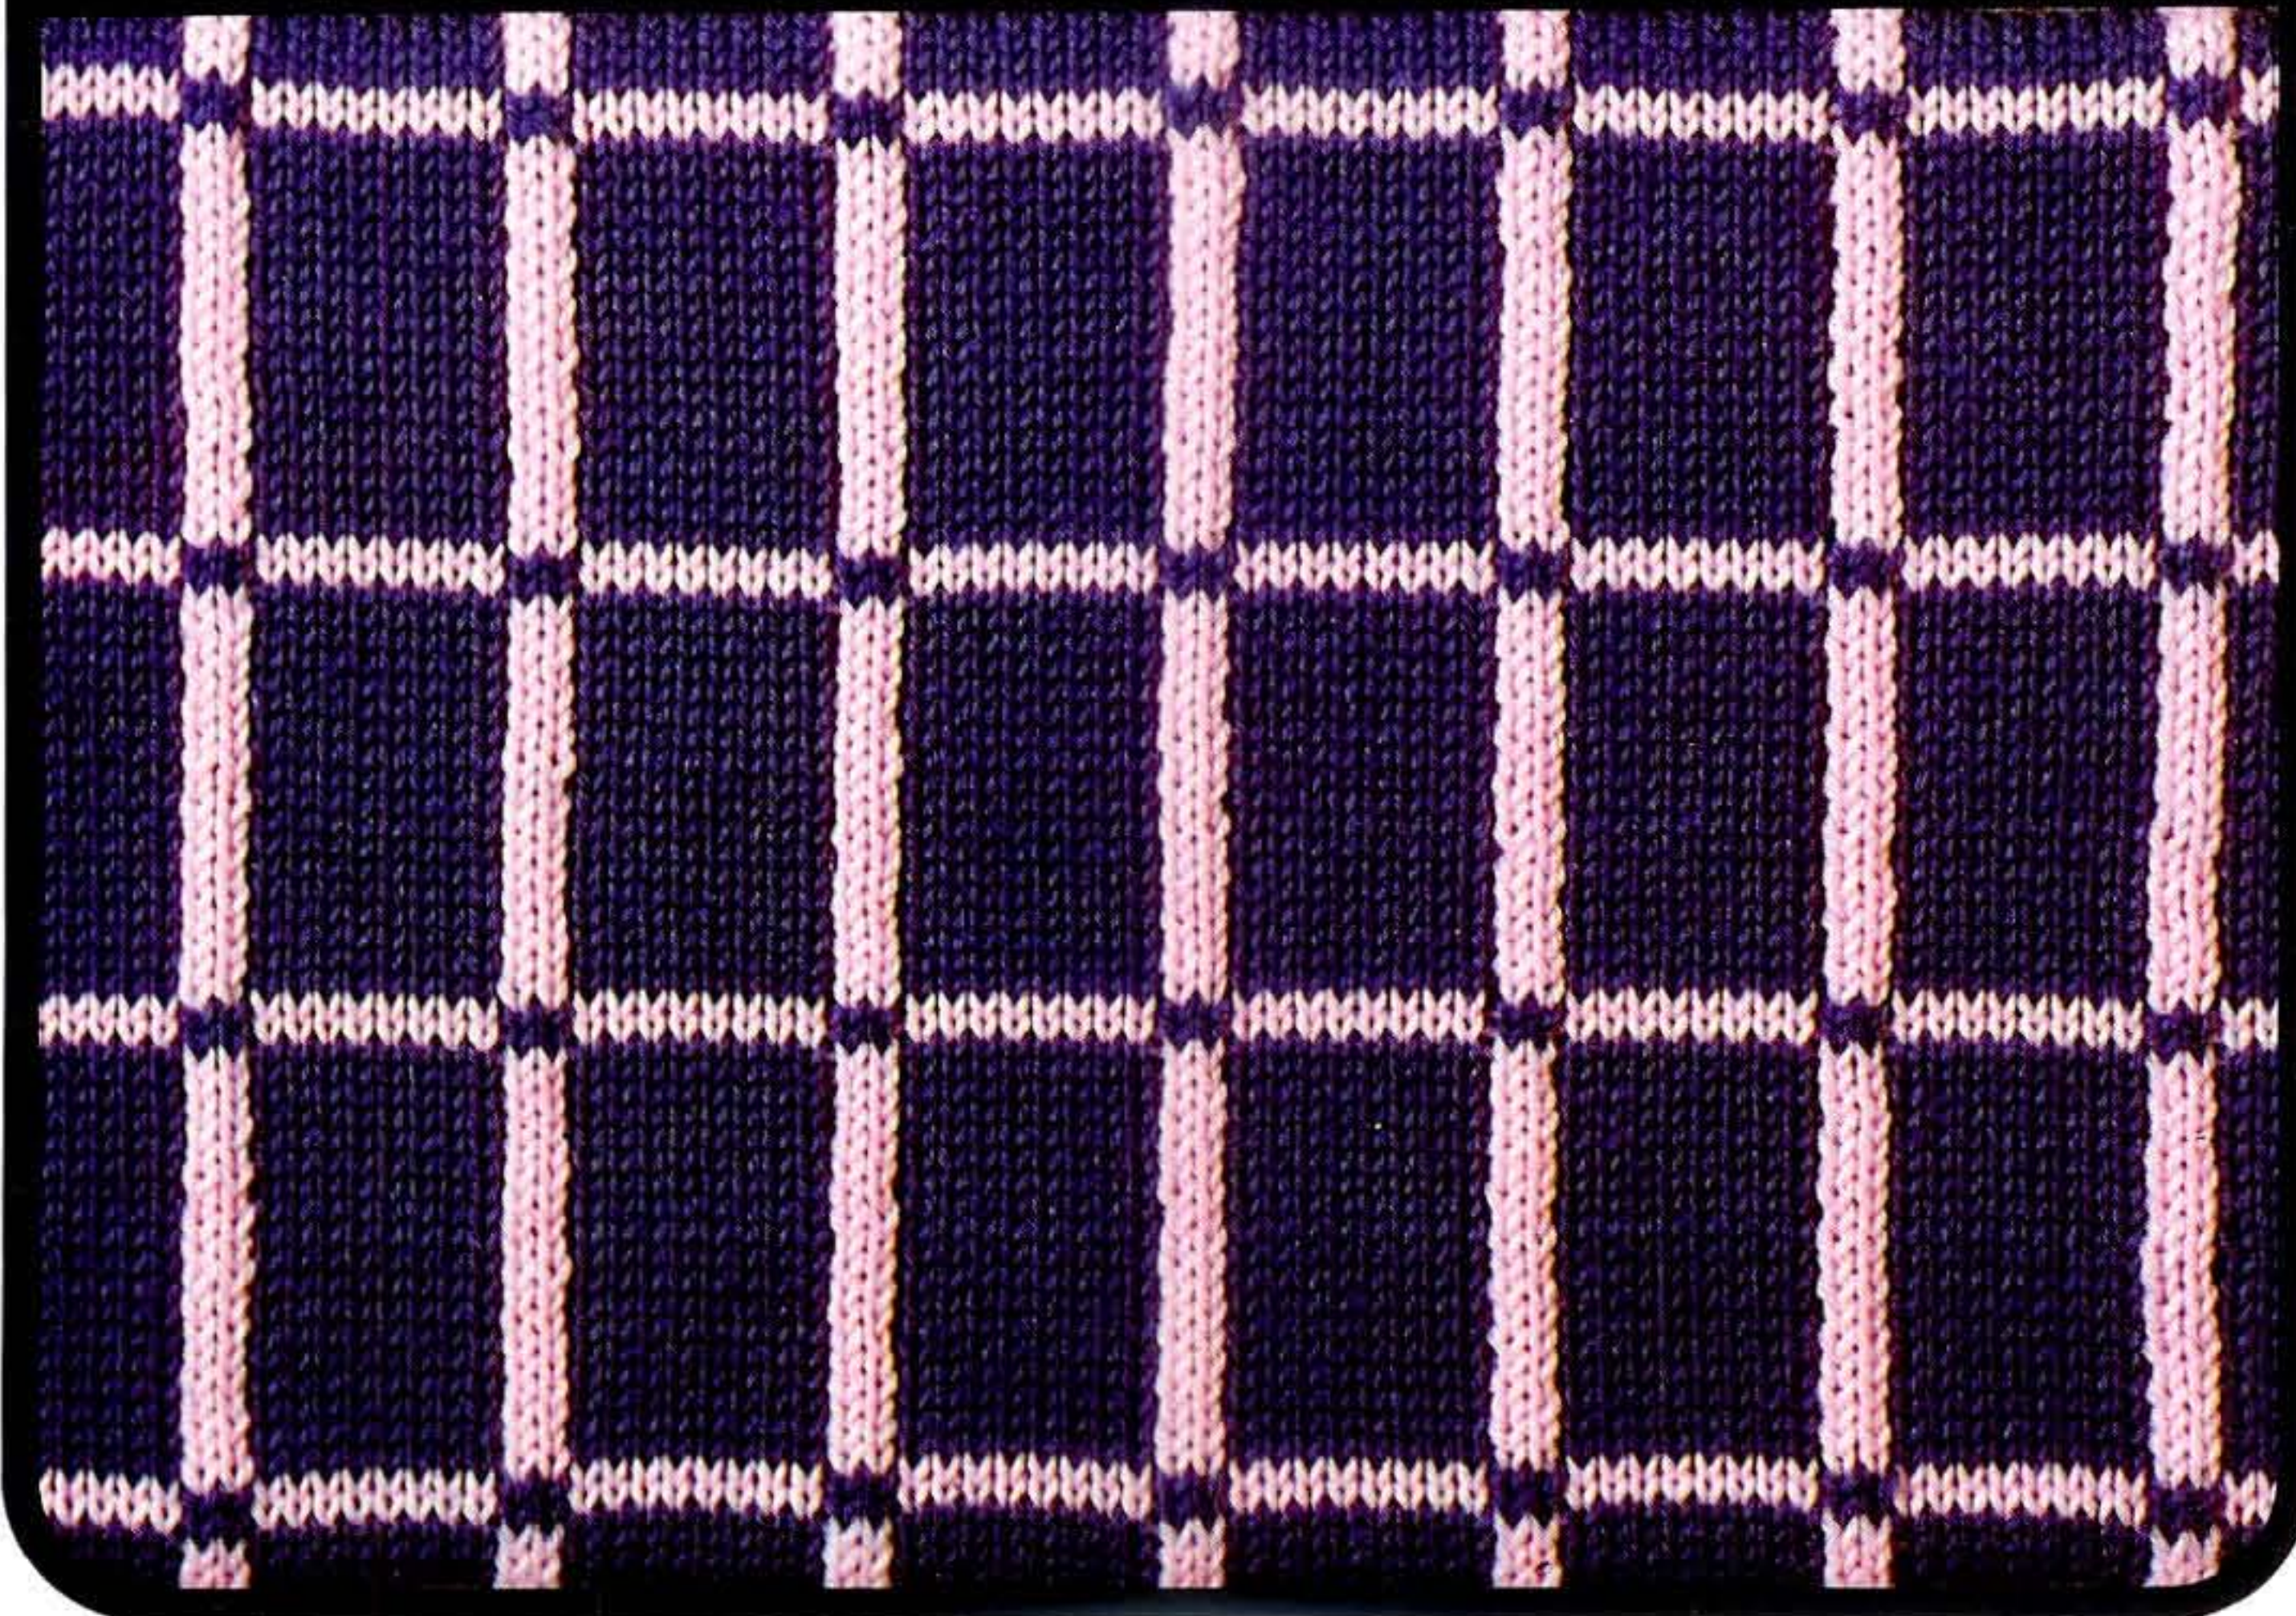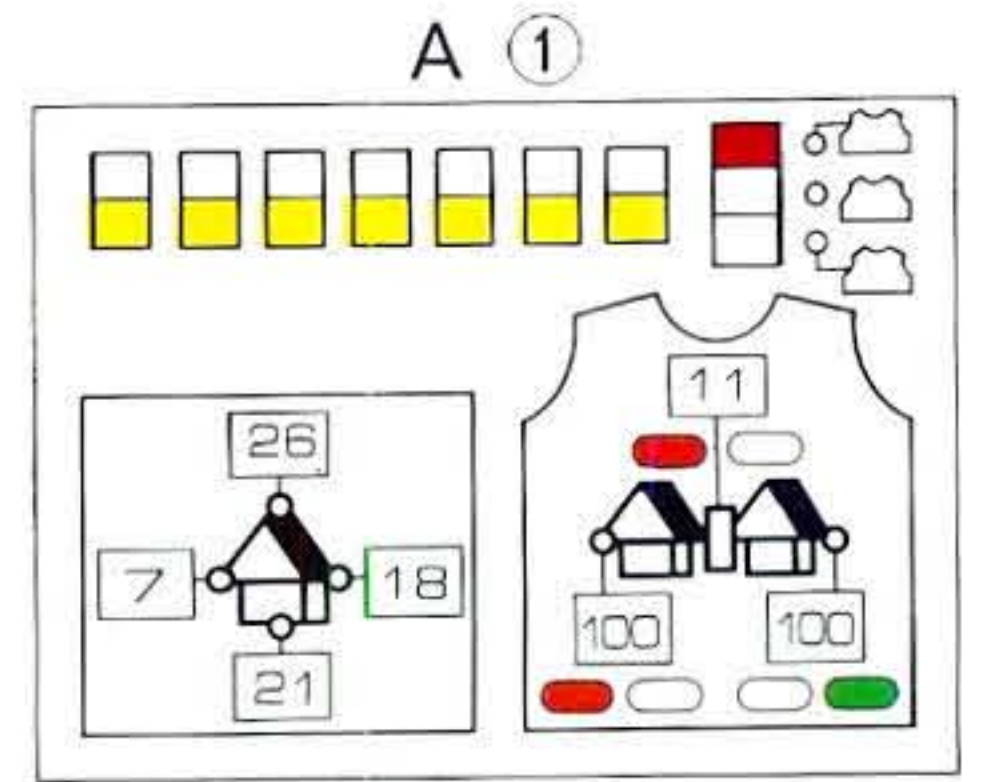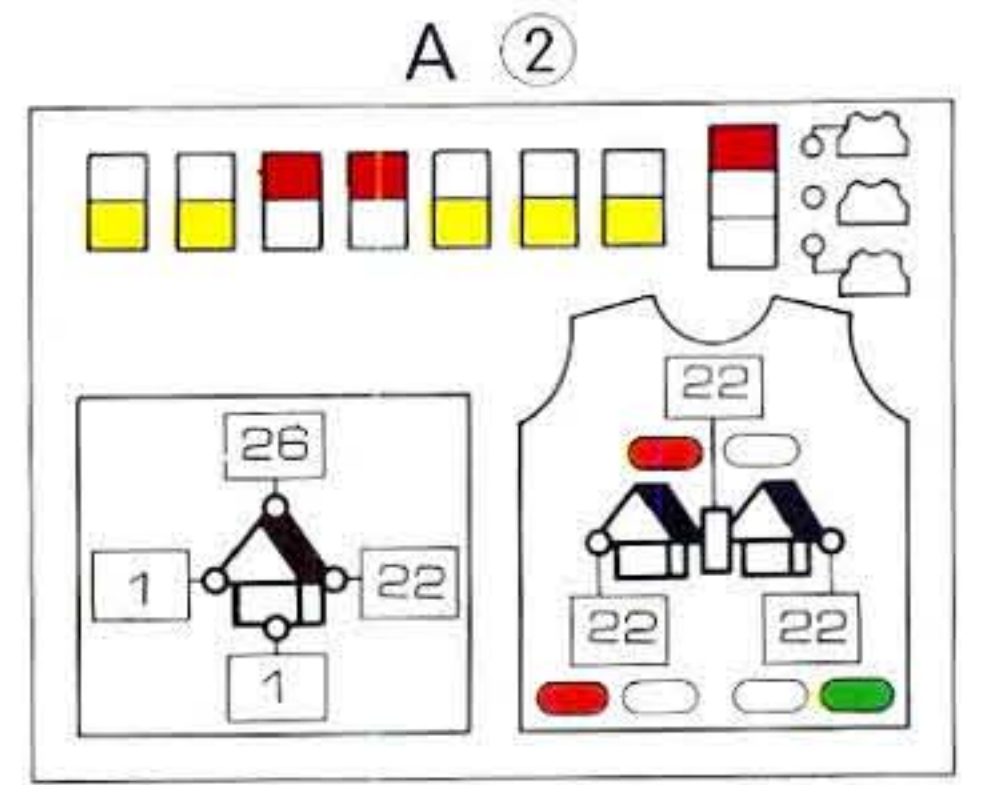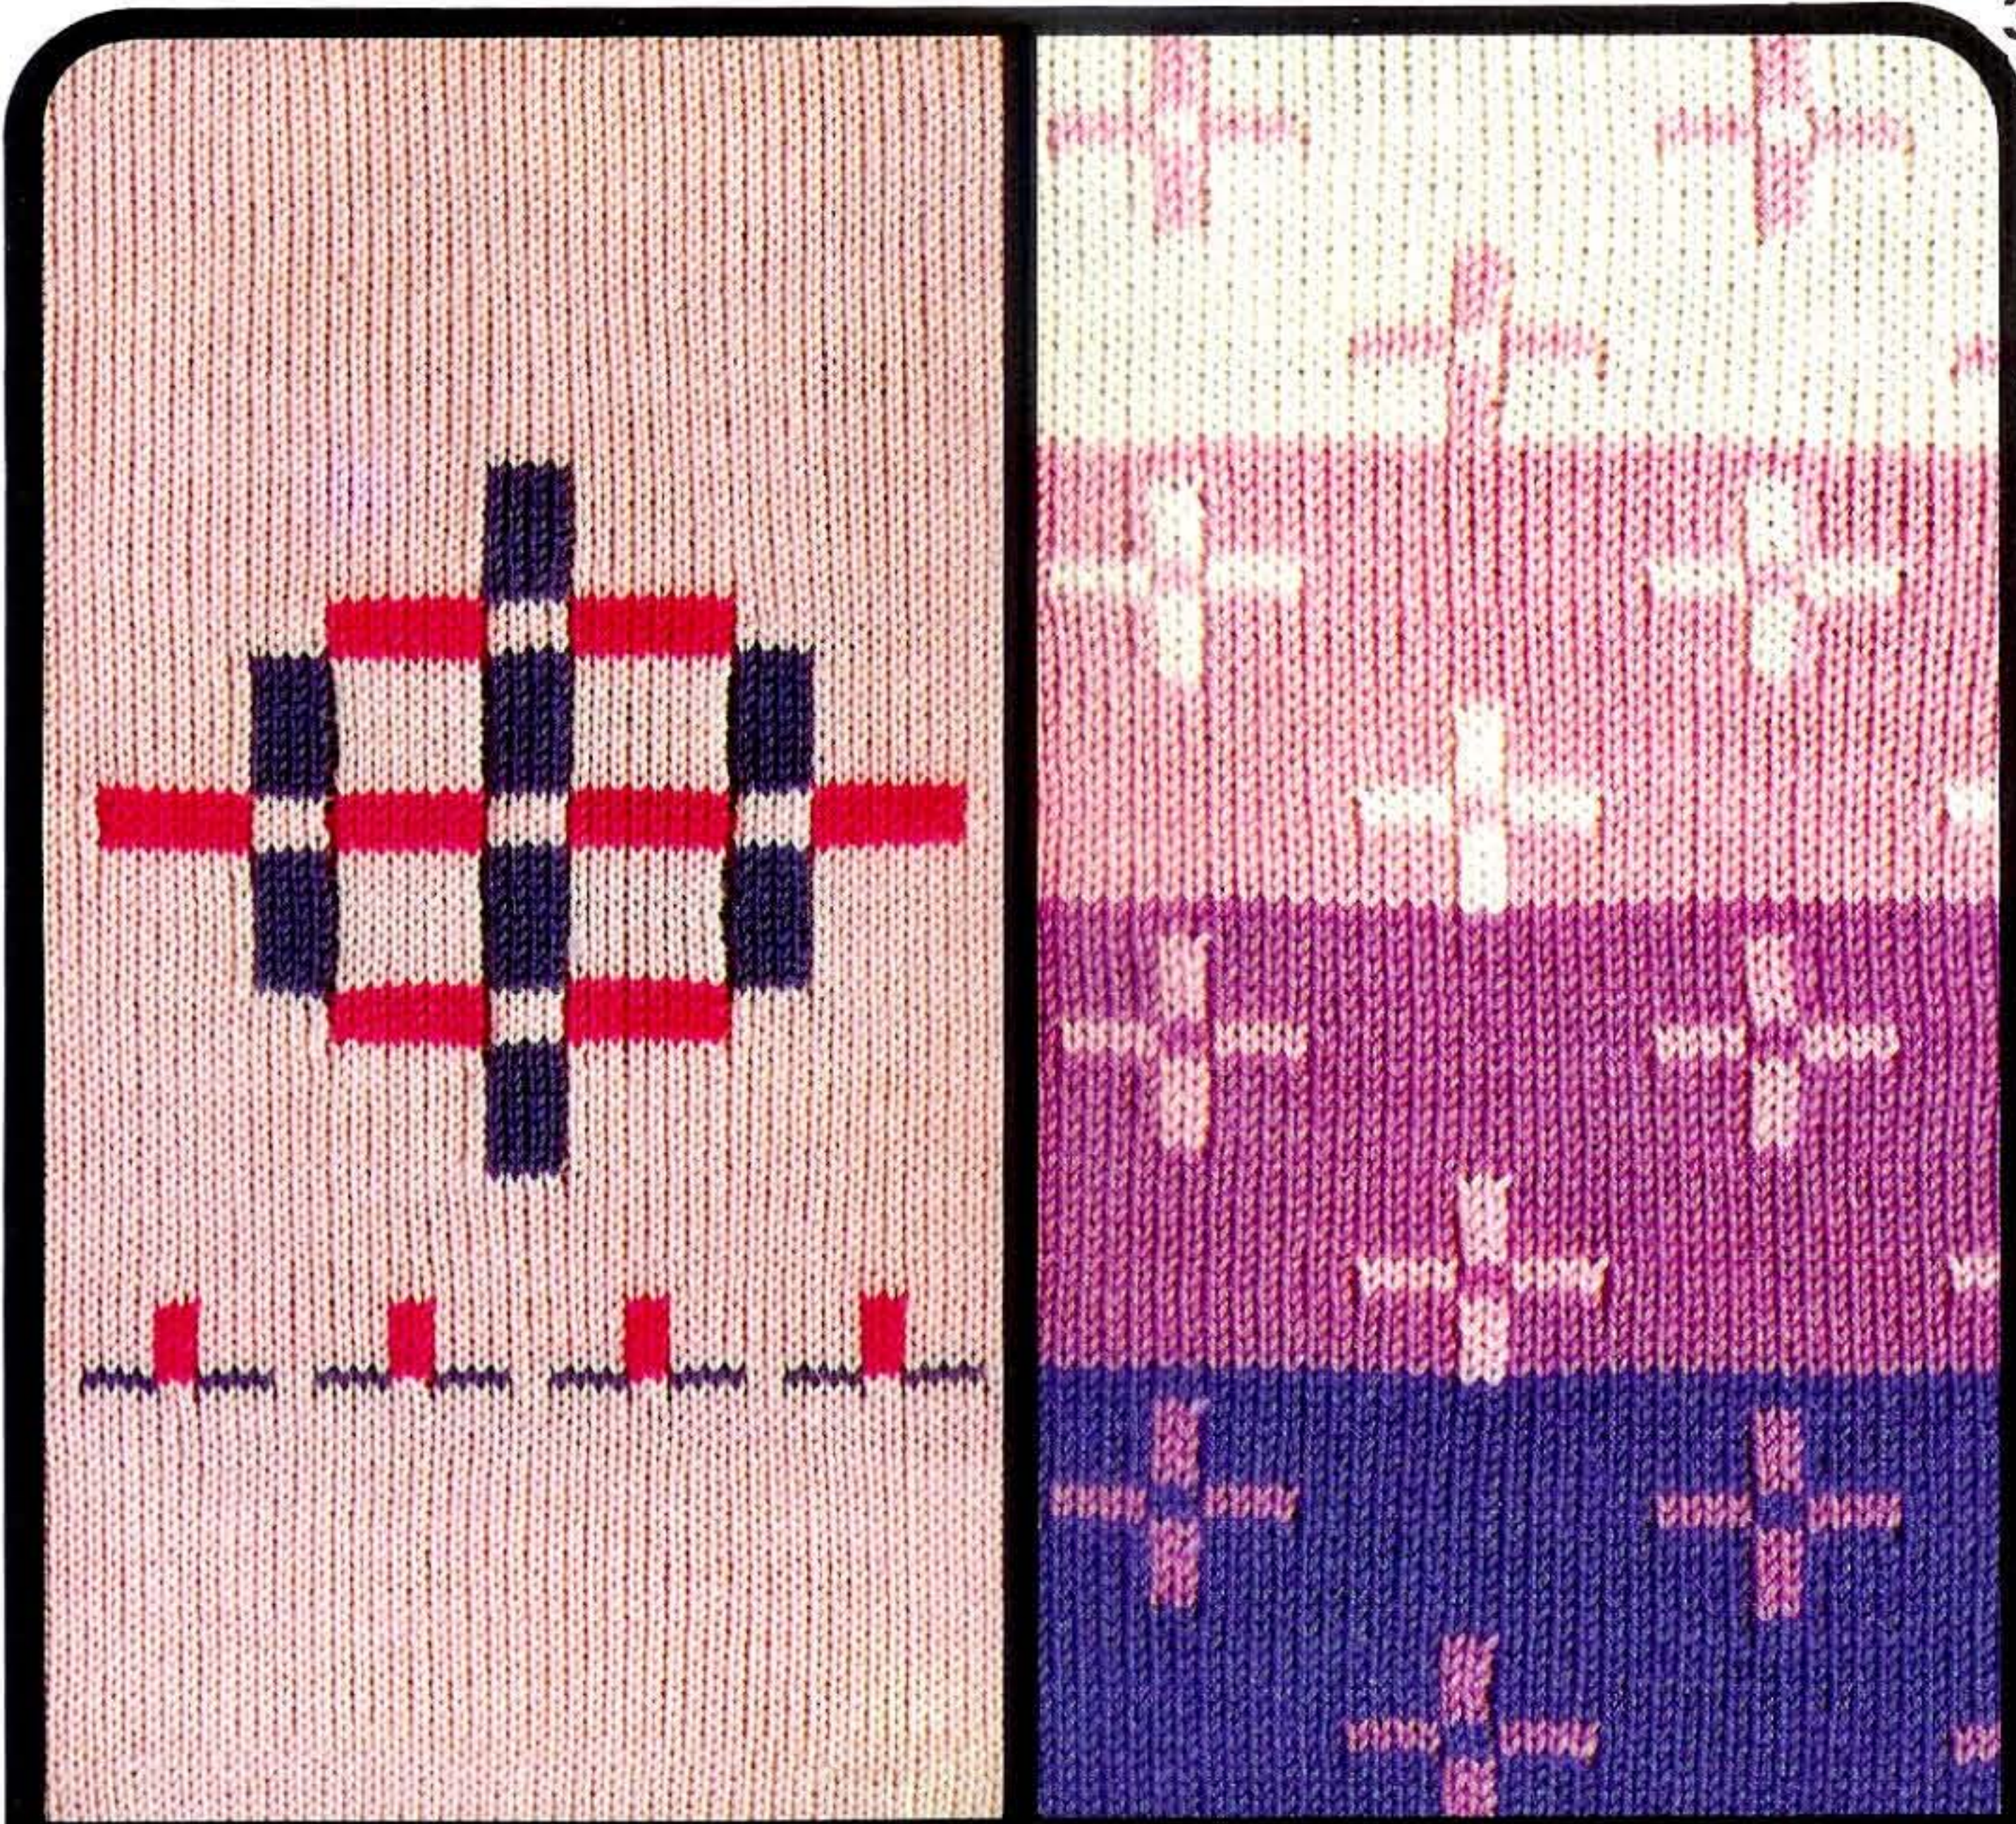


25
20
15
10
5
1

    70 5 10 15 20 25 30 35 40 45 50 55 60

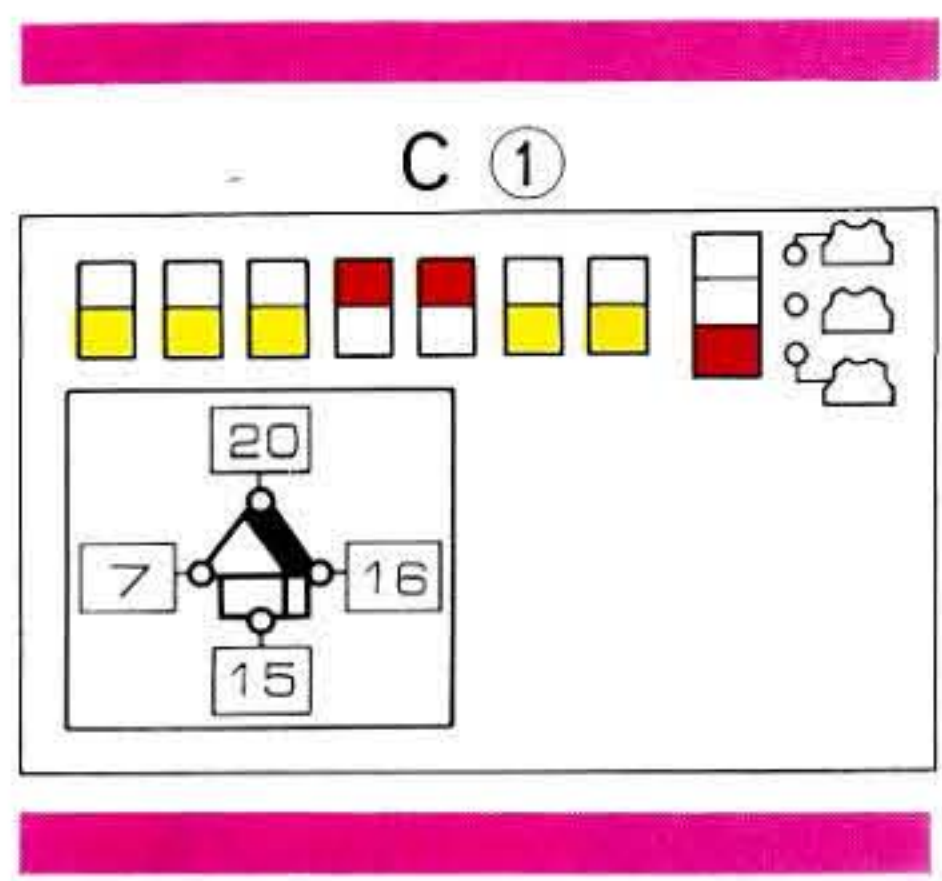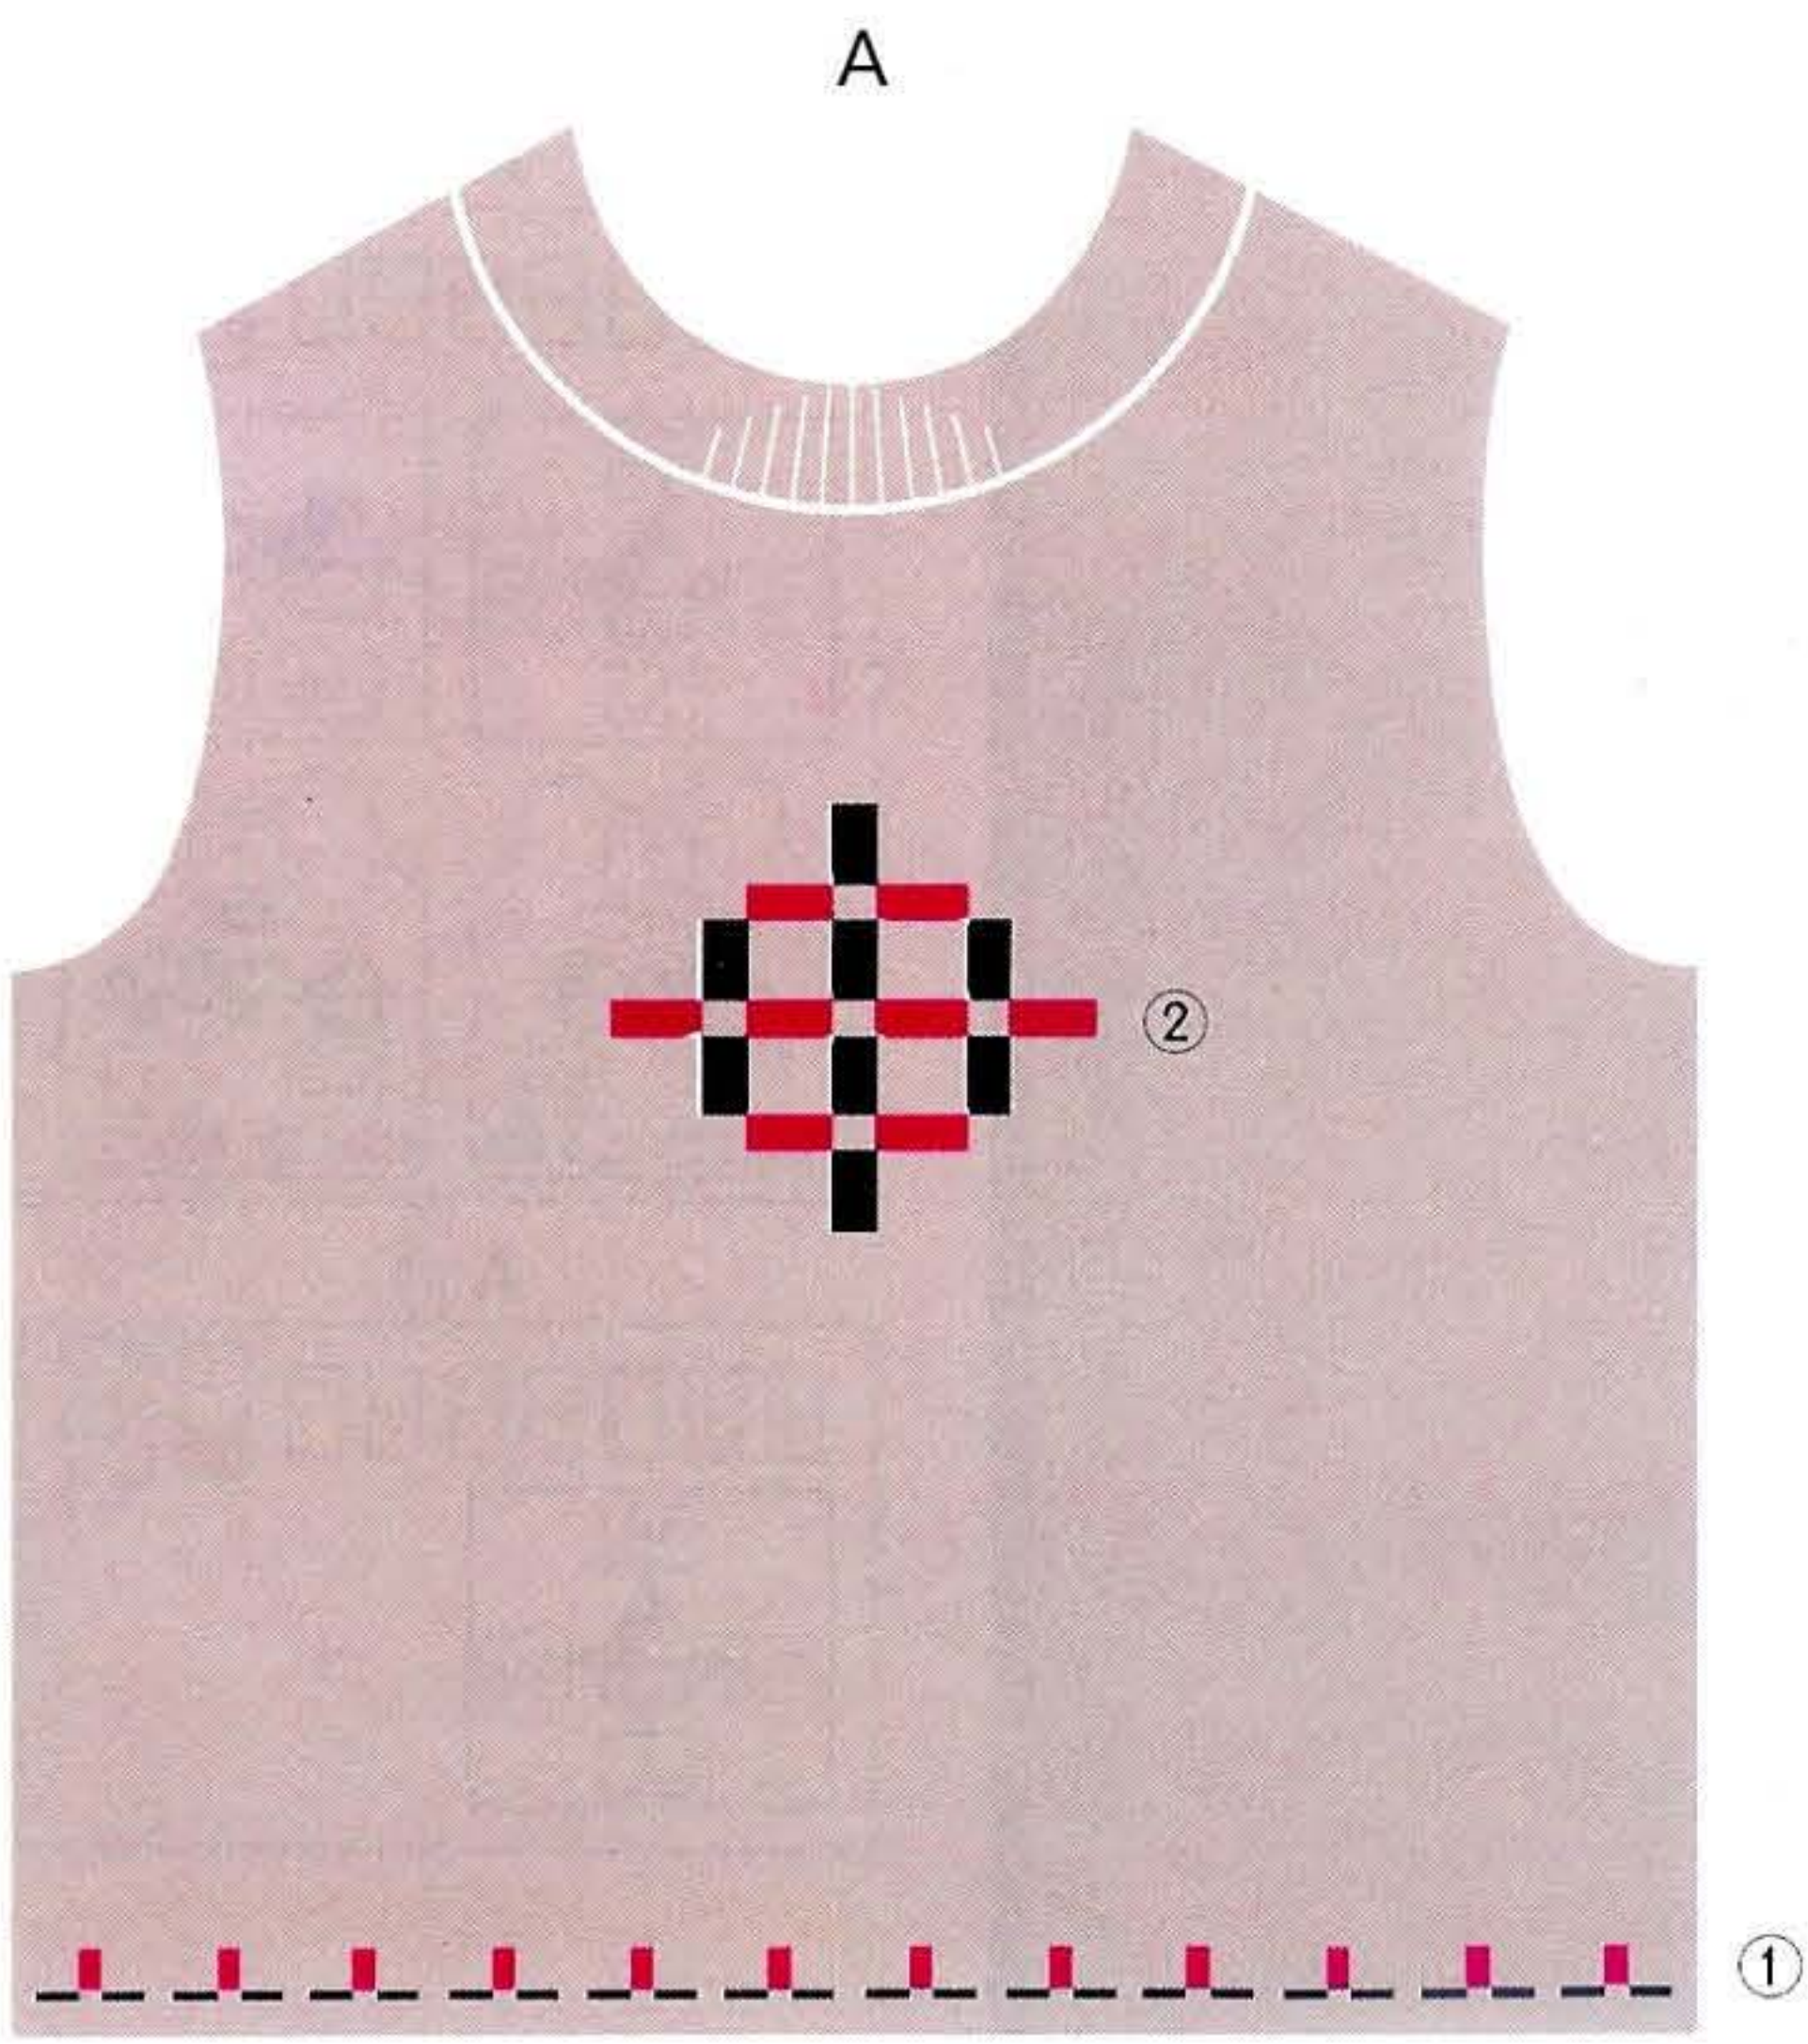


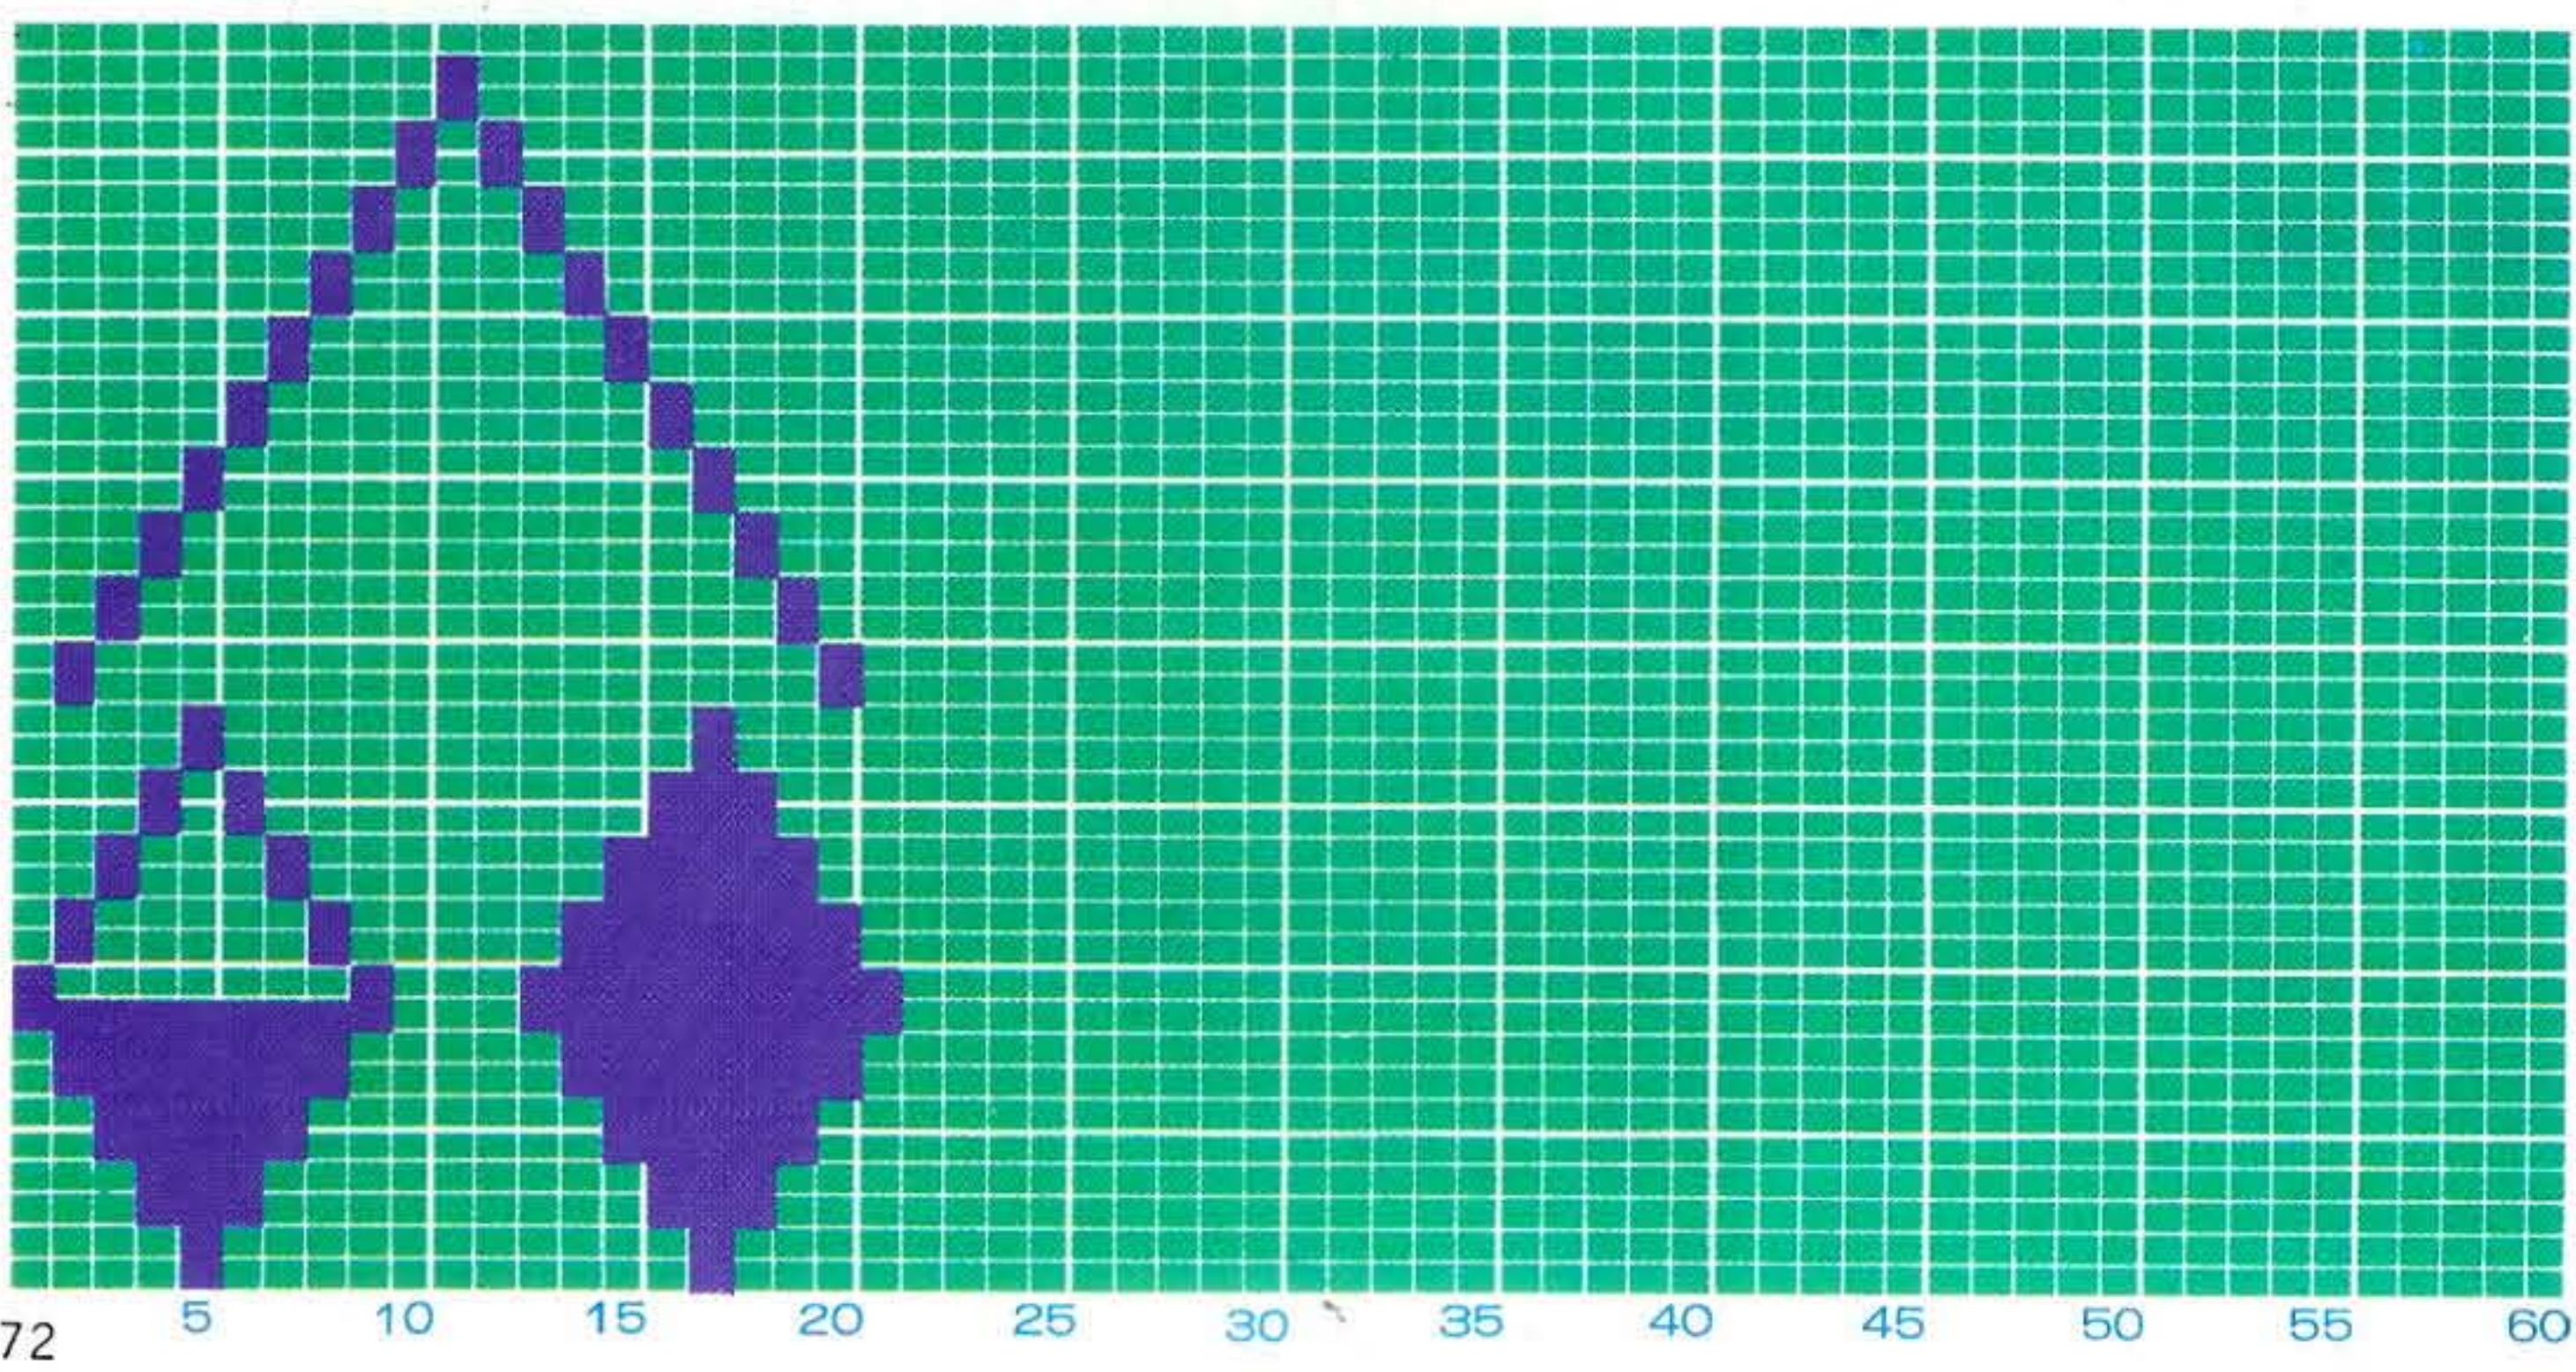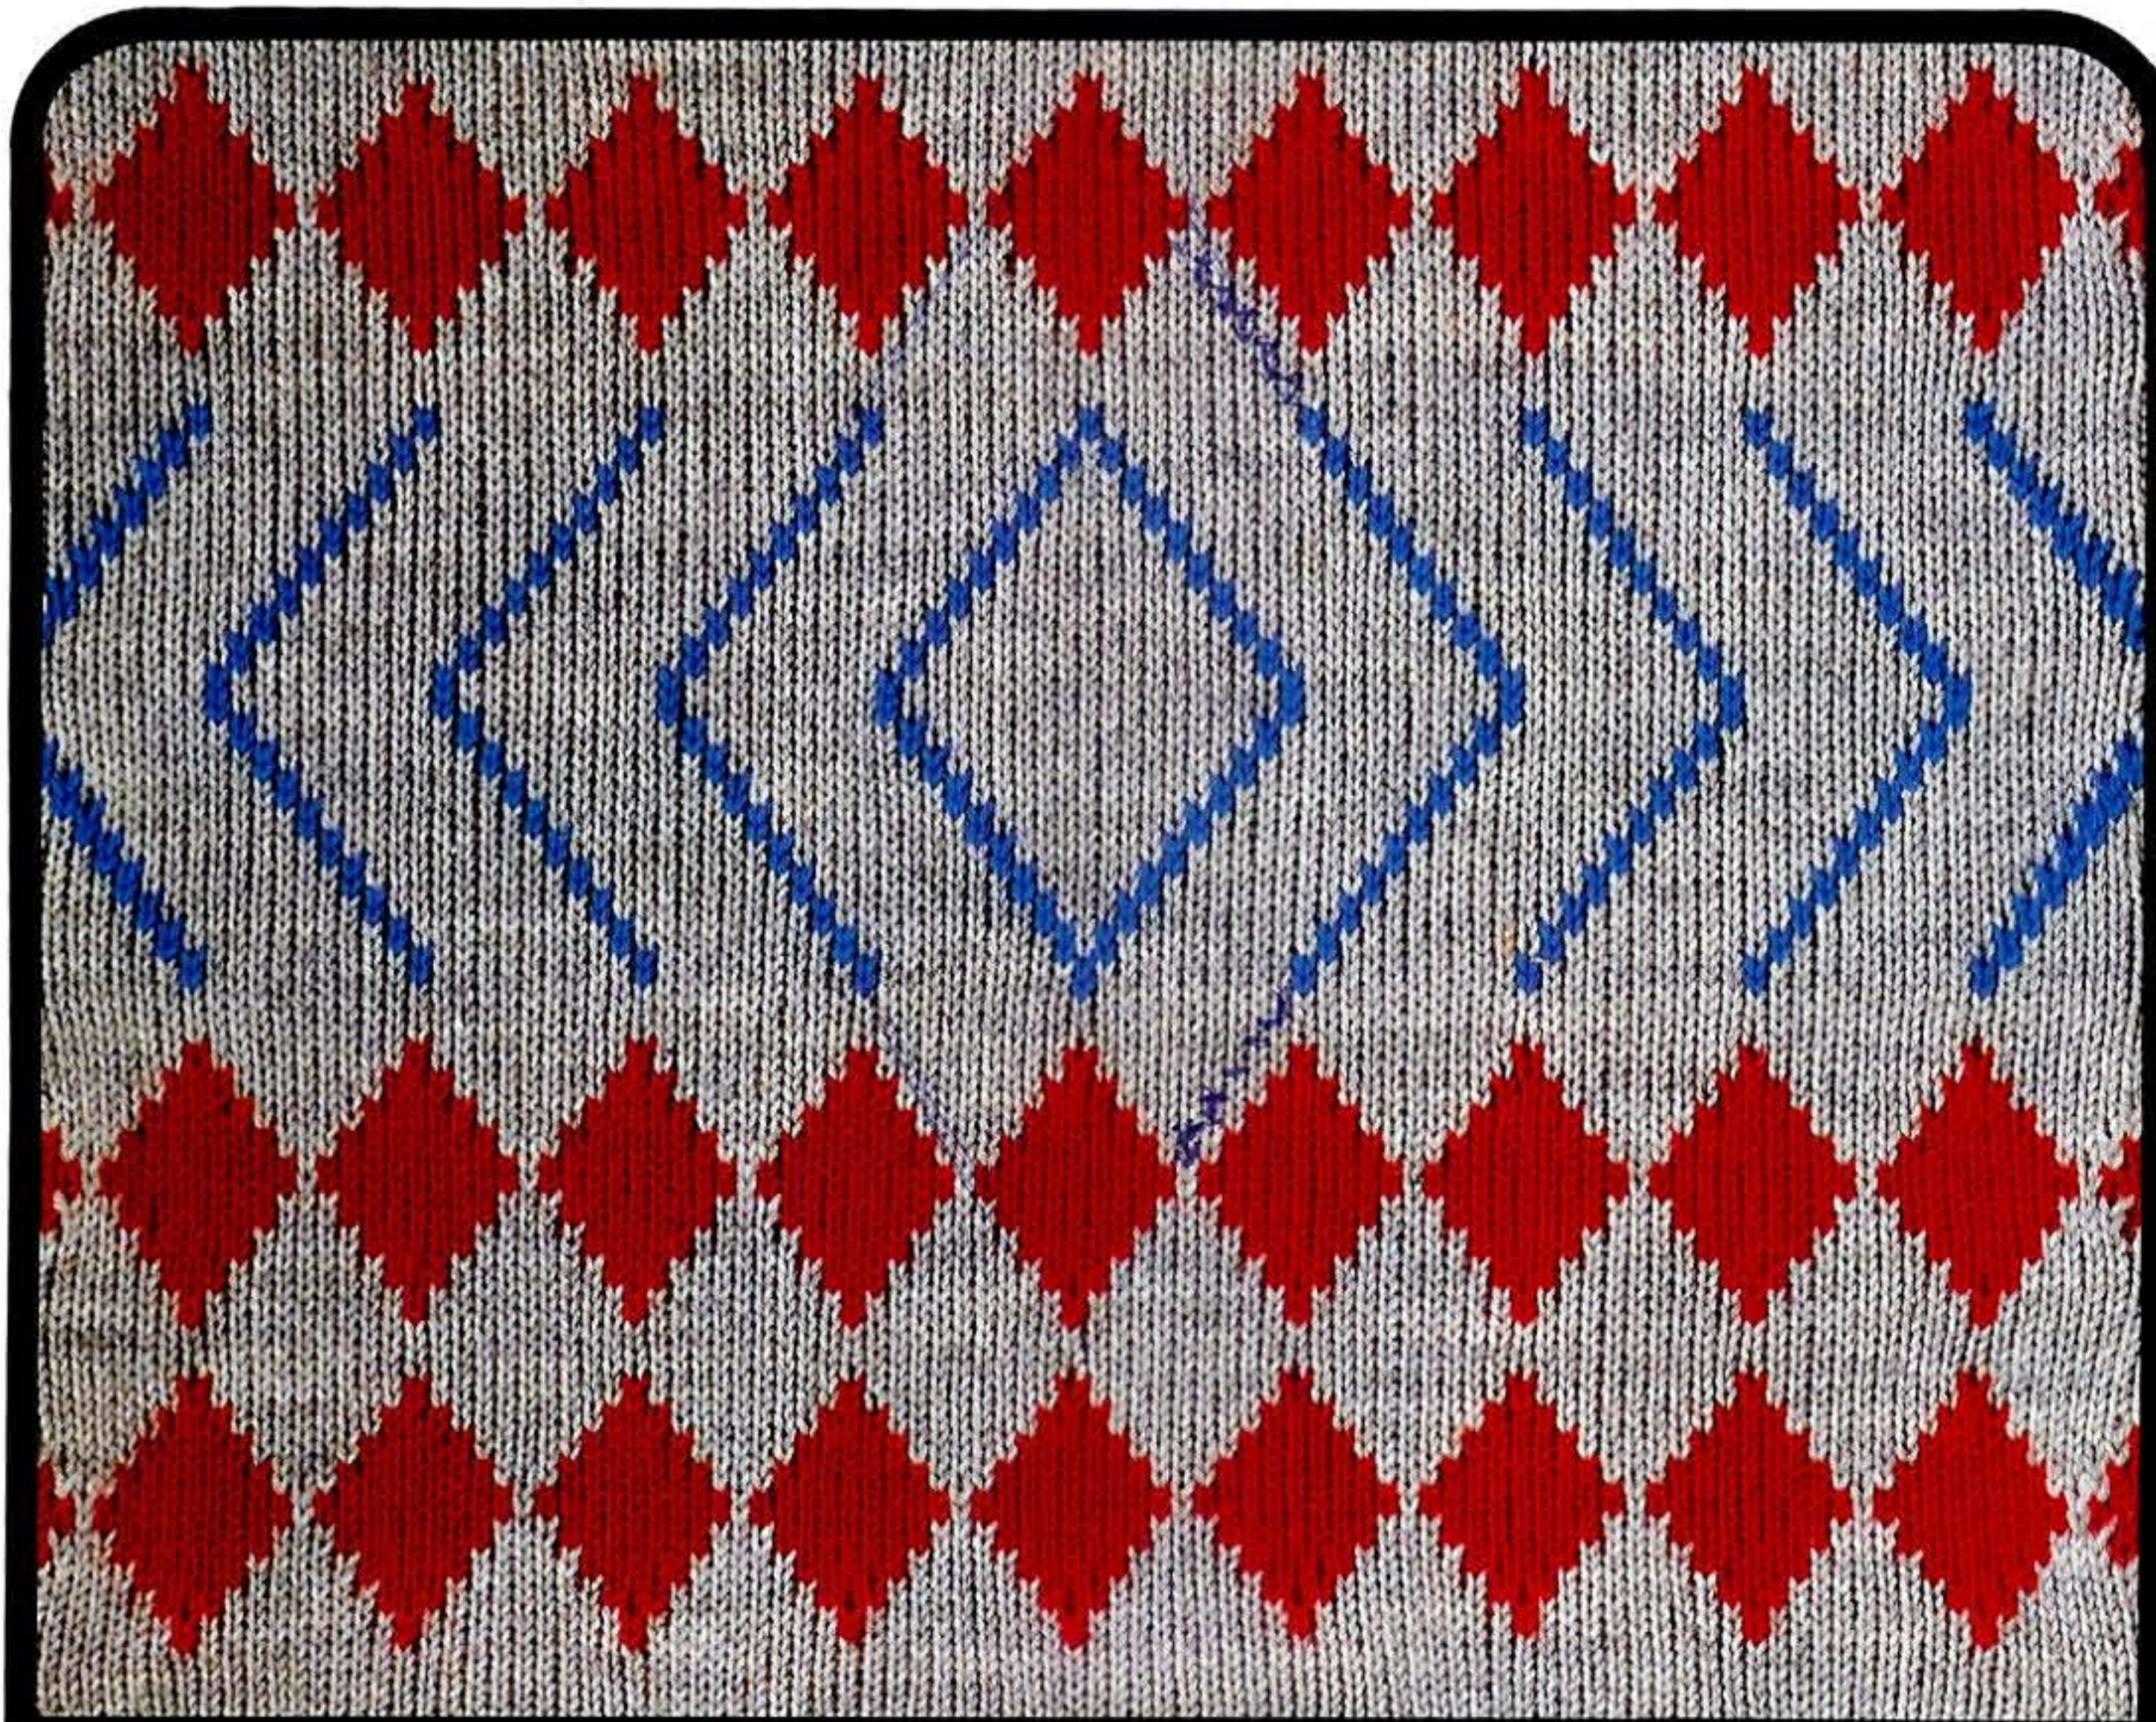


A ②

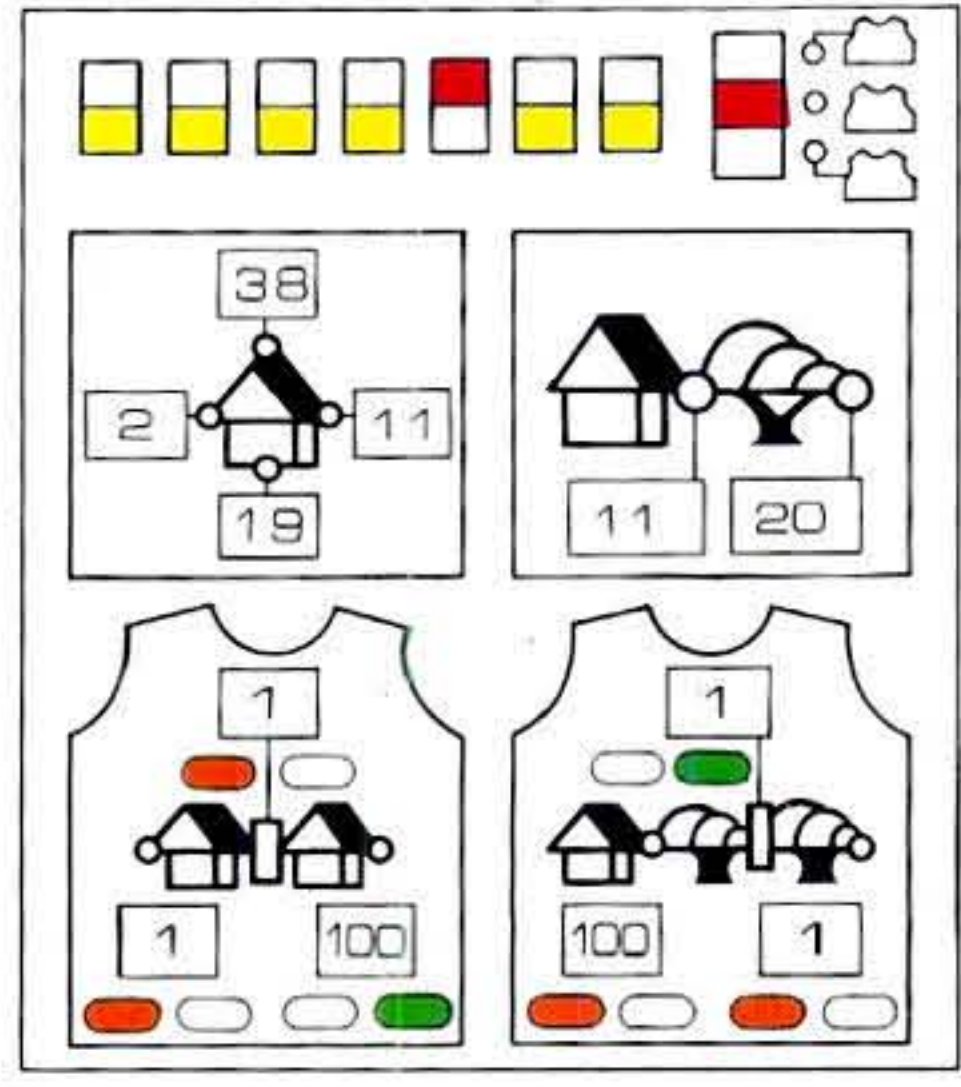 


A ①

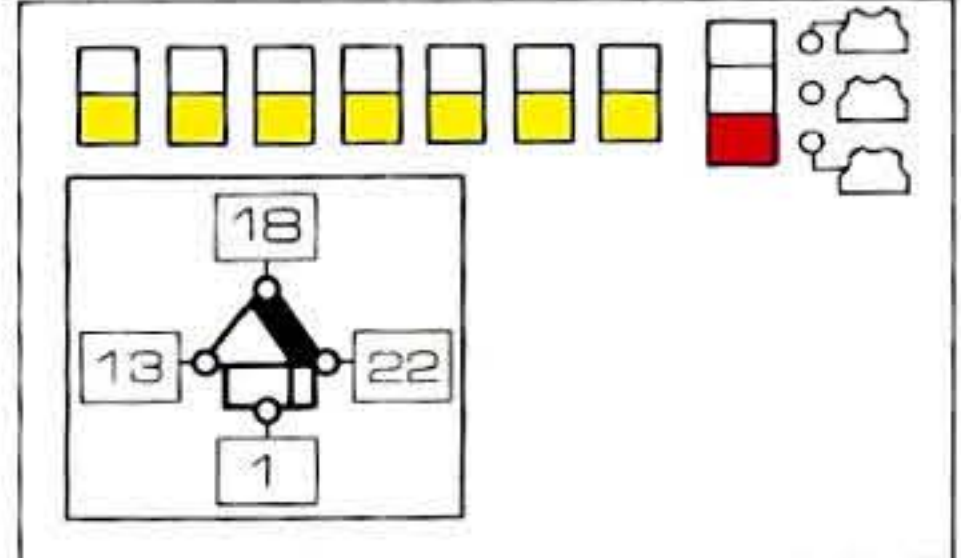 


C ④

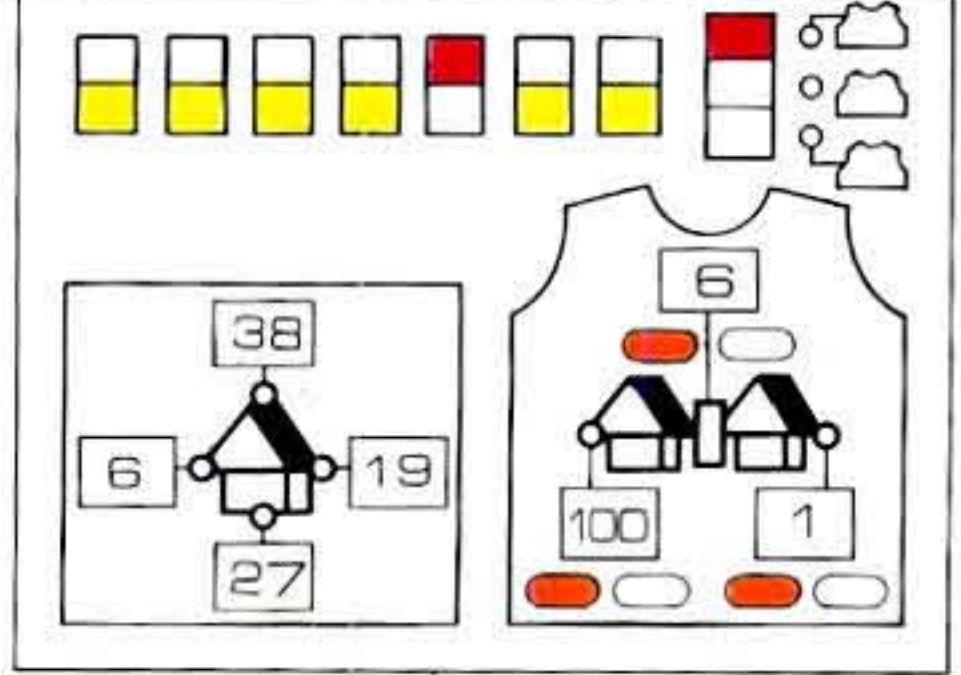 


C ③

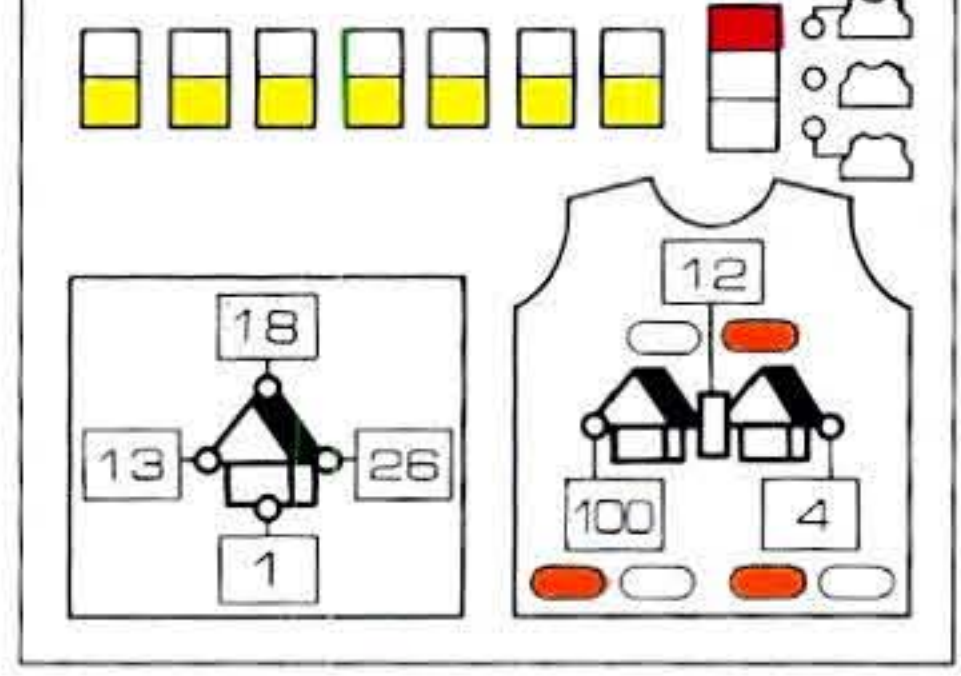 

C ②

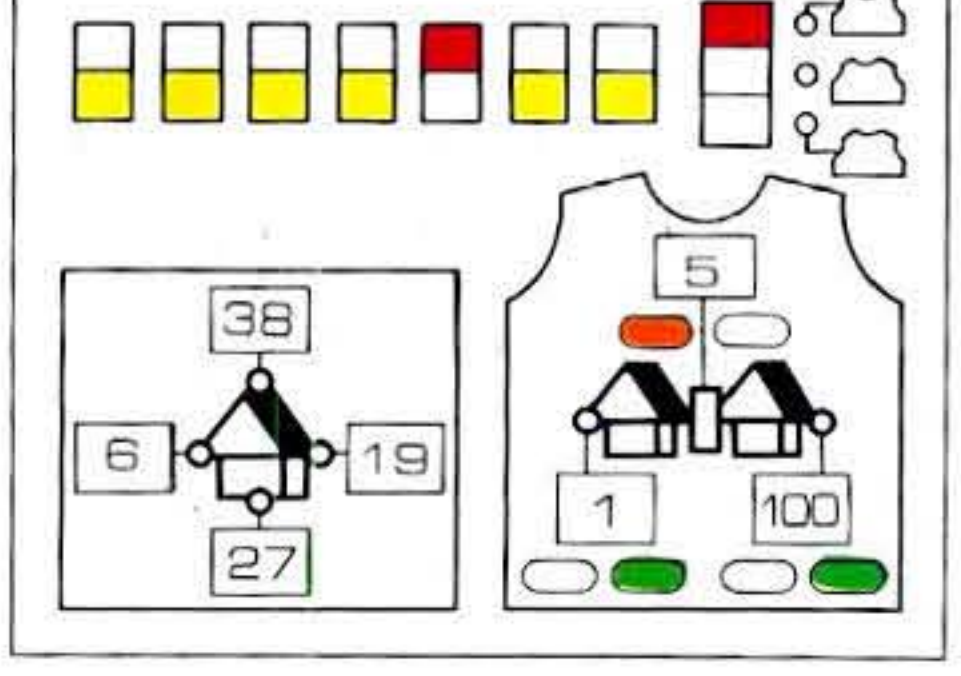 


C ①

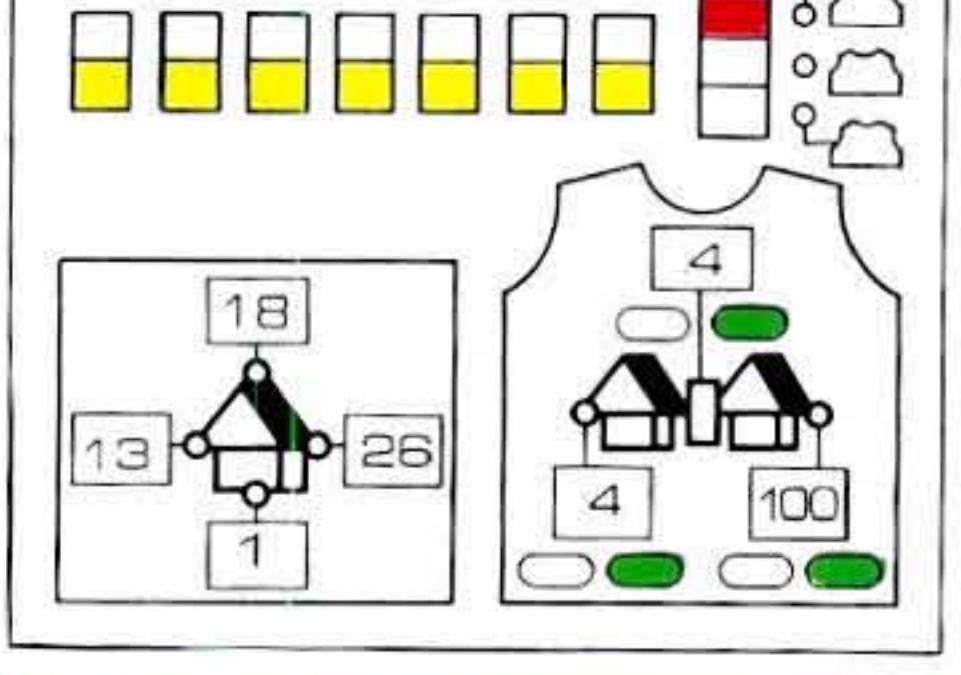 

A



 B

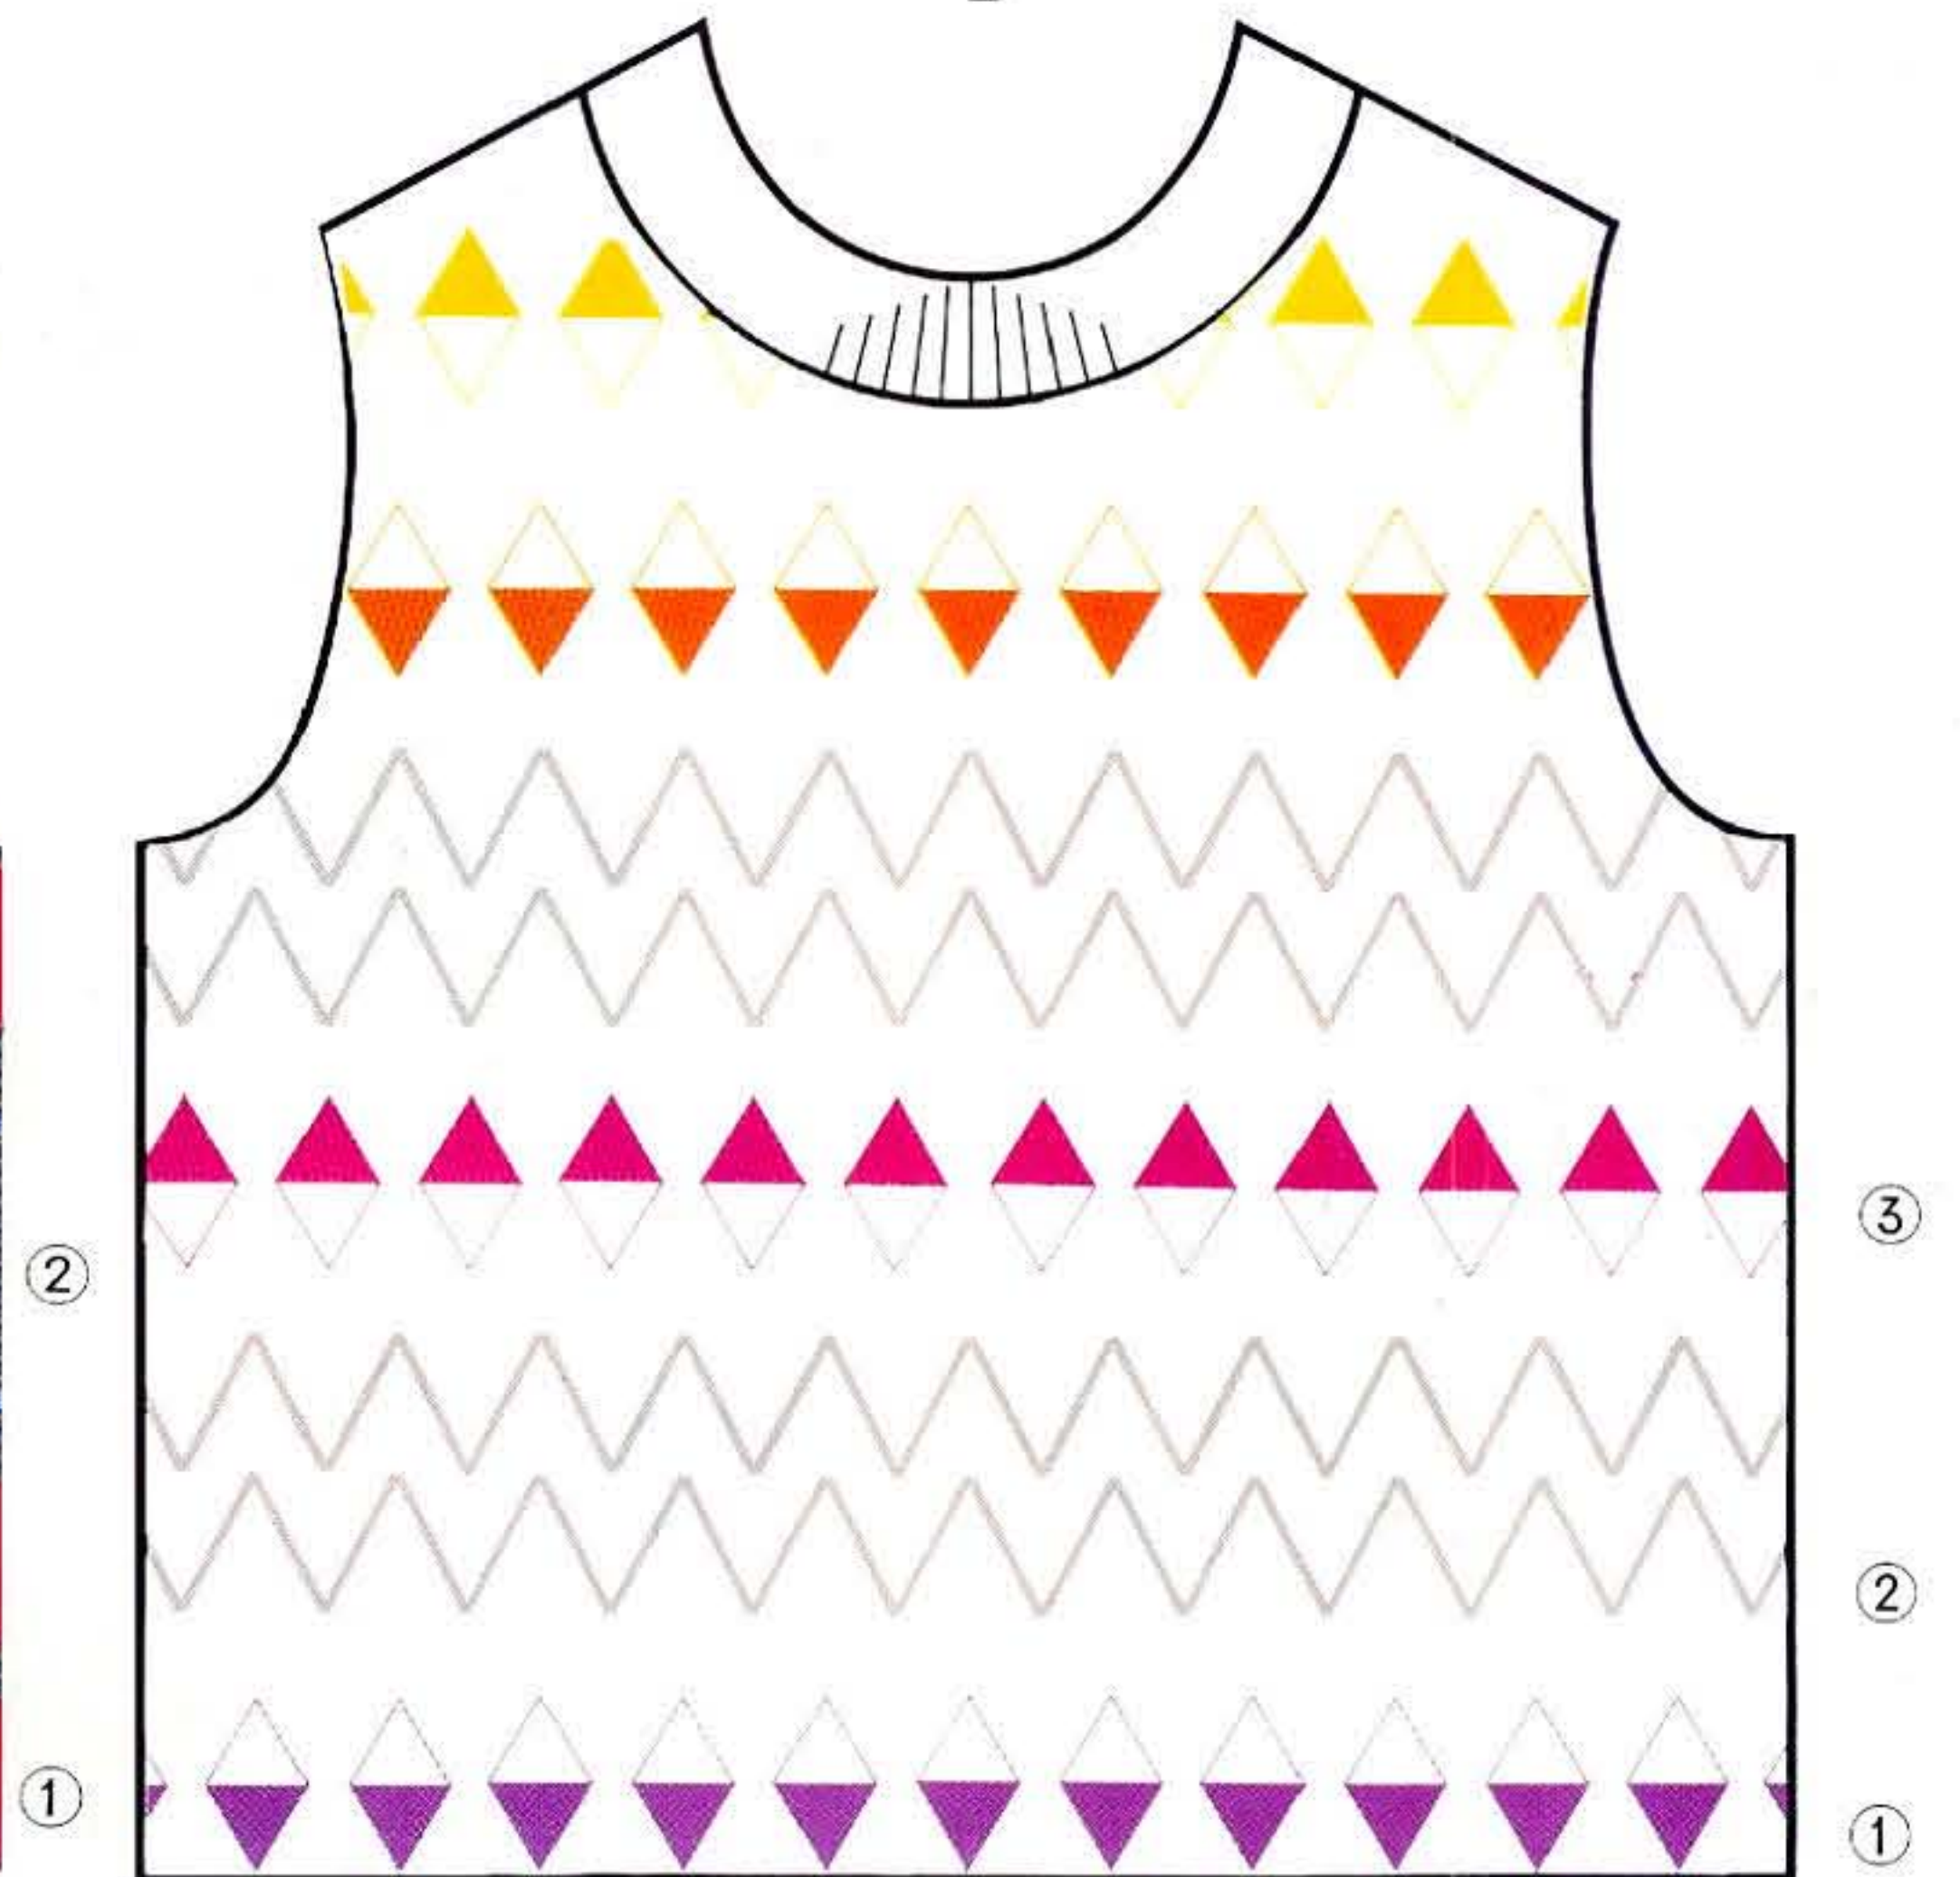


B ③ (1) (8) → (C'F)






18をインプットし (はじめ) キーを押します。

B ②


B ①

      C

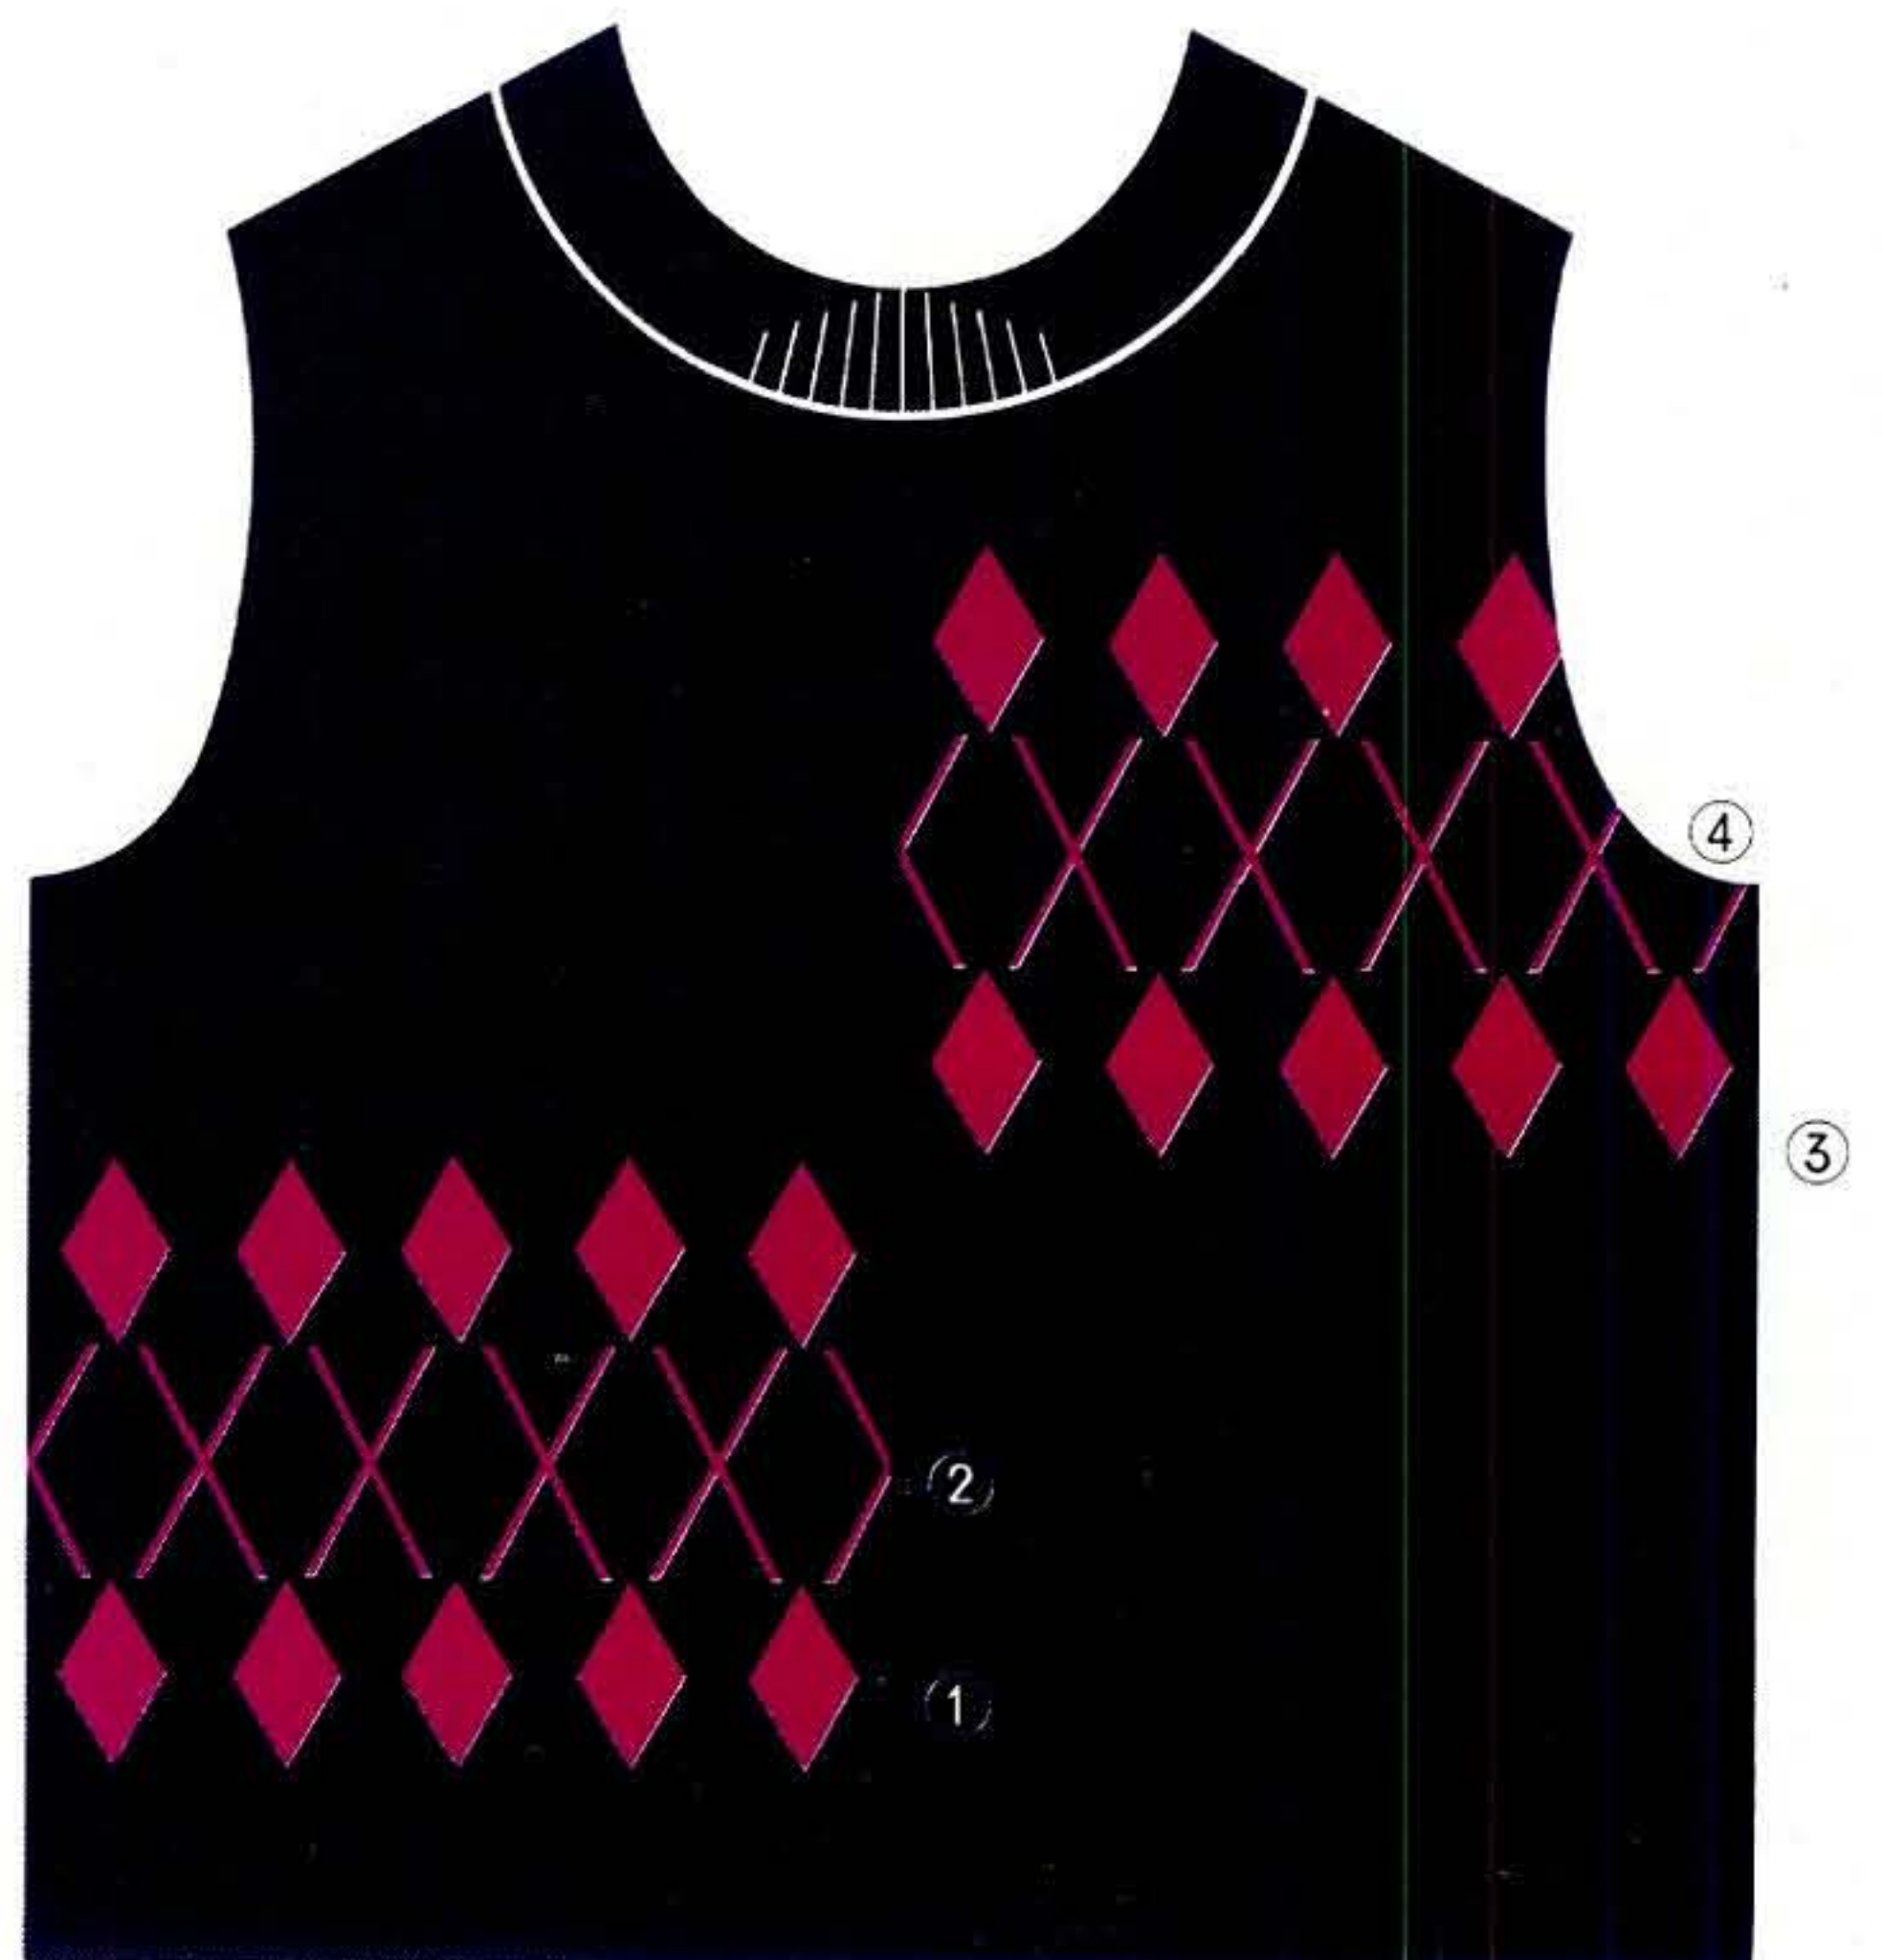

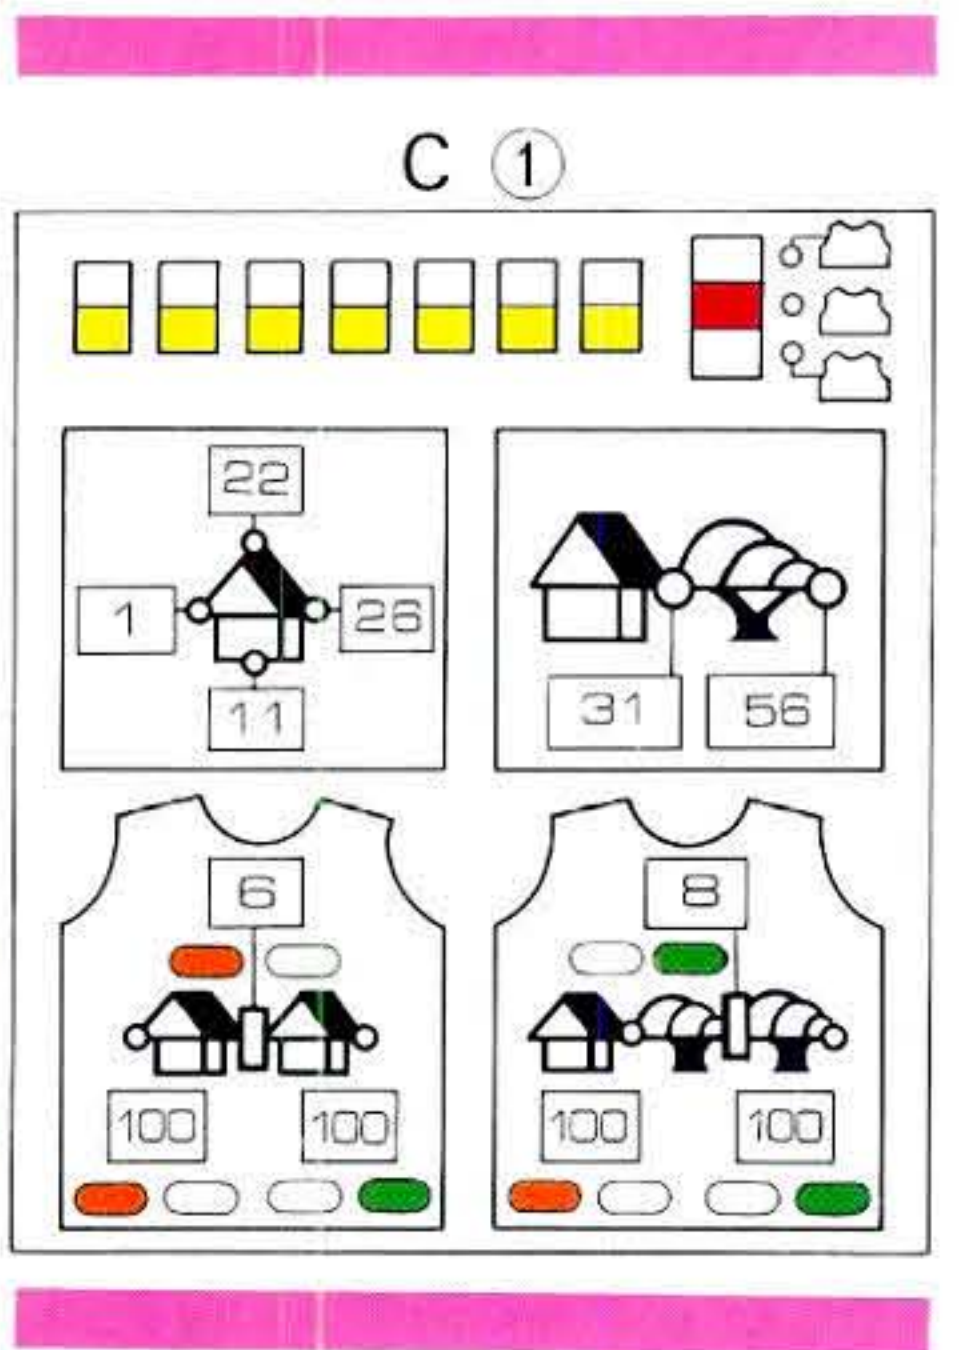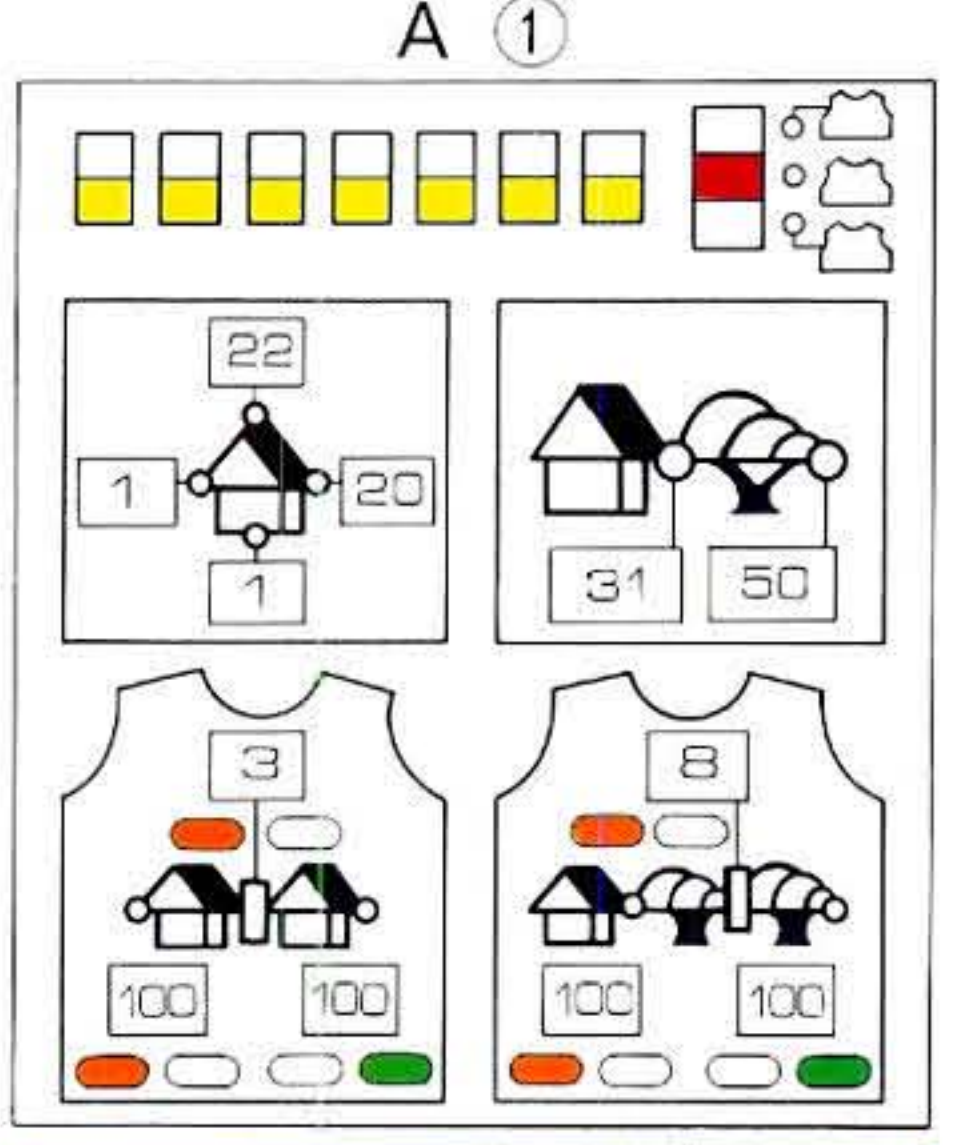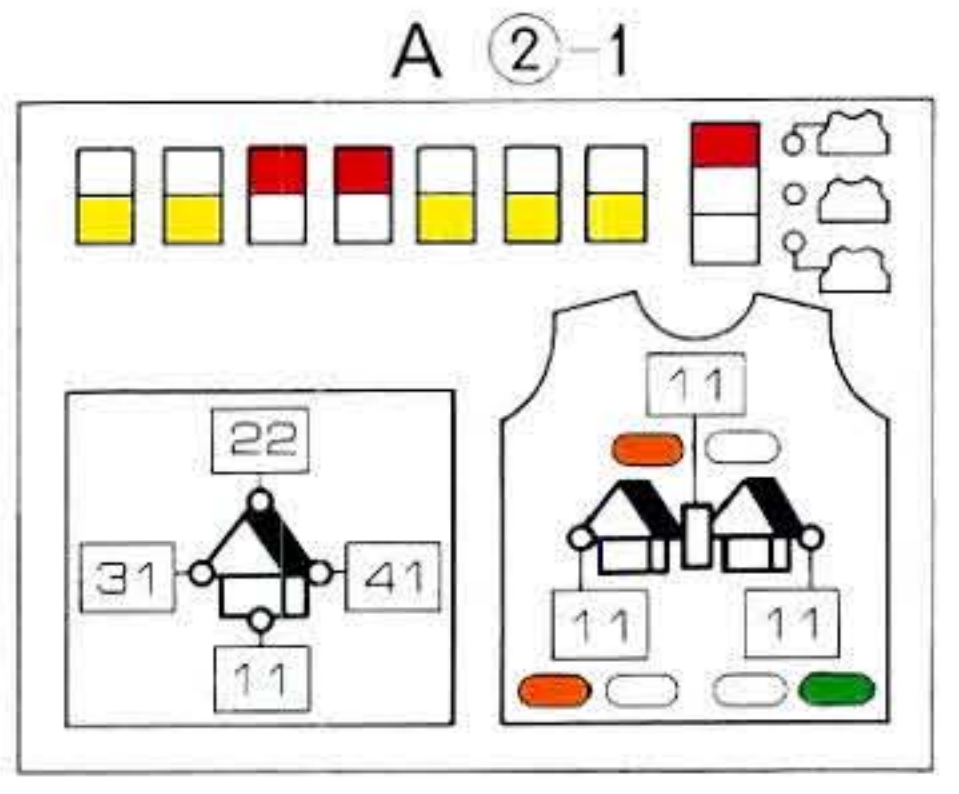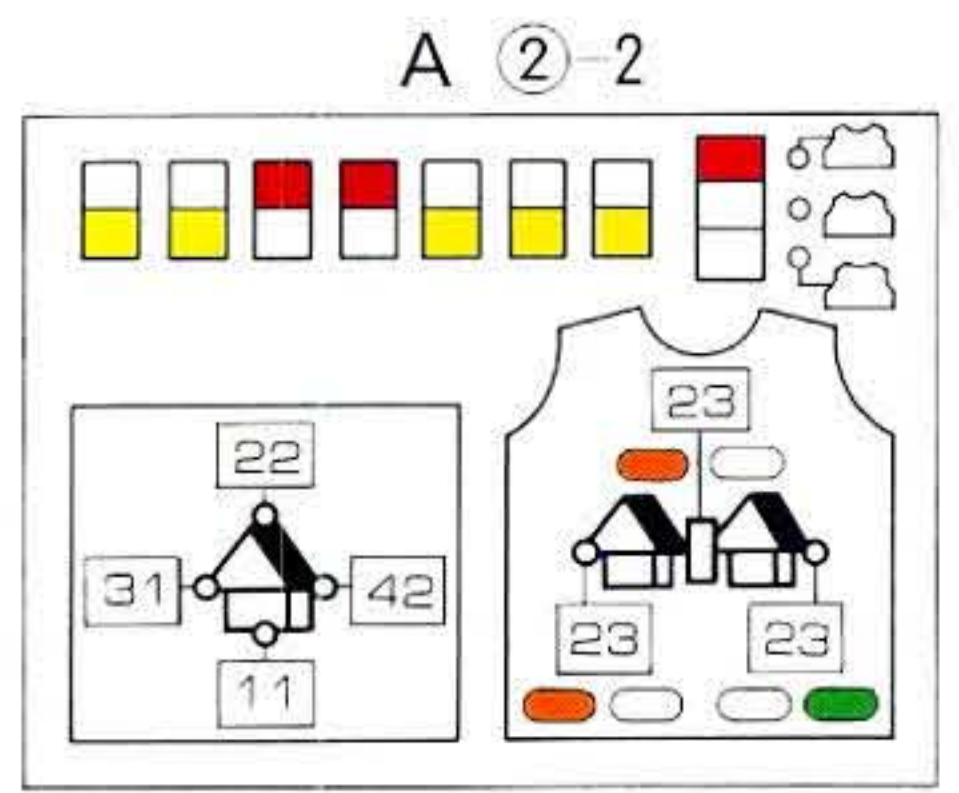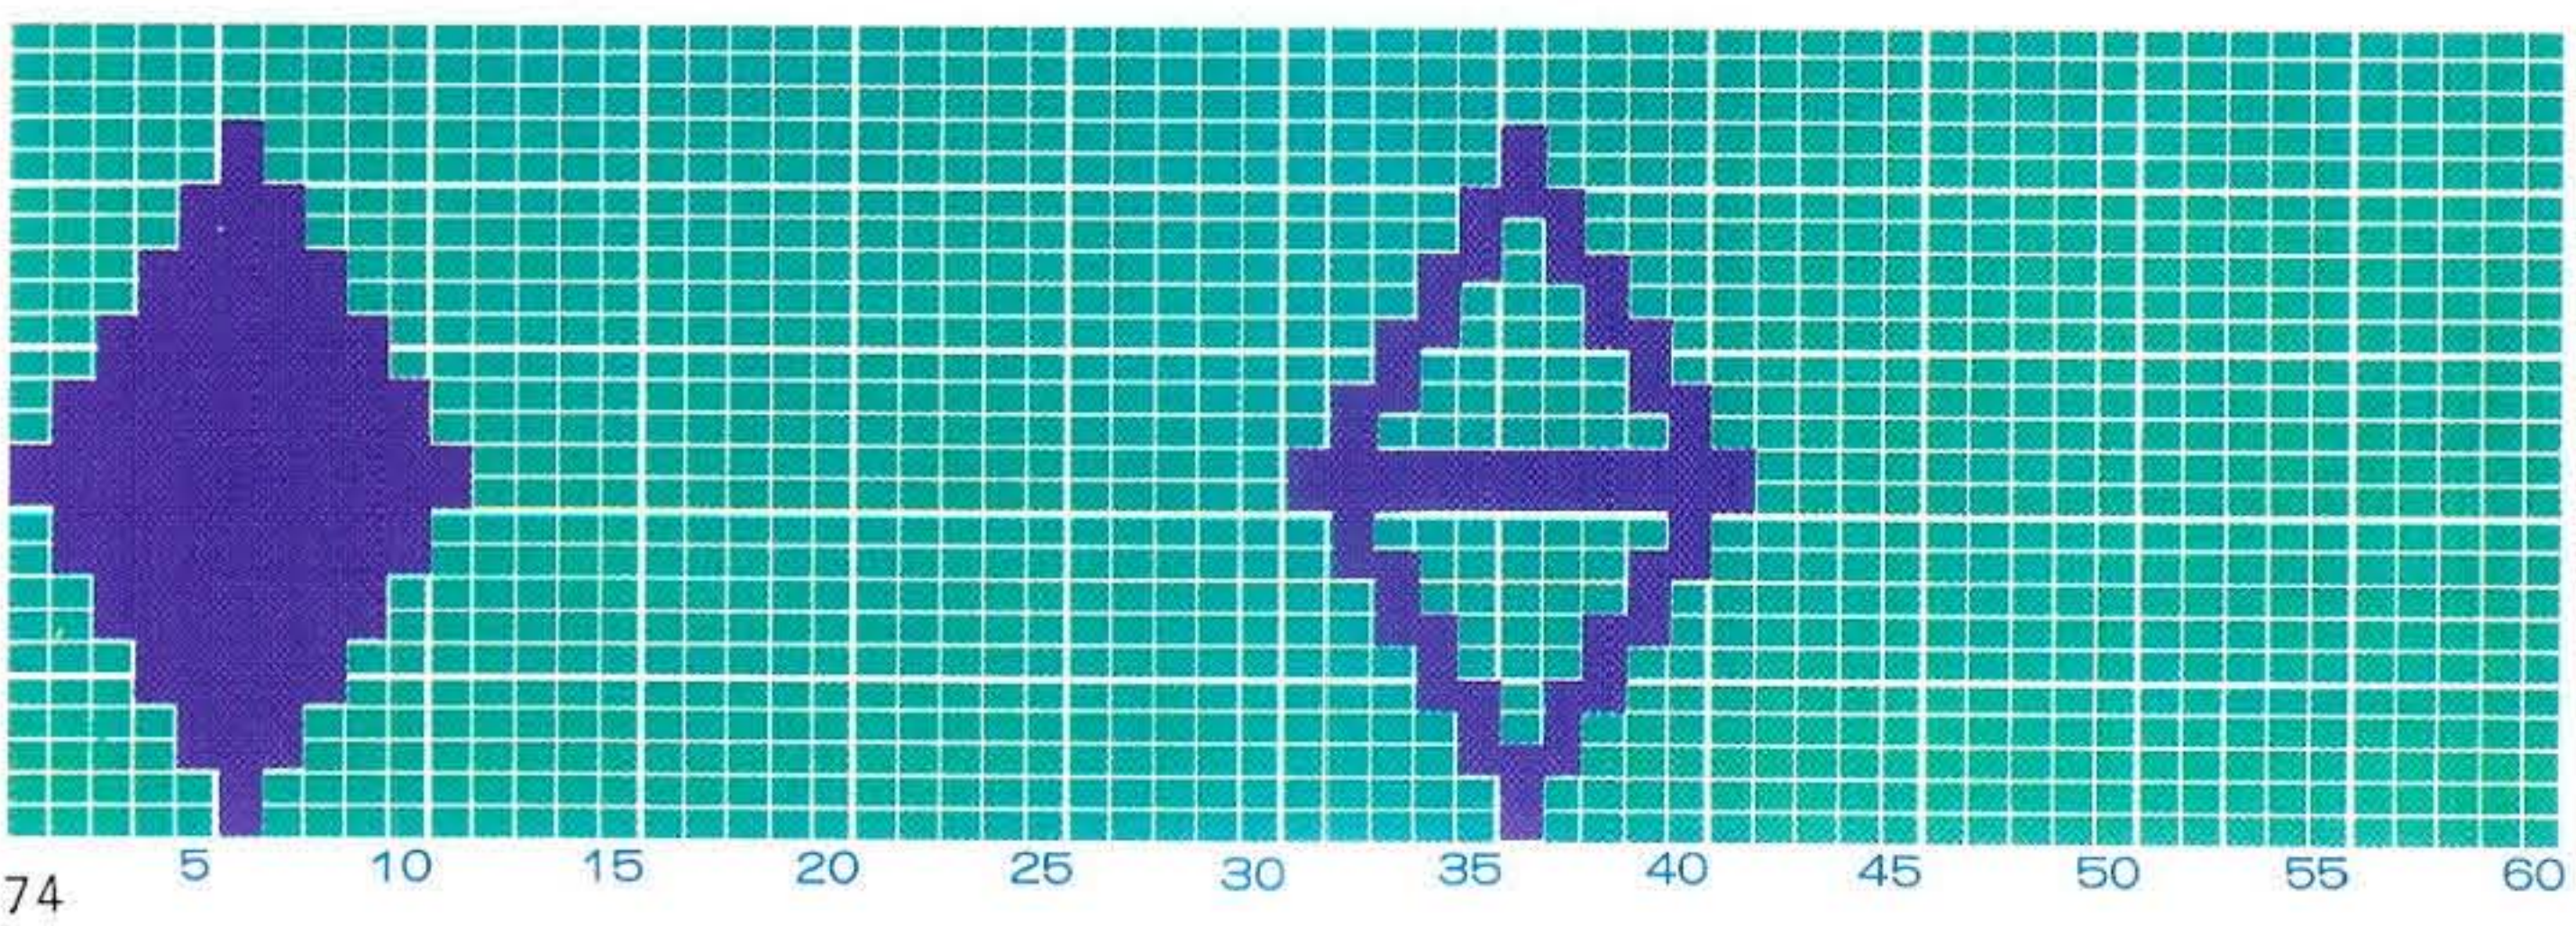


A

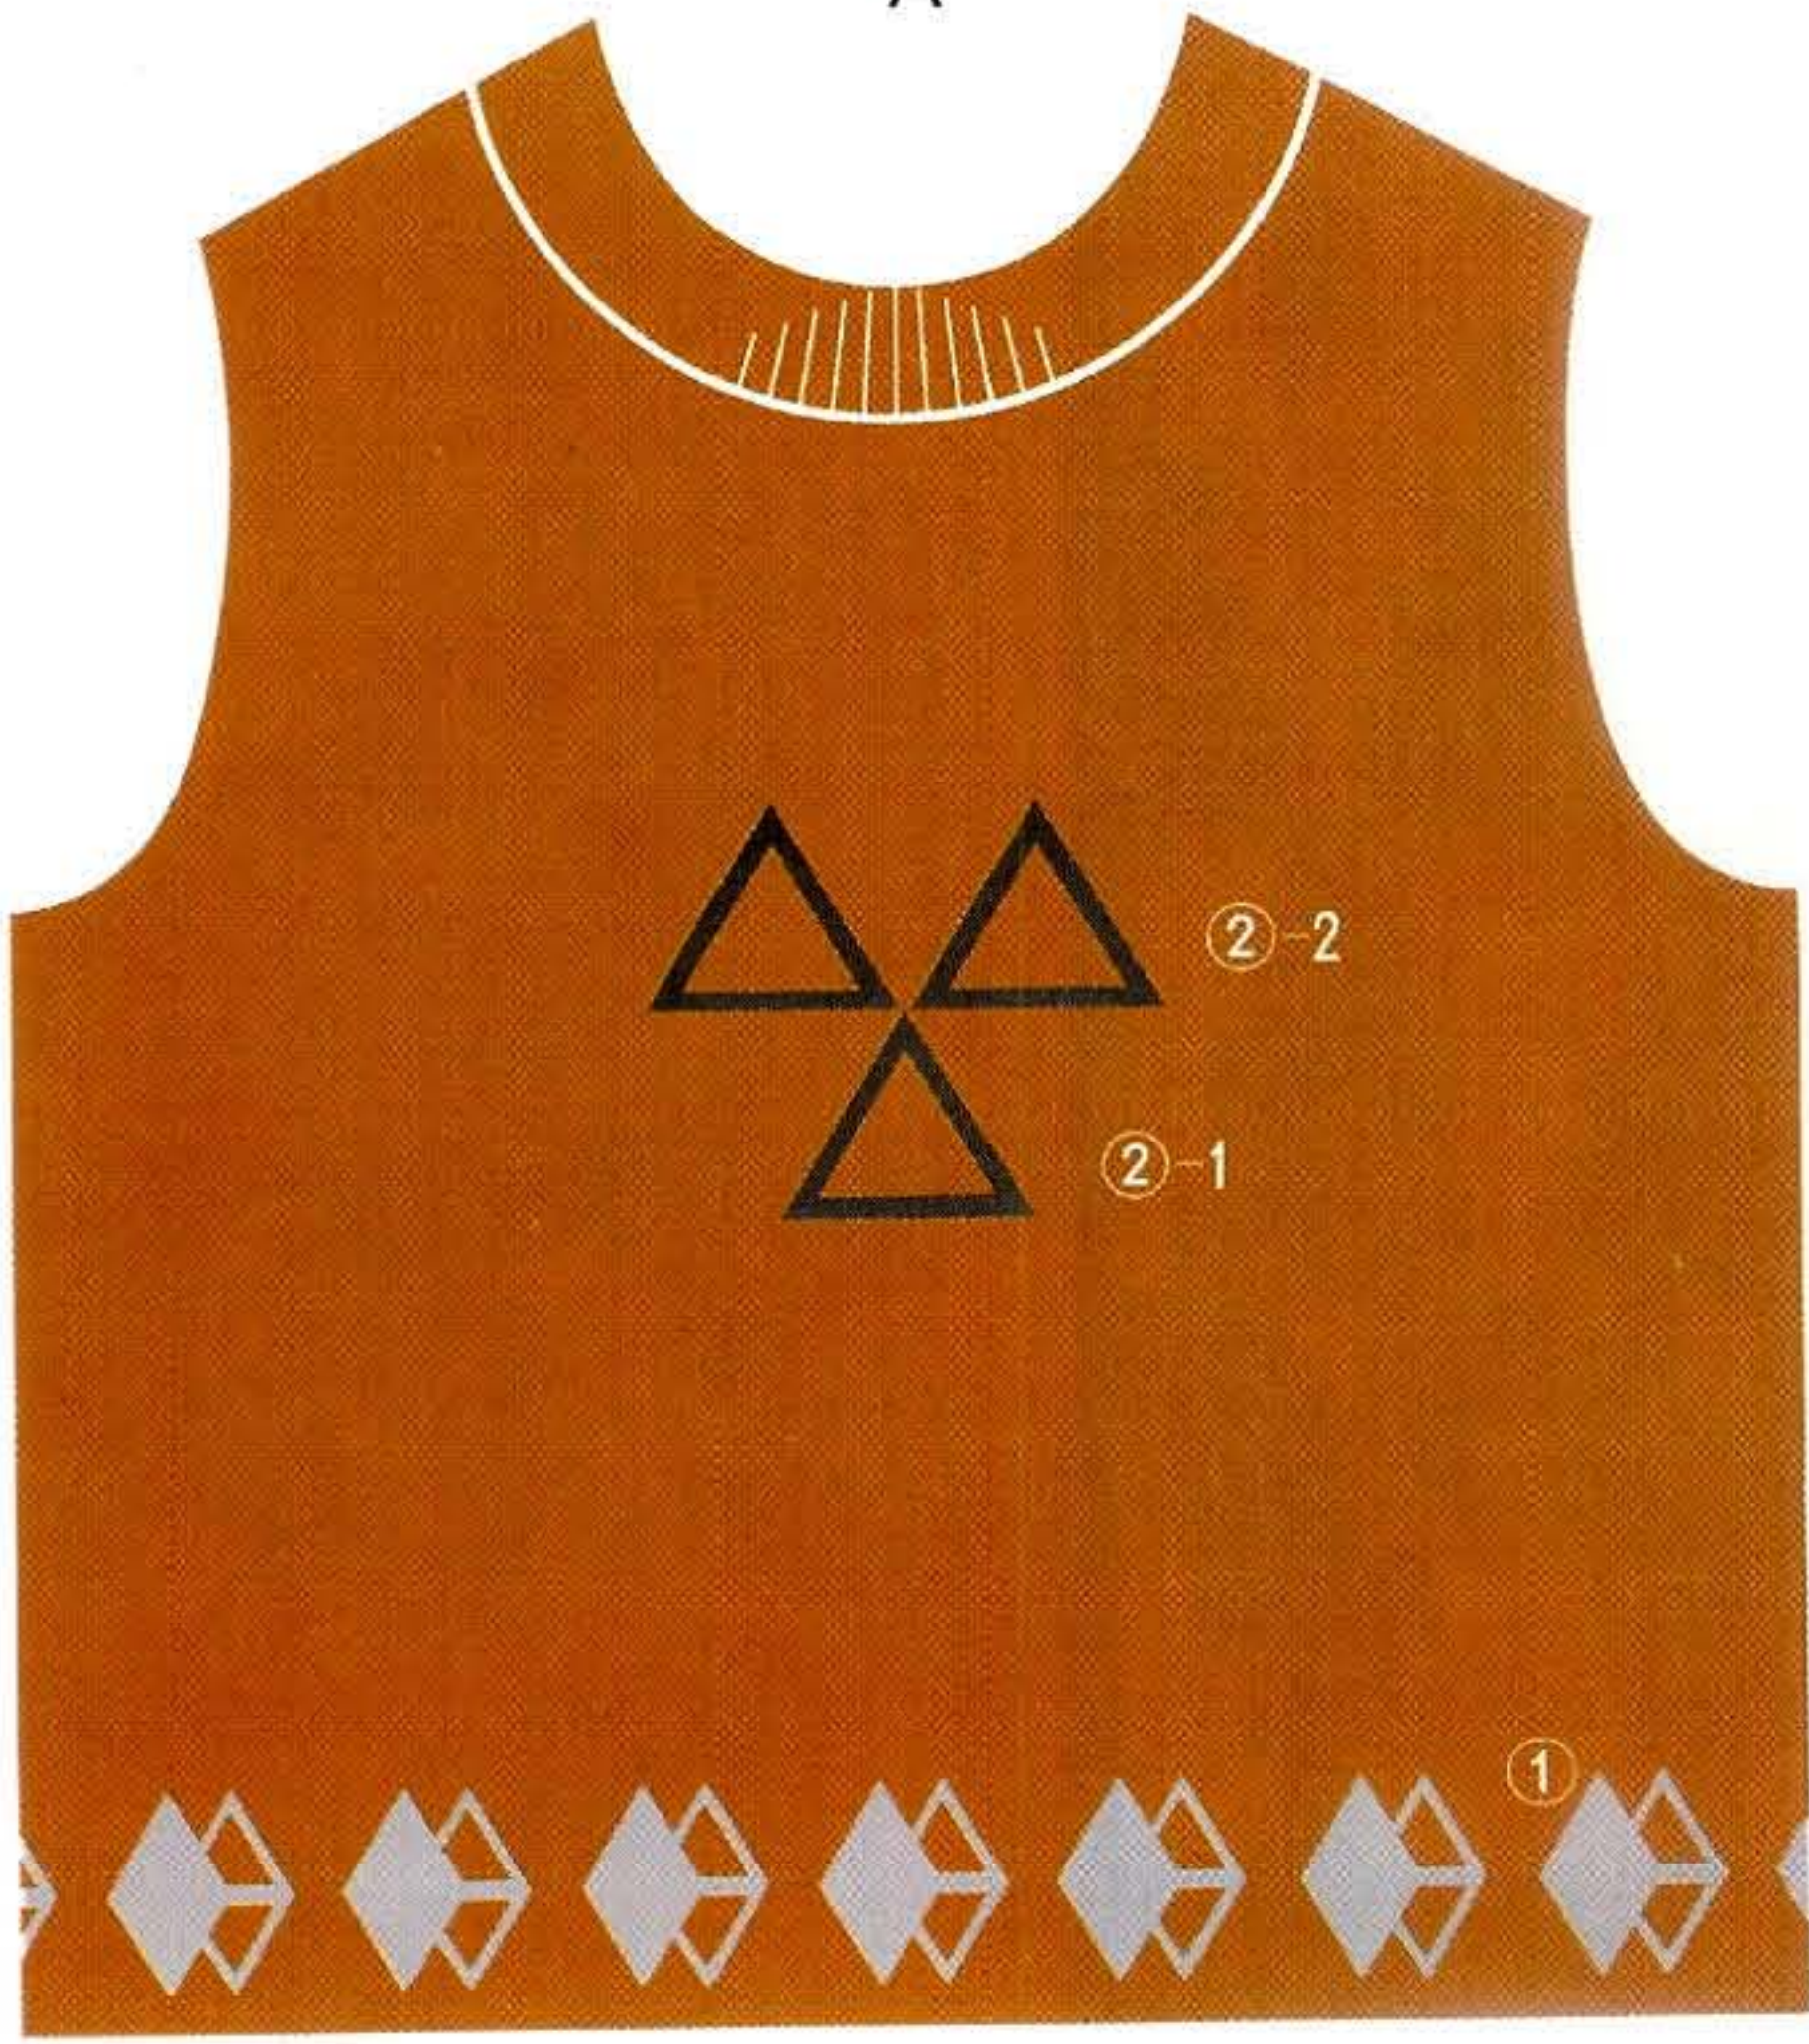 


B



 B ②

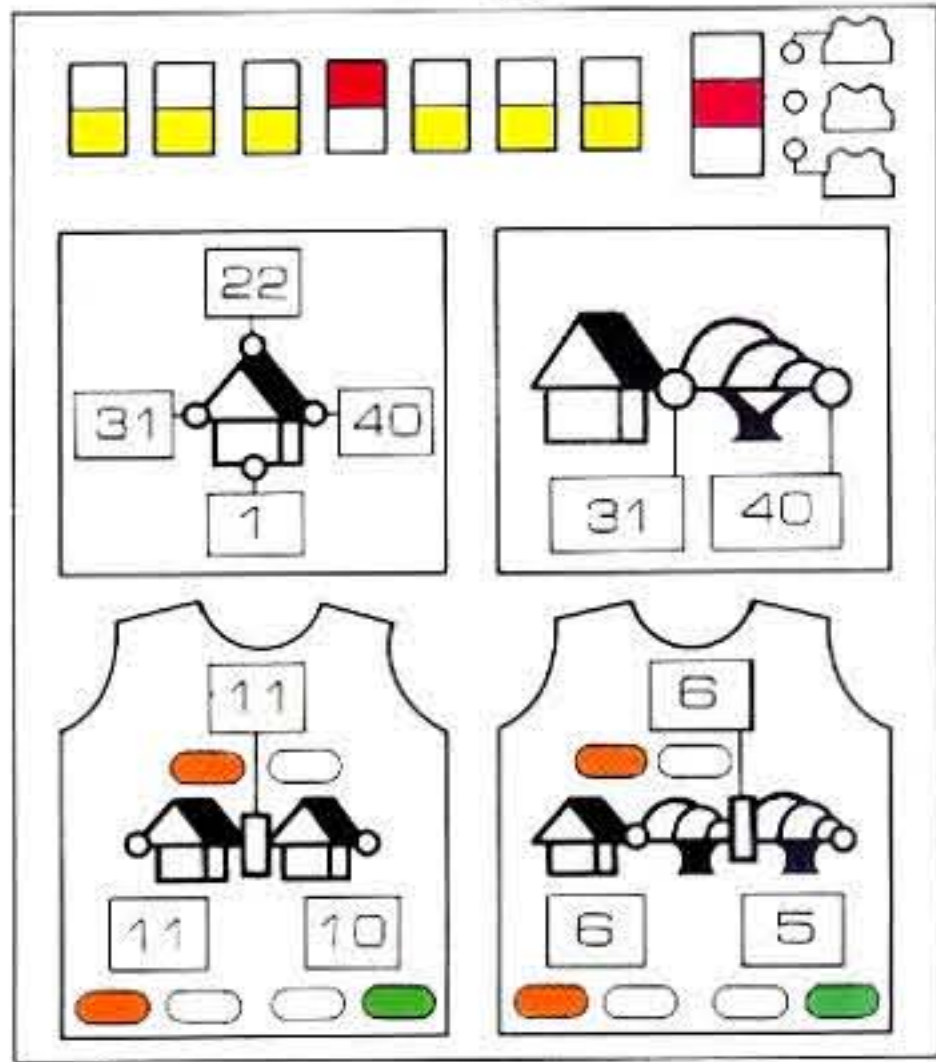


B ①

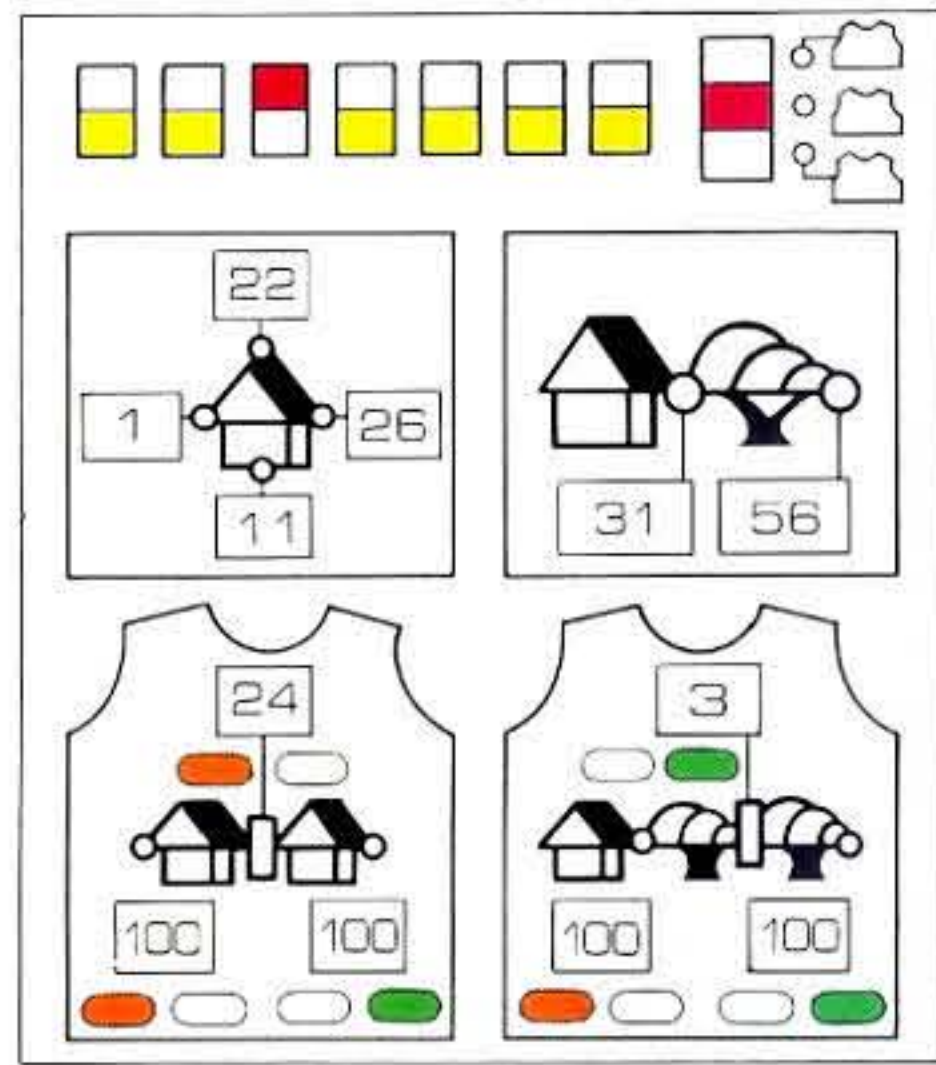 

C



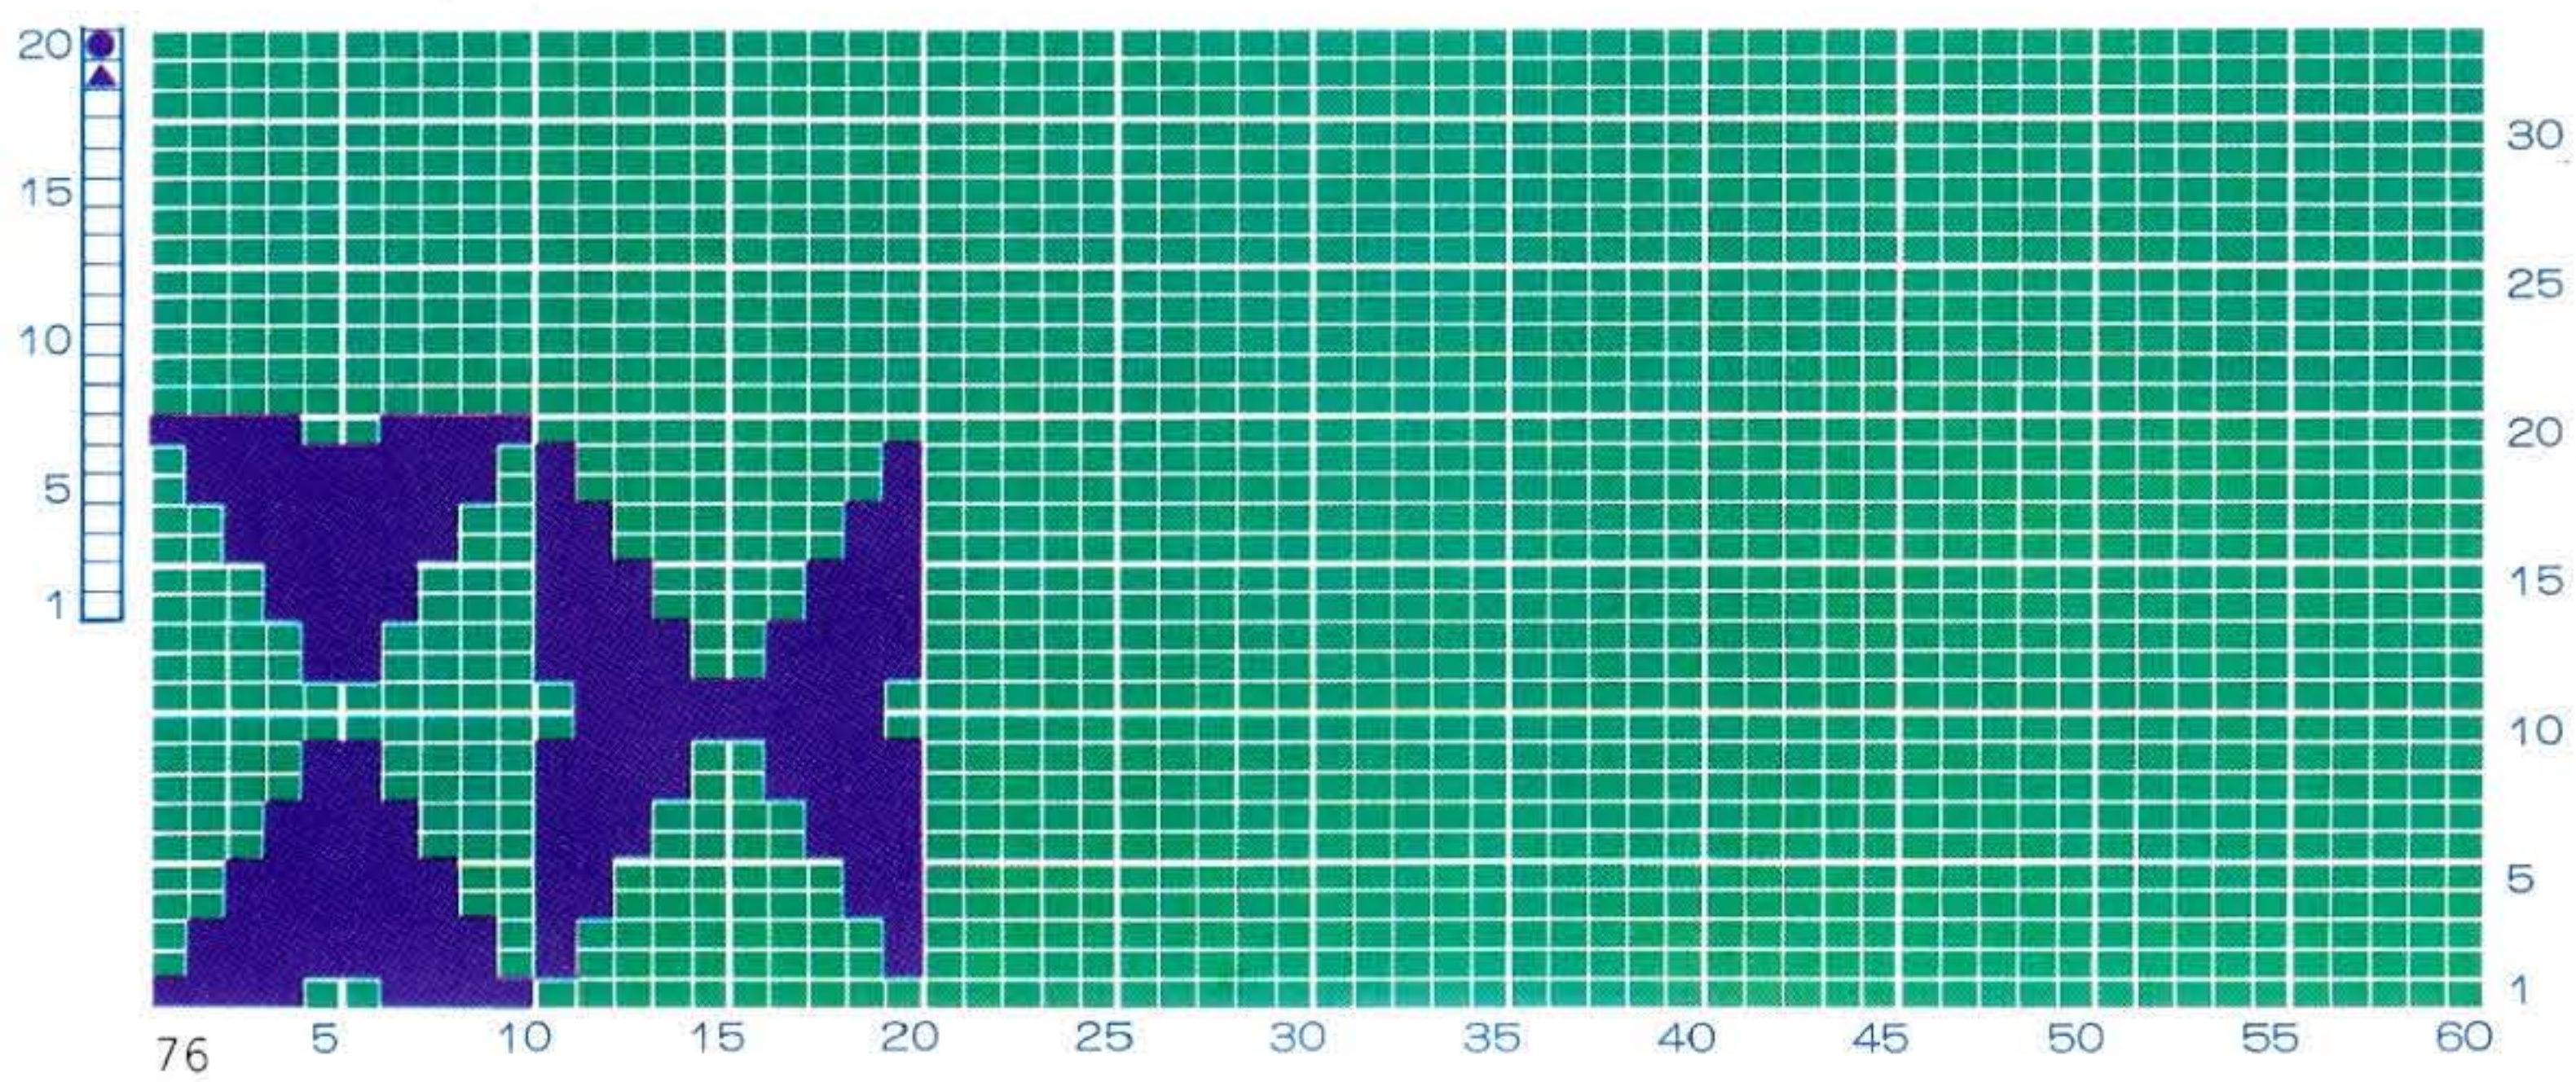 

A

 


B




L 欄に●印が現われたらスイッチを切替えながら編みます。
Change the position of switch at the "●" mark to knit the pattern continuously.


A ①-2

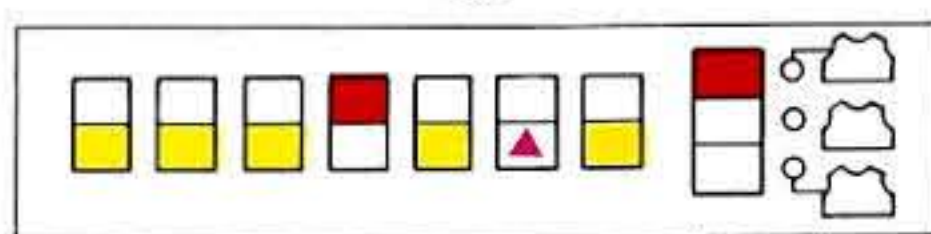

A ①-1

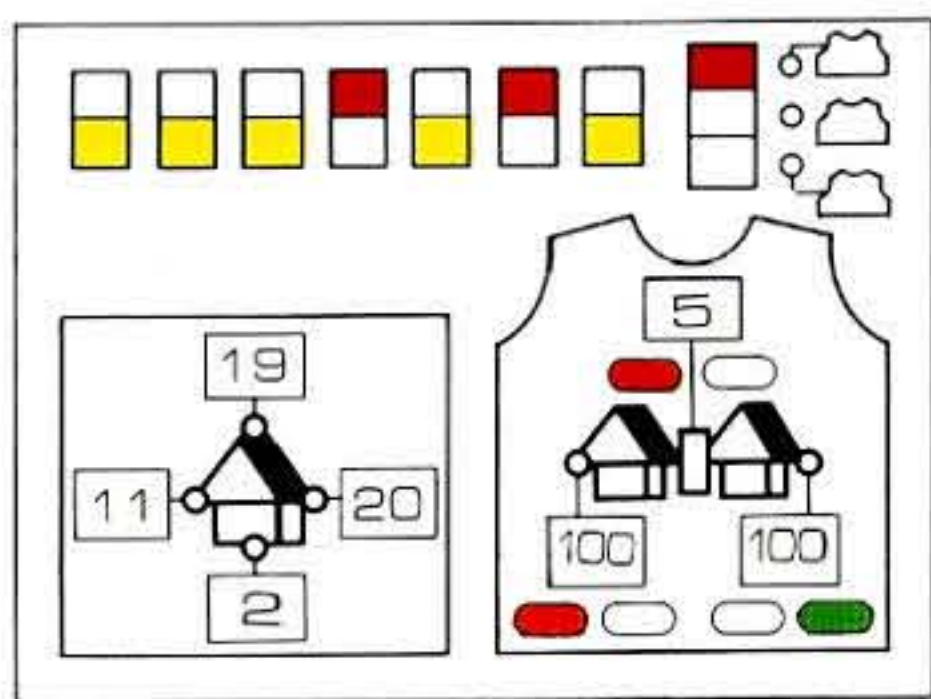 


B ①

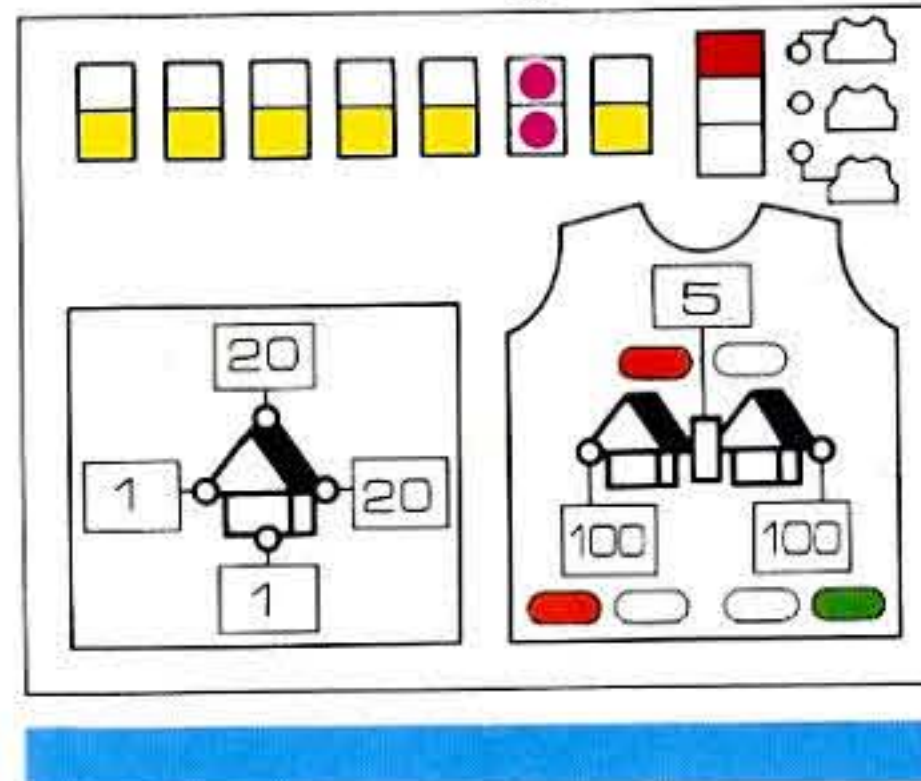 

C







 
C ①

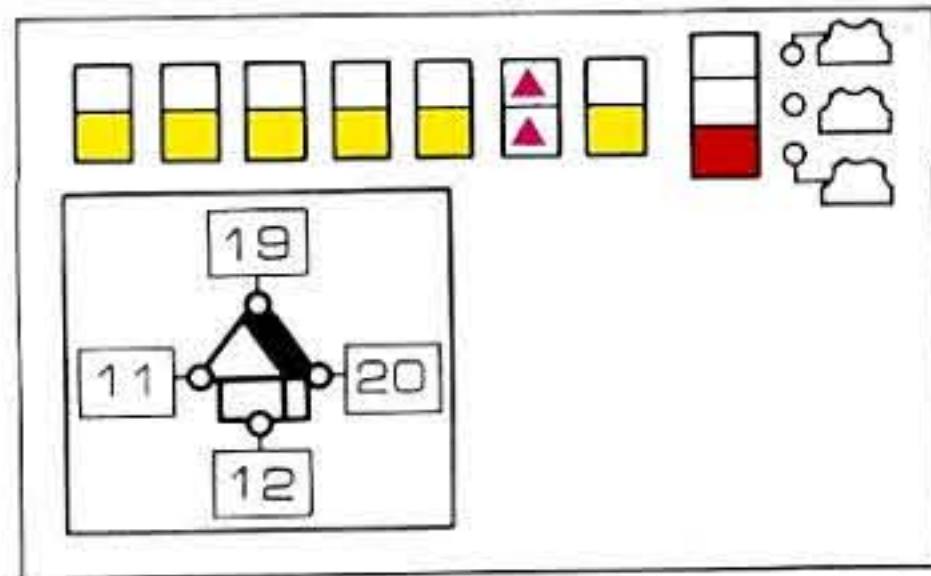

L 欄に▲印が現われたらスイッチを切替えながら編みます。
Change the position of switch at the "▲" mark to knit the pattern continuously.



       ①

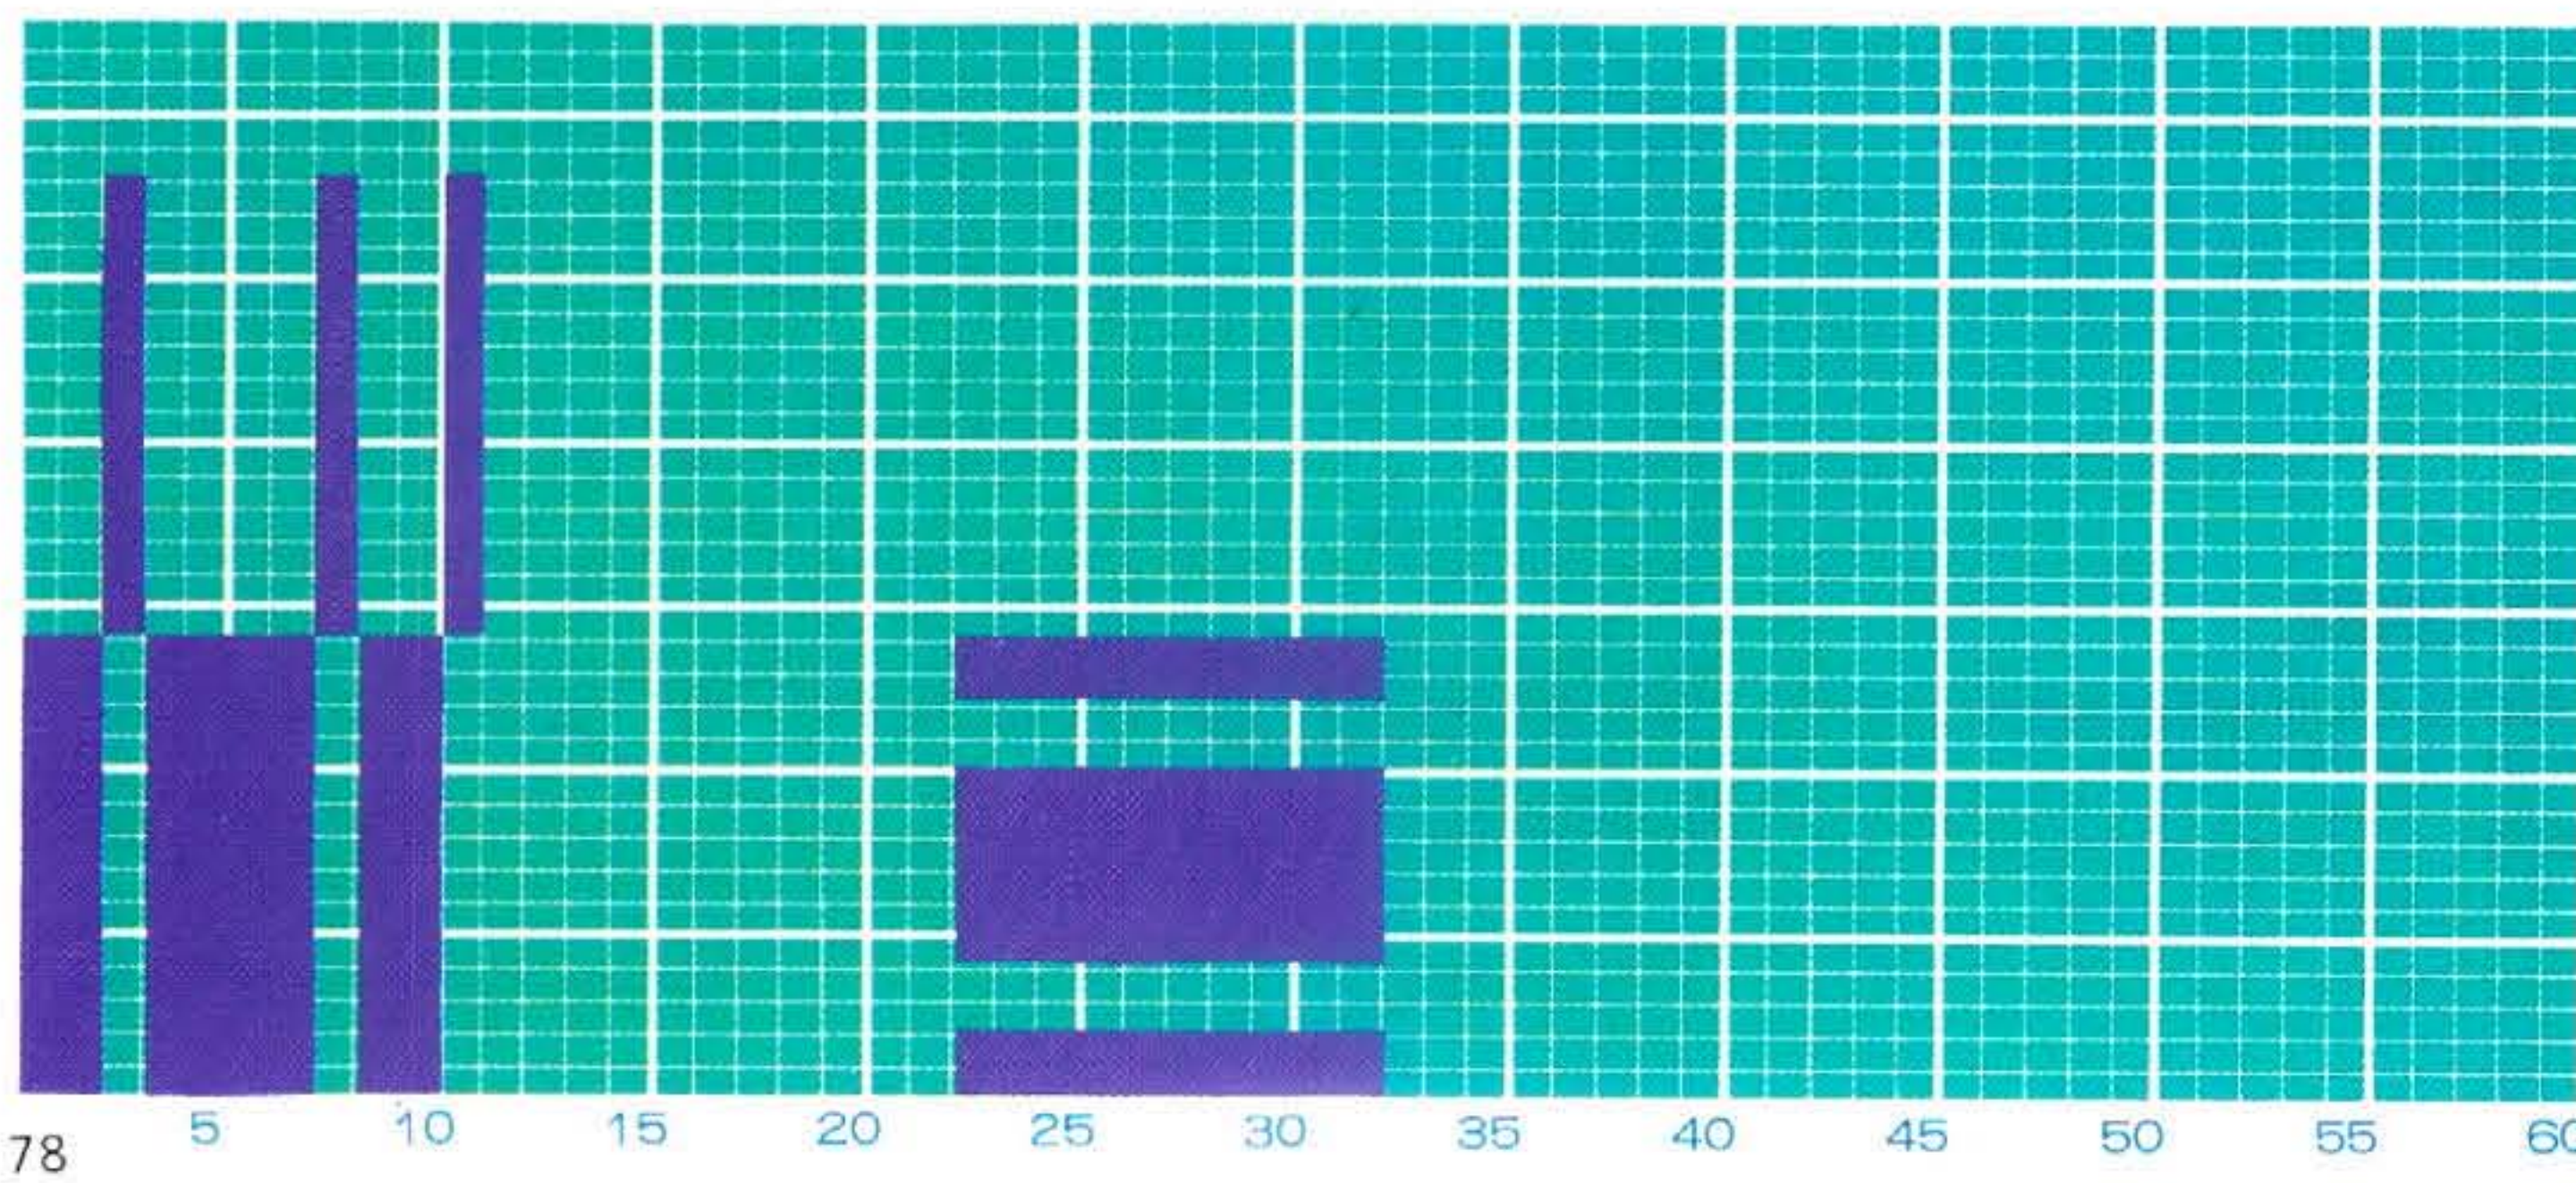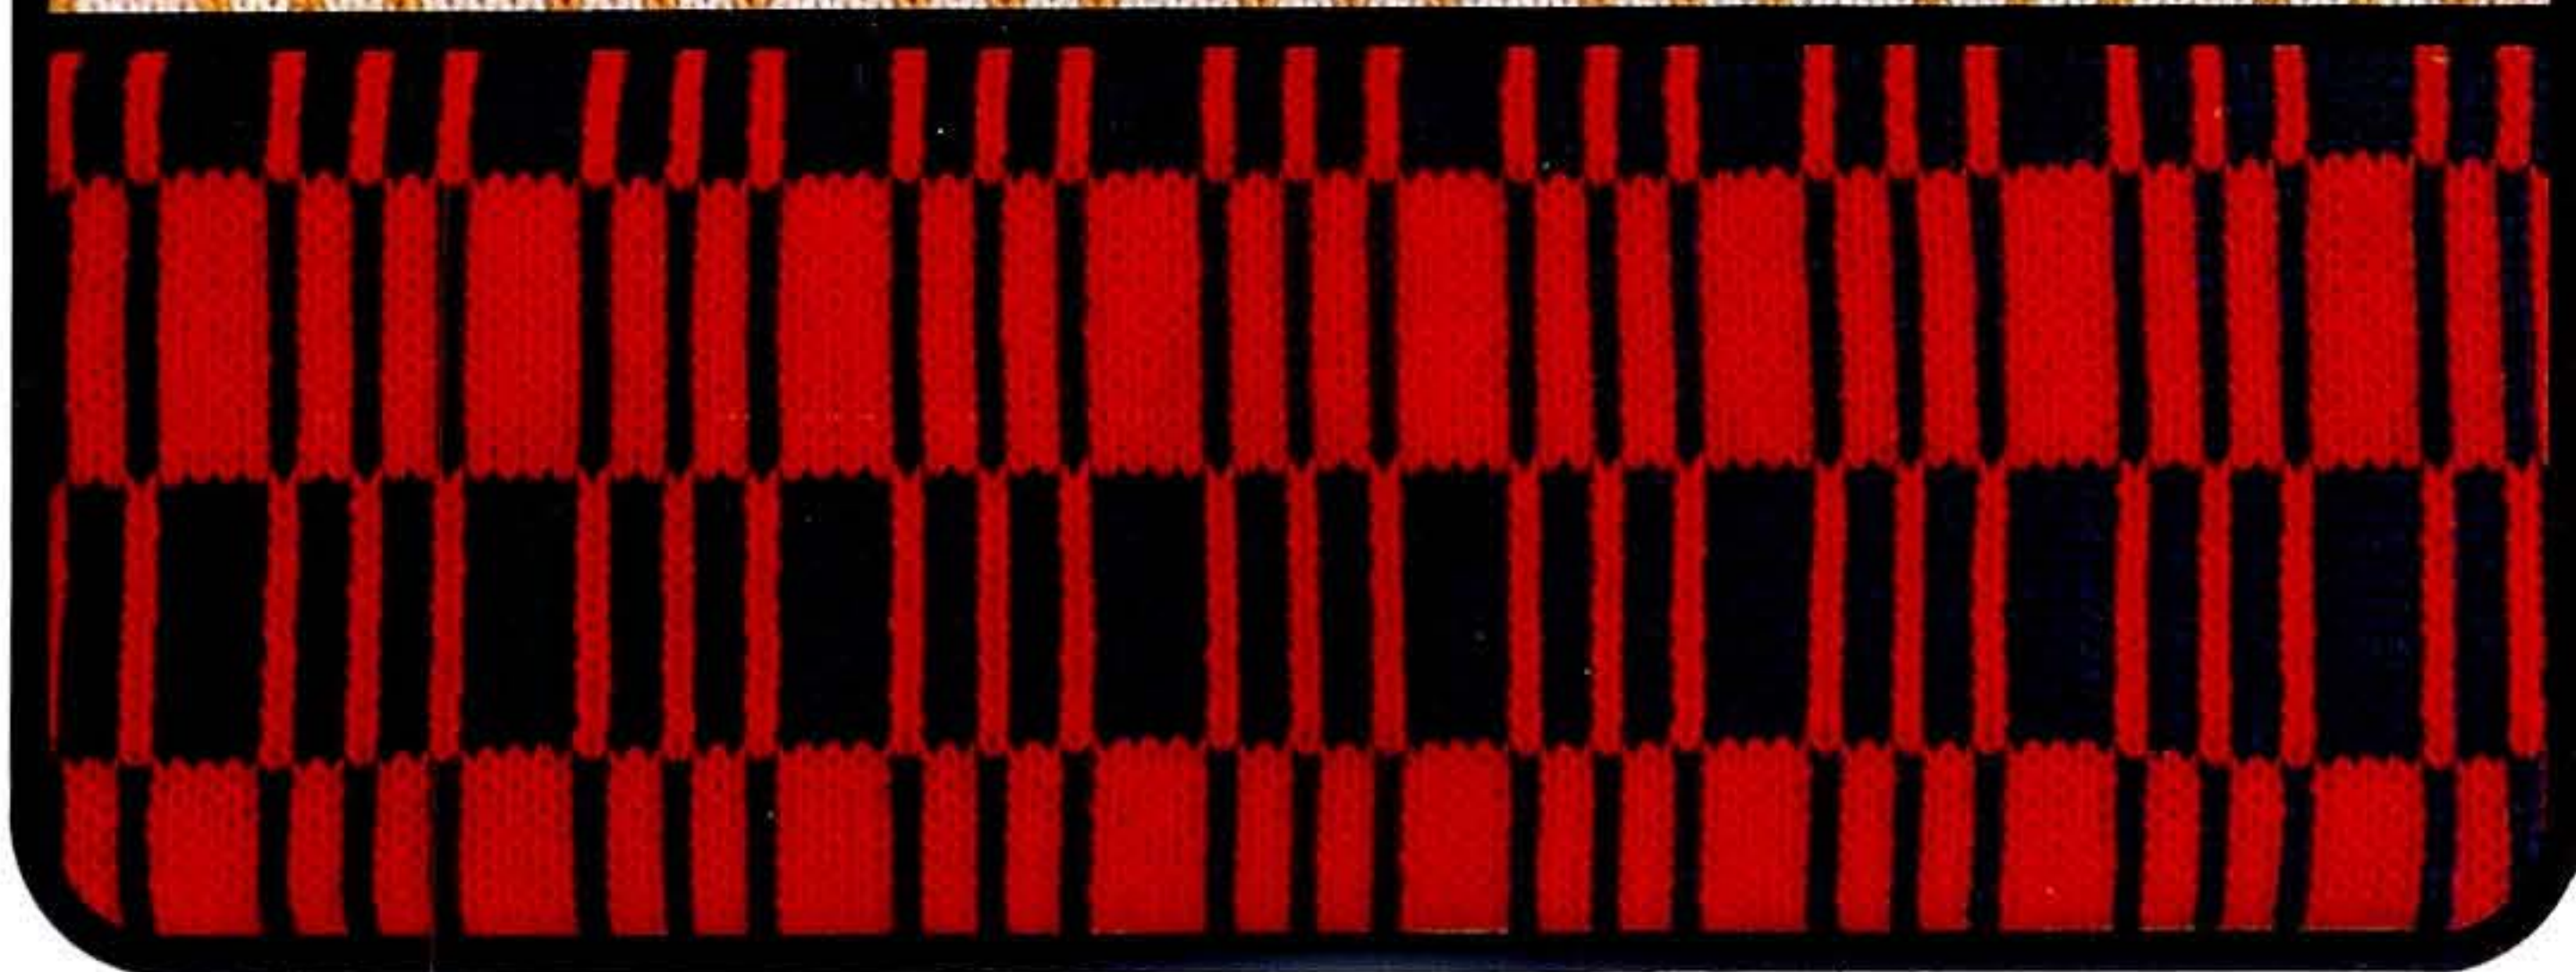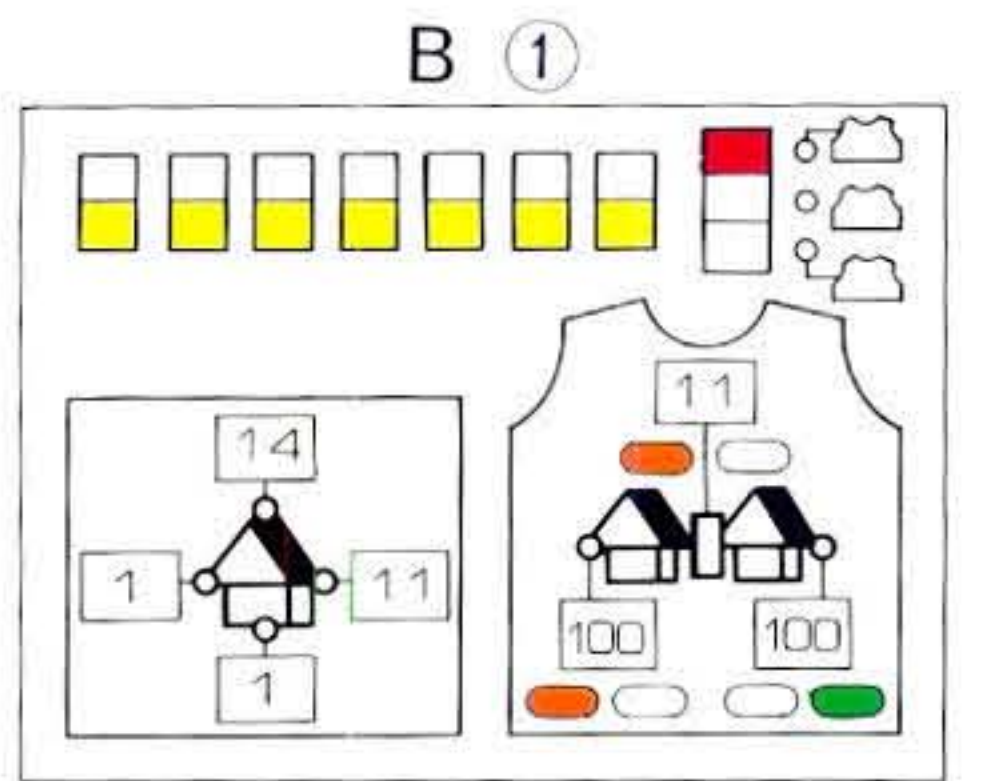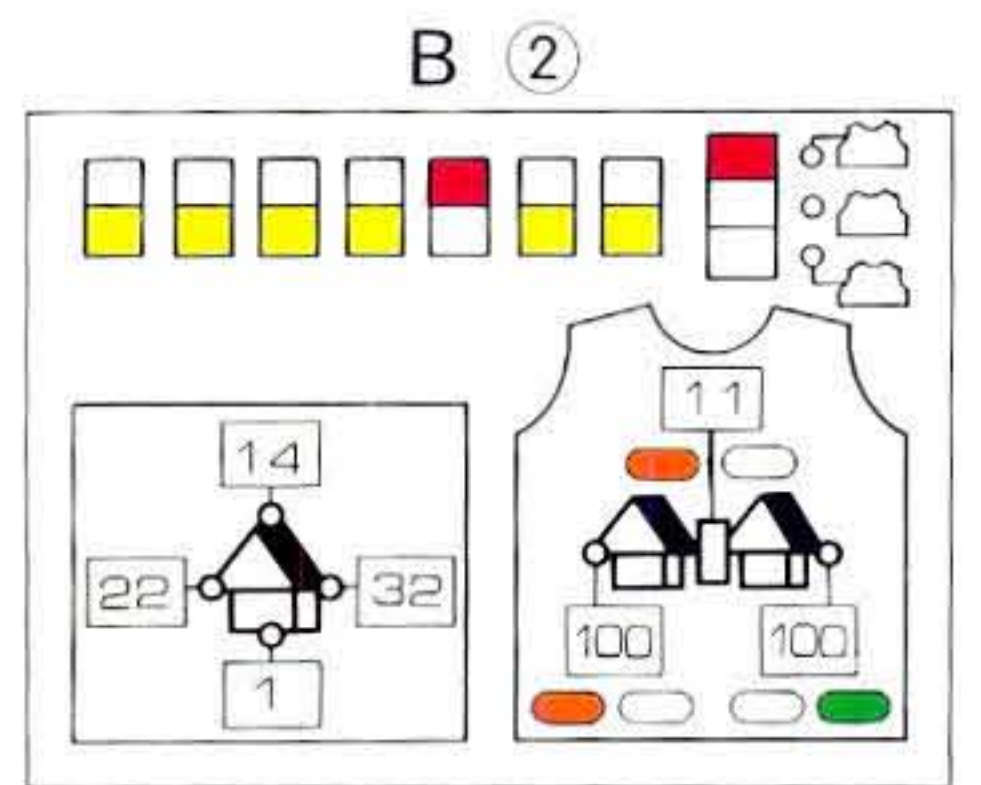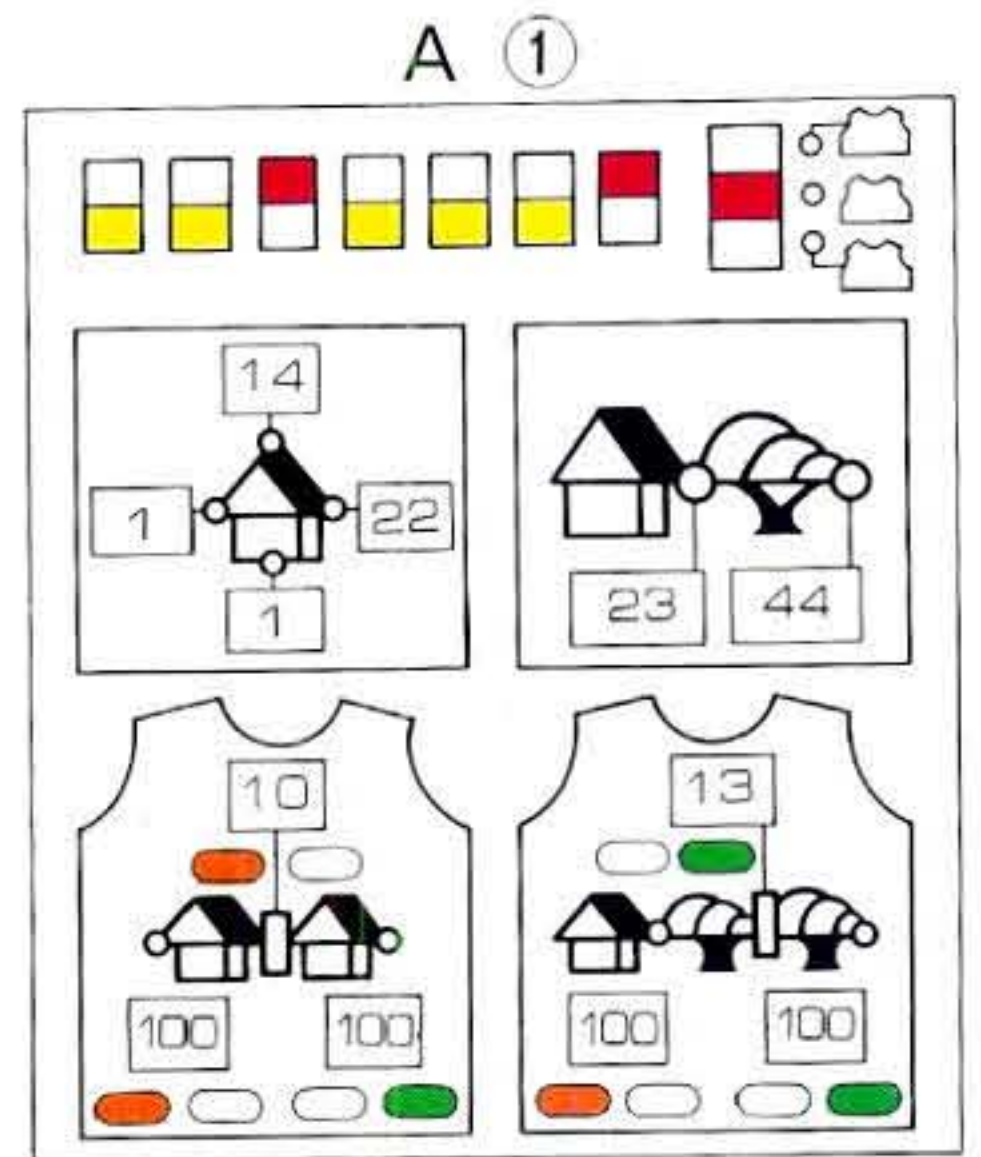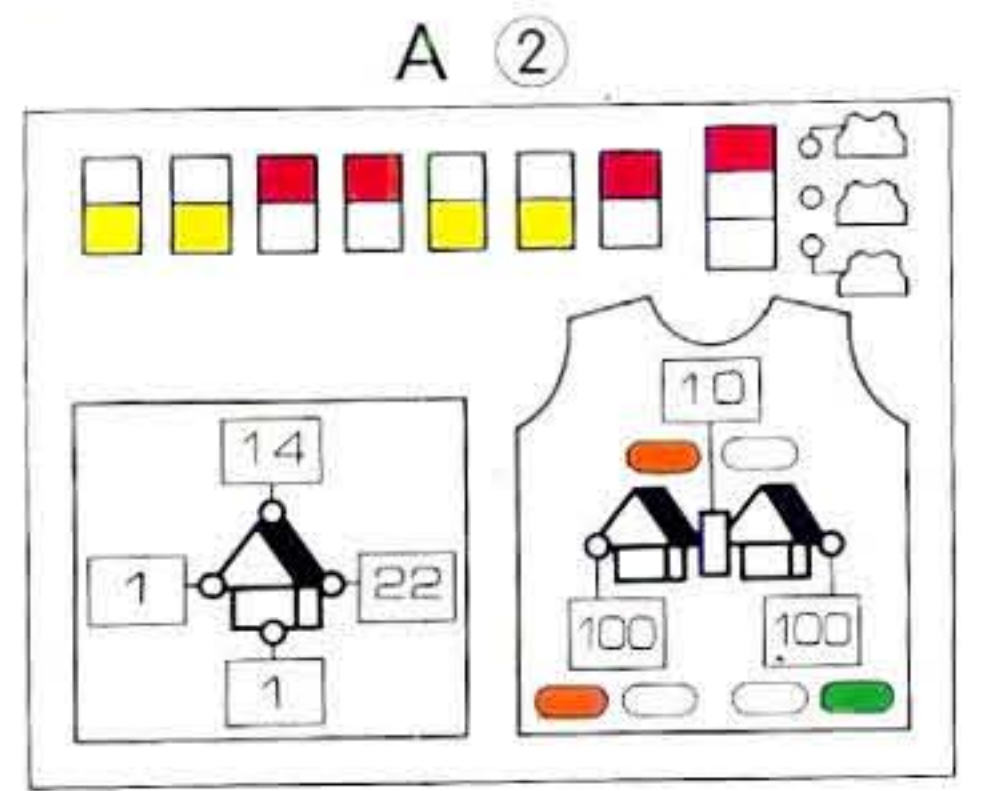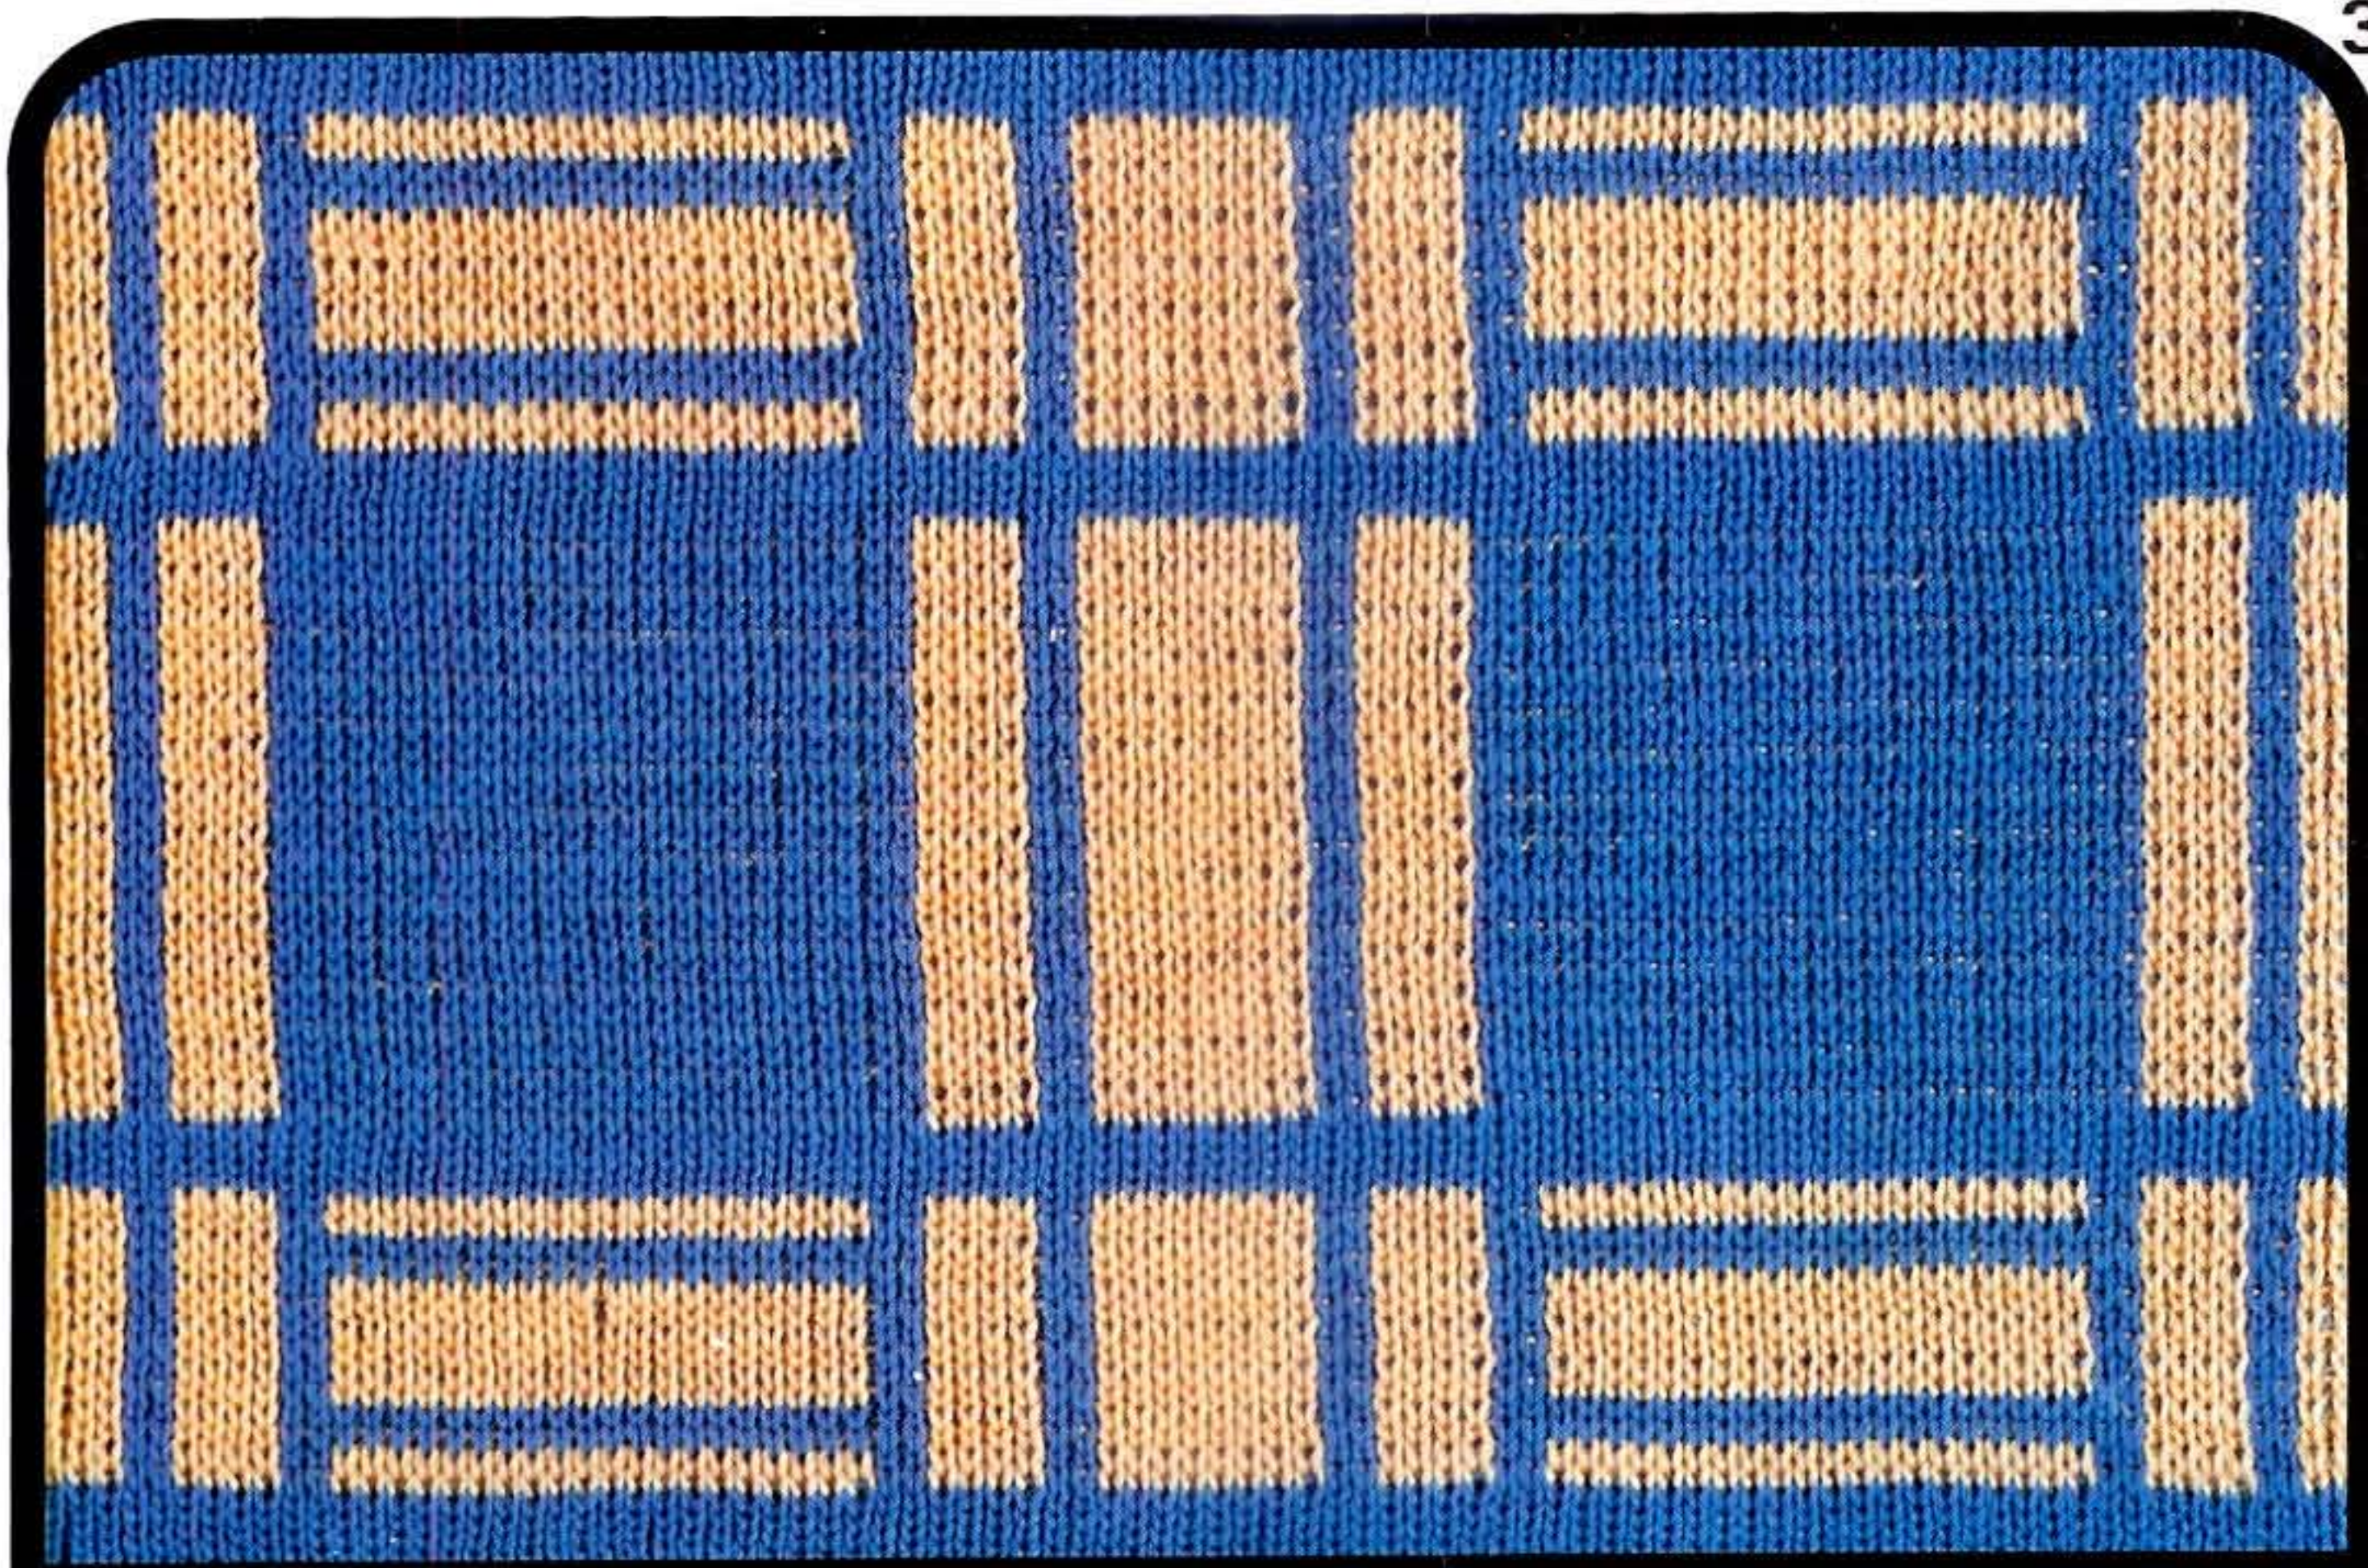

30
25
20
15
10
5
1

A



 
↑ 2
↓ 1

B





↑ 2
↓ 1


C

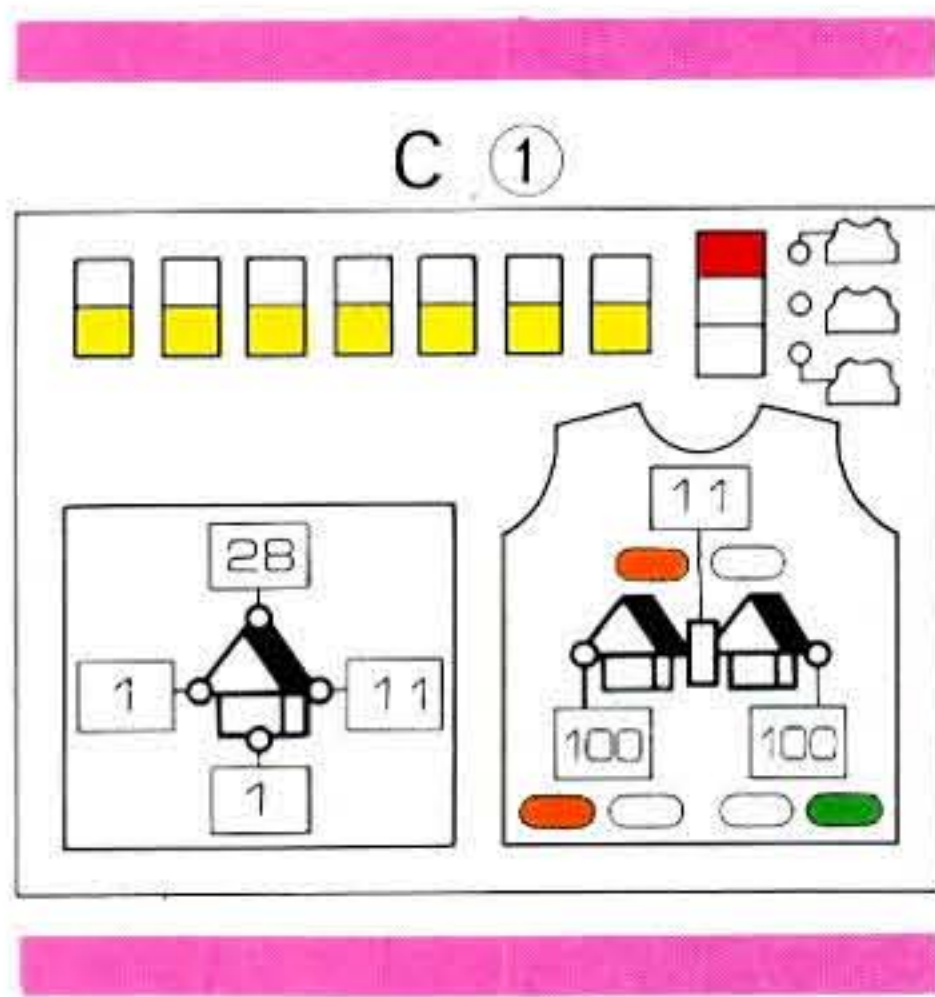


①

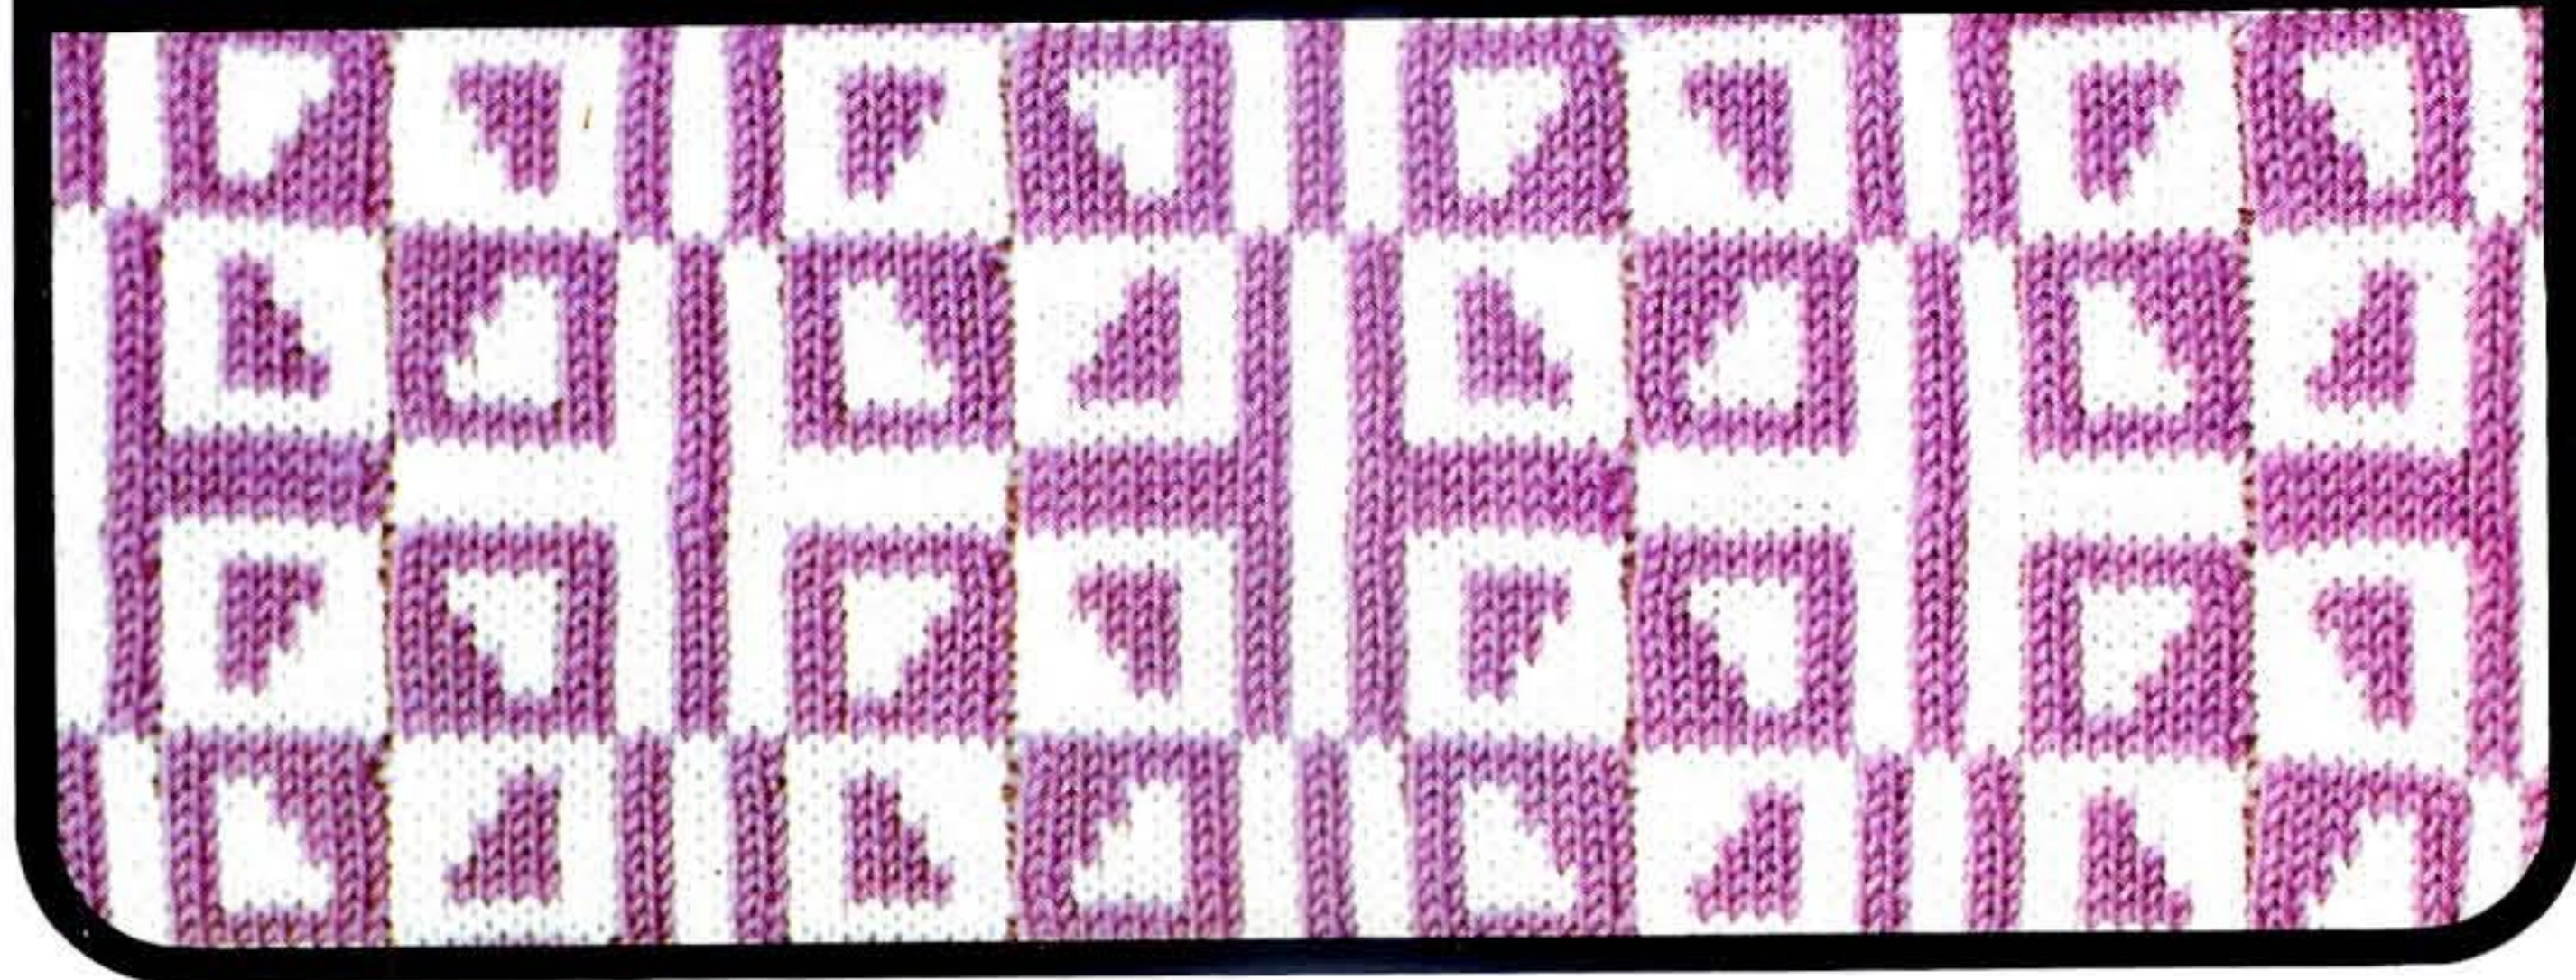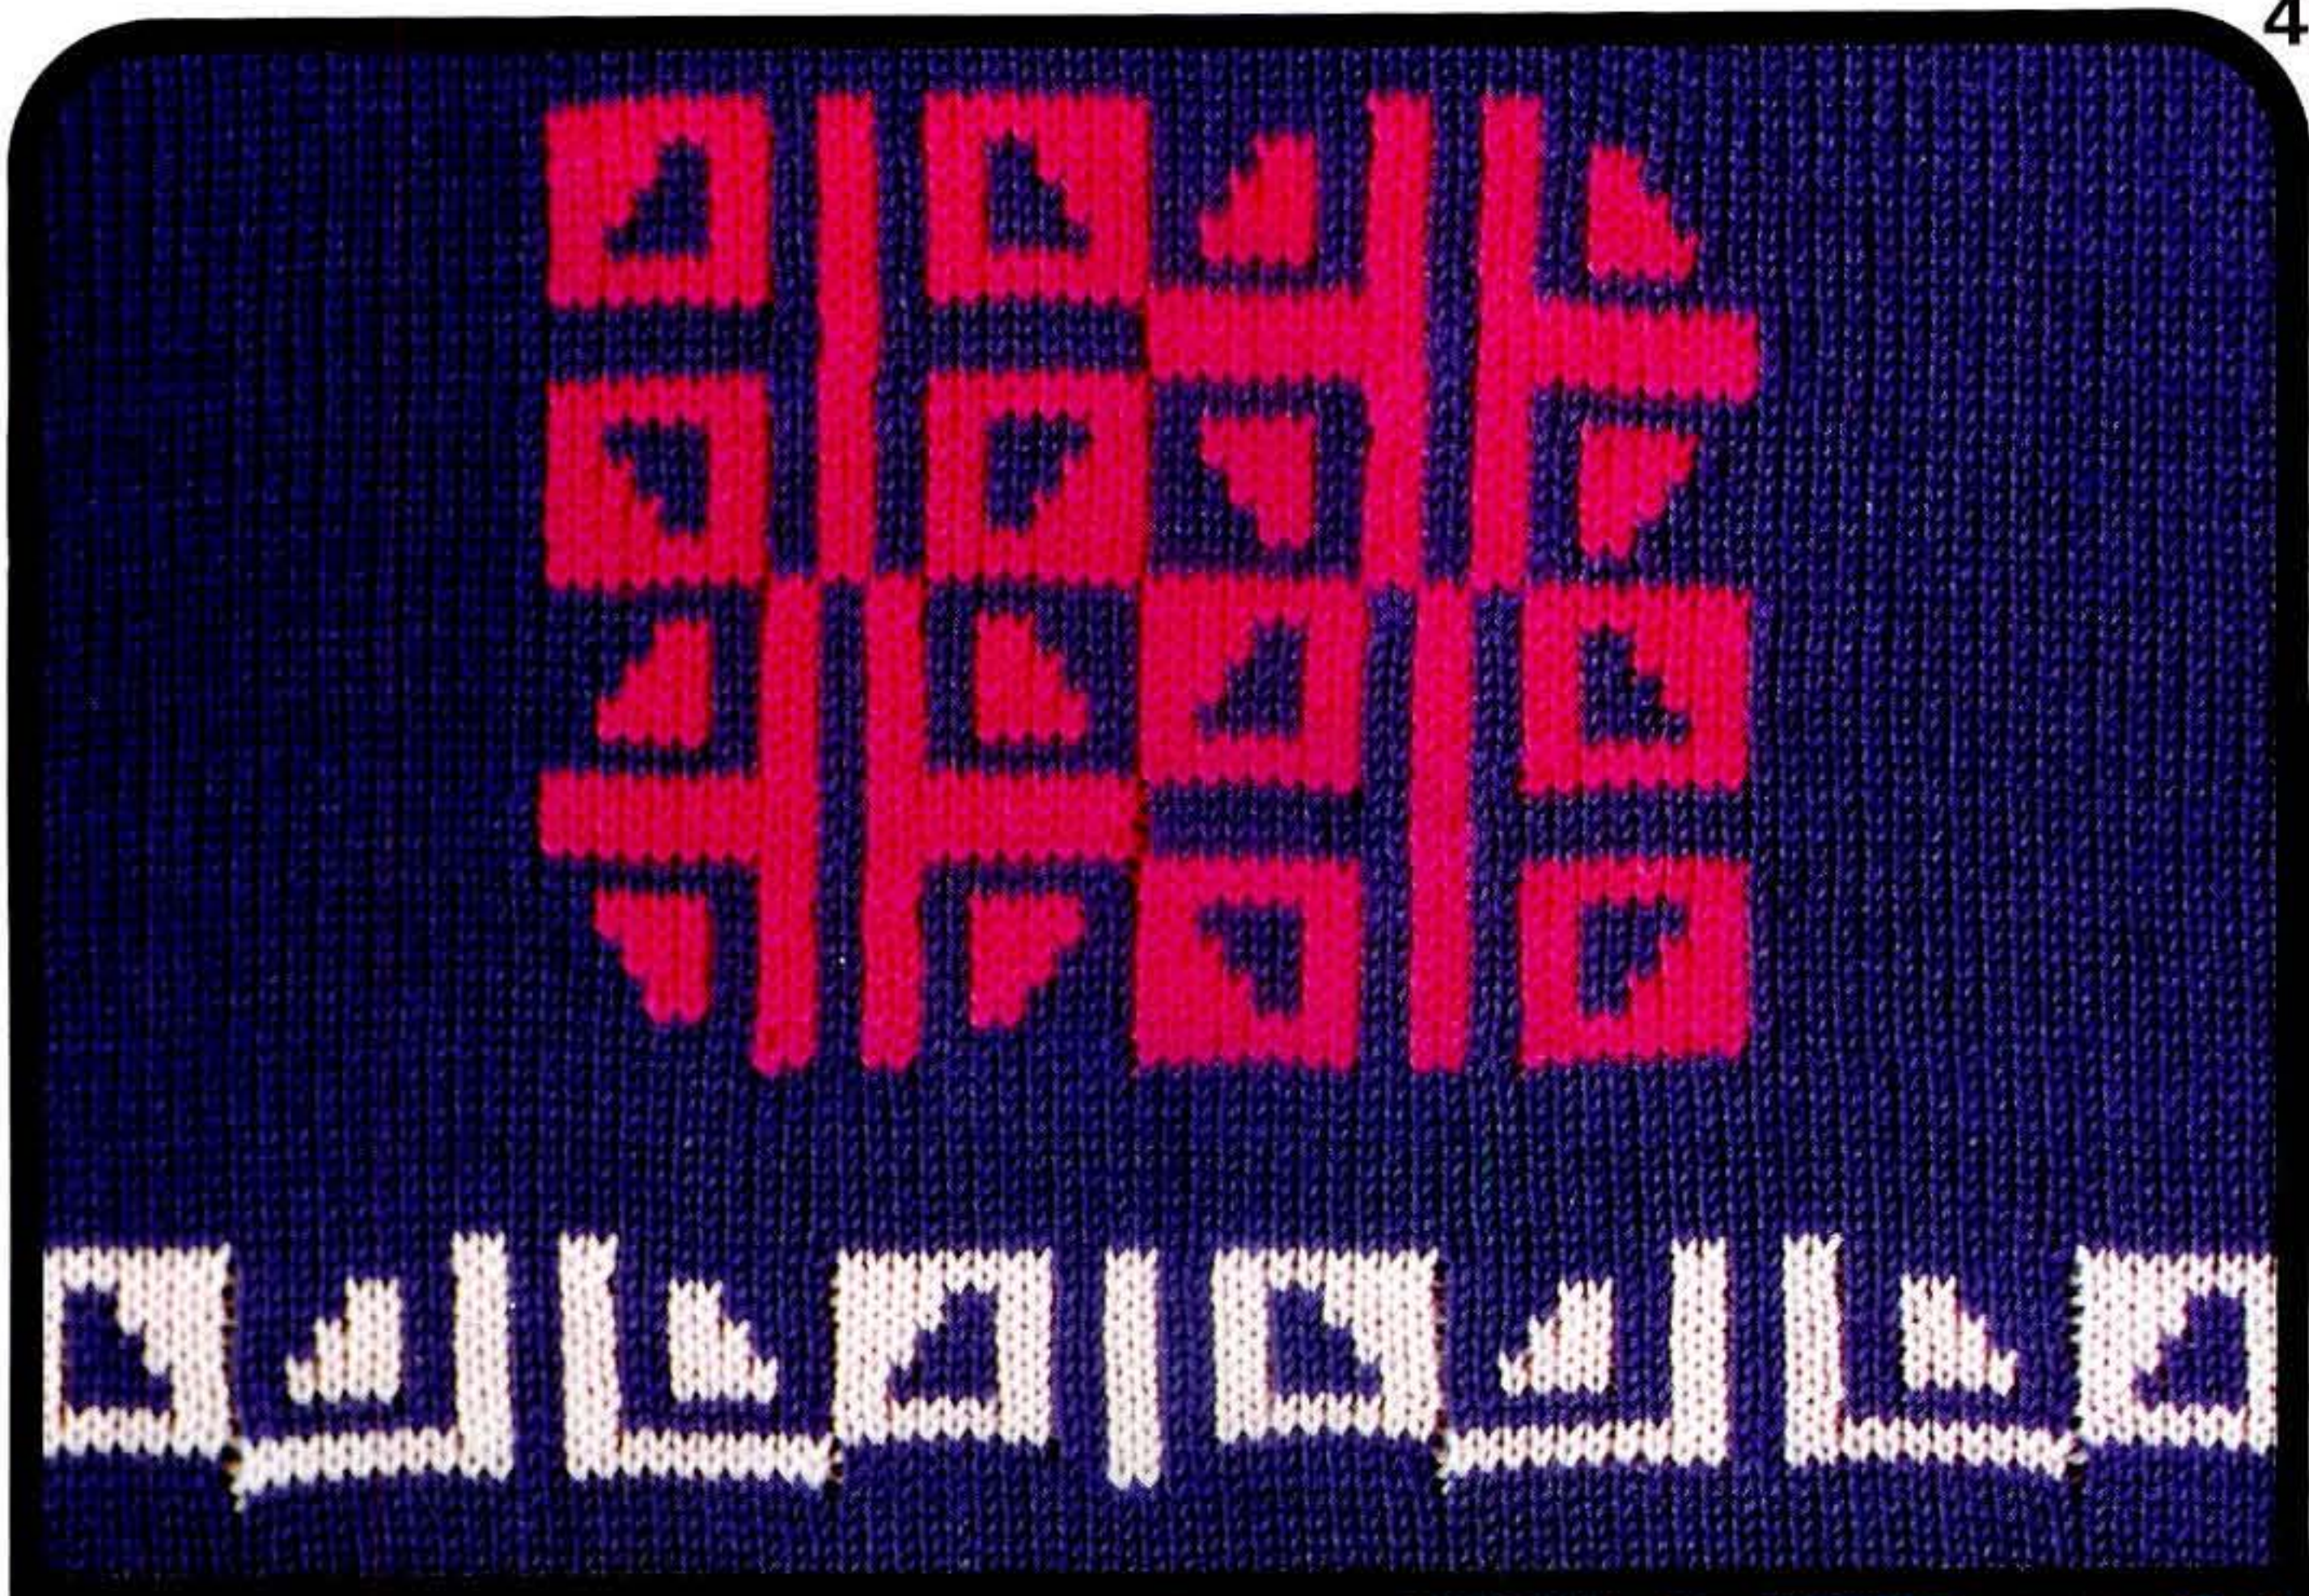  


A ②-2

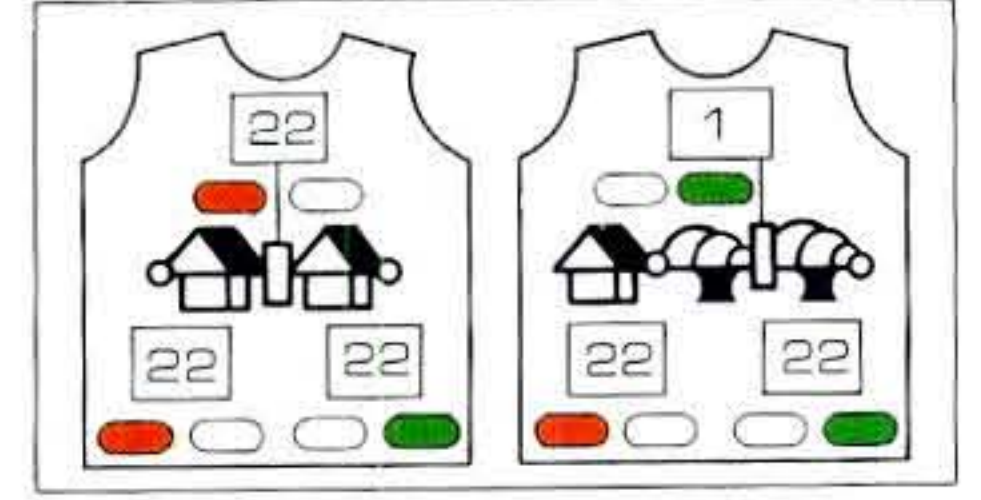 



A ②-1

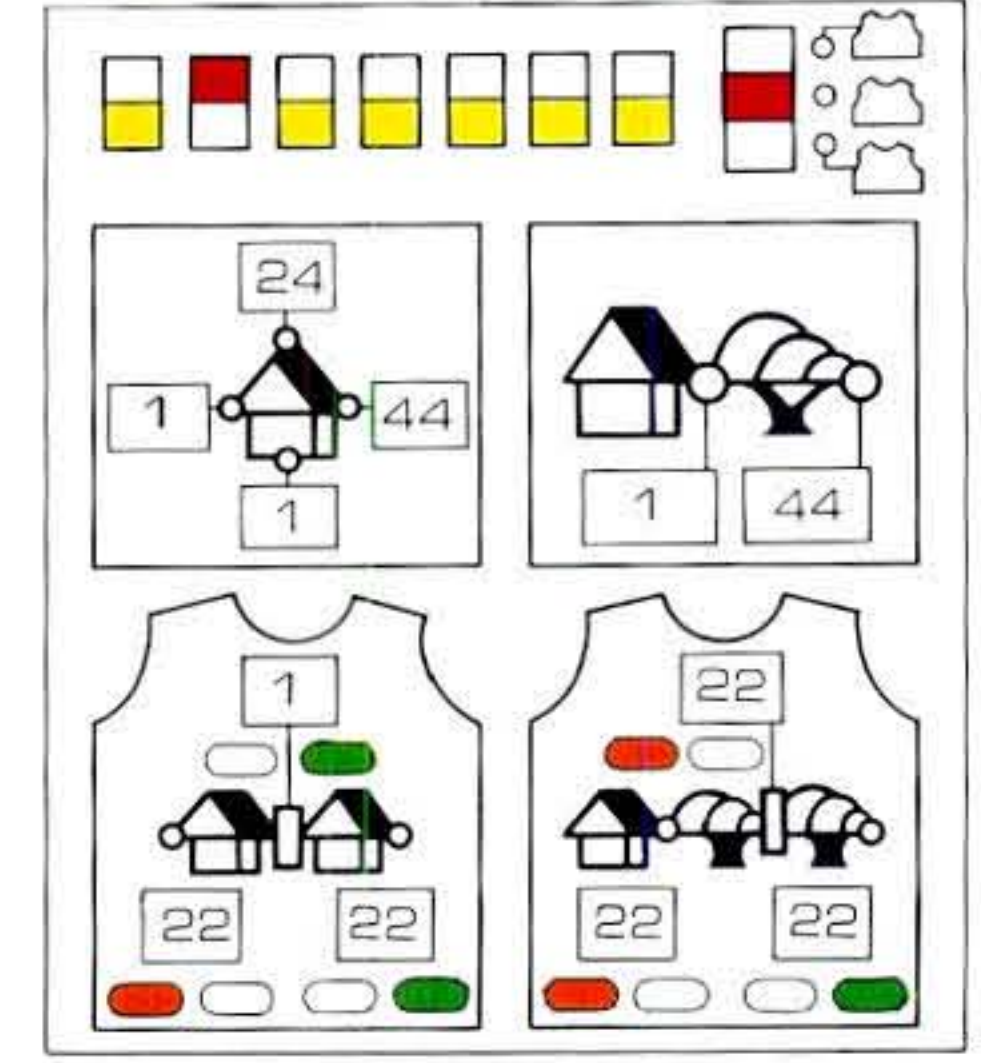 

A ①

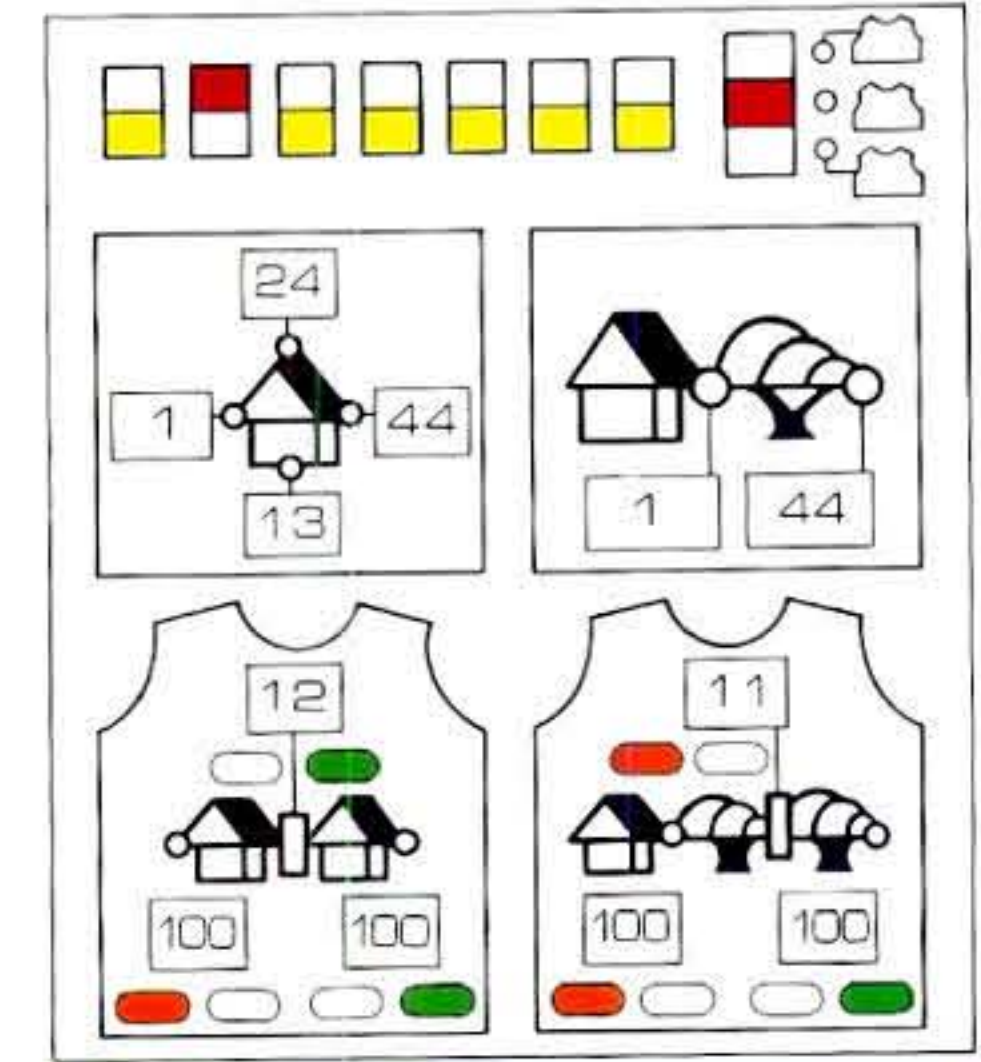 

B ①

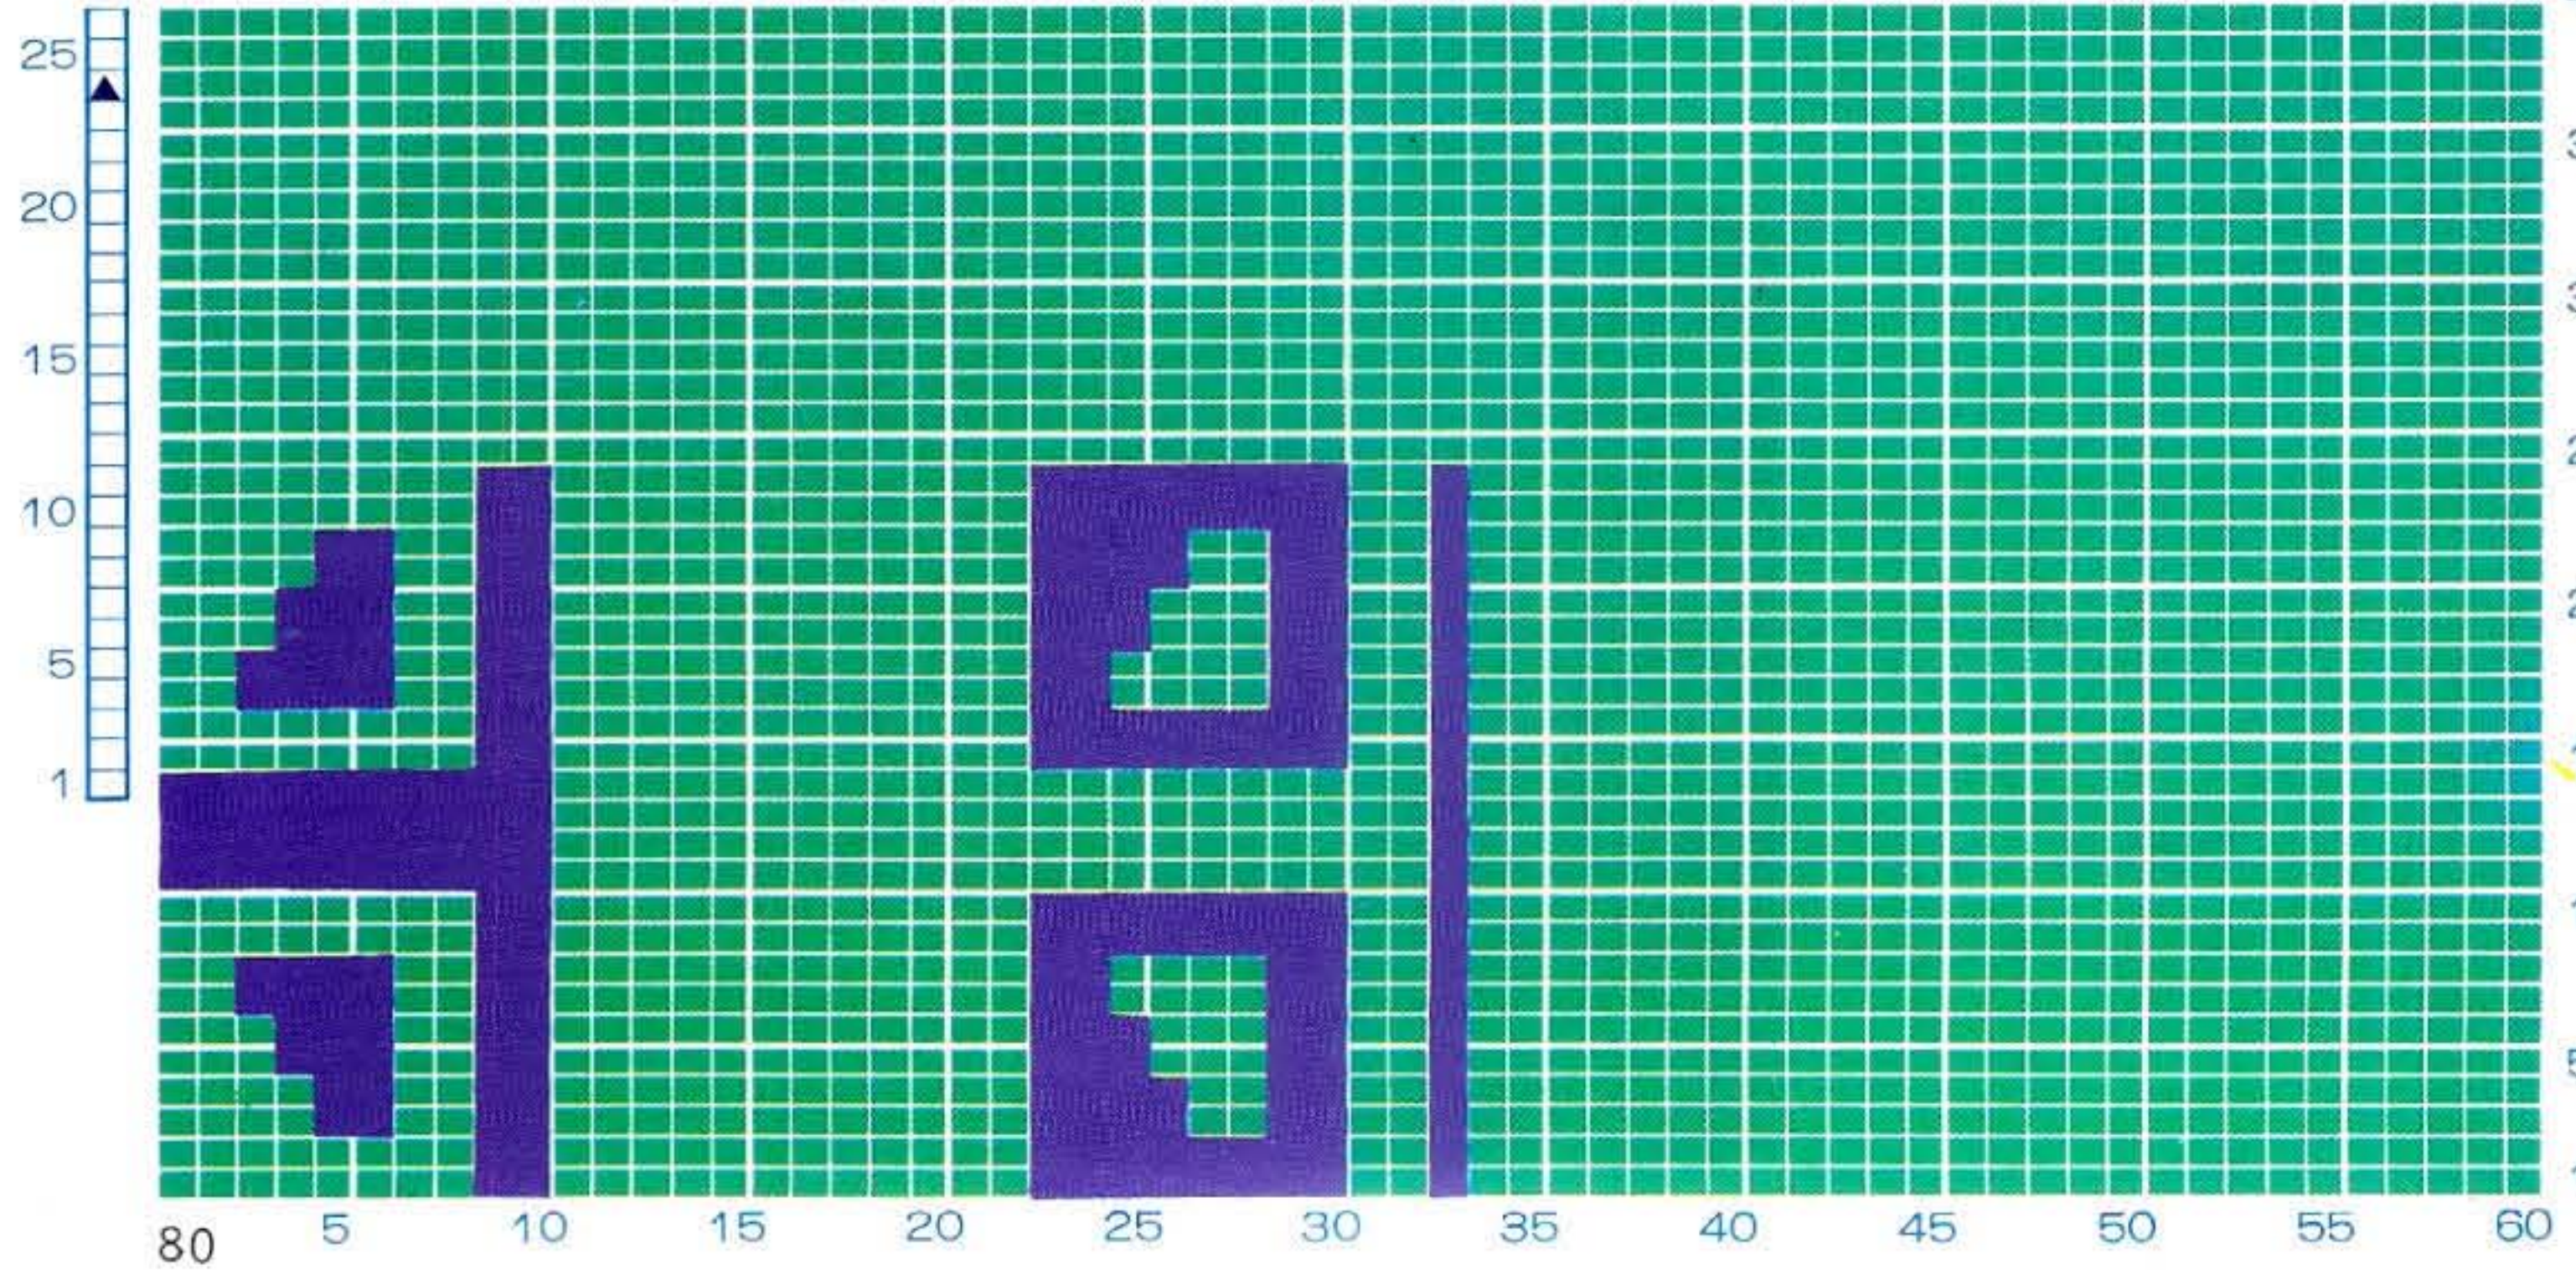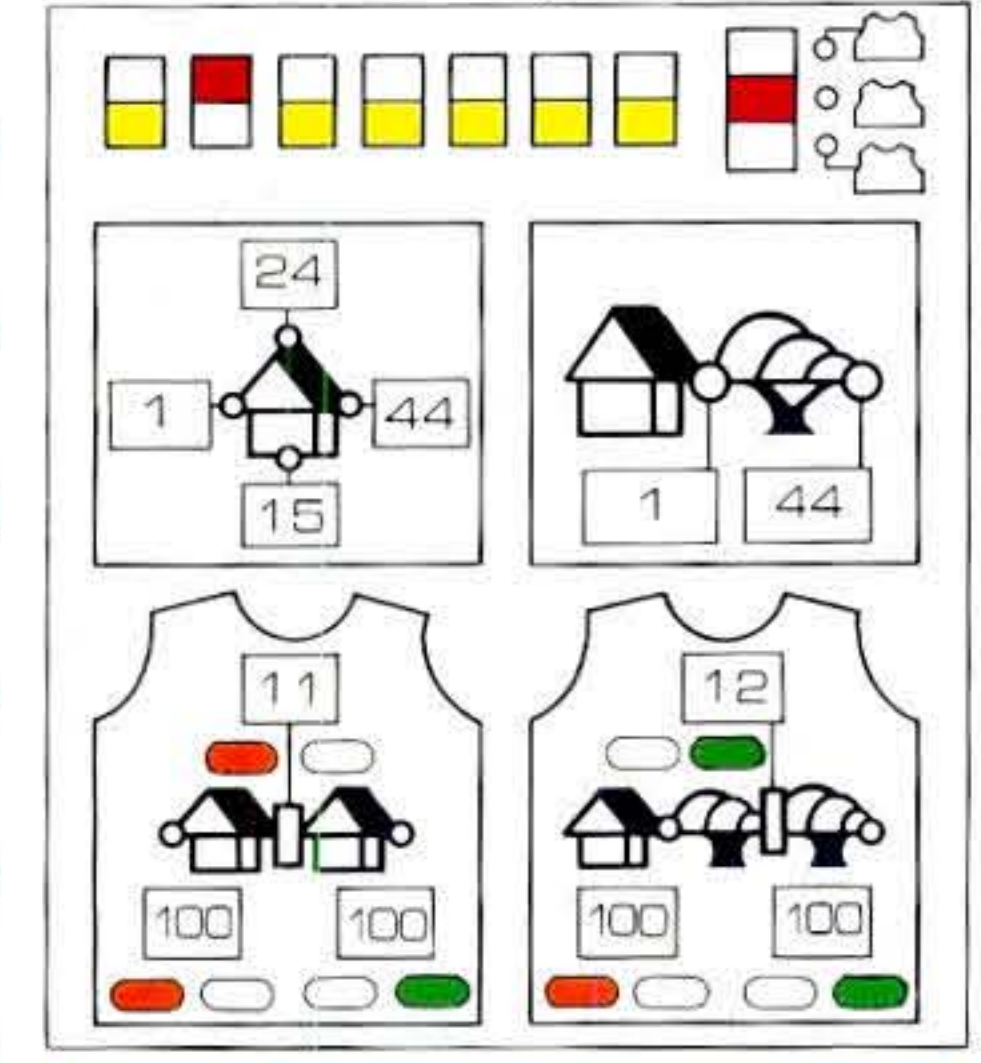  


A



B





 C

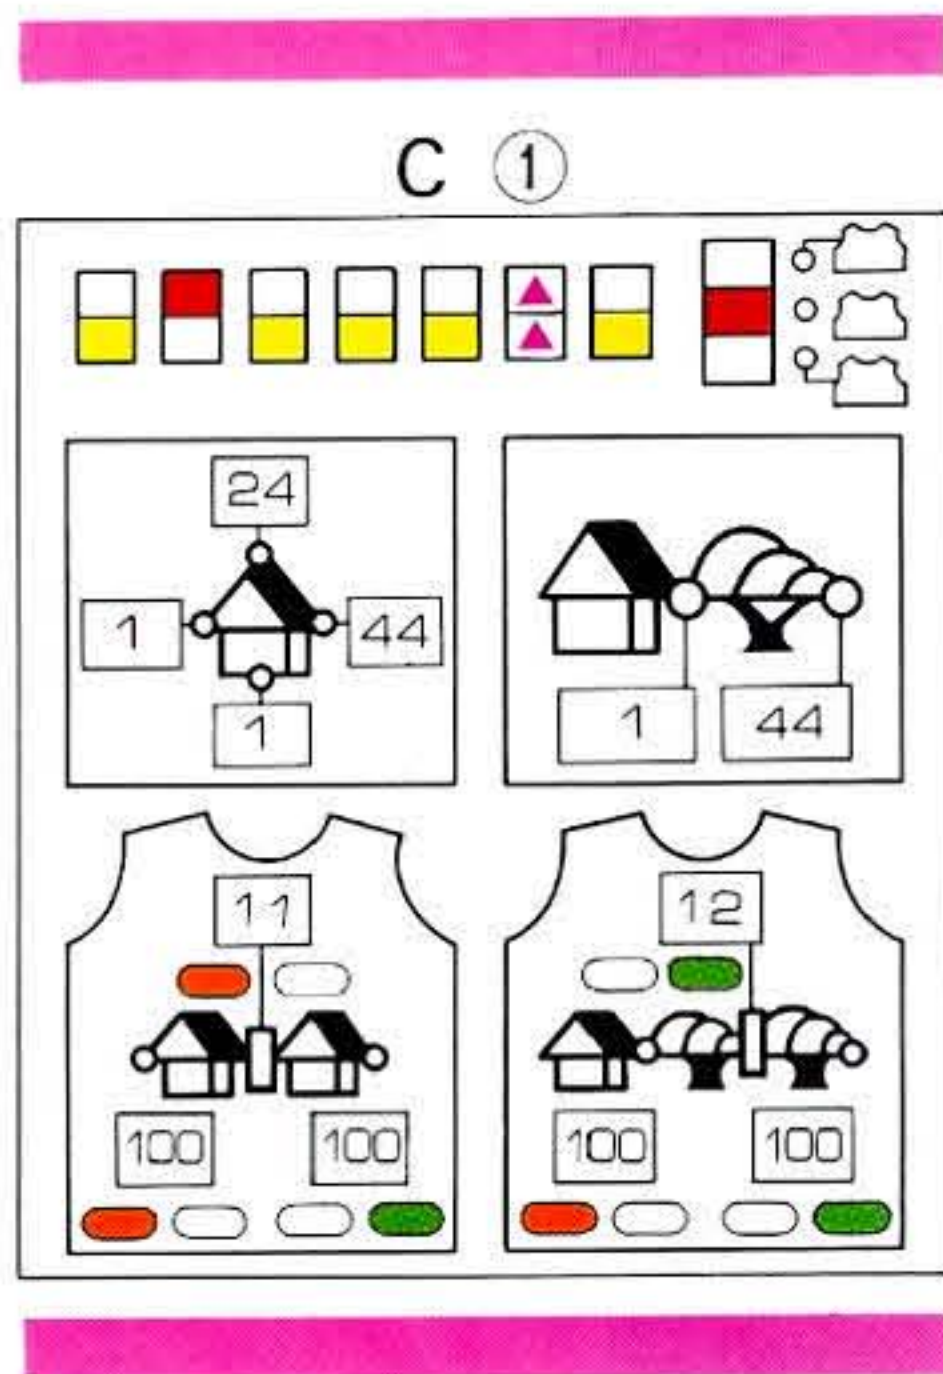


  L 欄に▲印が現われたらスイッチを切替えながら編みます。
 Change the position of switch at the "▲" mark
 to knit the pattern continuously.




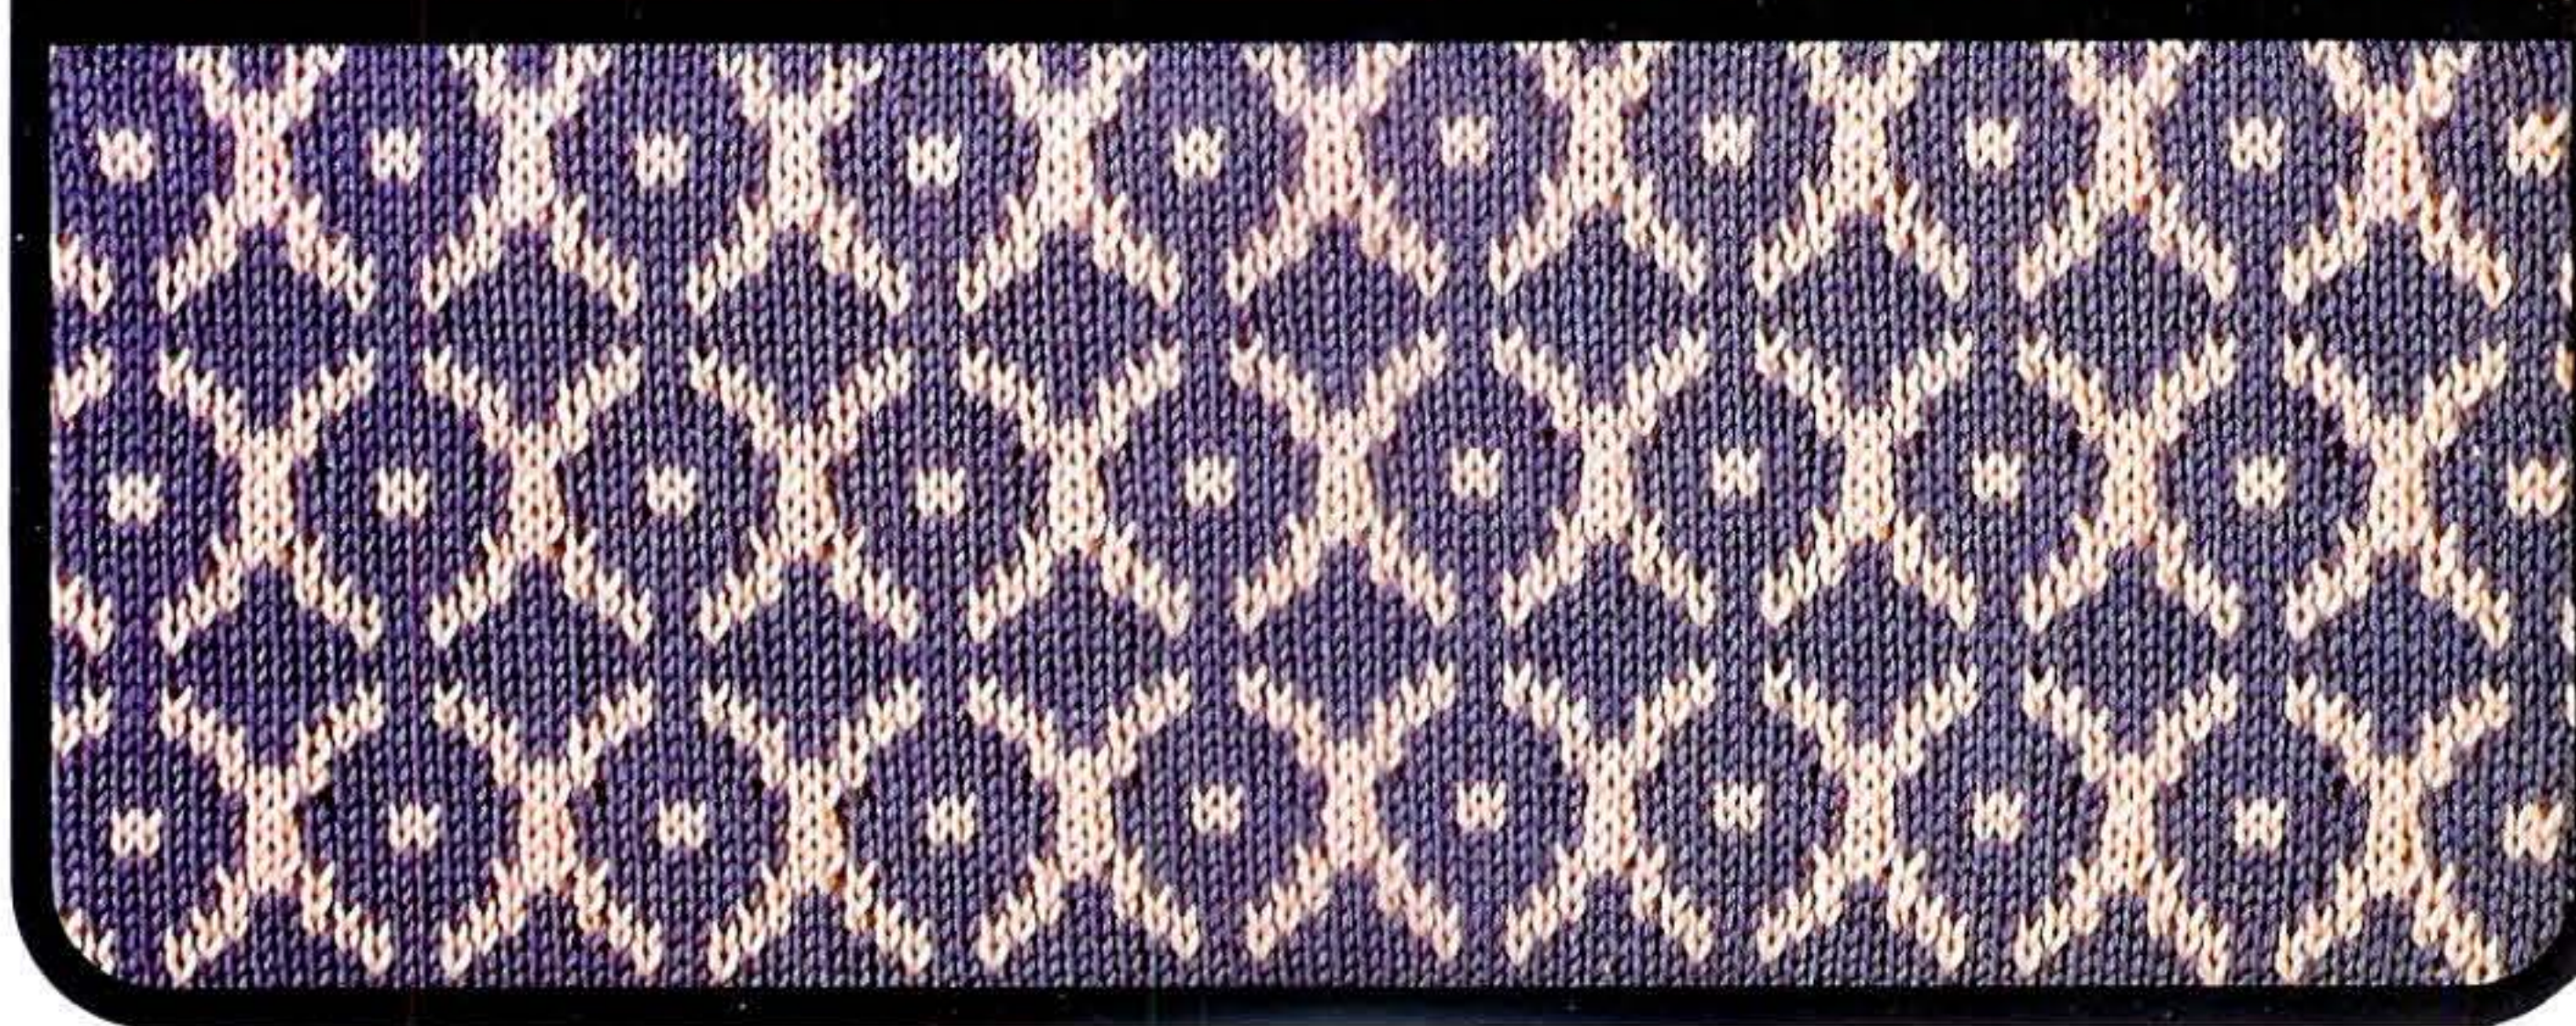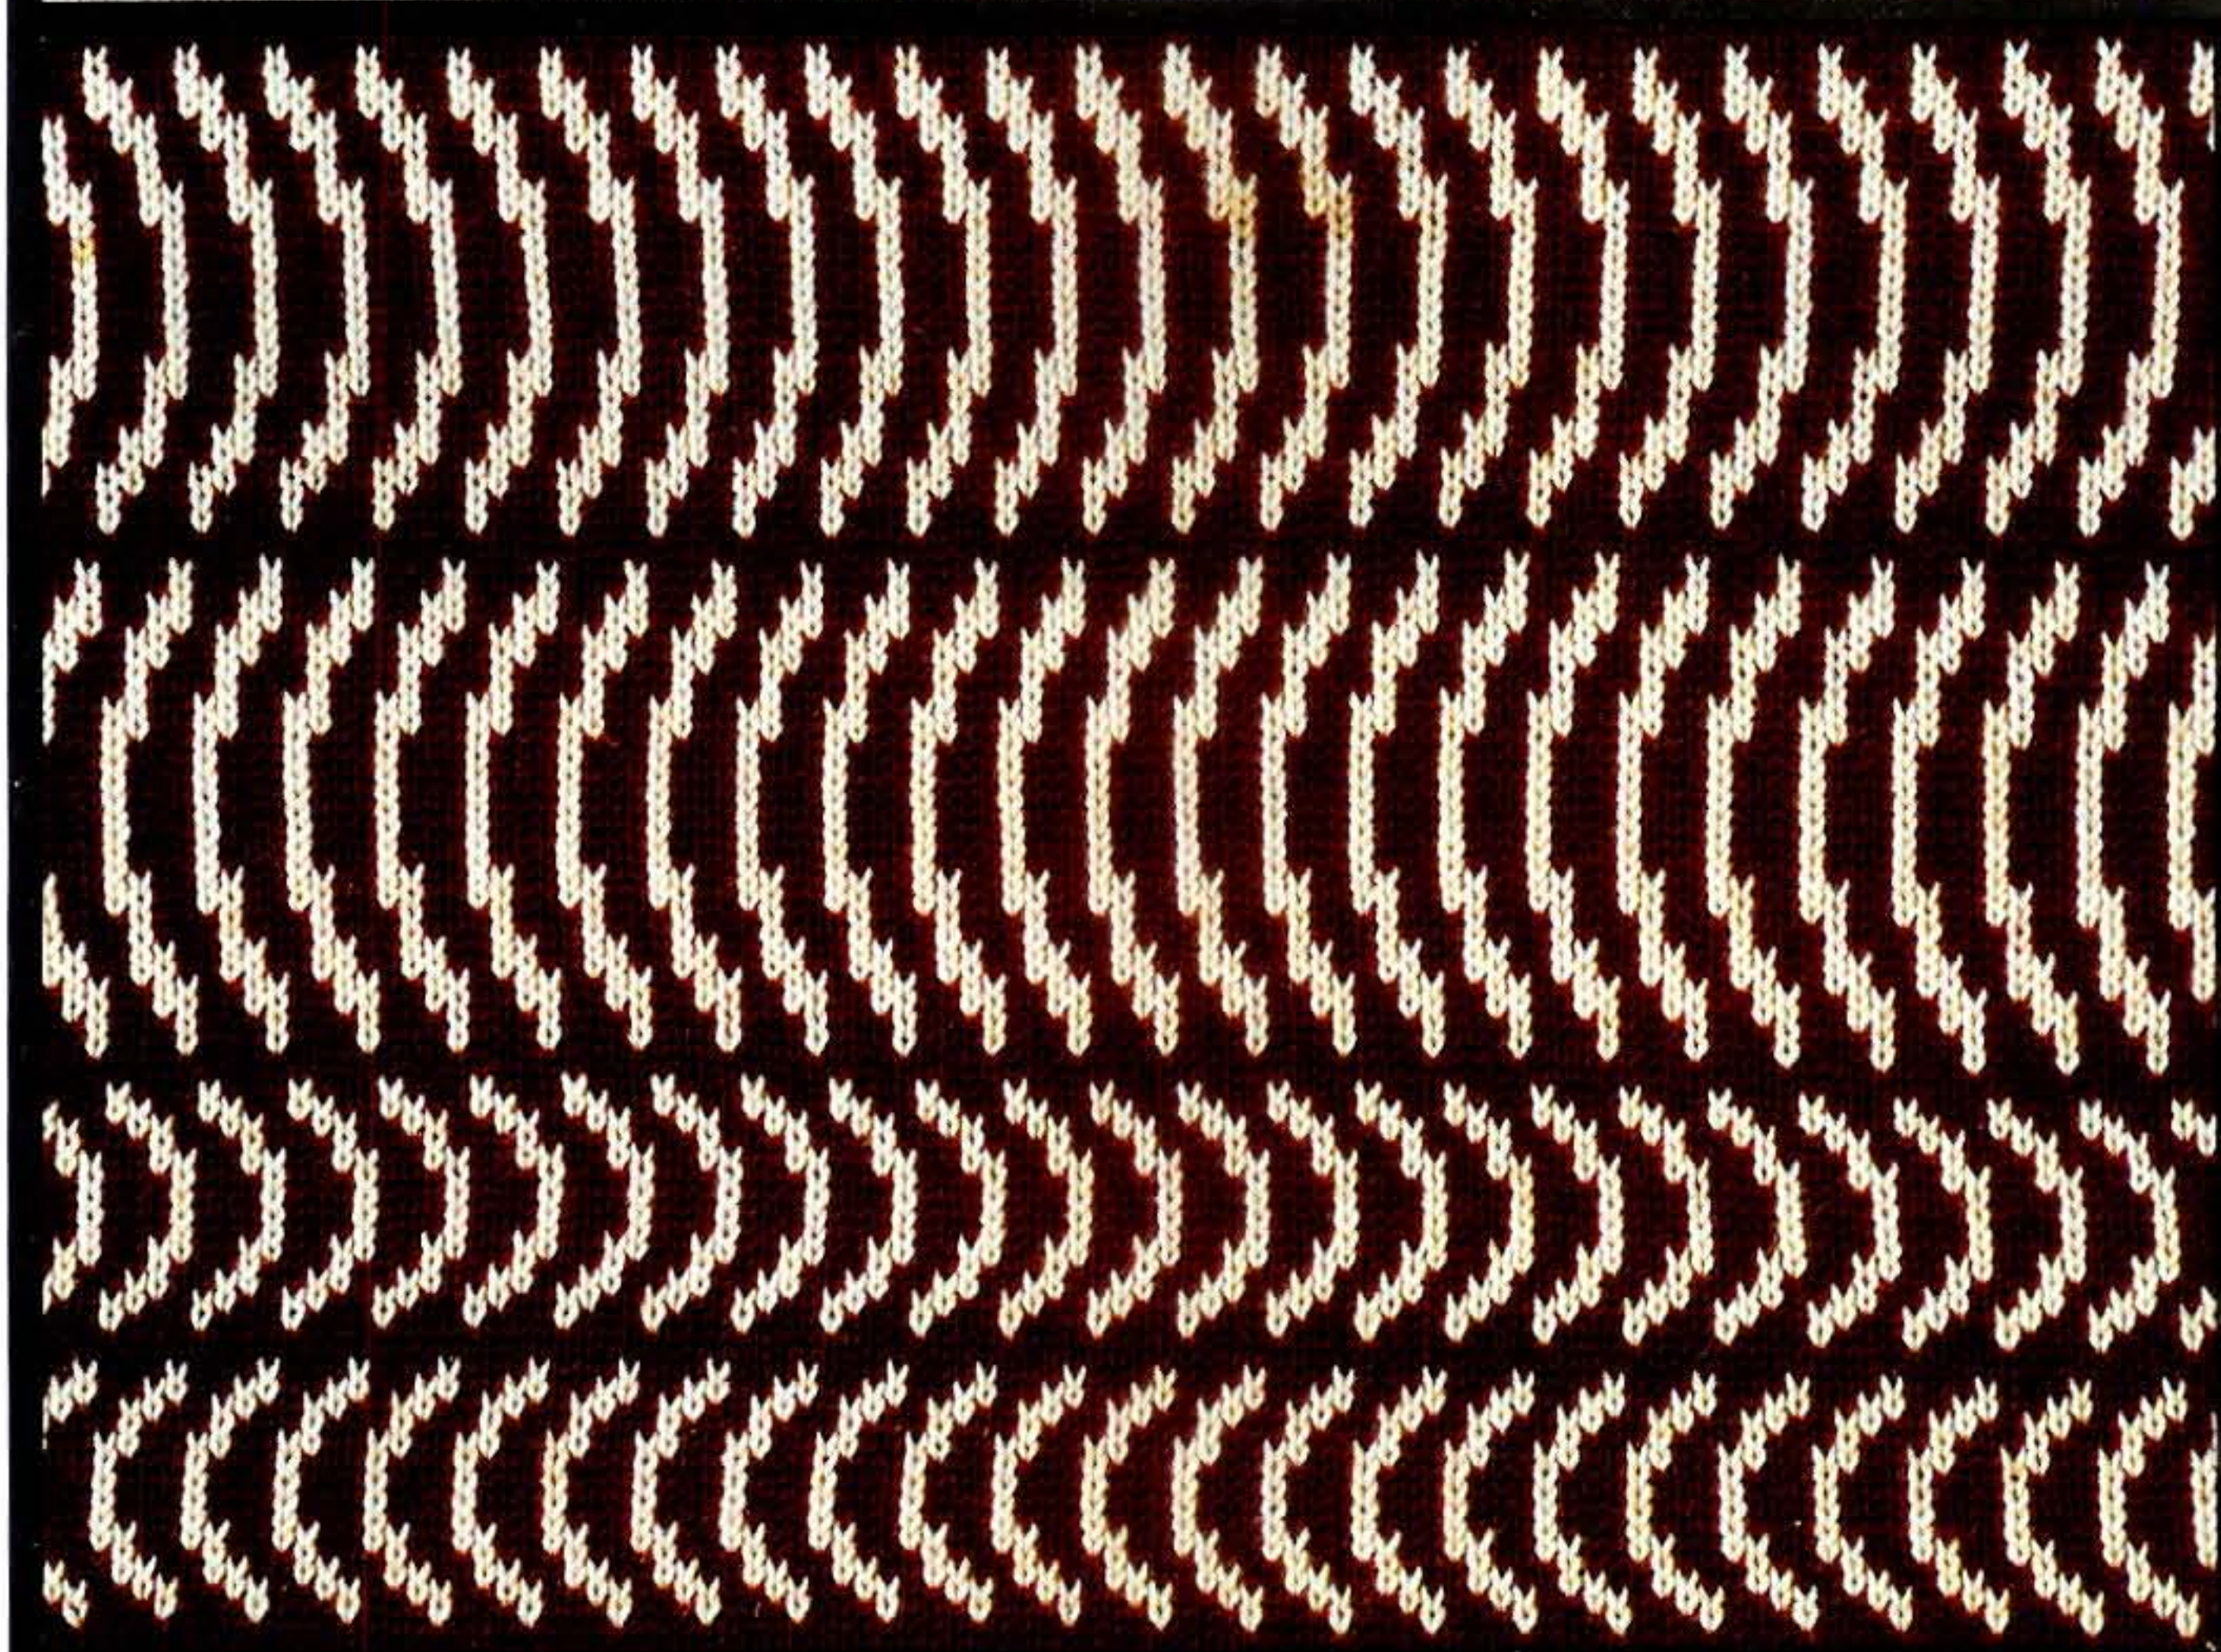



A ③

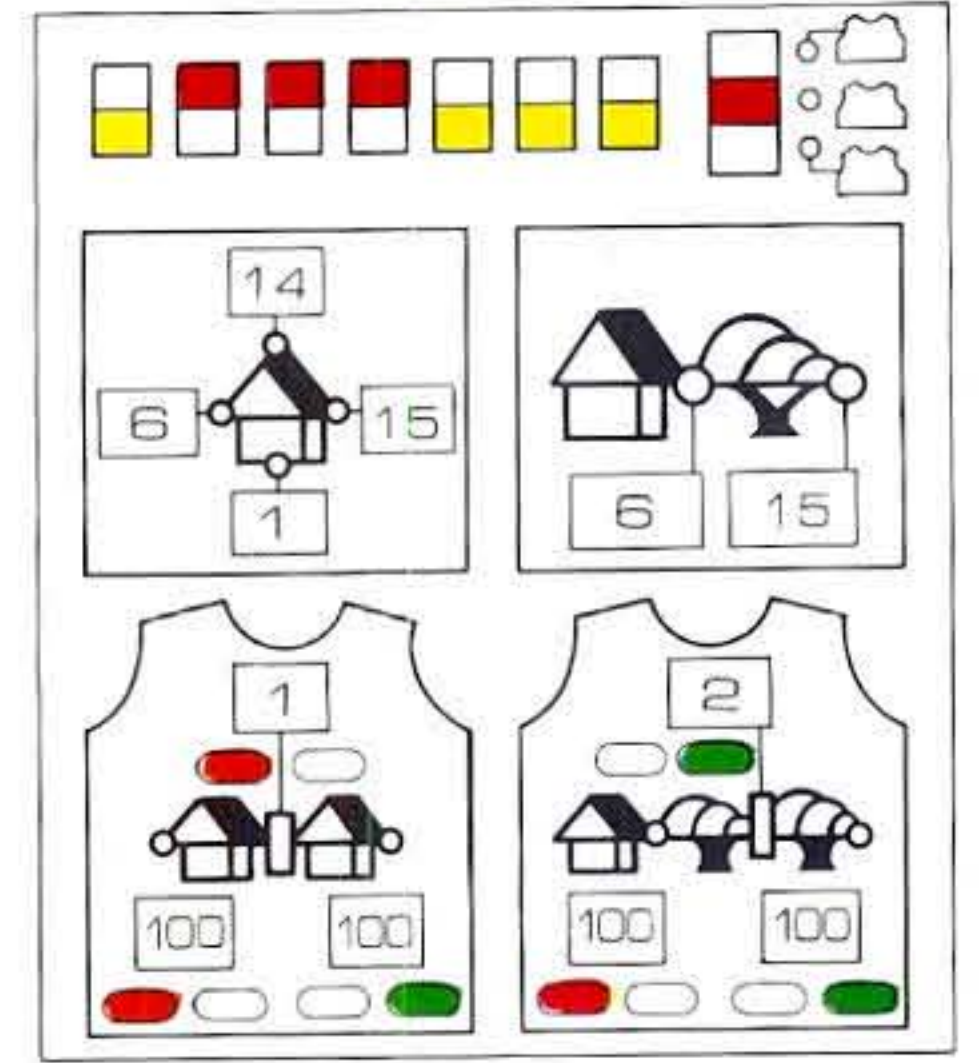 

A ②

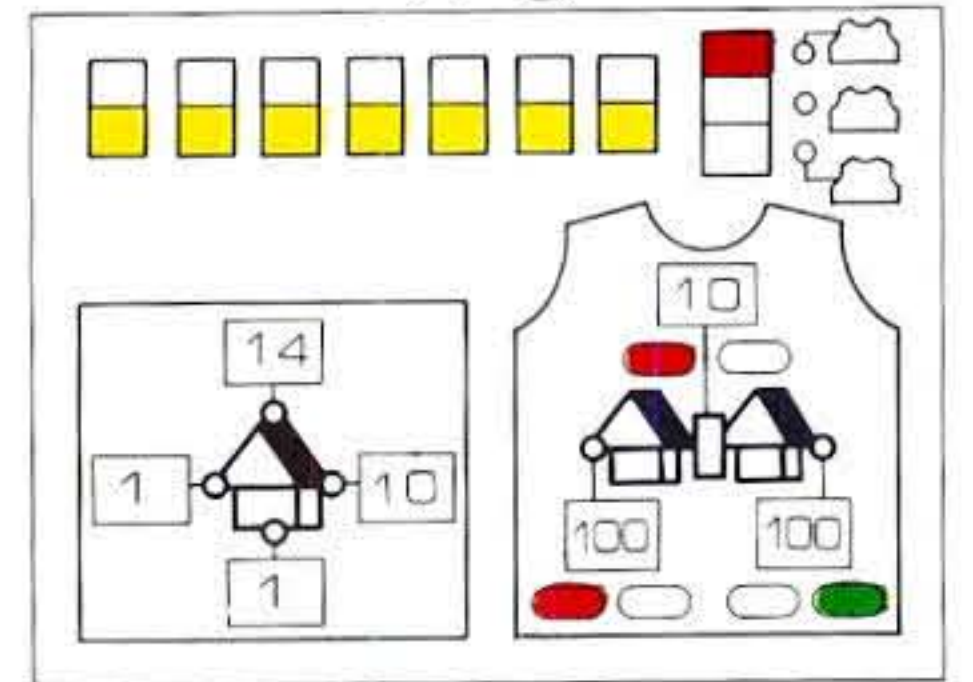 

A ①

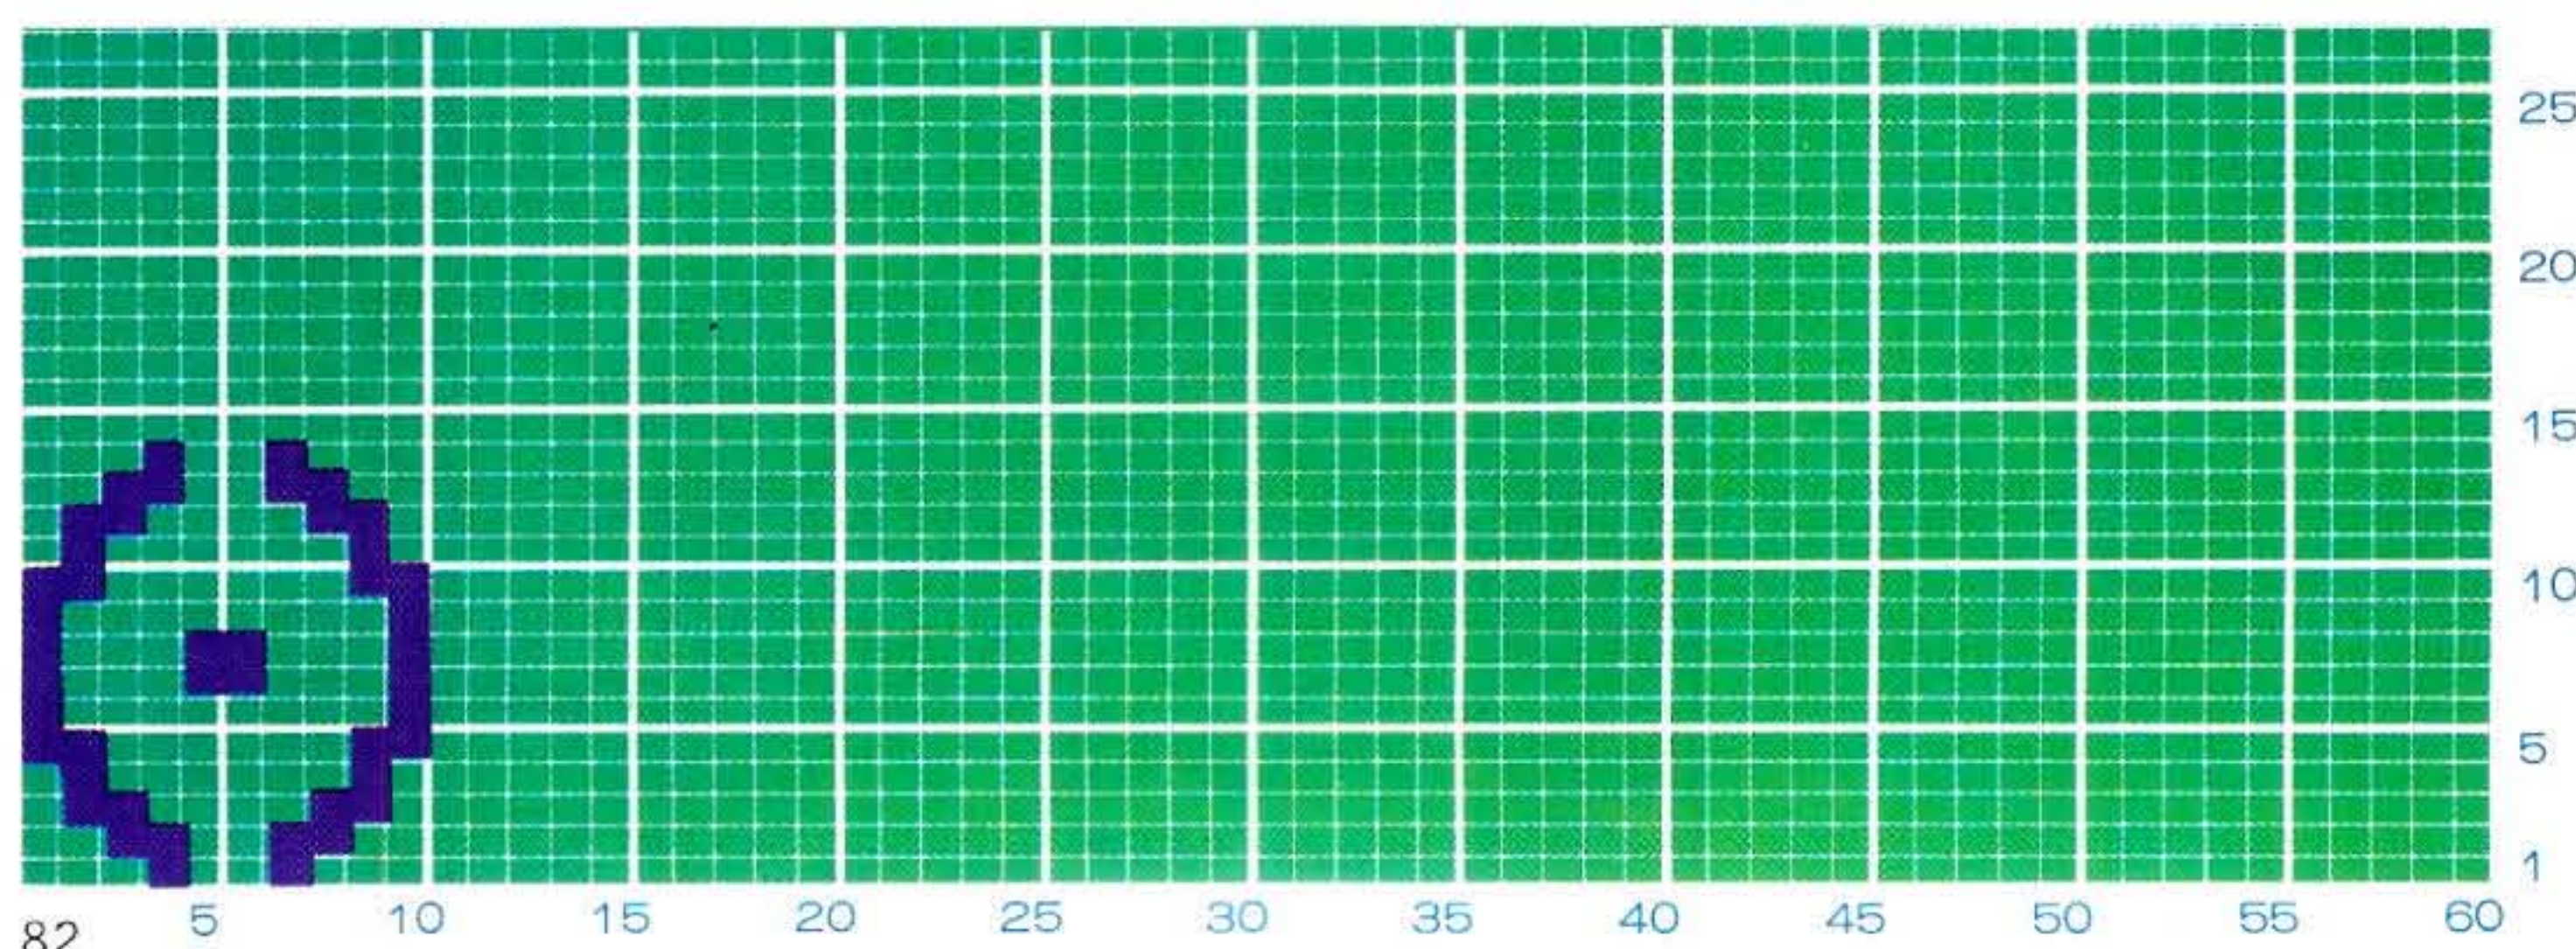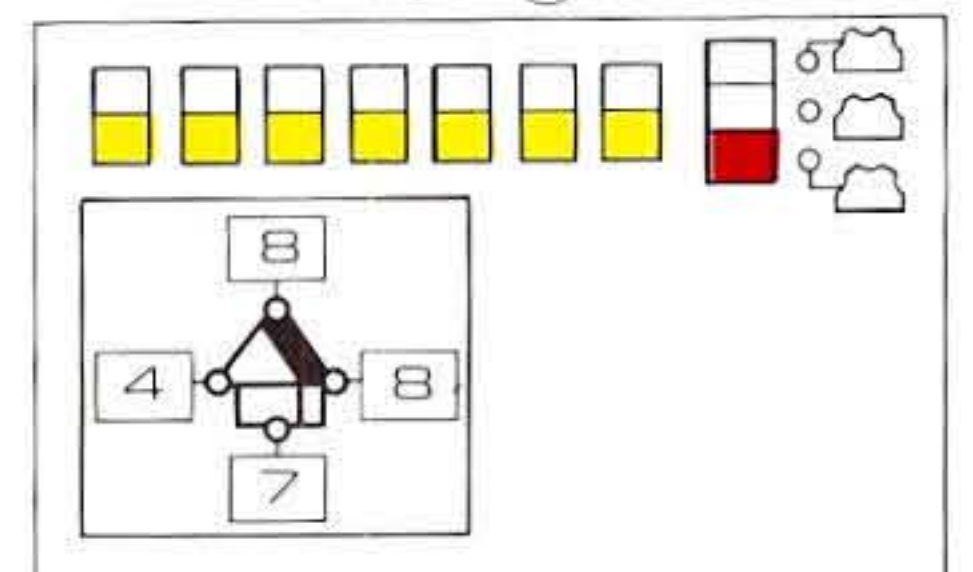  

A



 
③
②
①

B




①-4
①-3
①-2
①-1


B ①-4

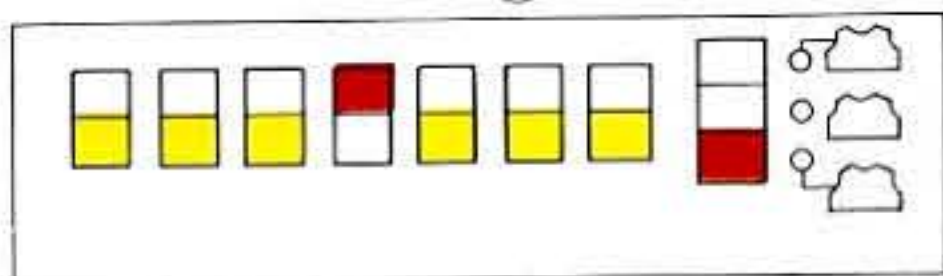


B ①-3

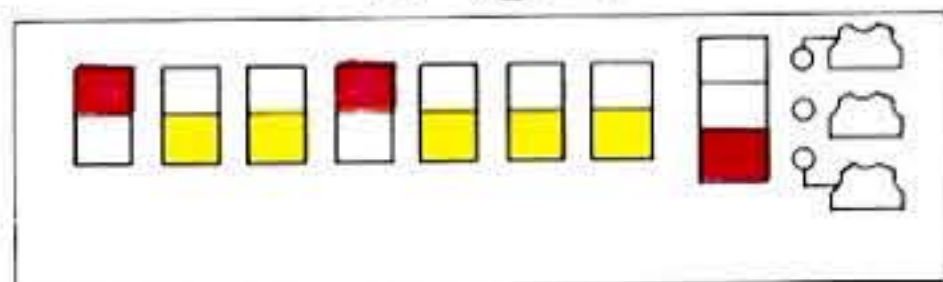 

B ①-2

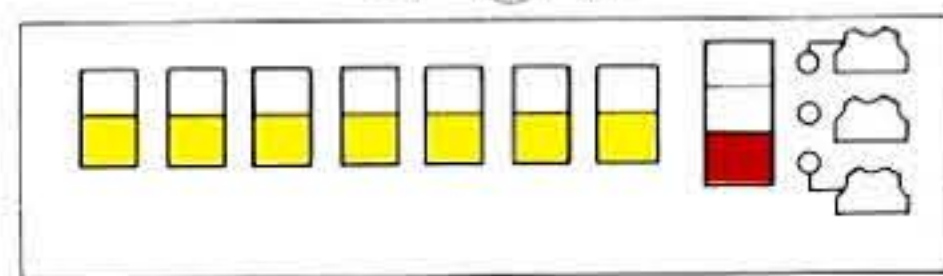 

B ①-1

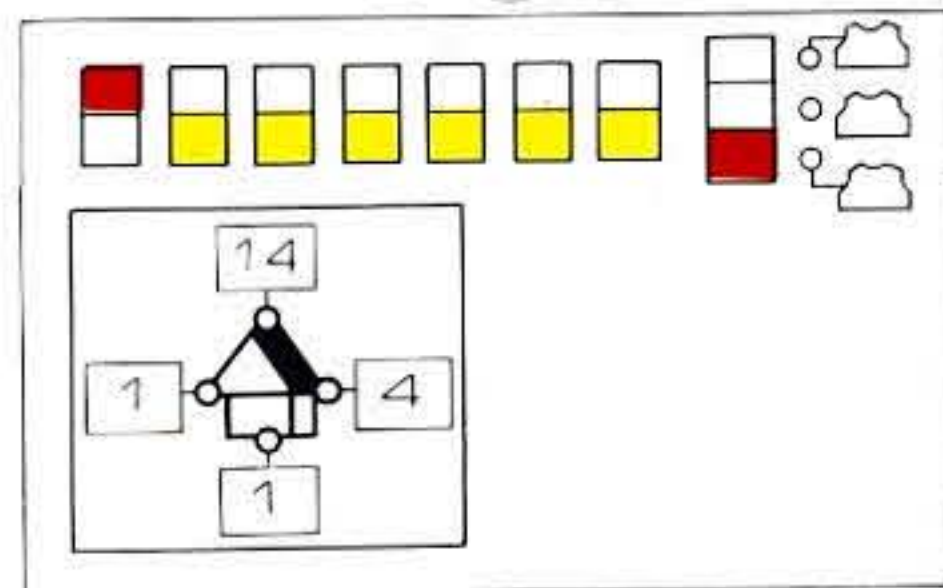 









C




①

        C ①

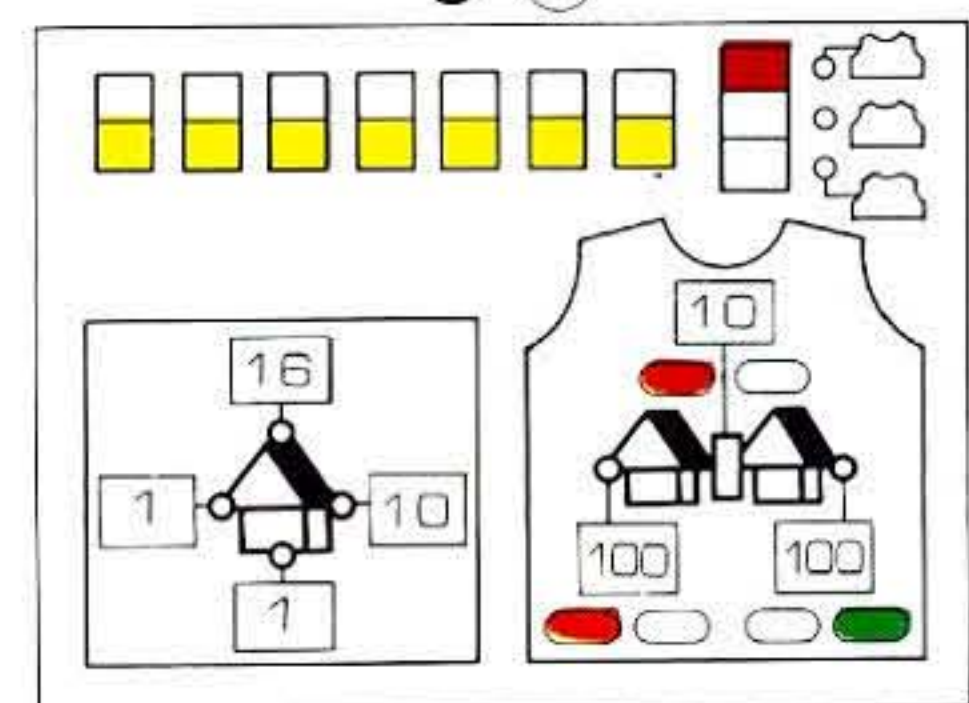

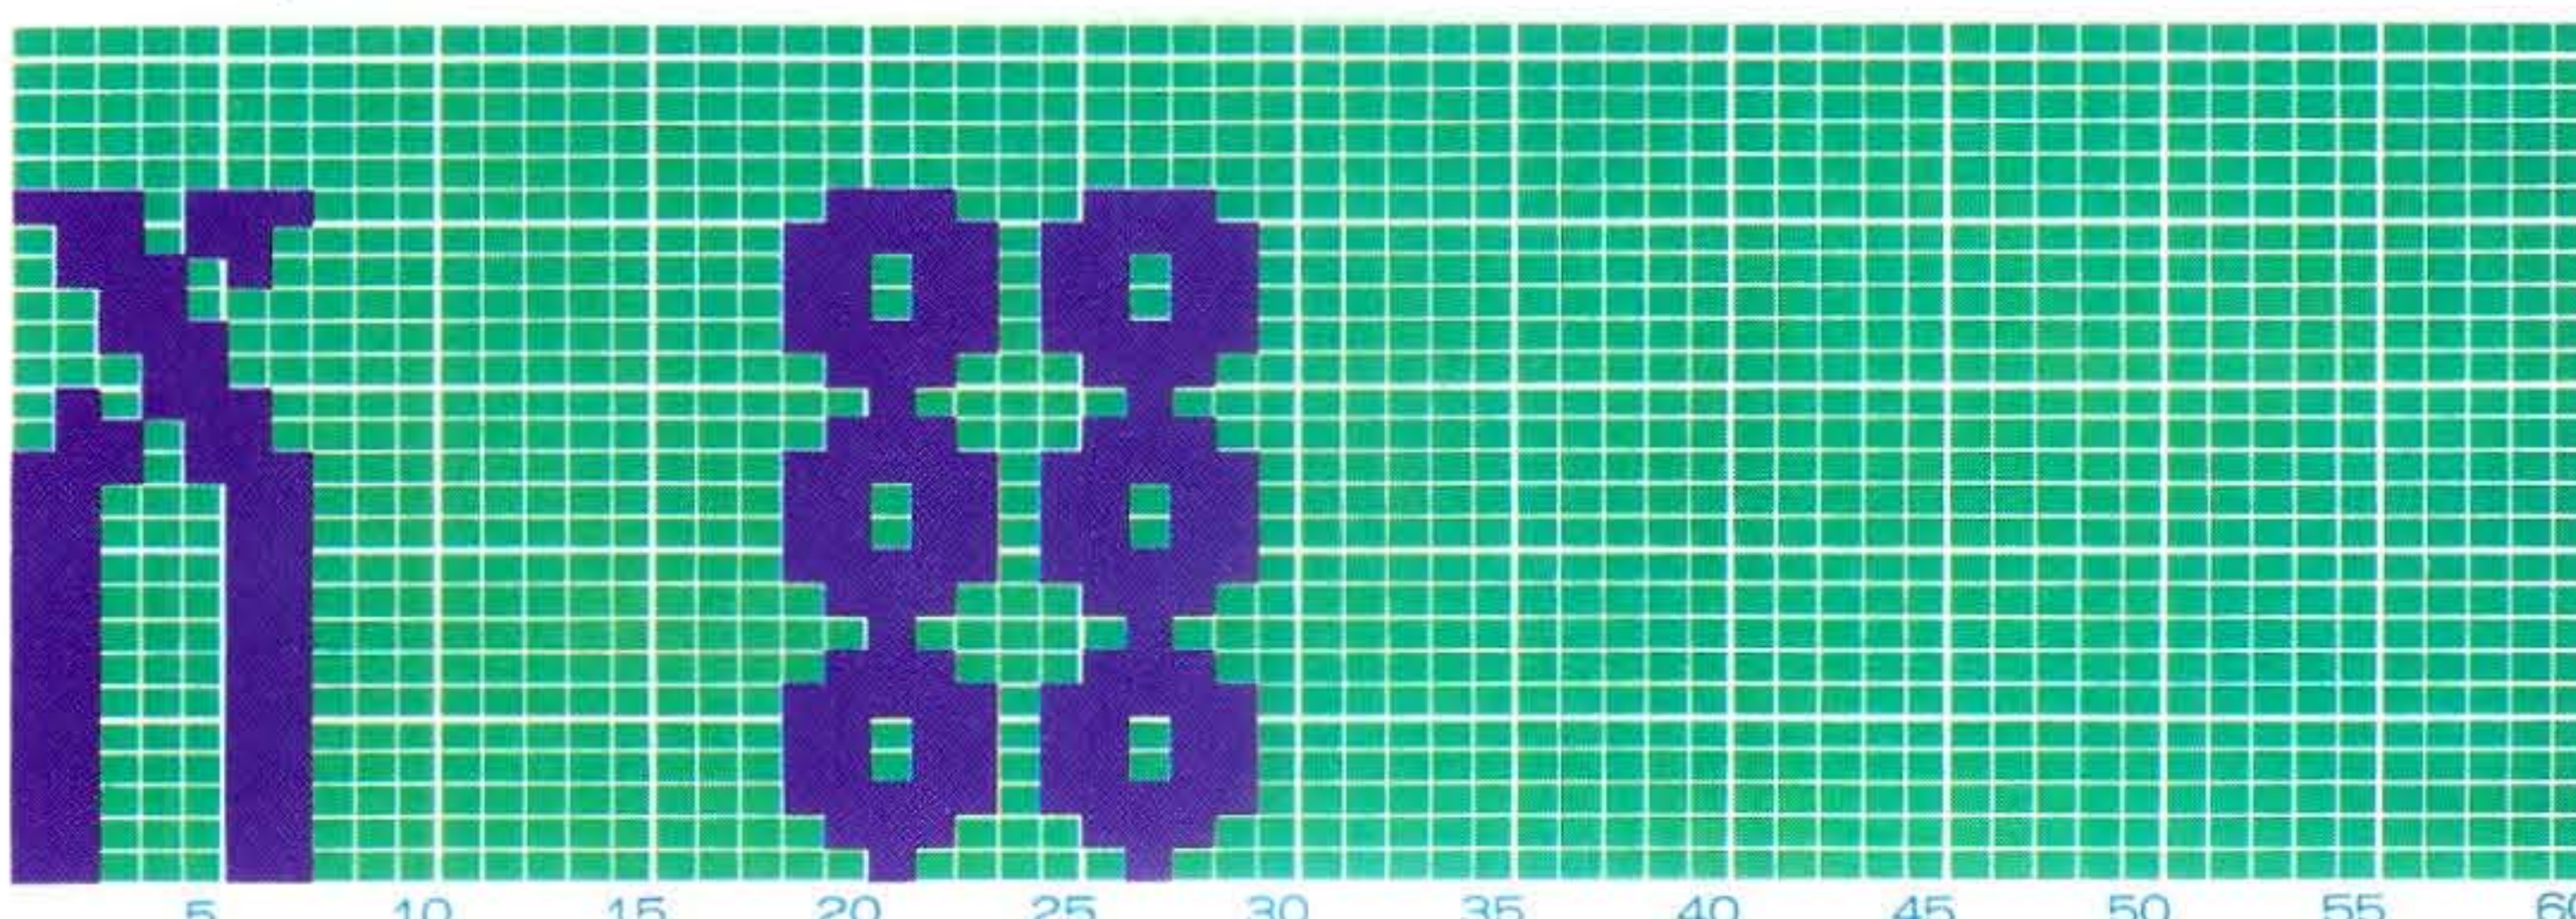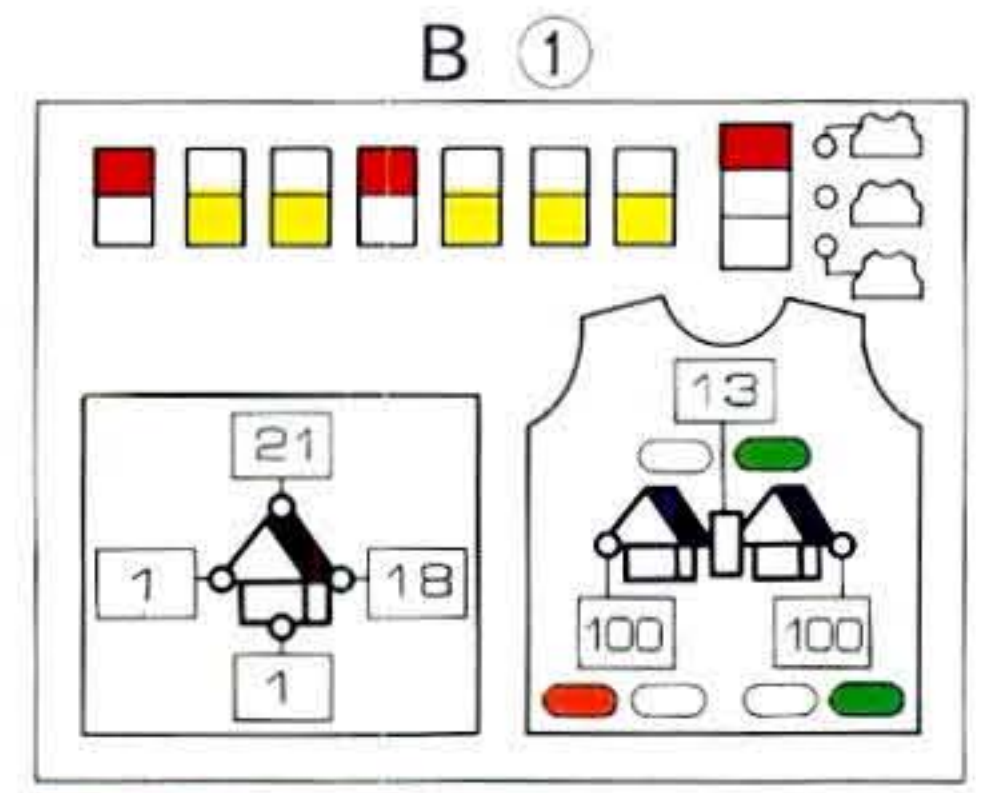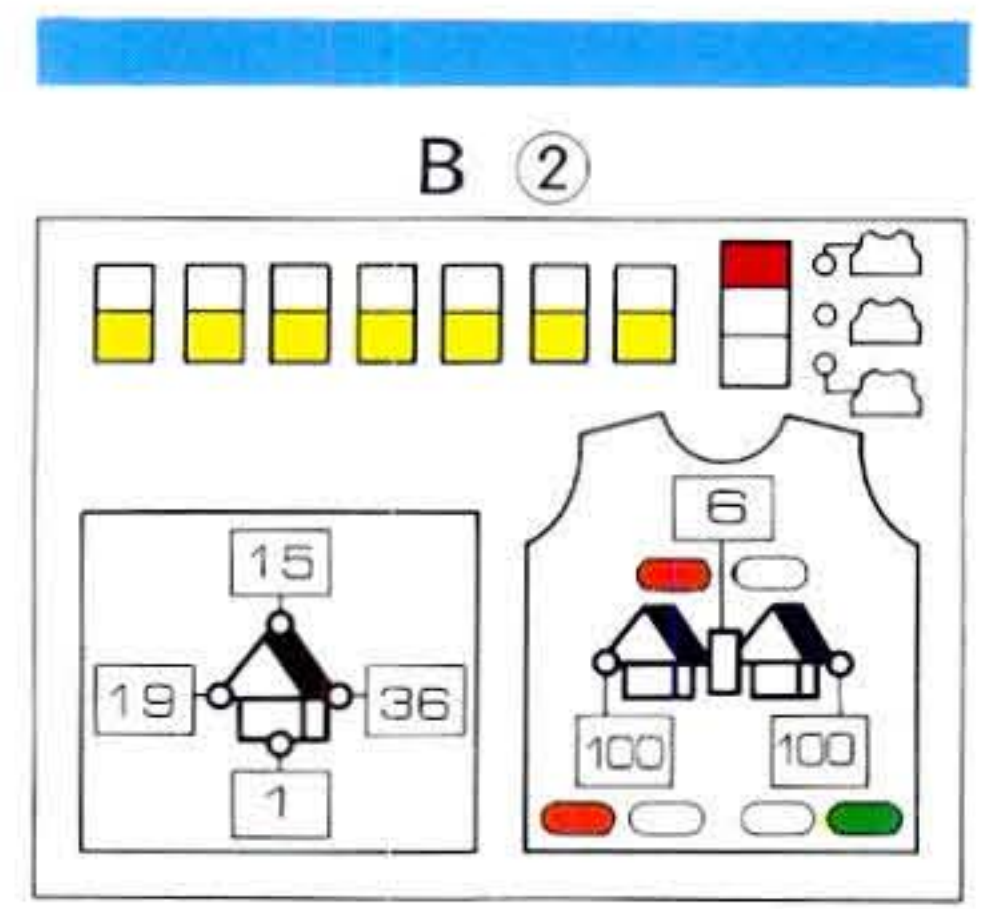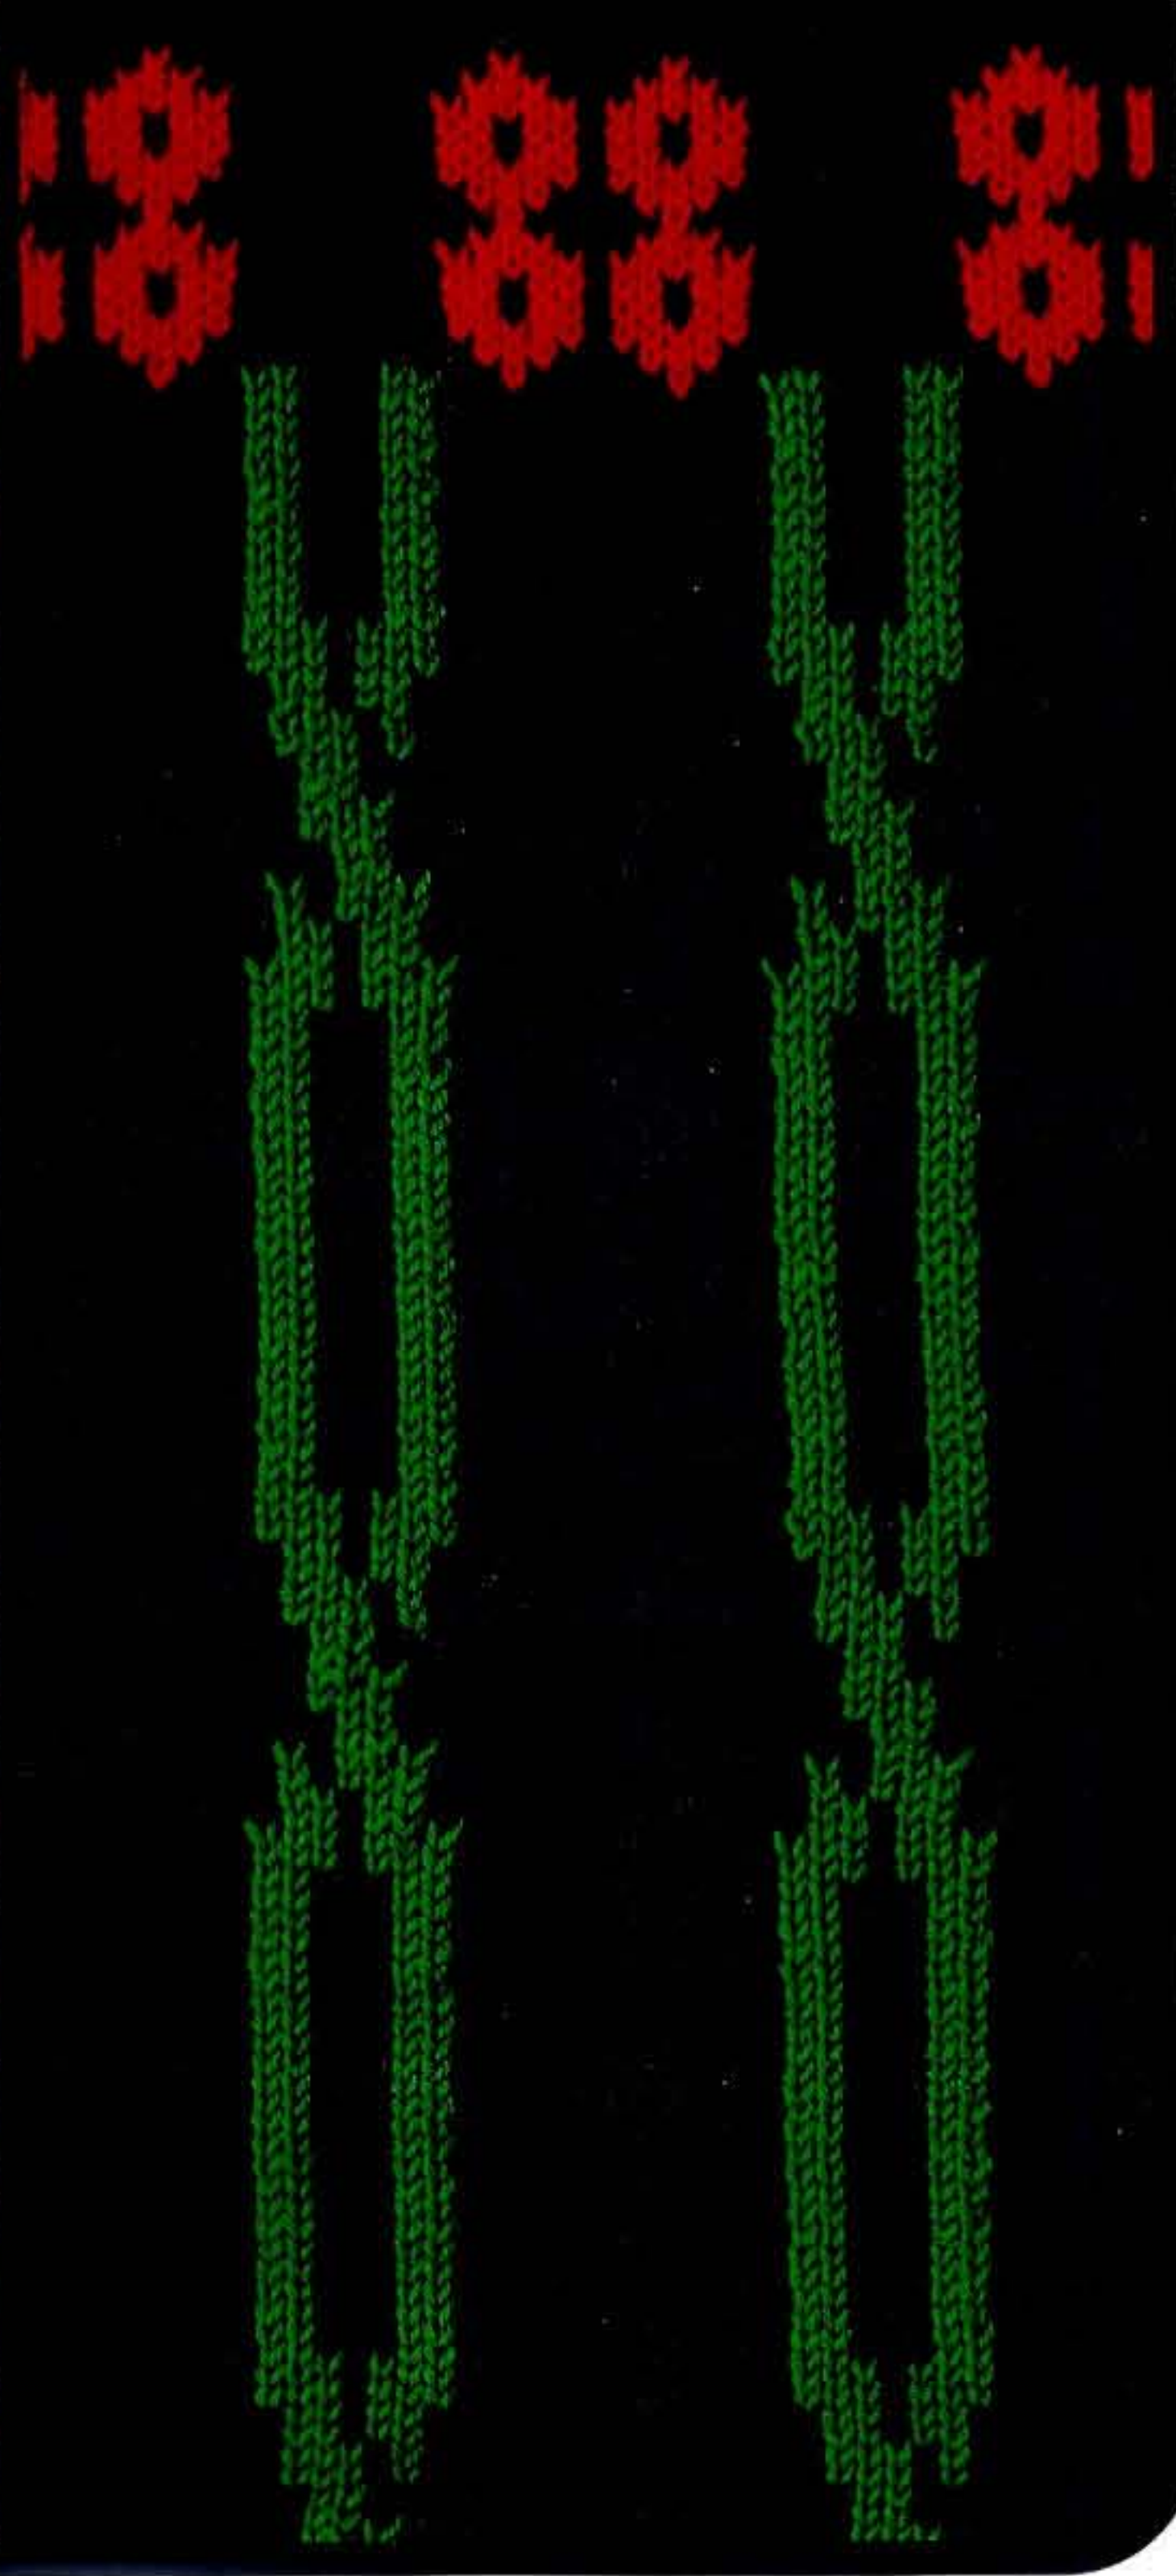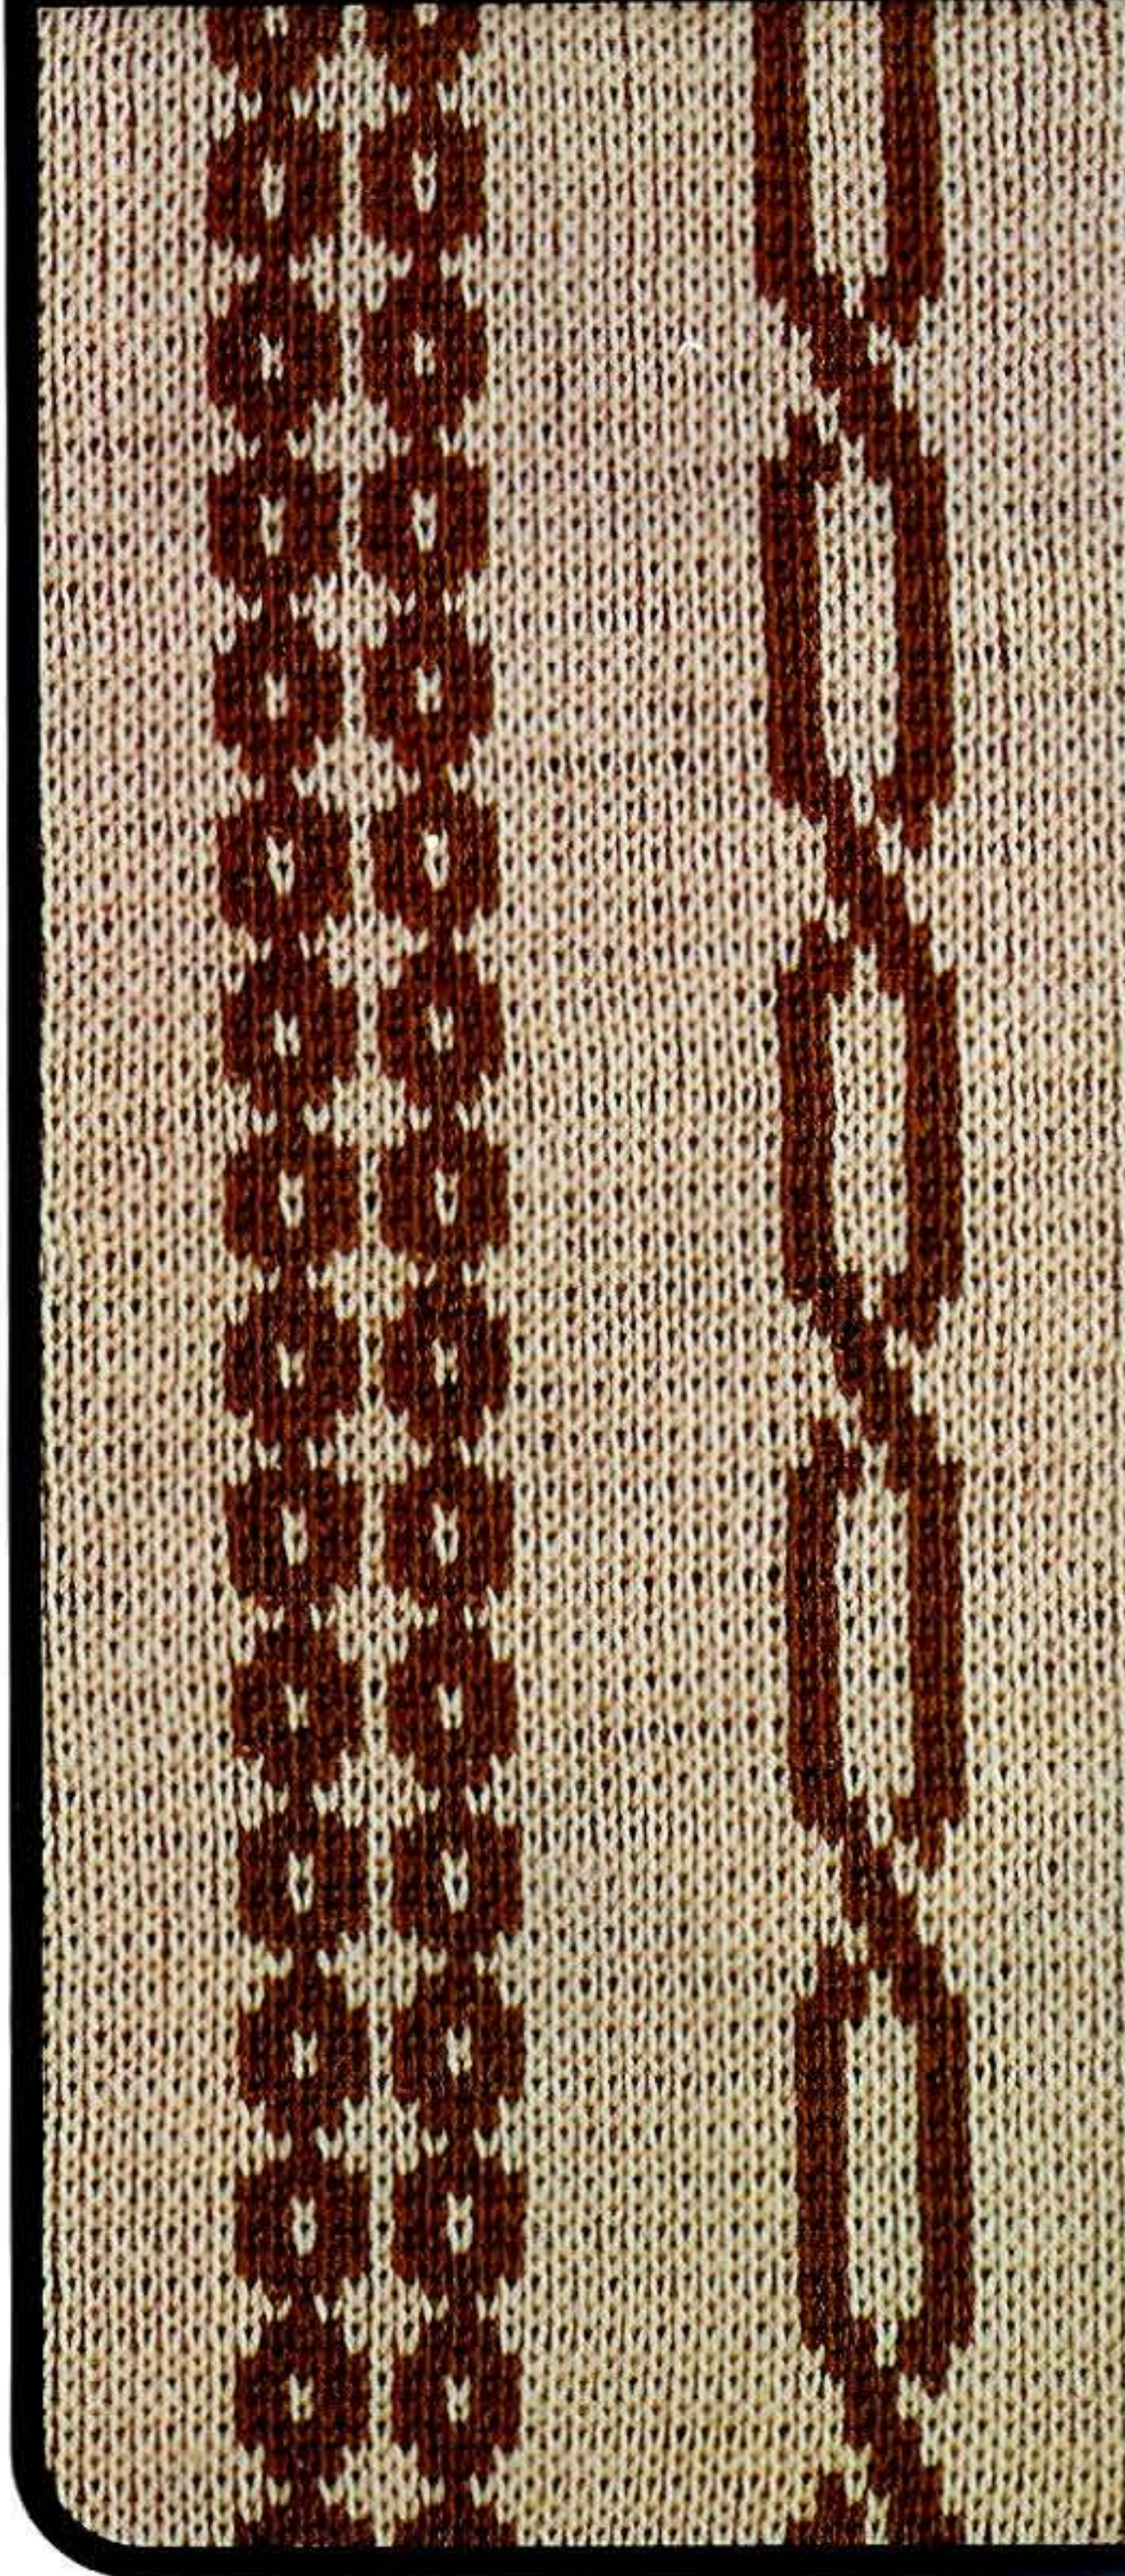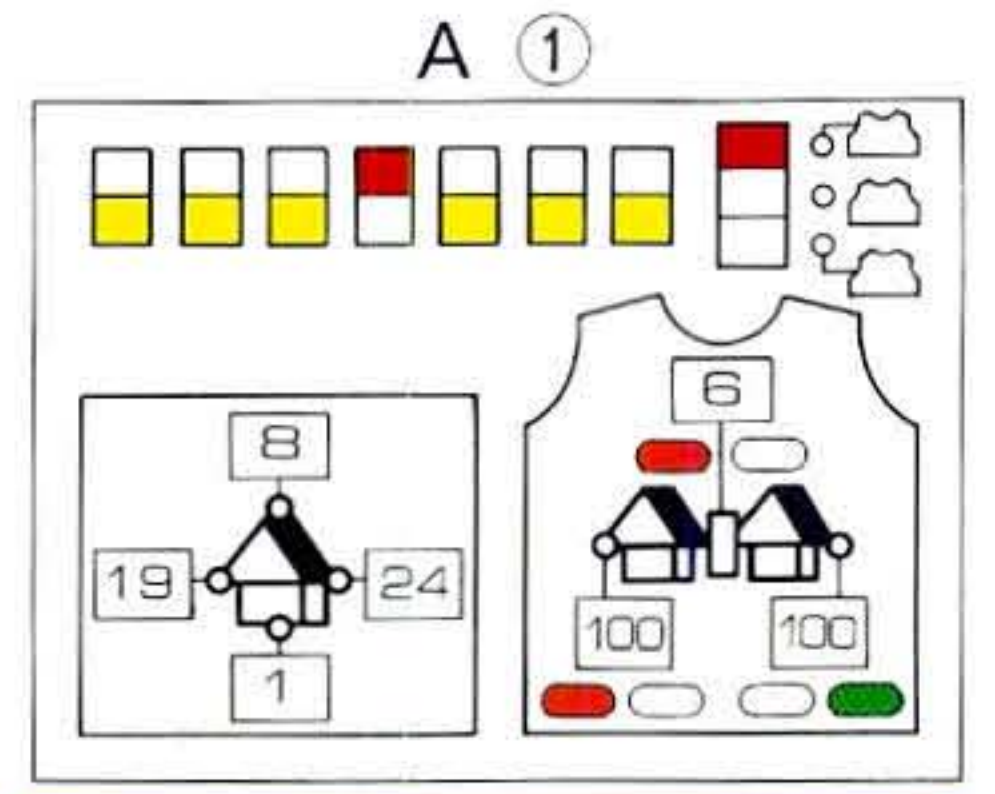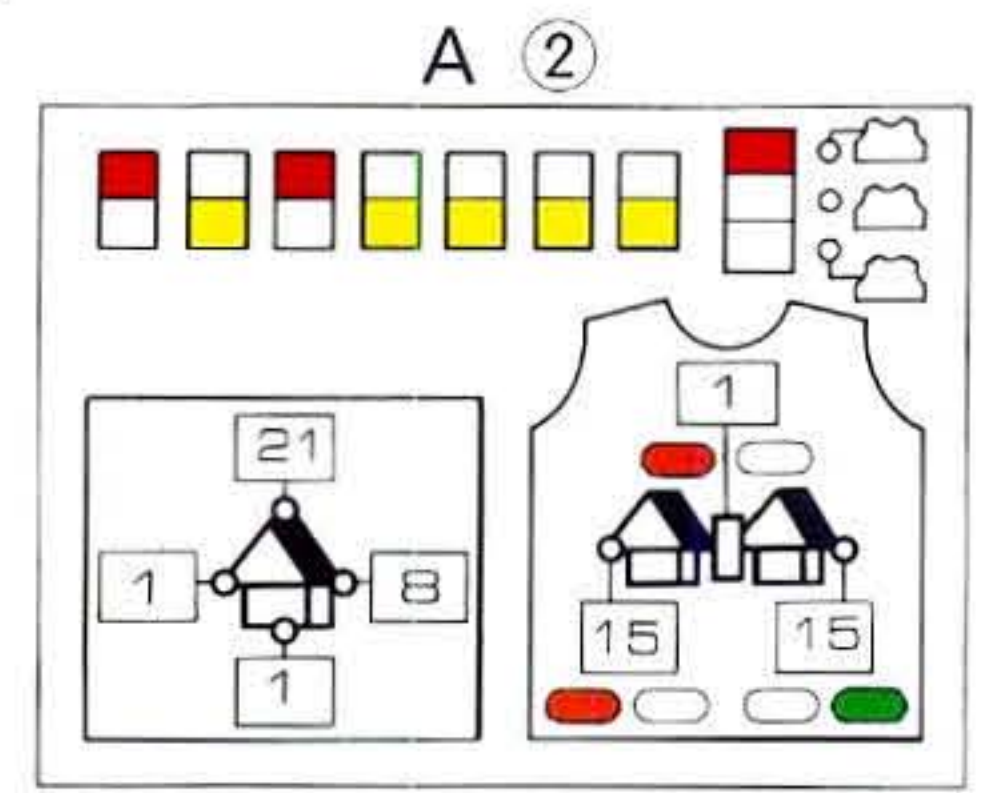


A

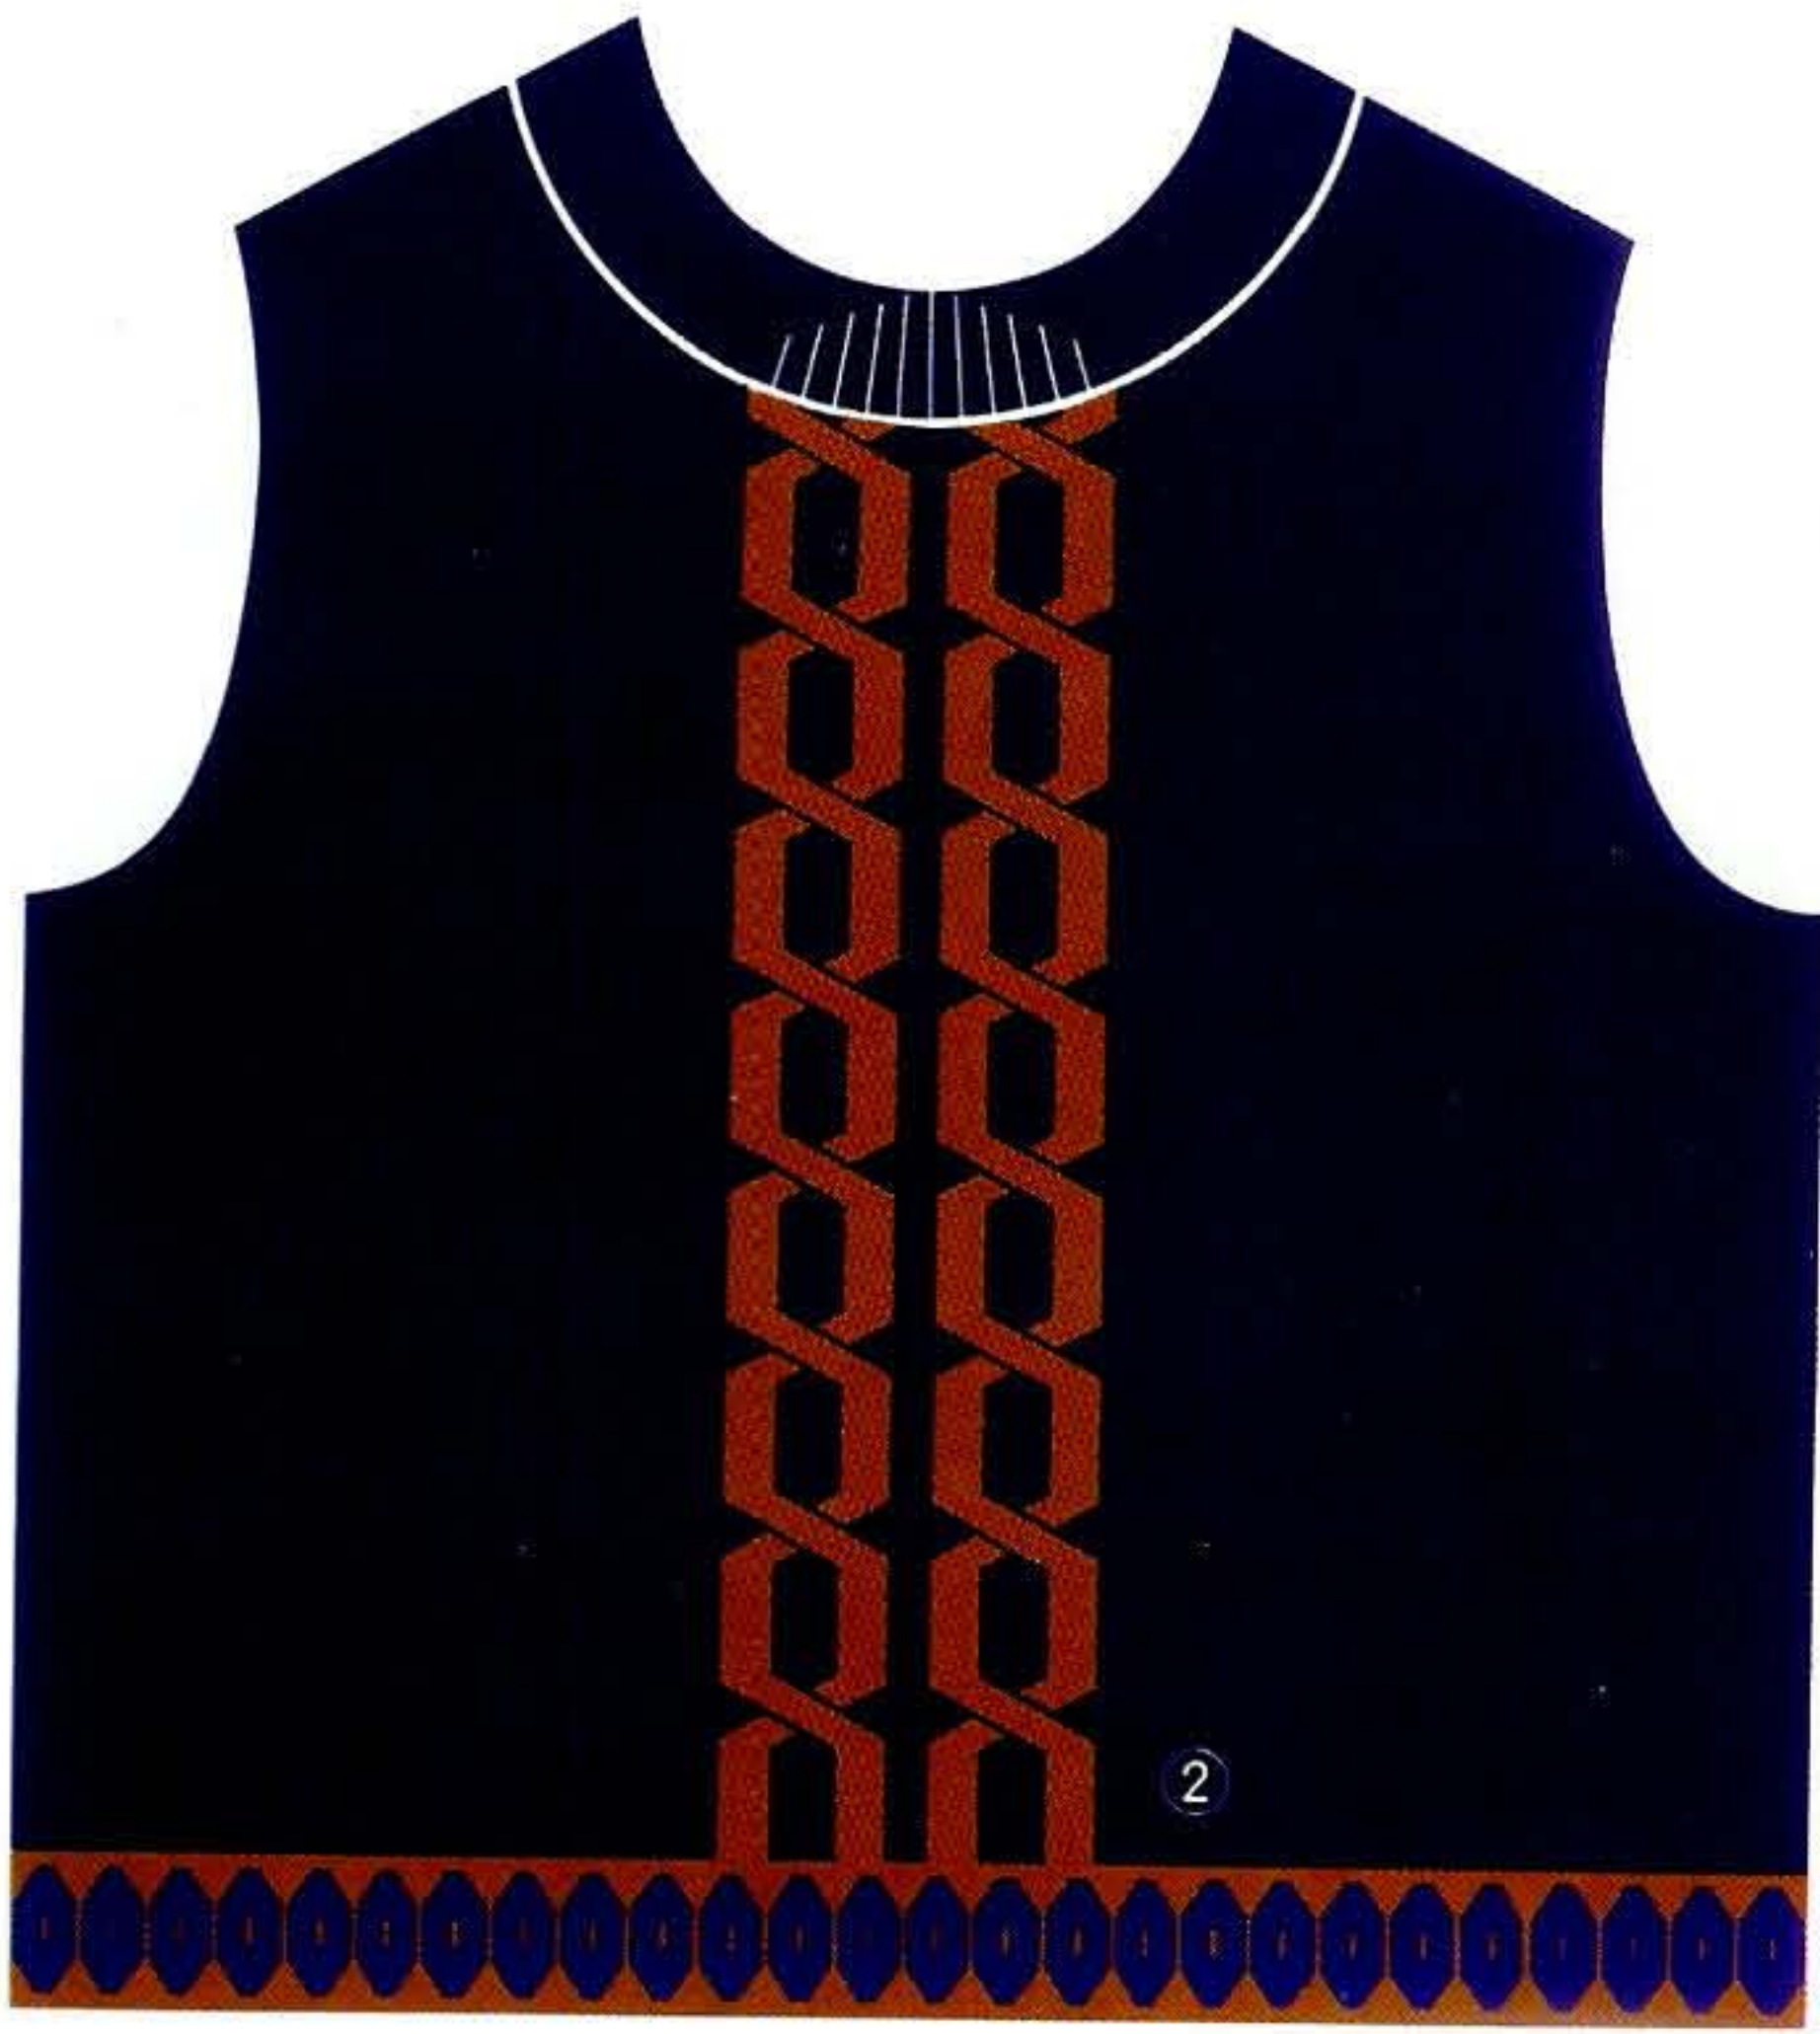 



B



    
C

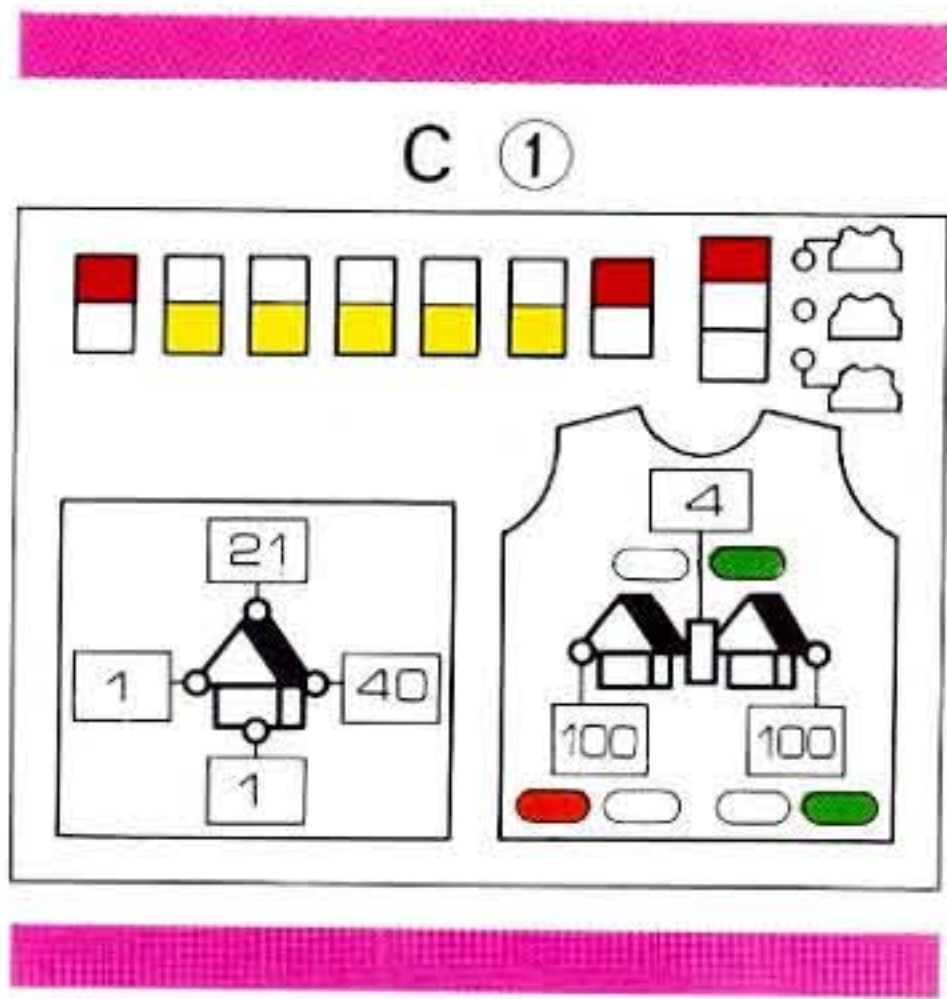

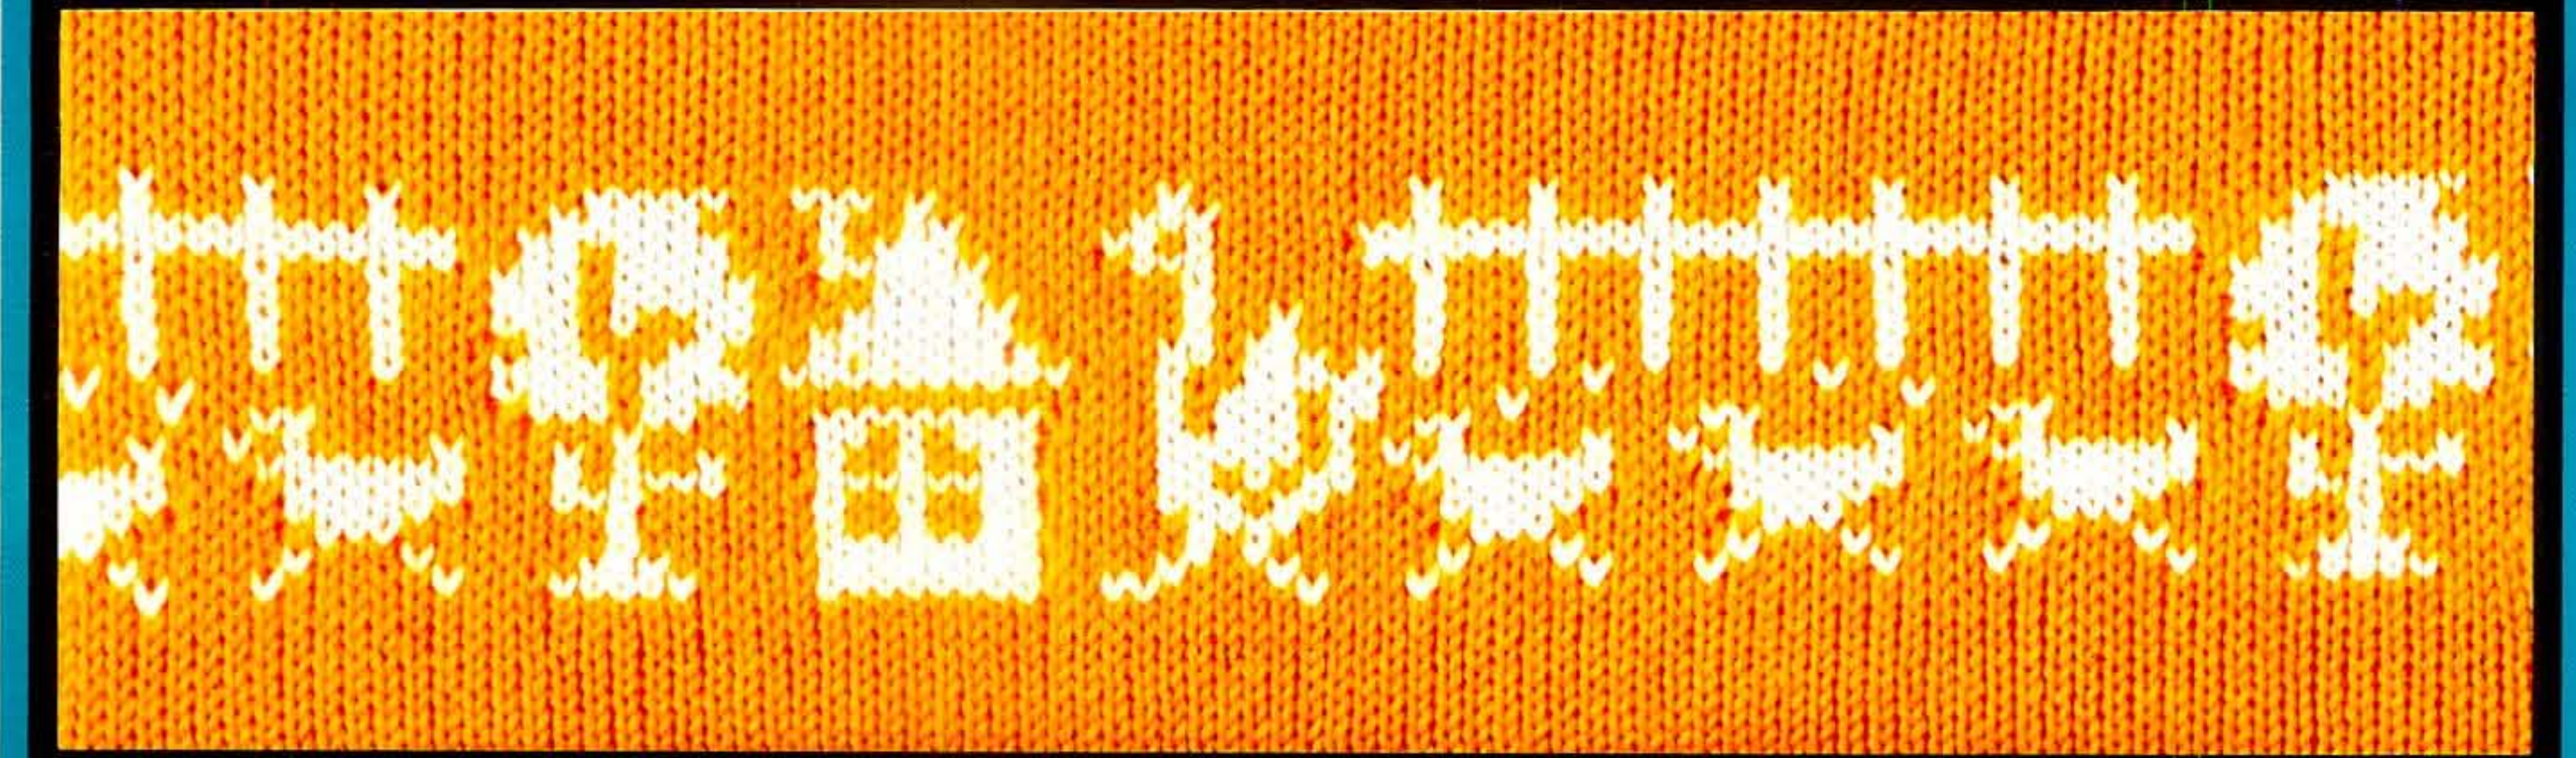 


 
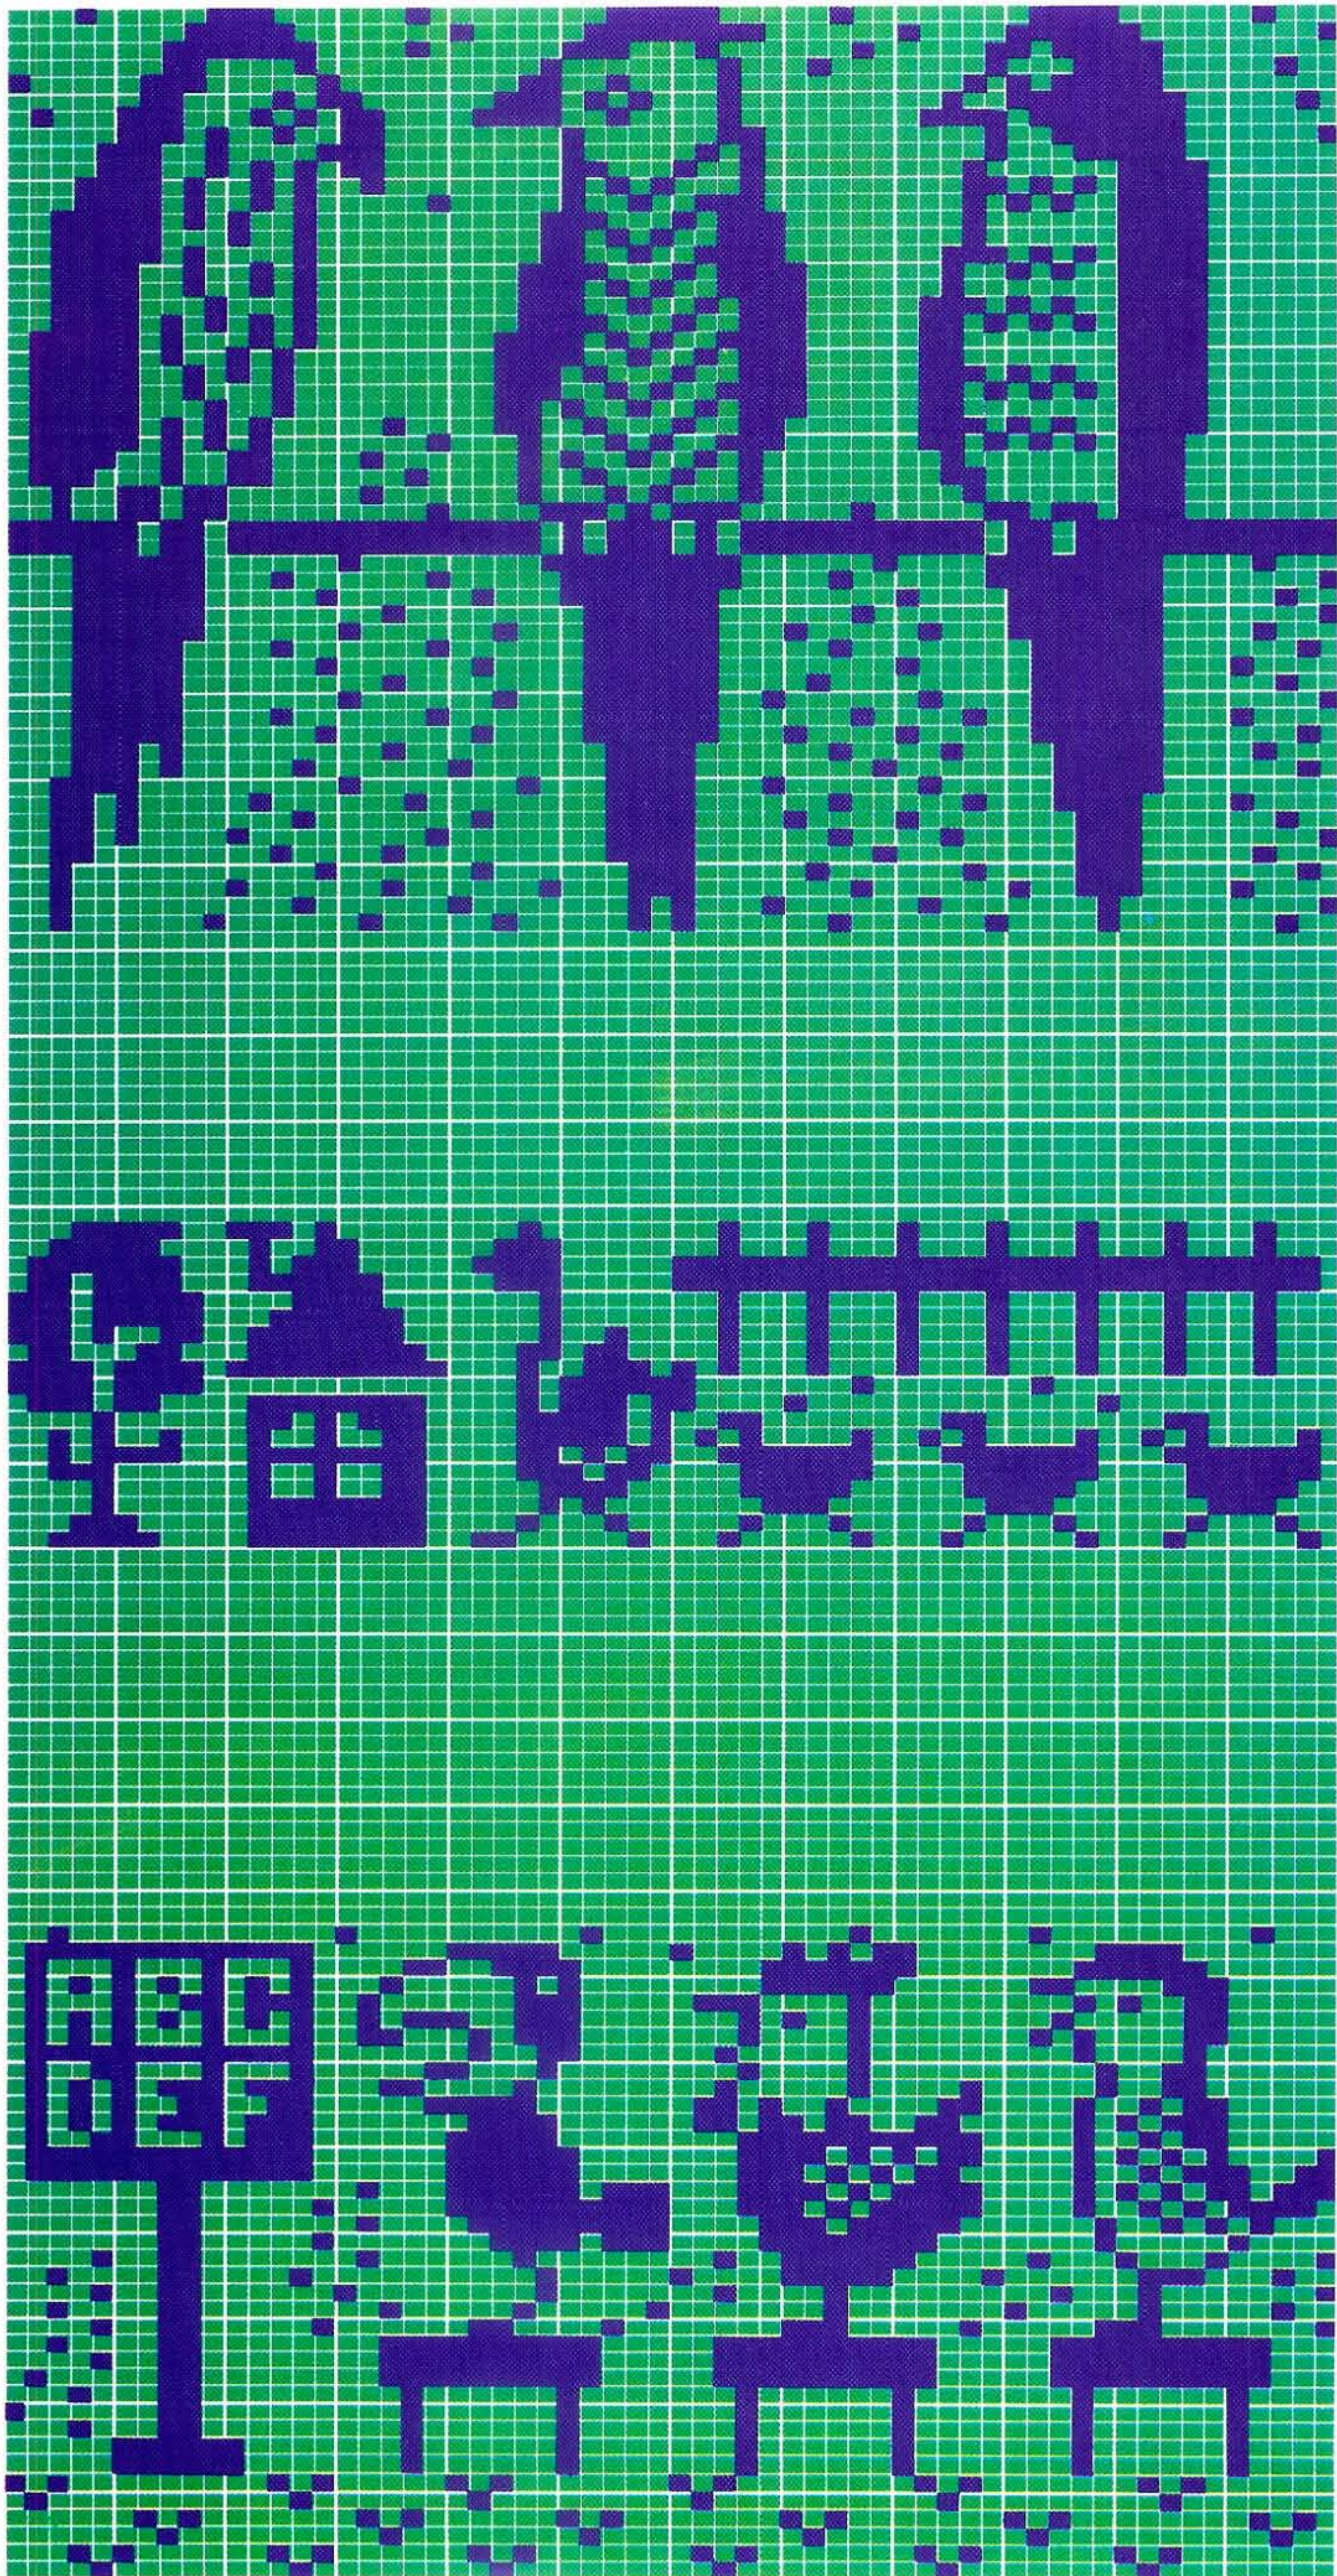 




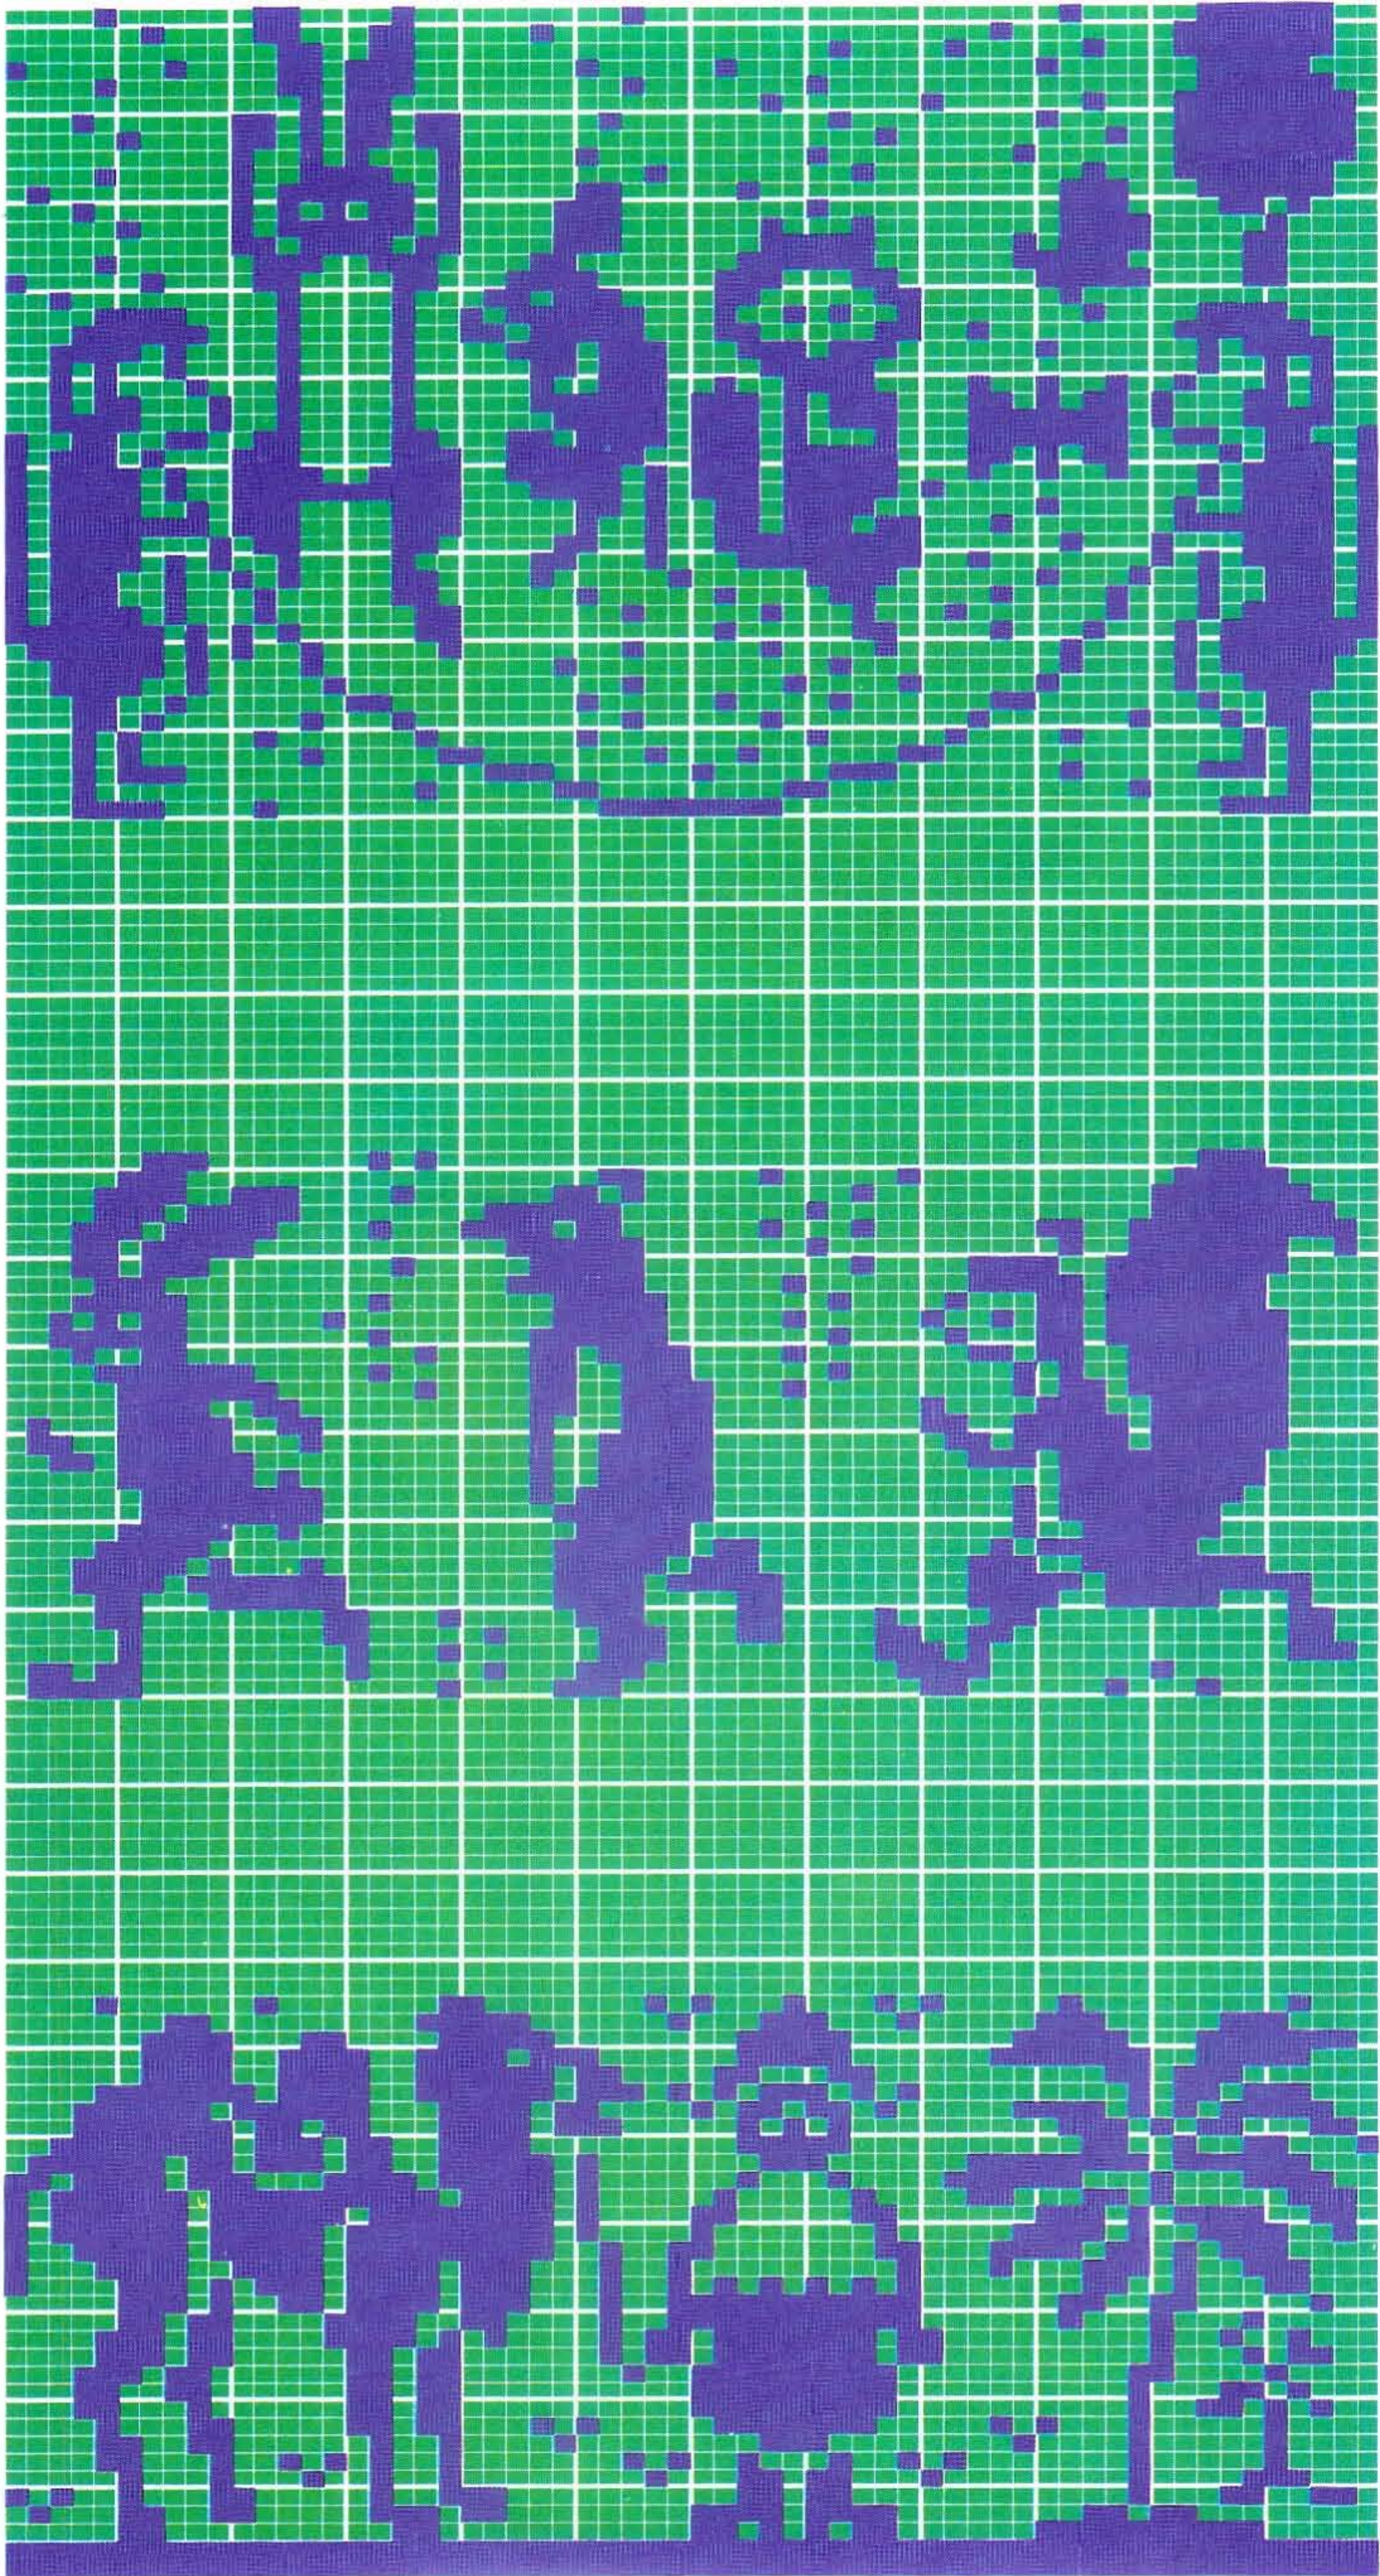




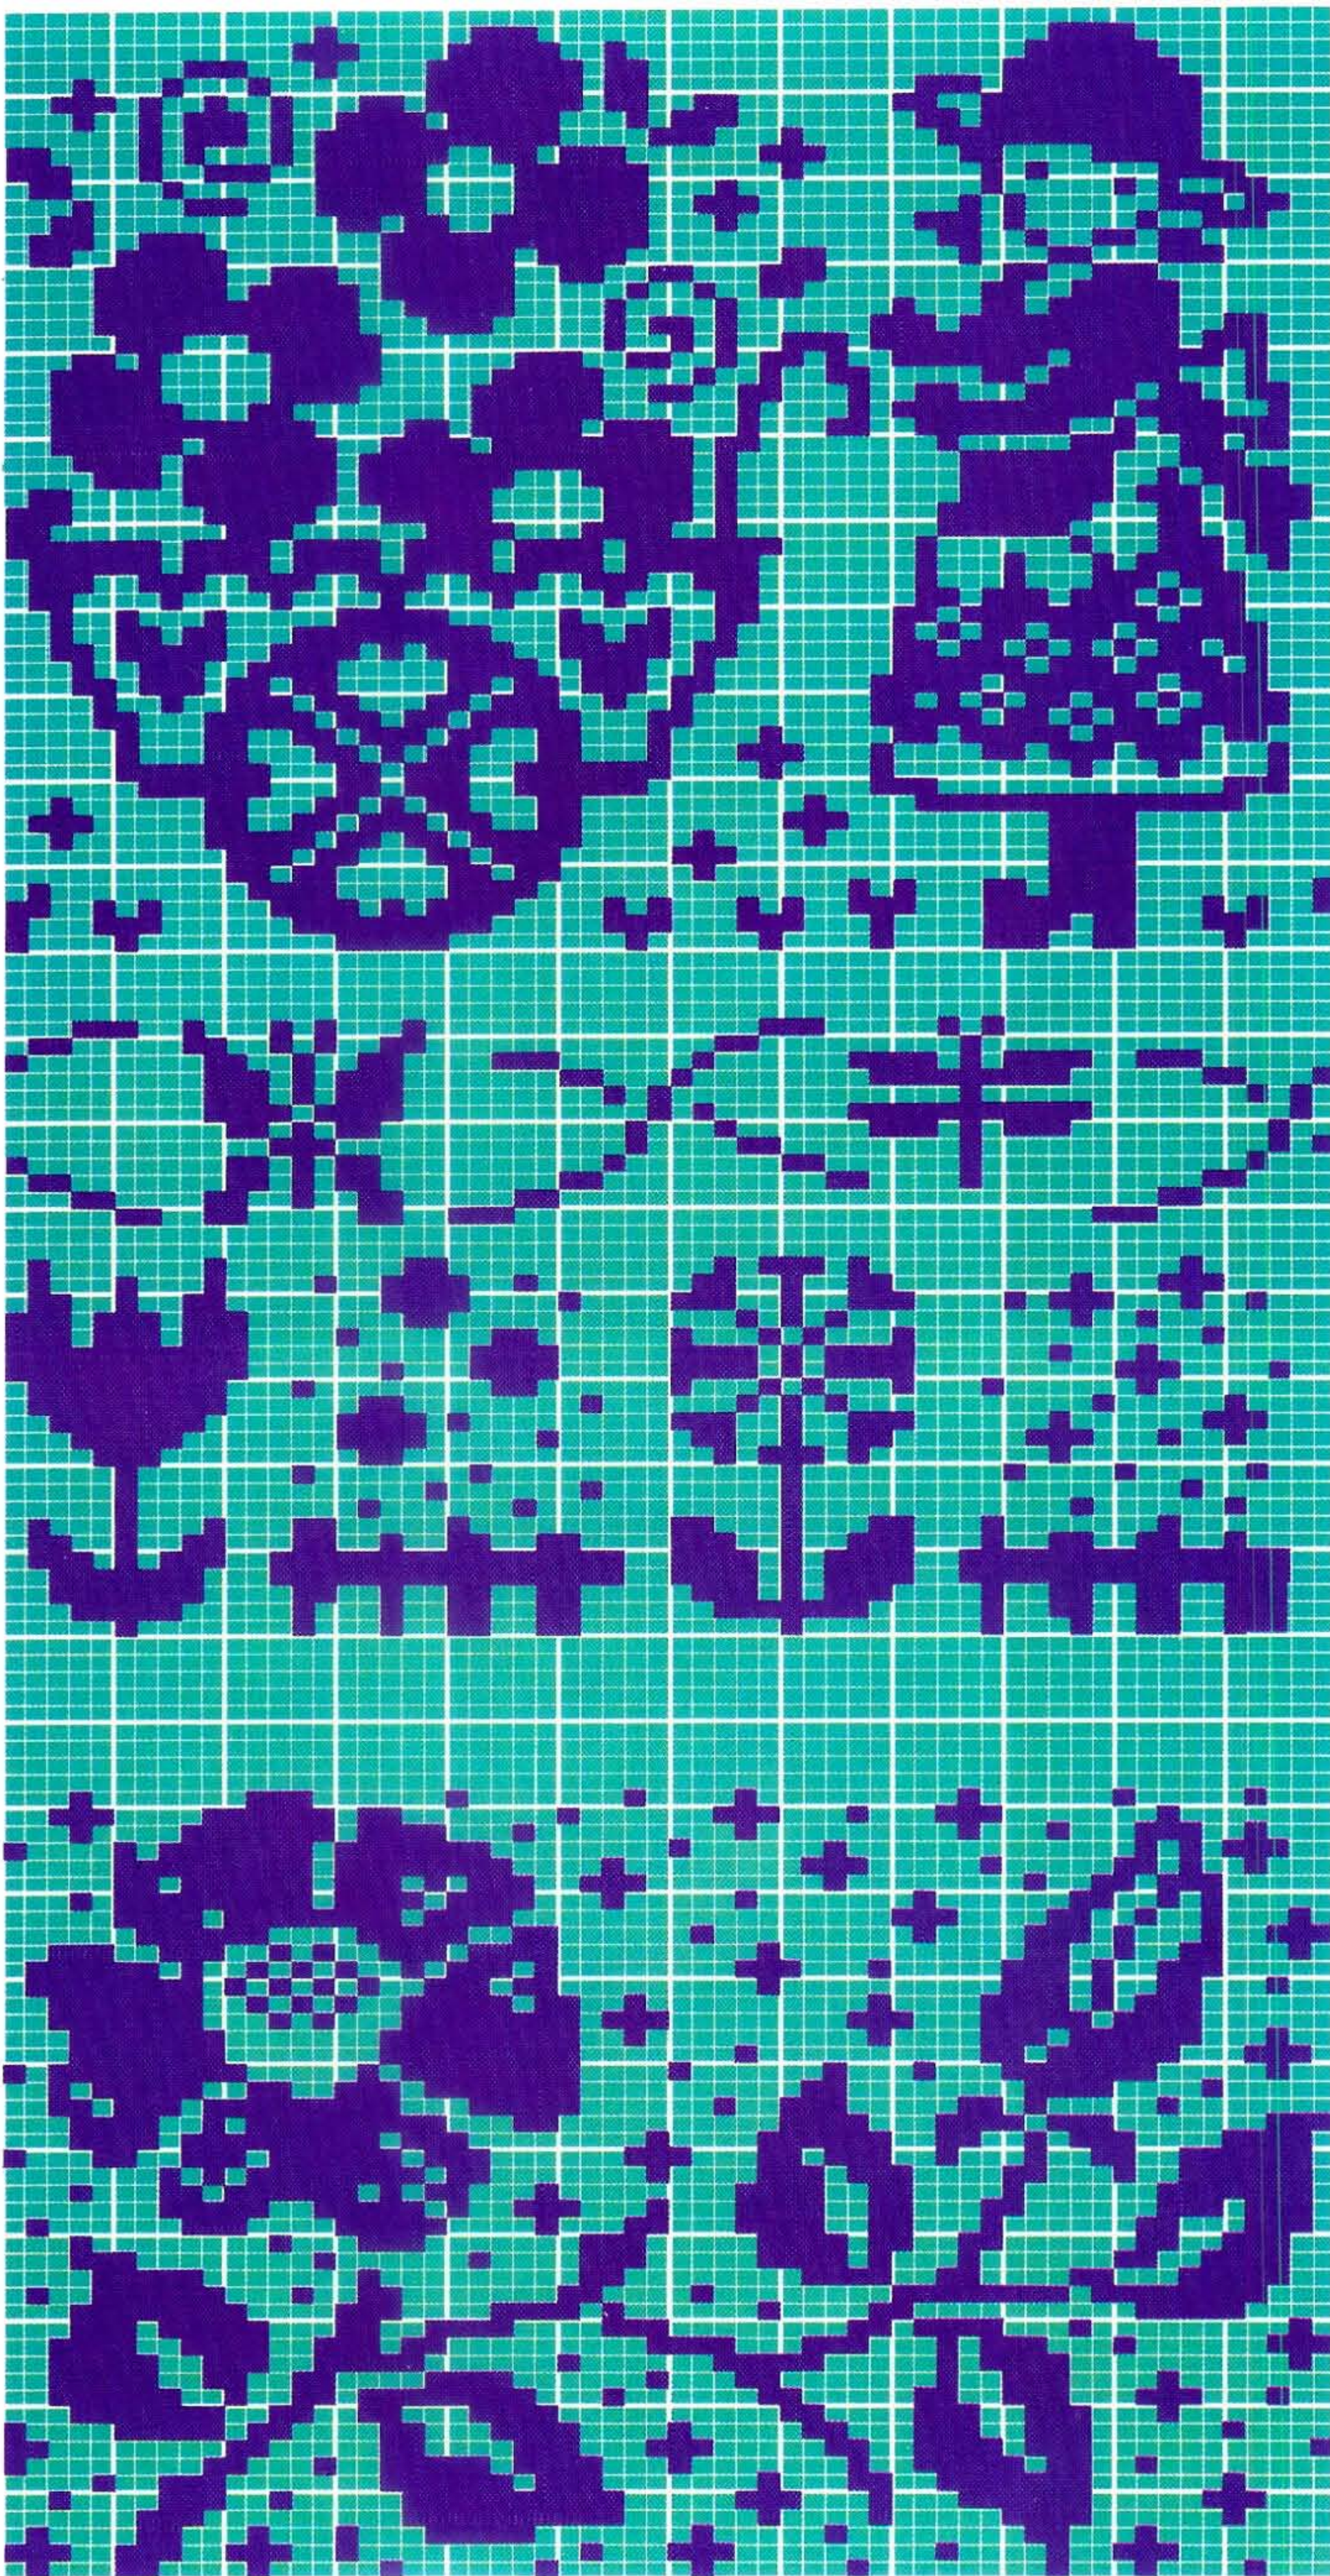

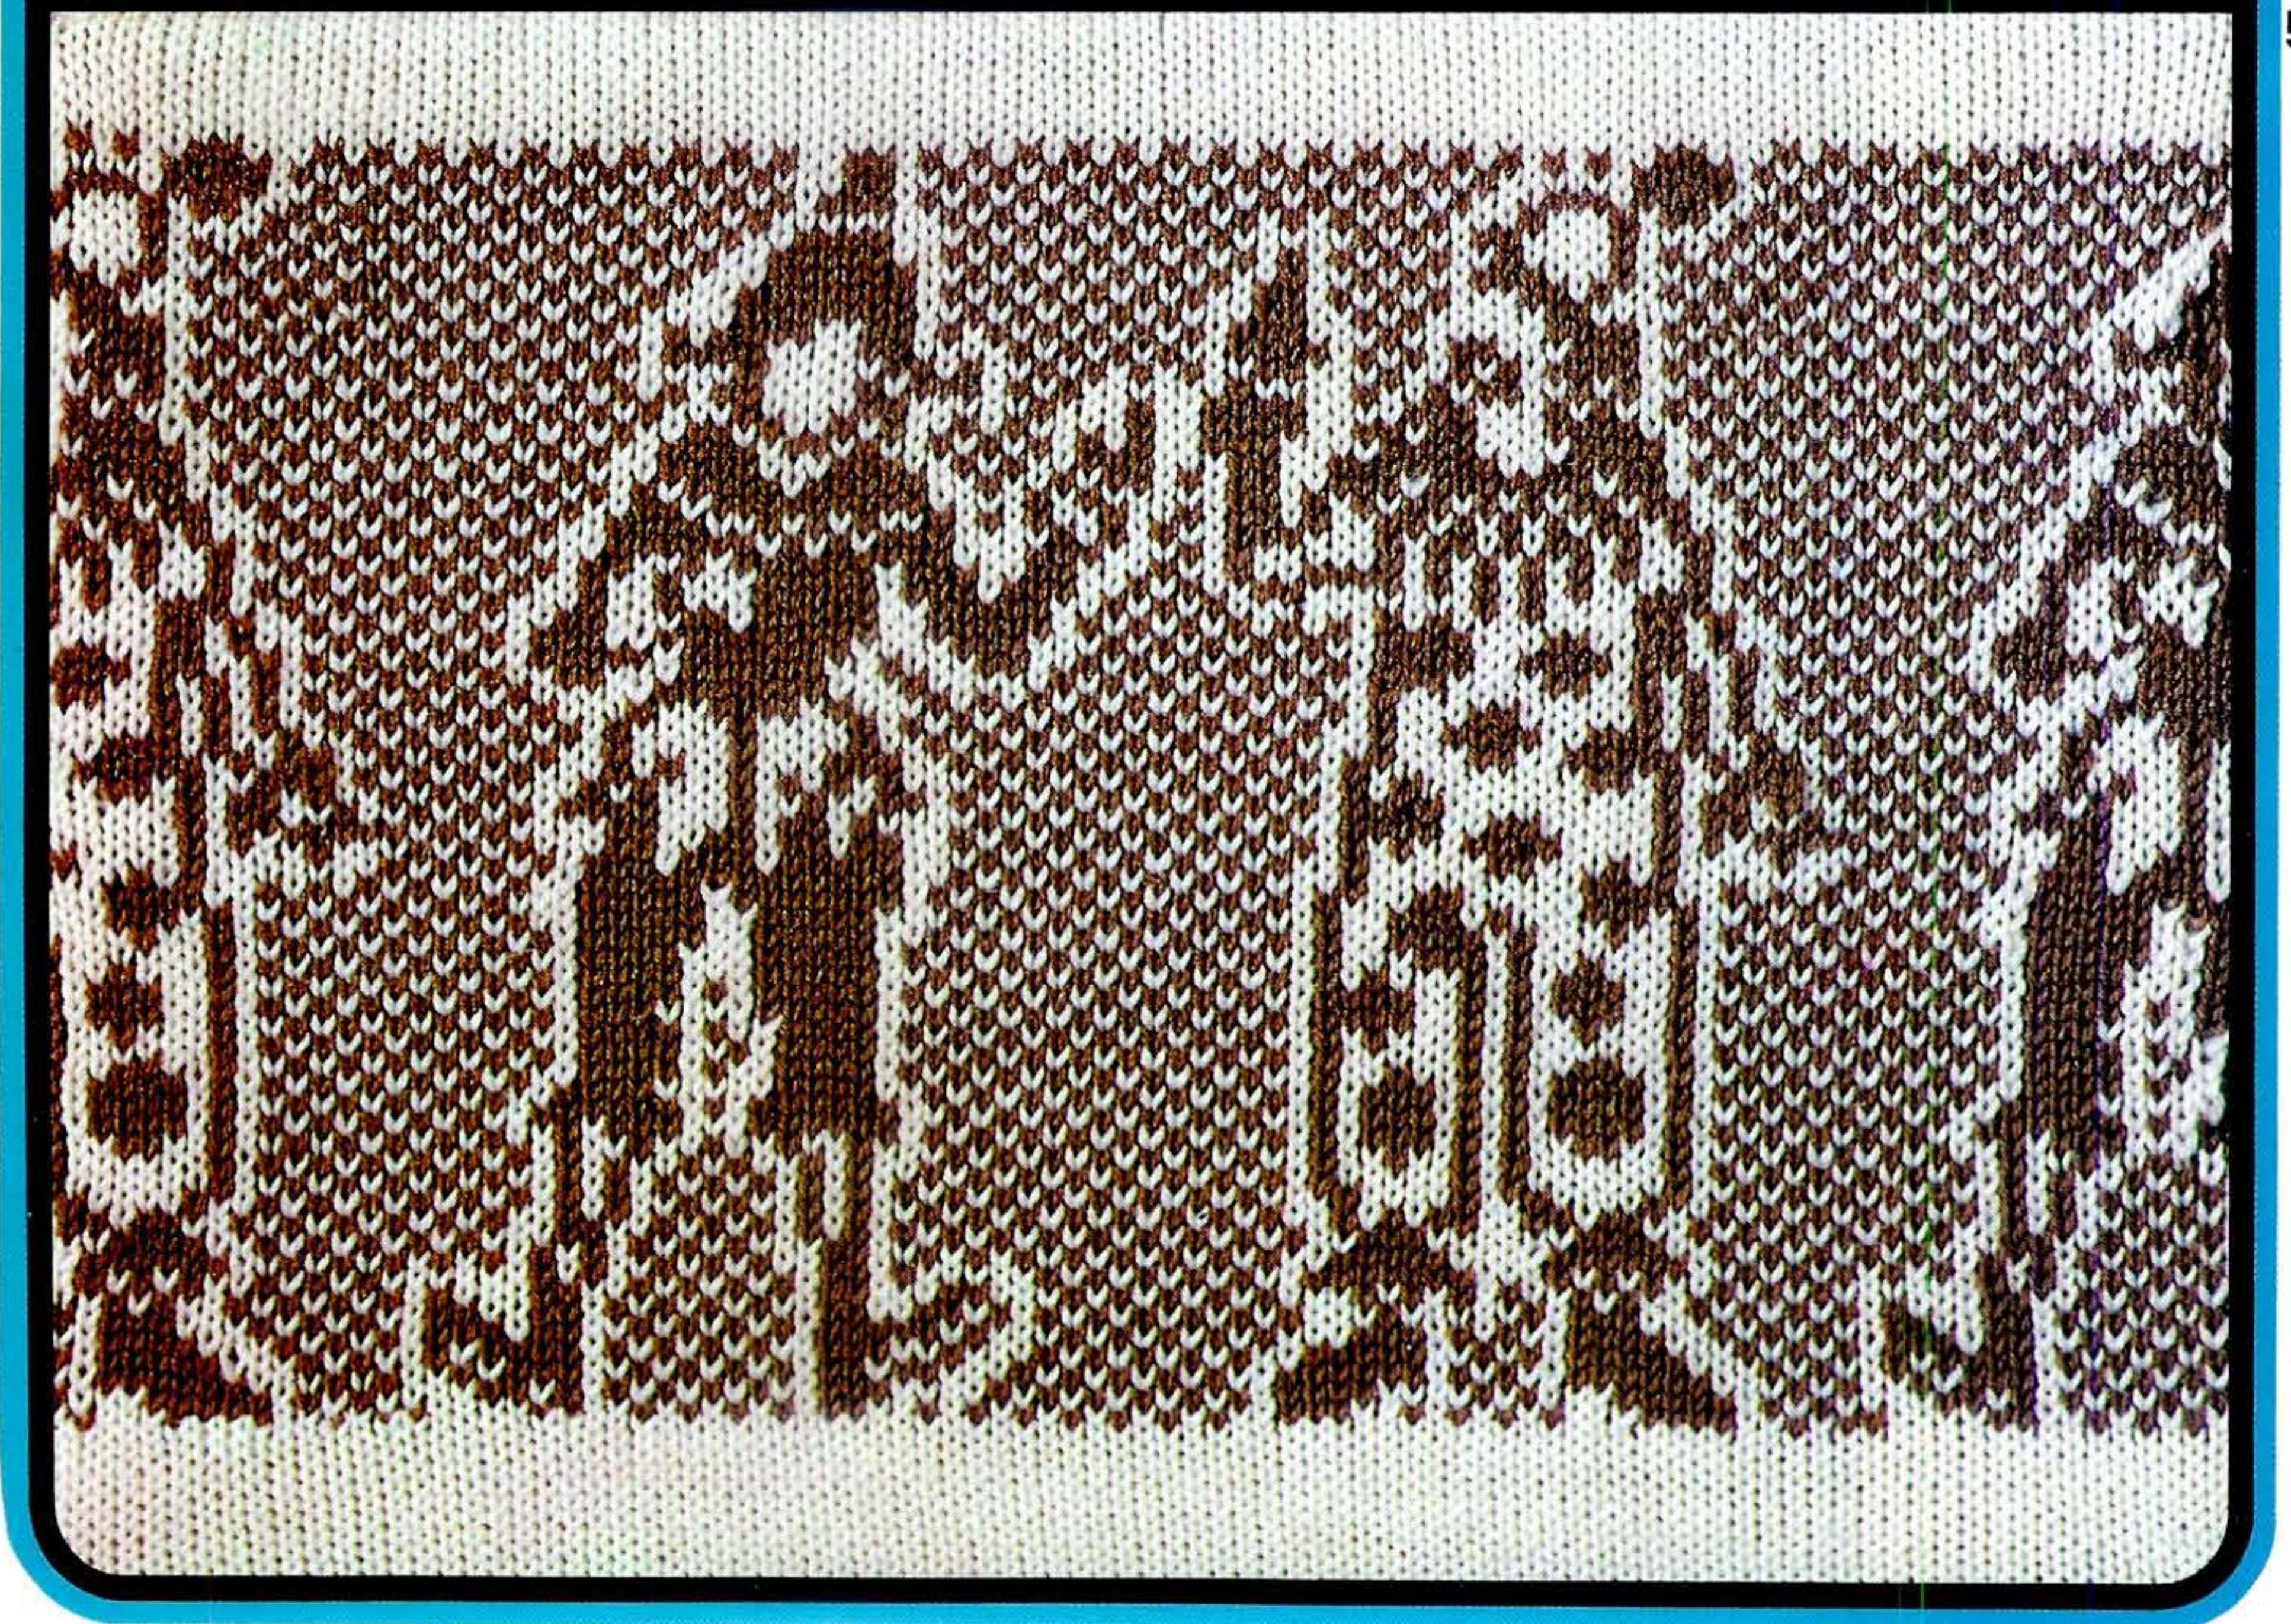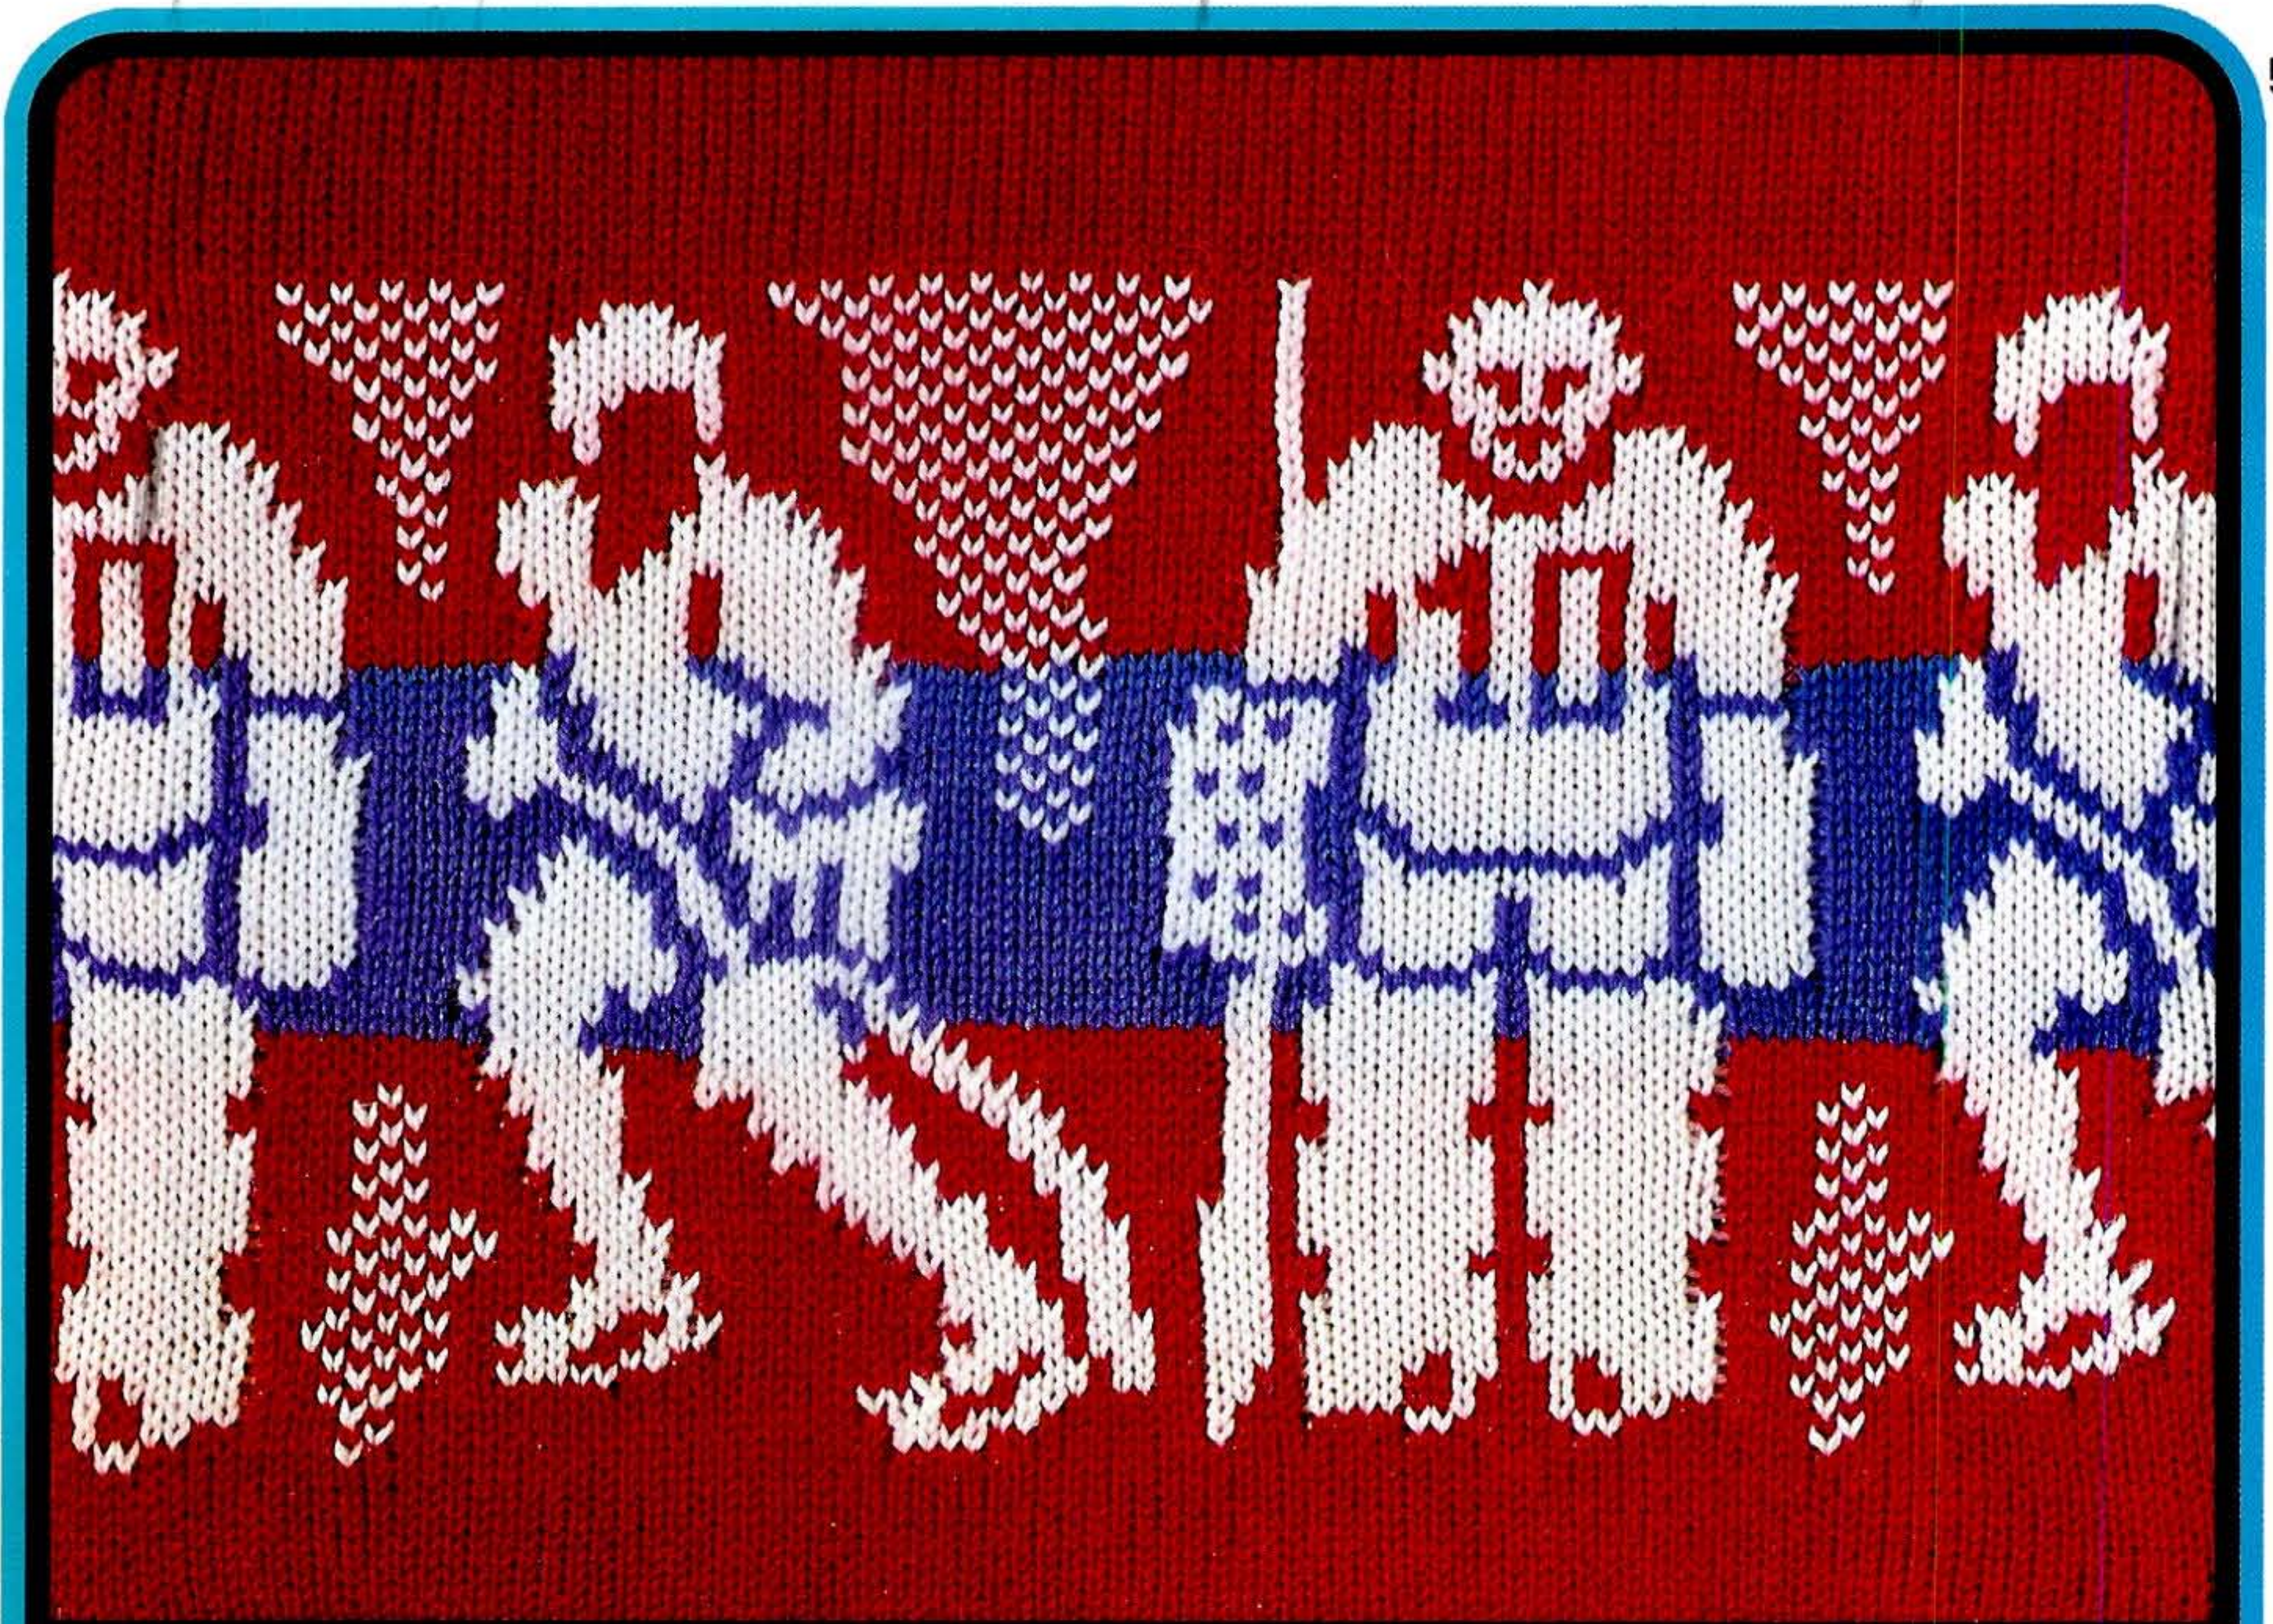

 70
65
60
55
50
45
40
35
30
25
20
15
10
5
1

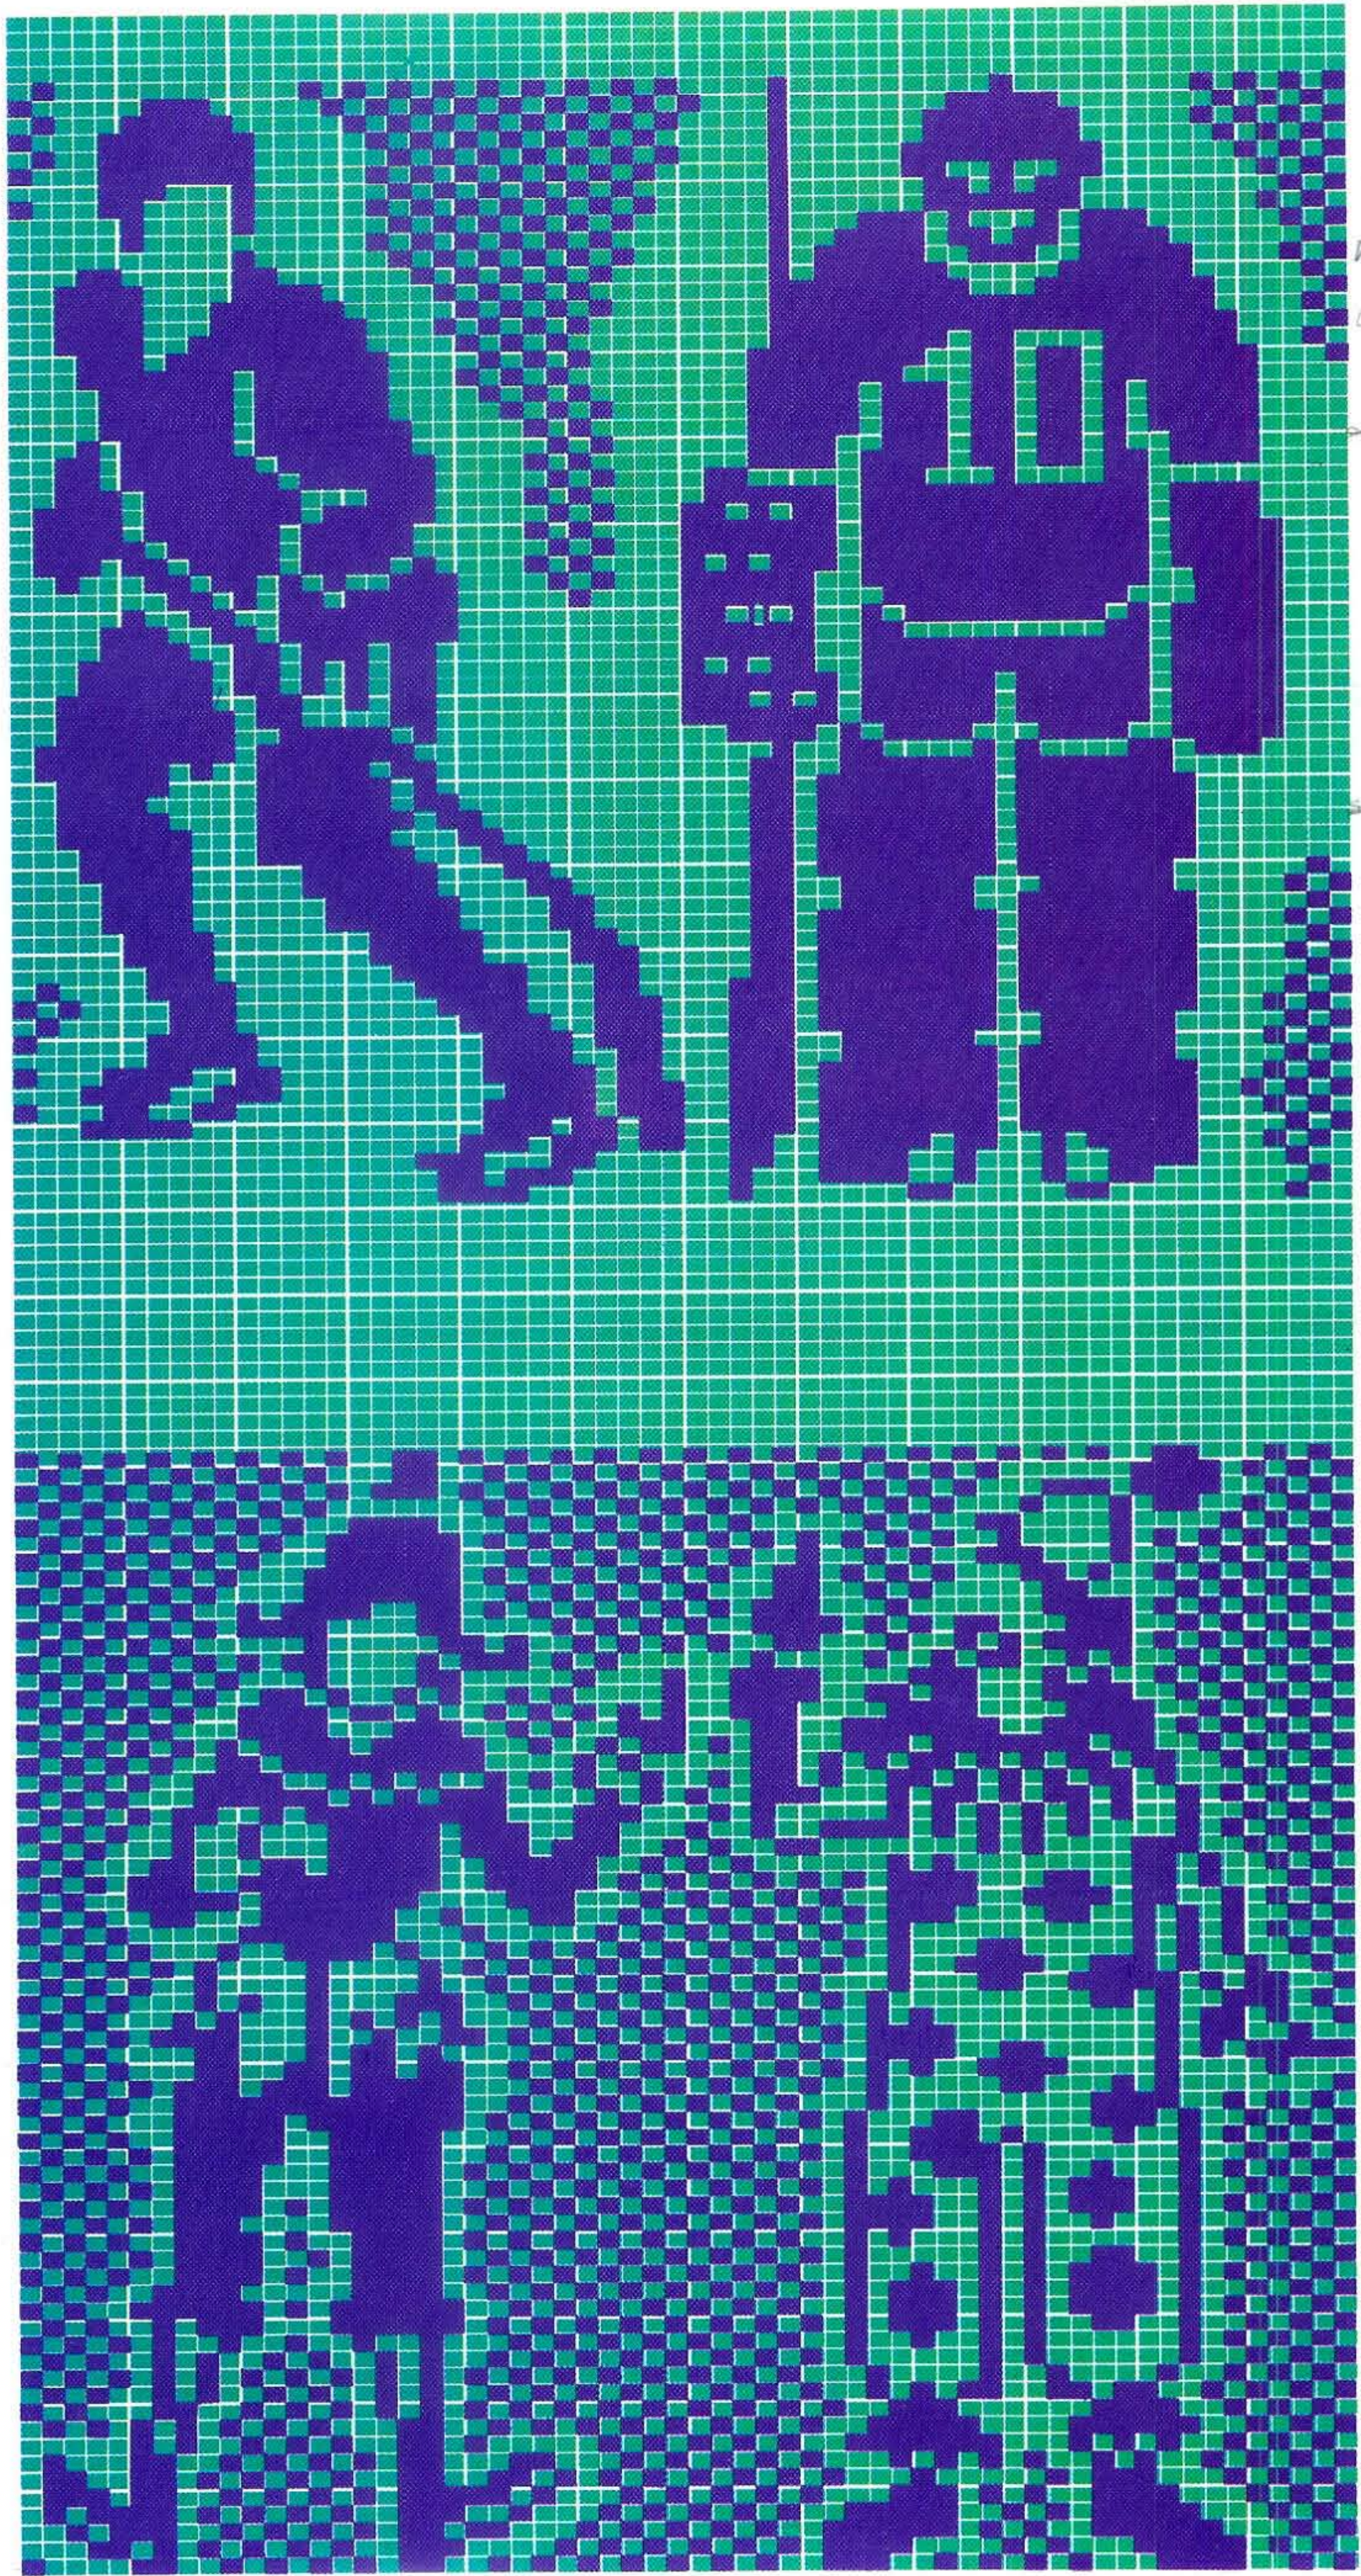

RED in A
WHITE in B
46-60

 
24-45
BLUE in A
WHITE in B

1-23
RED in A
WHITE in B







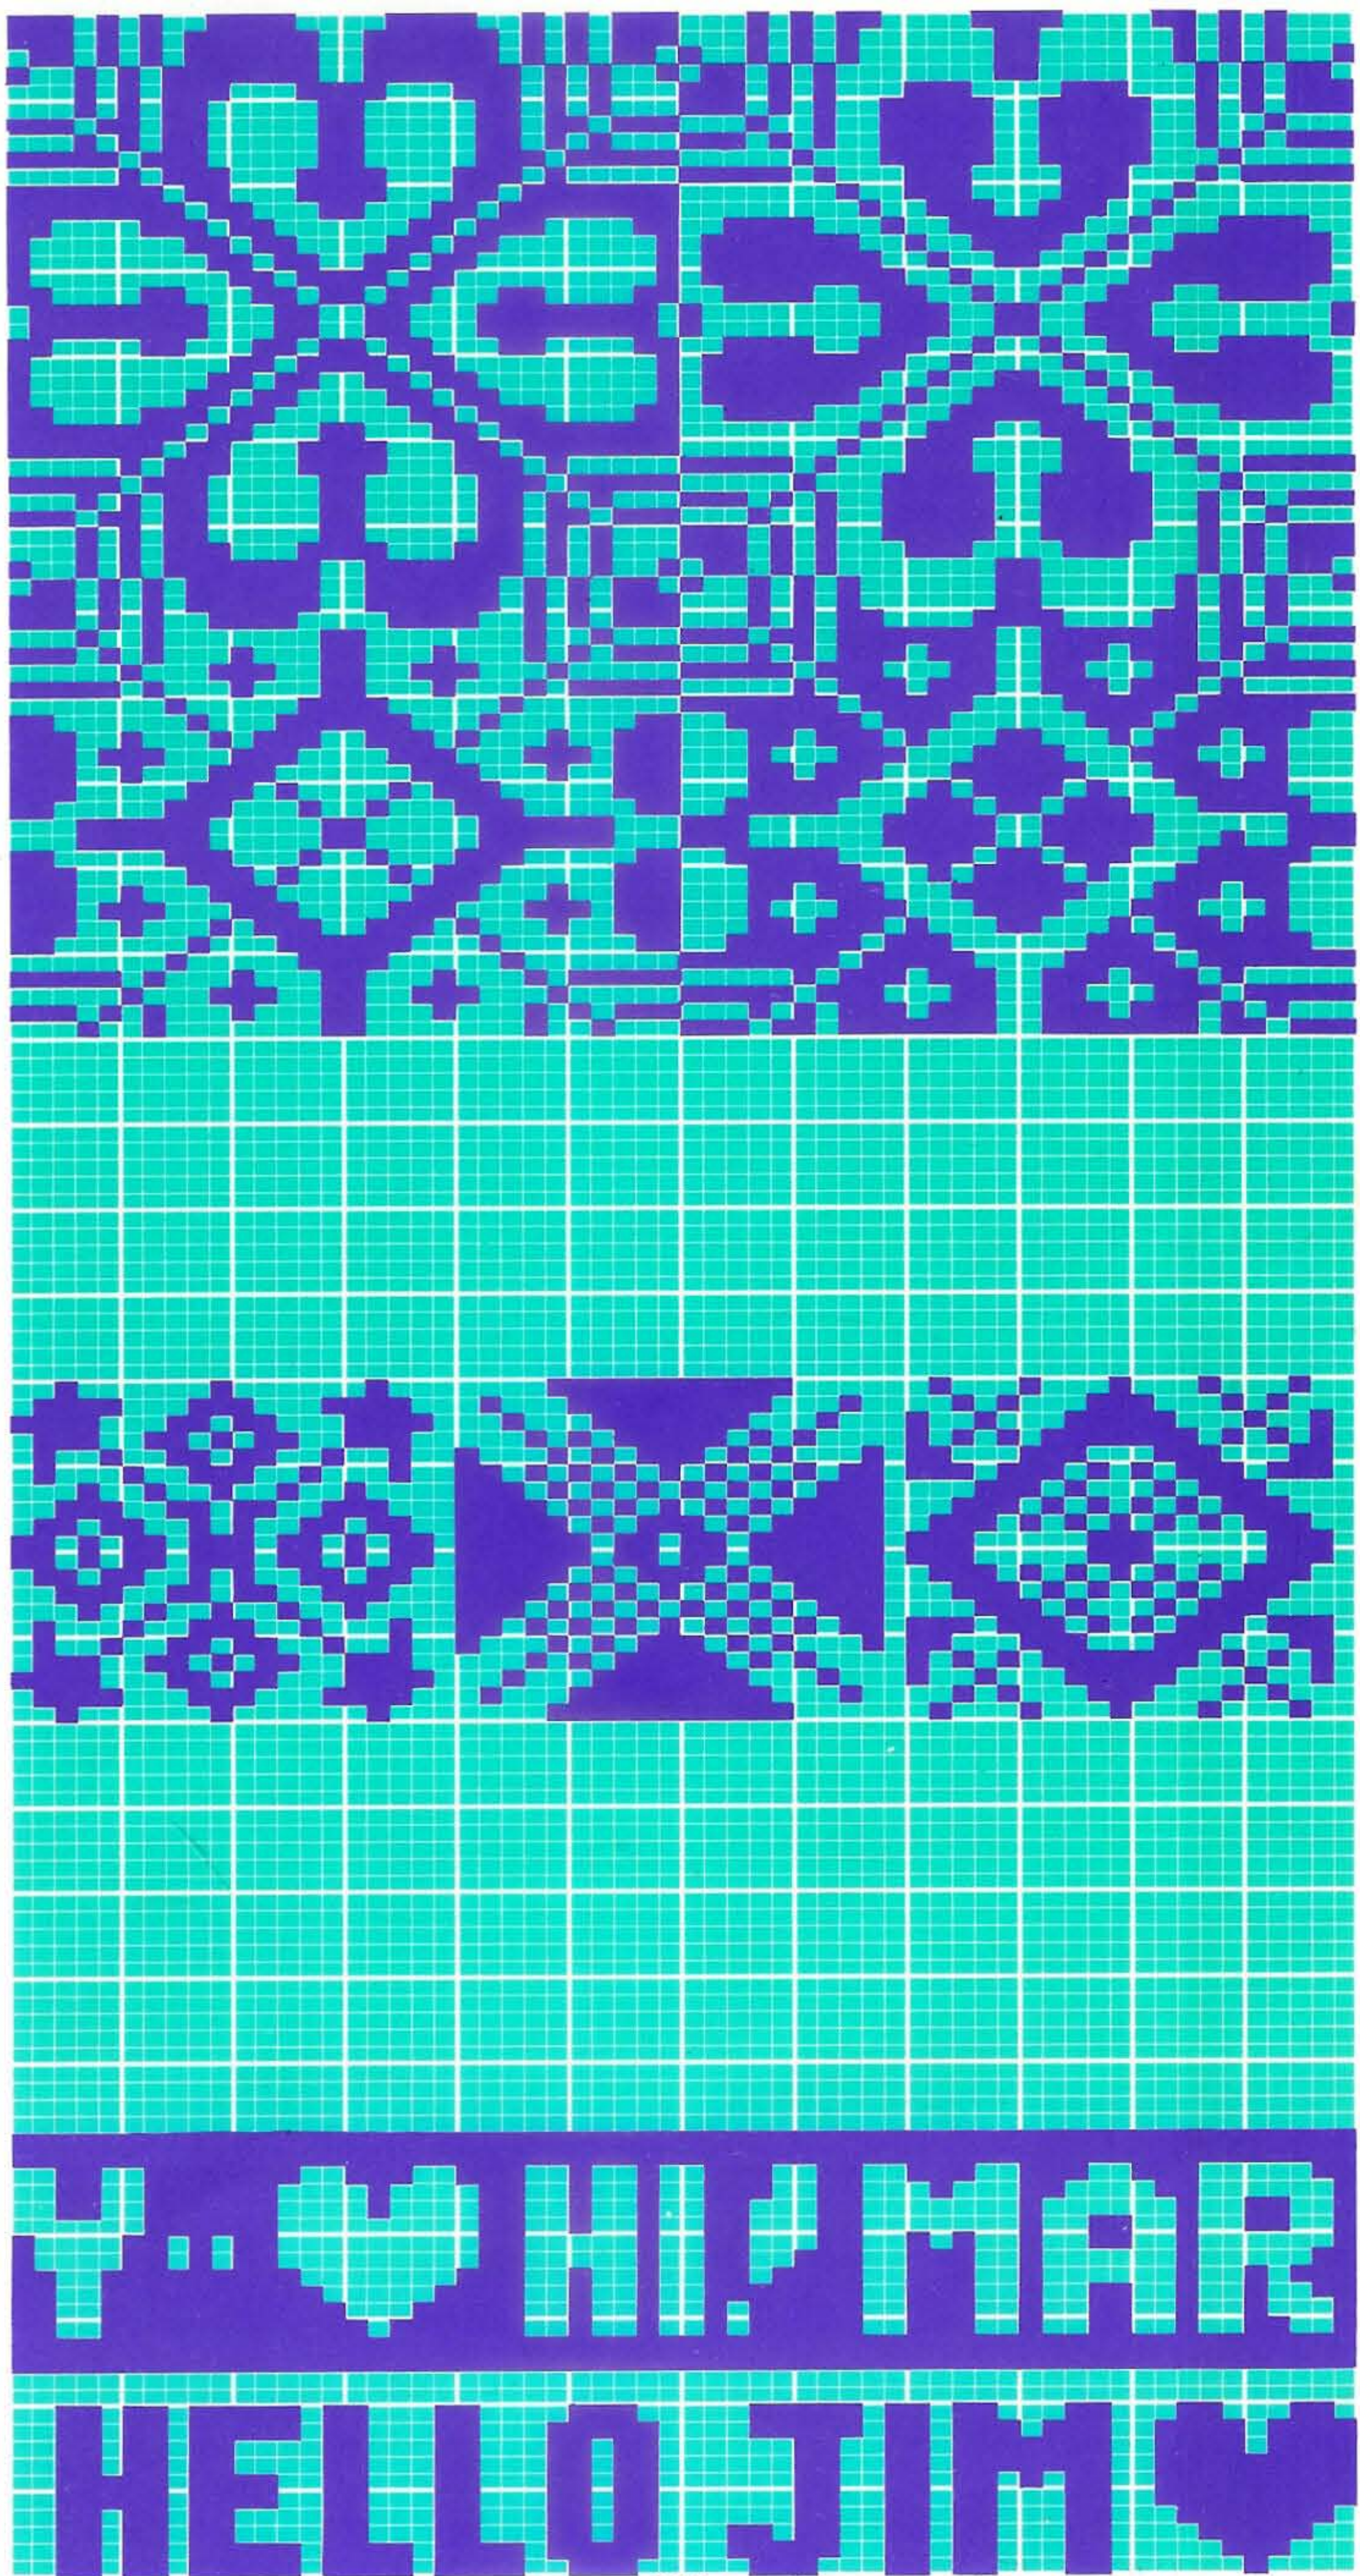

トピカル模様あみ集



brother