

IN VOSTHAGE Lucas 2 or JEAN 421 TRACK 1
DEC 2

Electroknit® Pattern Cards

トピカル模様カード集

Vol.1 FAIR ISLE PATTERNS

 
第1集 / 編込み模様

Card Nos. No.101-110



この模様カード集は取扱説明書で
基本的な操作をマスターしてからご利用ください


Please use this pattern card after learning the basic operations
with the instruction manual.


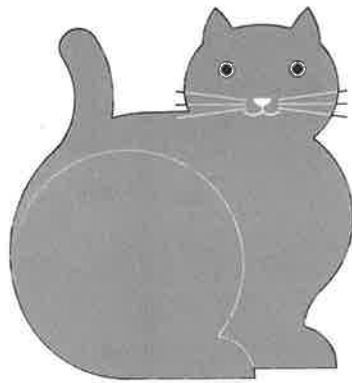


メモ欄の(A)は地糸口、(B)は色糸口の糸の切り替え位置を示します。

    
 
 
 
 
 
(A) and (B) in MEMO WINDOW mean the Yarn changing position for main yarn and second yarn respectively.



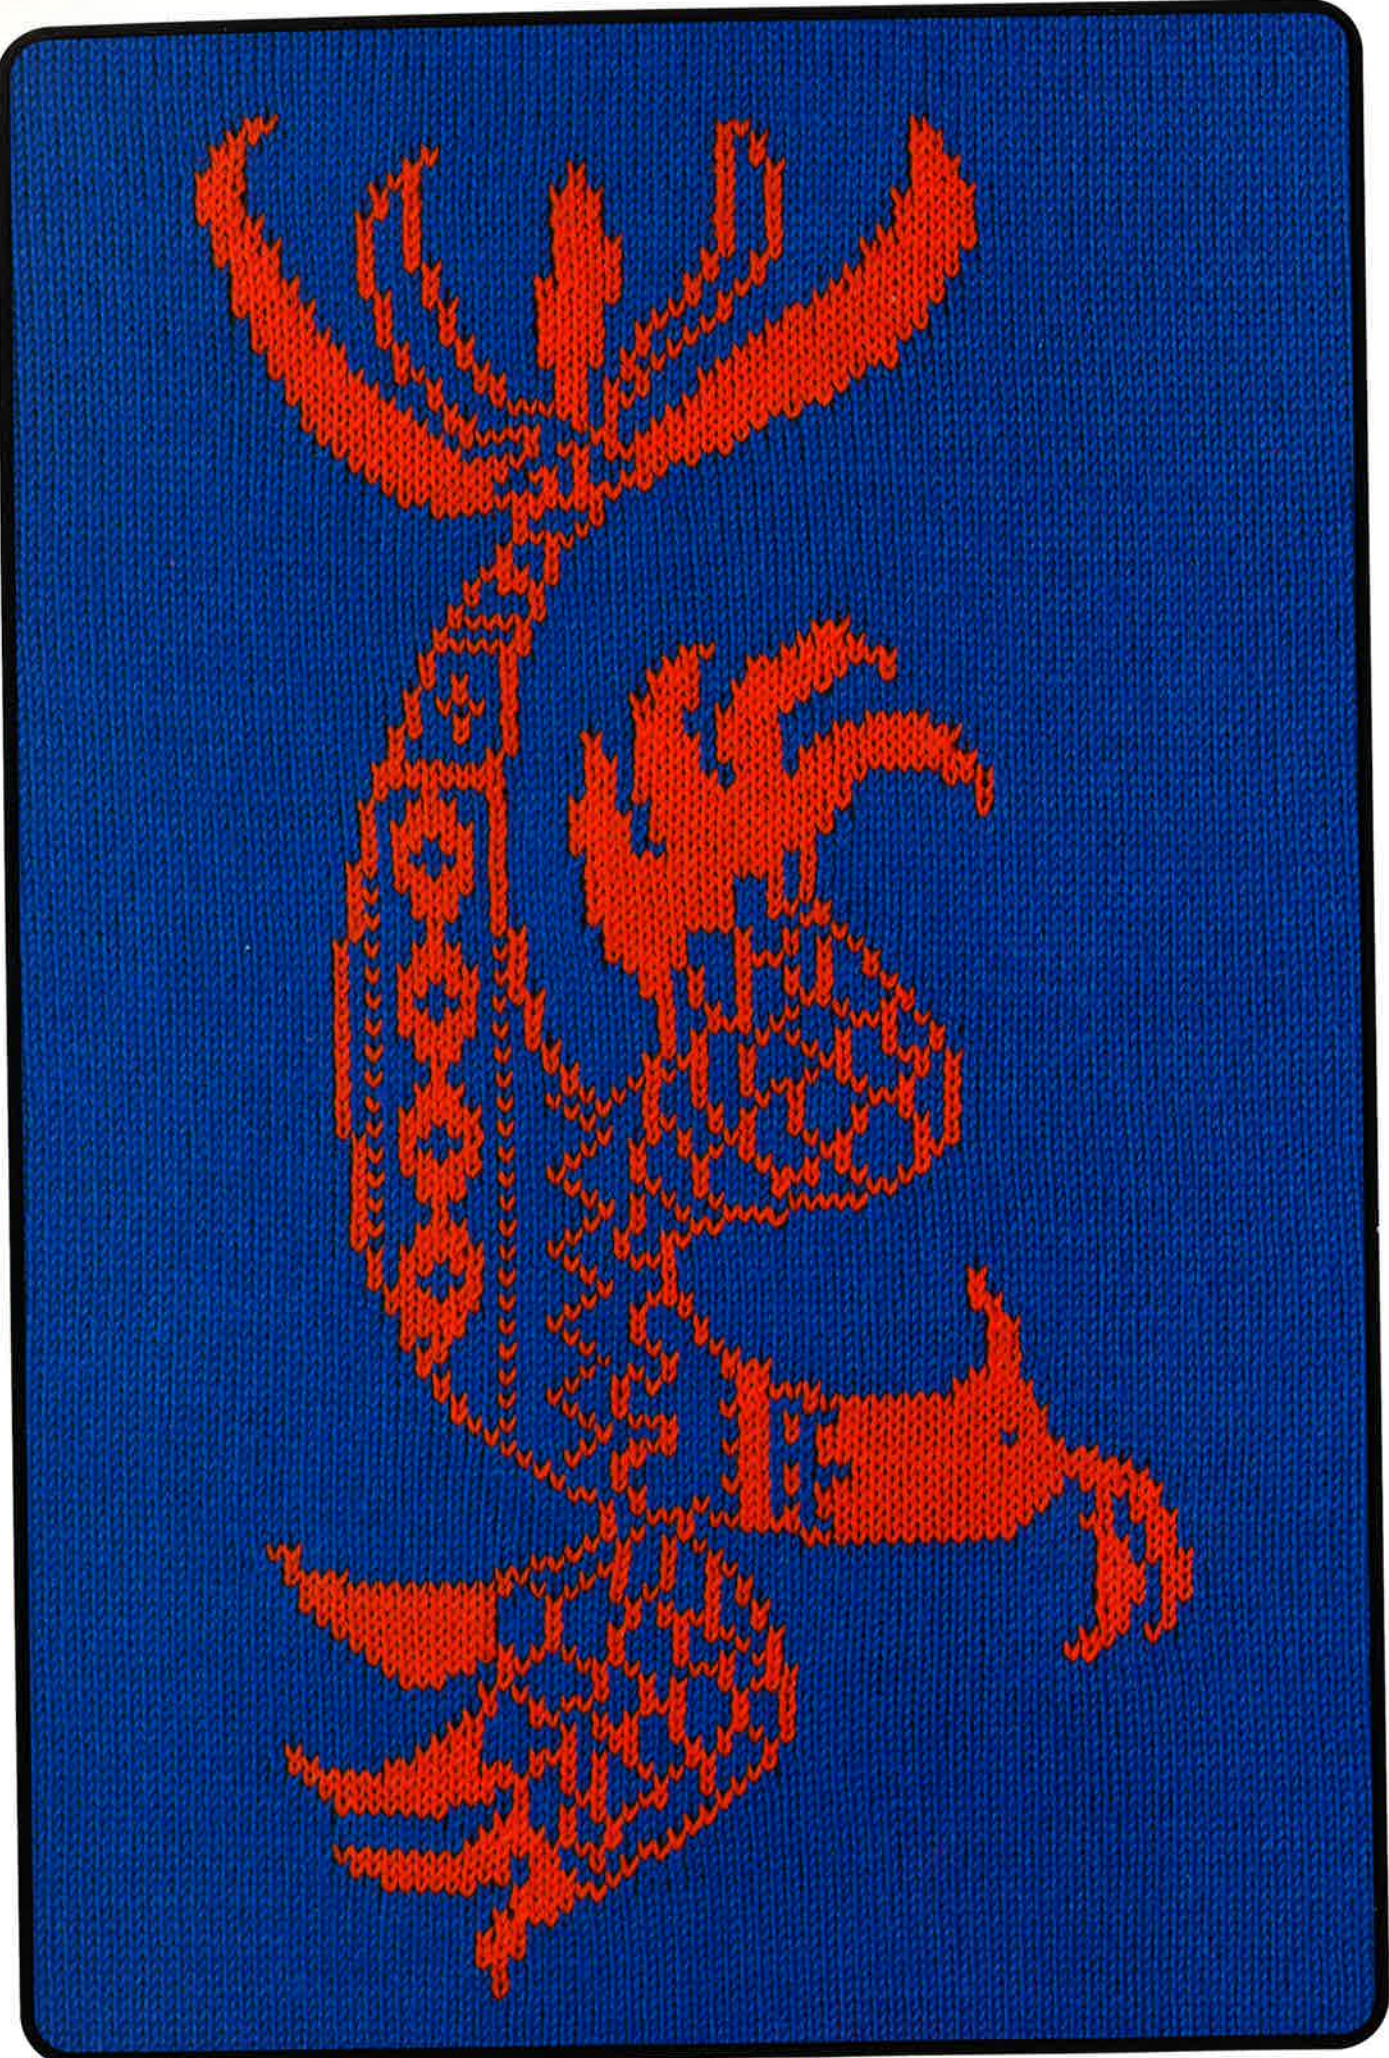

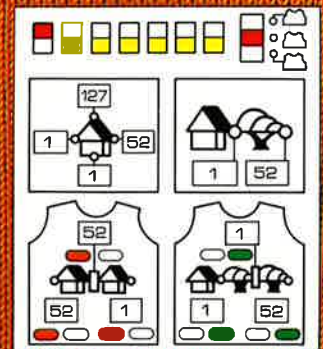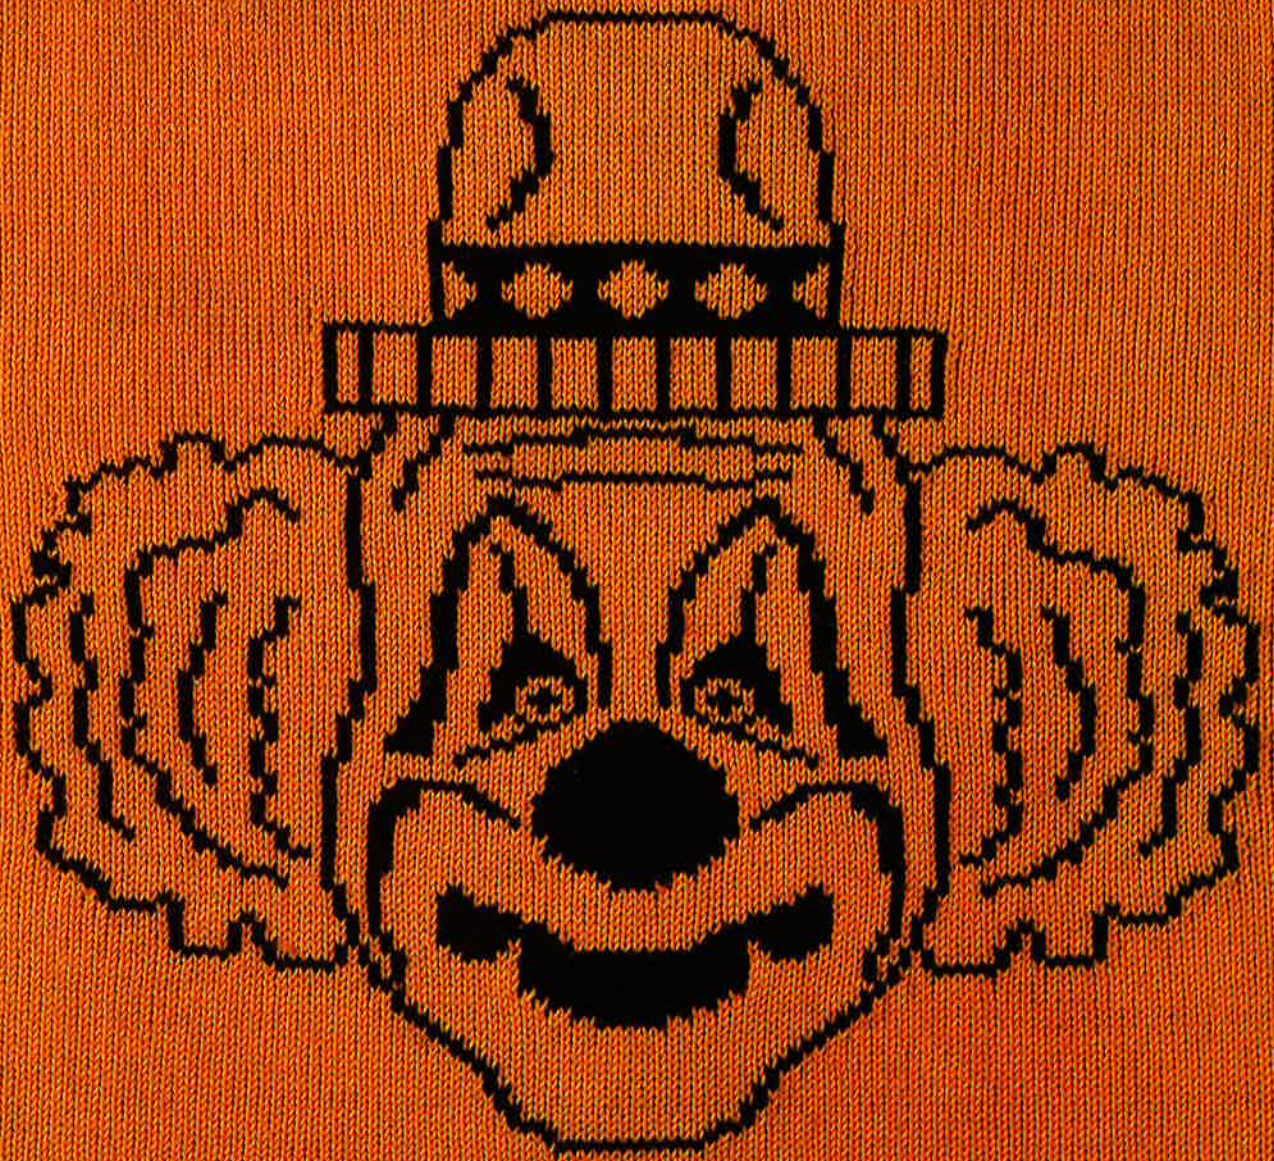



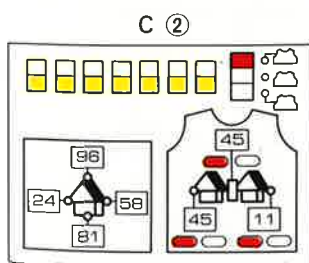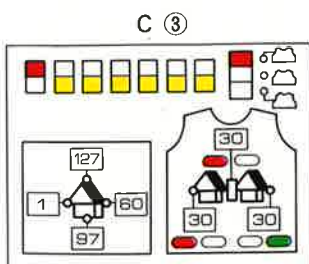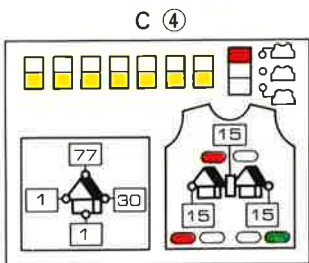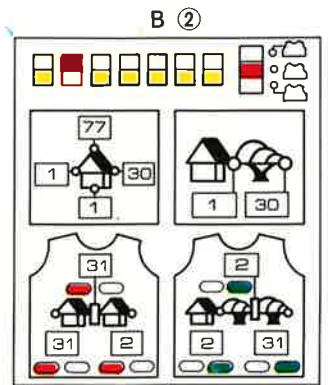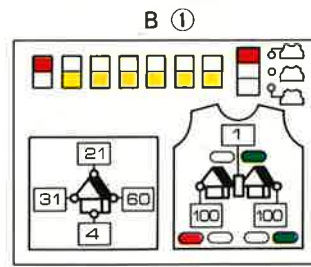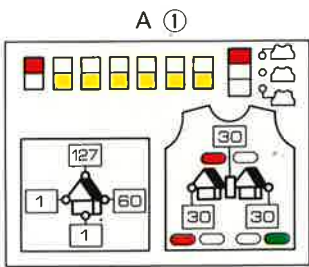

C ①の操作表はB ①と同じです。

C ① Programming: same as for B ①.



 
A




B




A ①

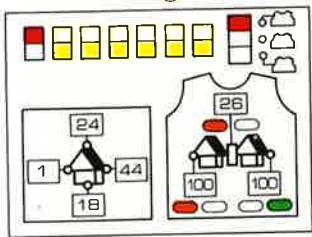


A ②

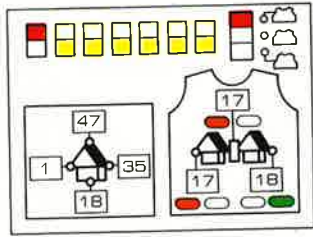 


B ①

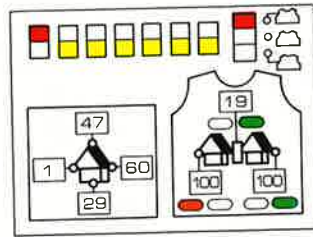 


B ②

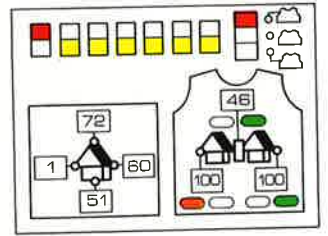 


C ③

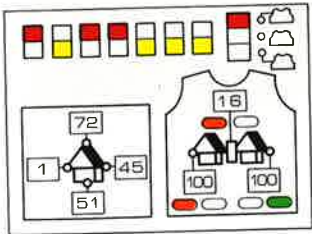 

C ②

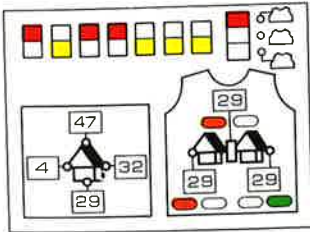 

C ①

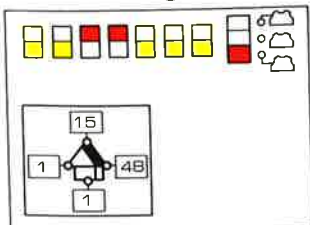 


C






A ①

 
105をインプットし、(はじめ)キーを押します。

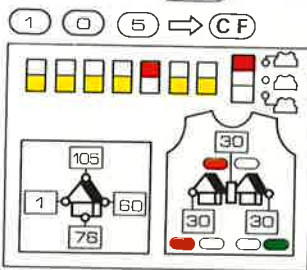


B ①

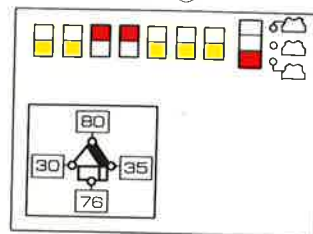 

C ②

 


C ①

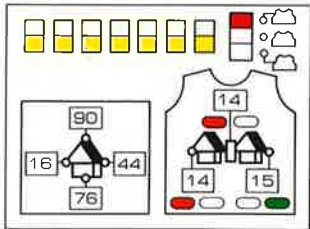 


①のプログラムで模様カードがもどってから1段編みます。次に(もどし)キーを押しカードをセットラインまでもどし、新たに②のプログラムを入れ、(はじめ)キーを押し、つづけて編みます。

Knit one row after the Pattern Card returned to the starting position of pattern for Program ①, then set the Card to the SET LINE by pushing (RR) key. Make the Program ②, push (CF) key and continue the knitting to complete the pattern.


 
D ①

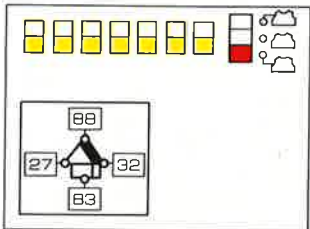

E ②

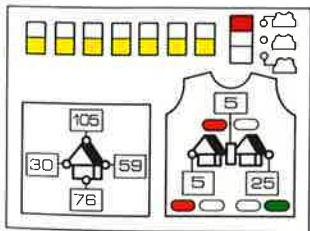 


E ①

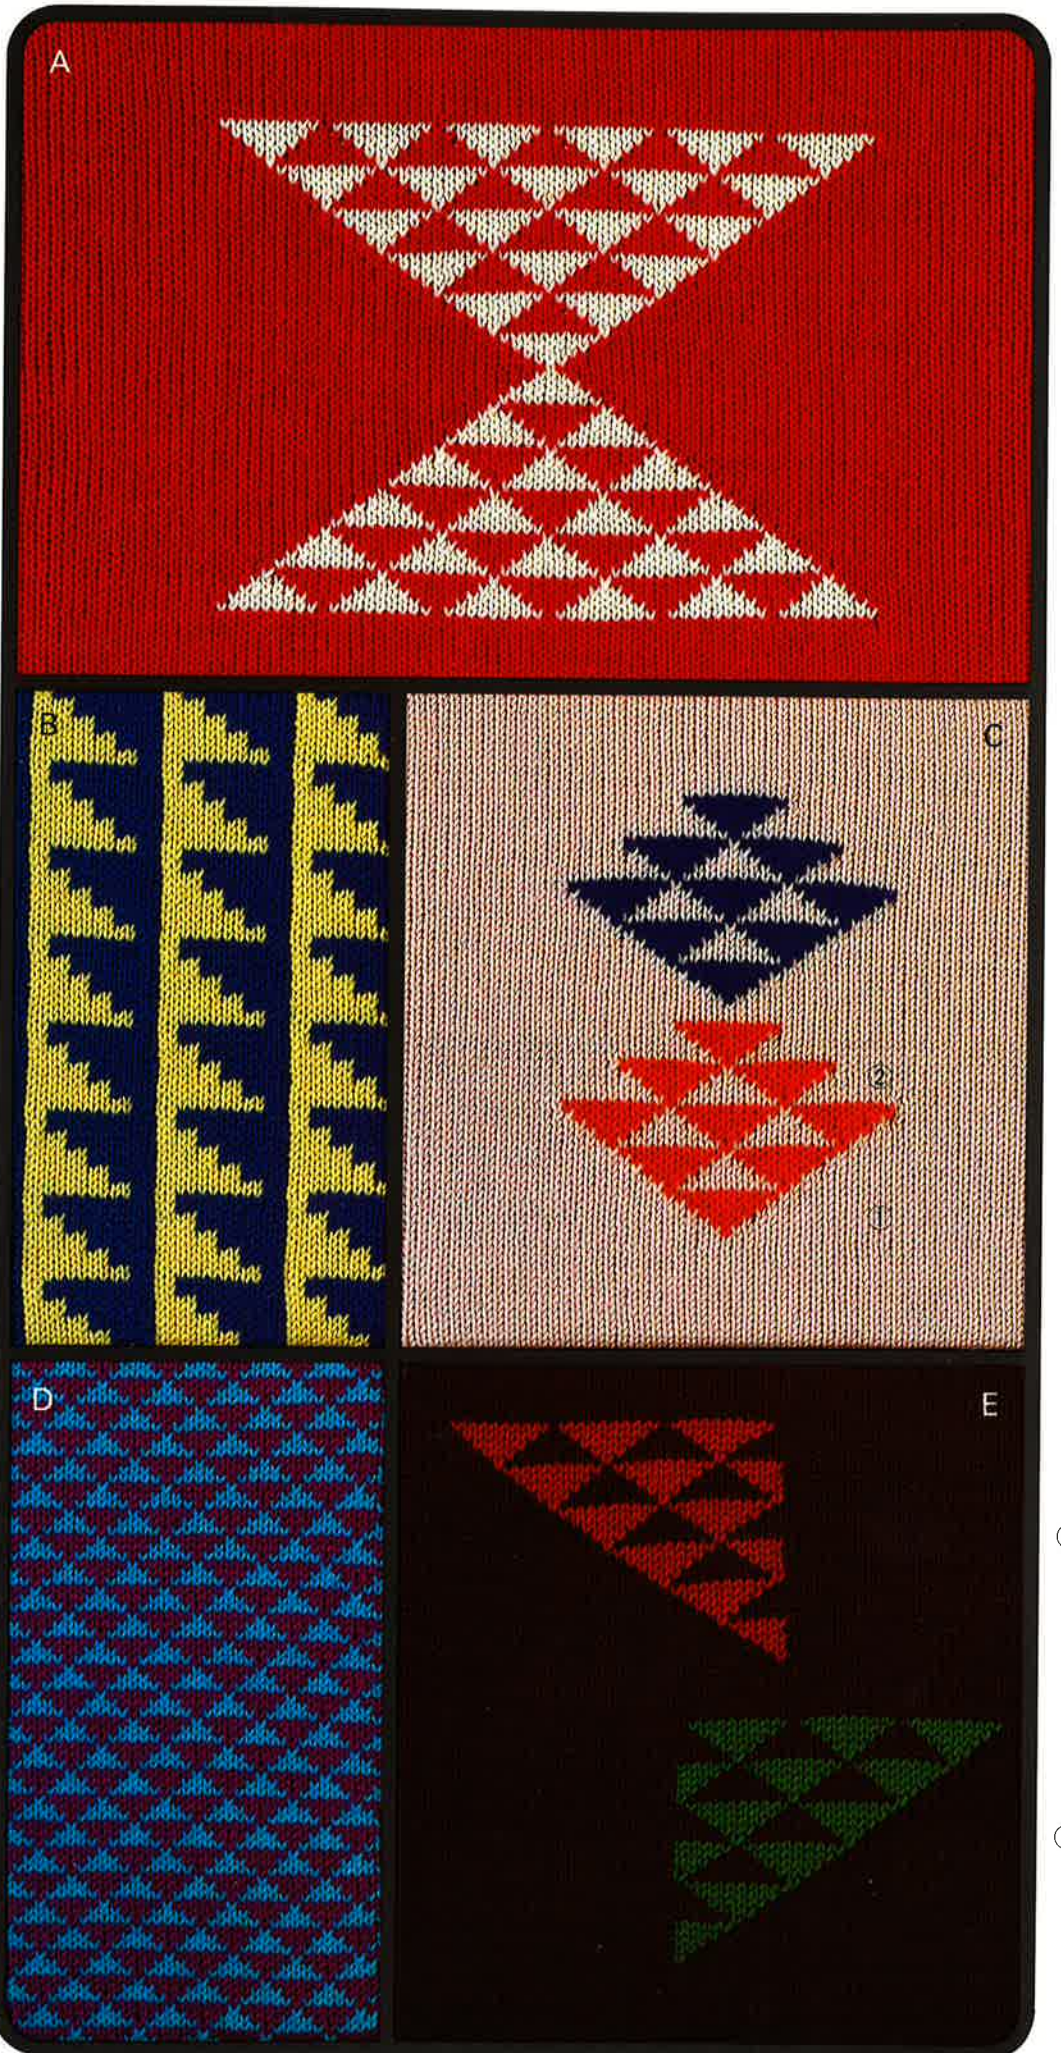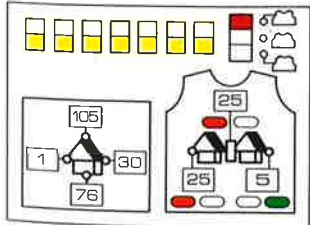  

②








 
①

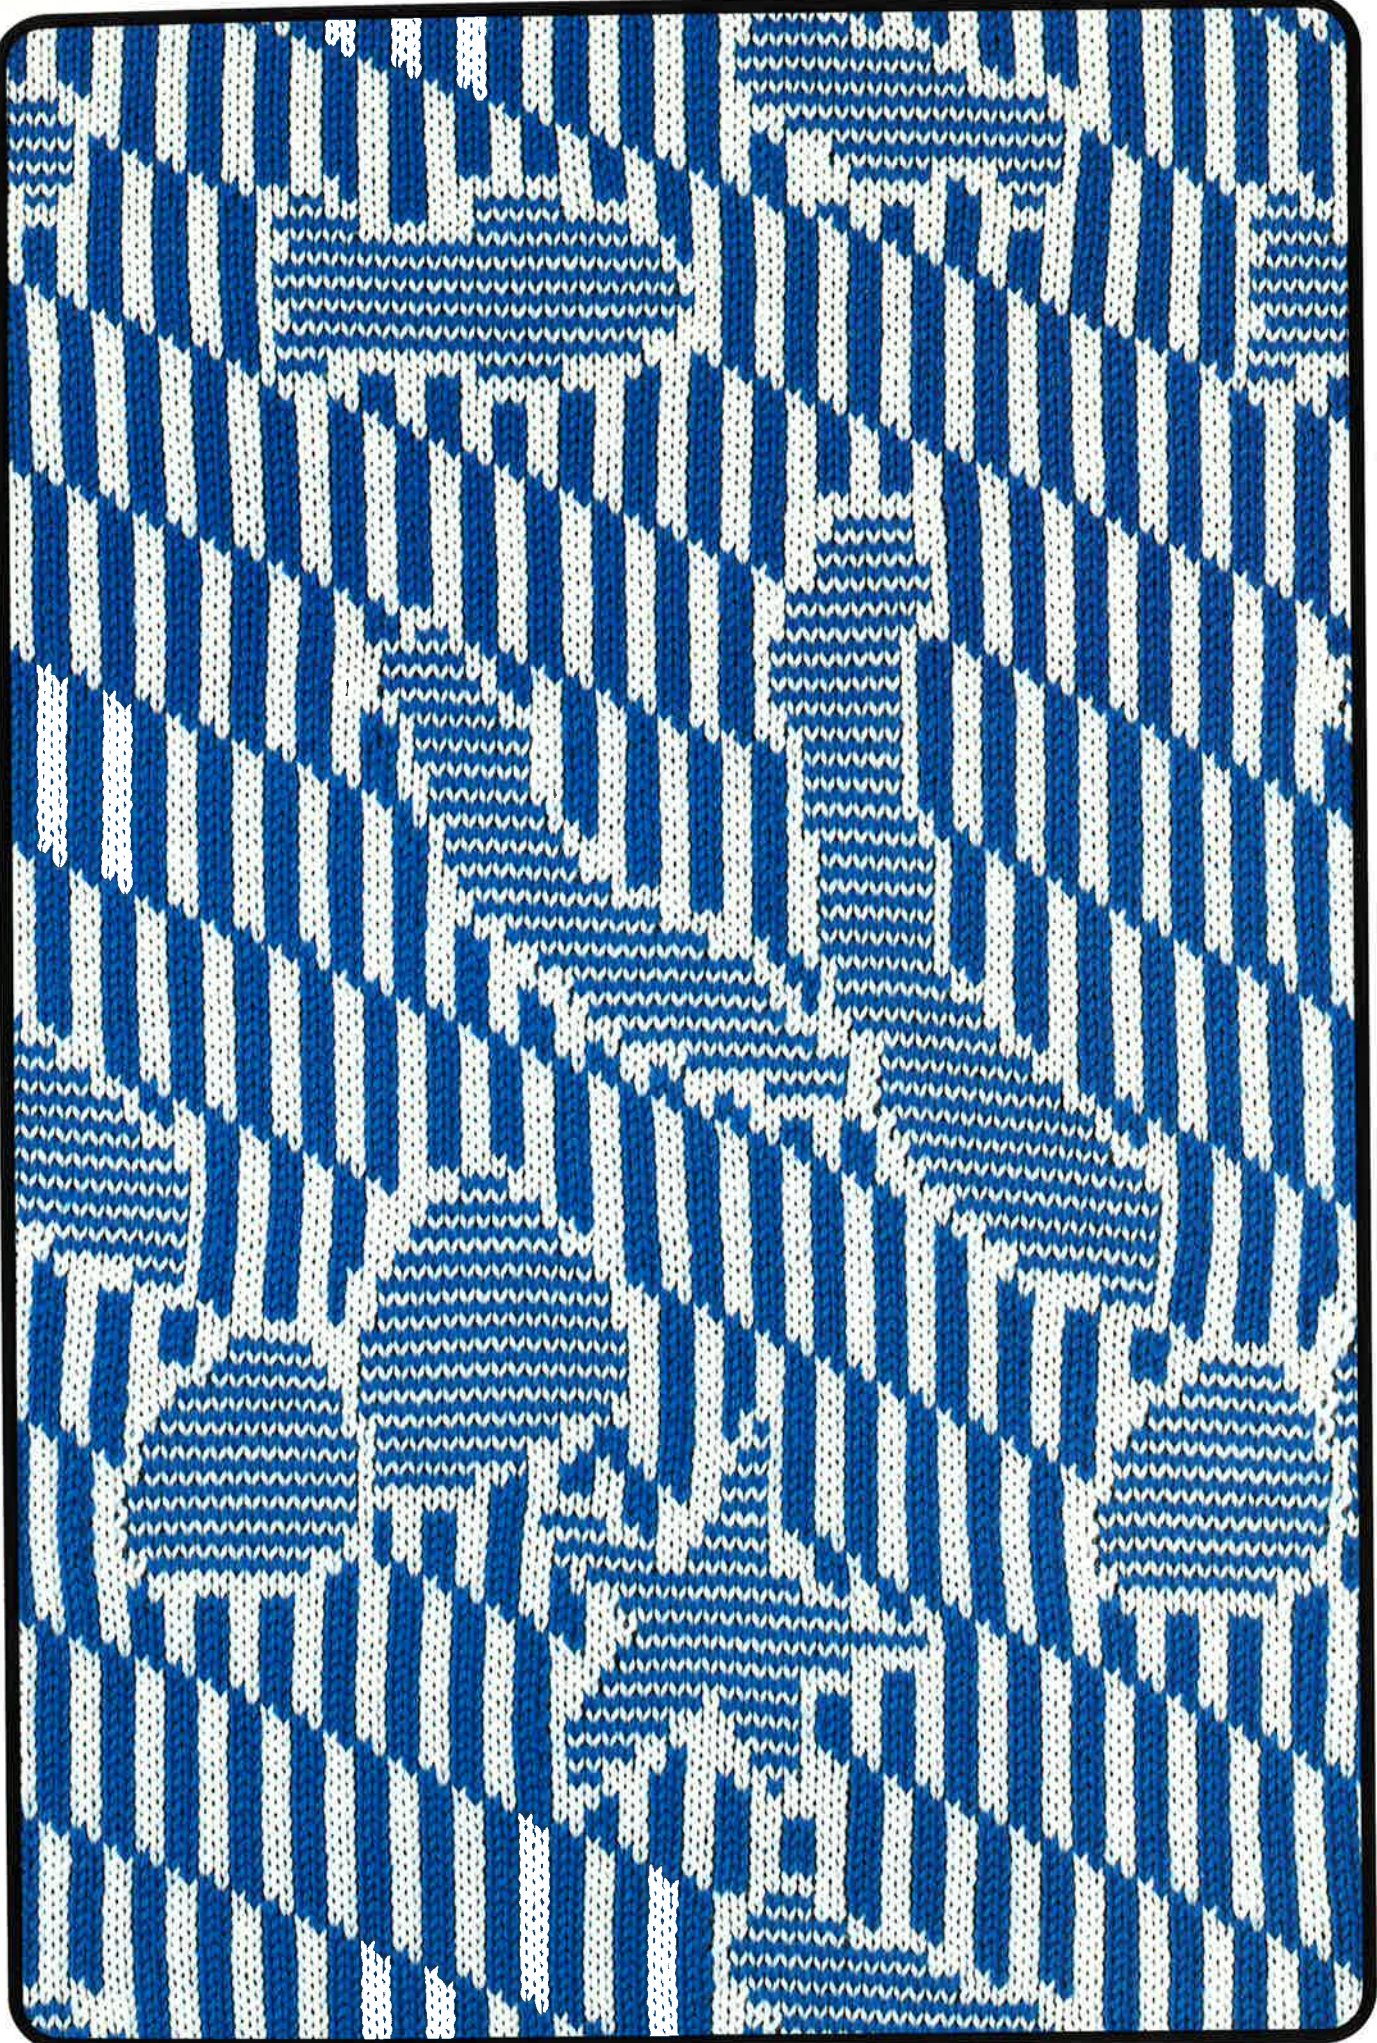



②

        ①

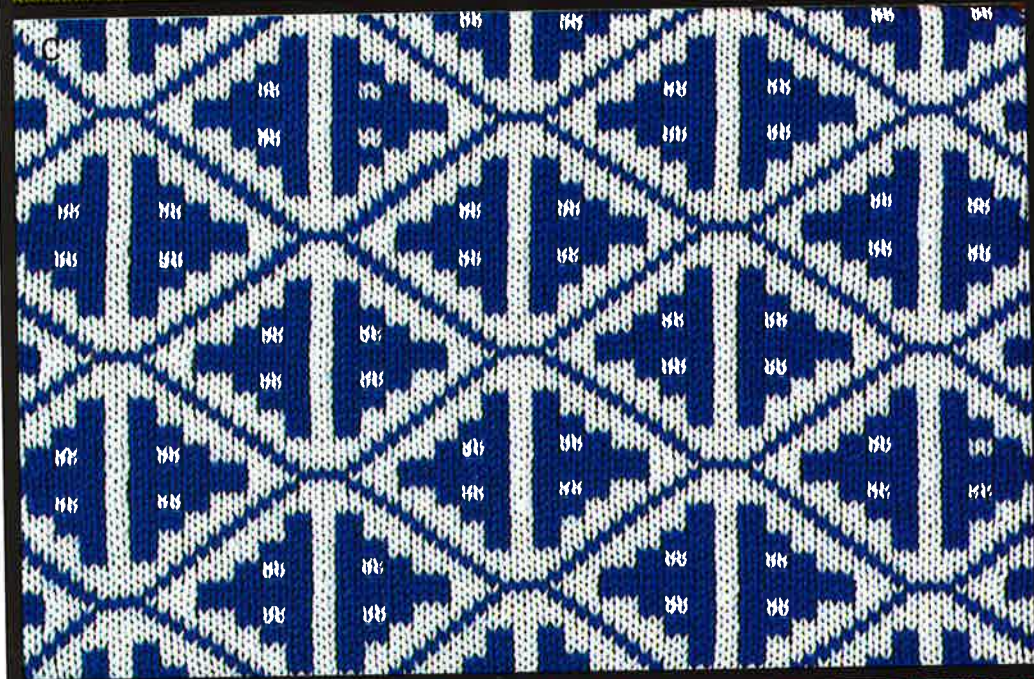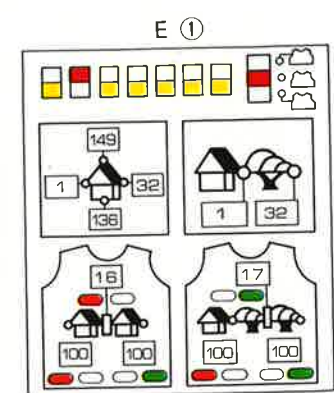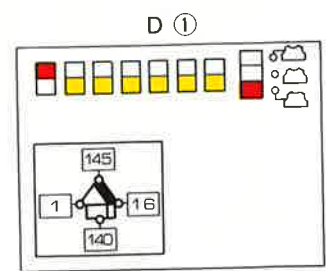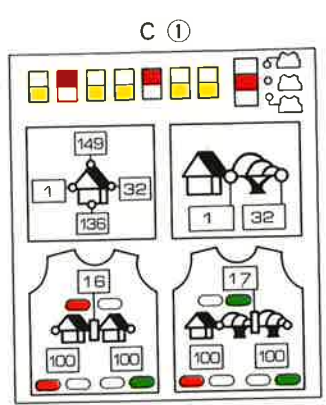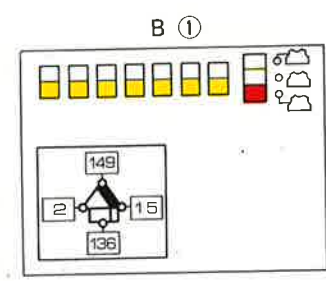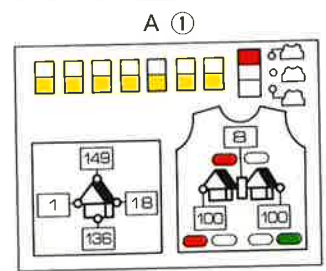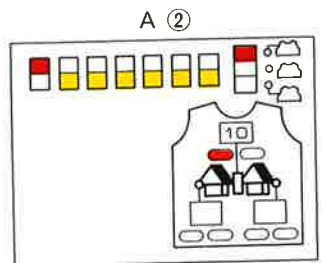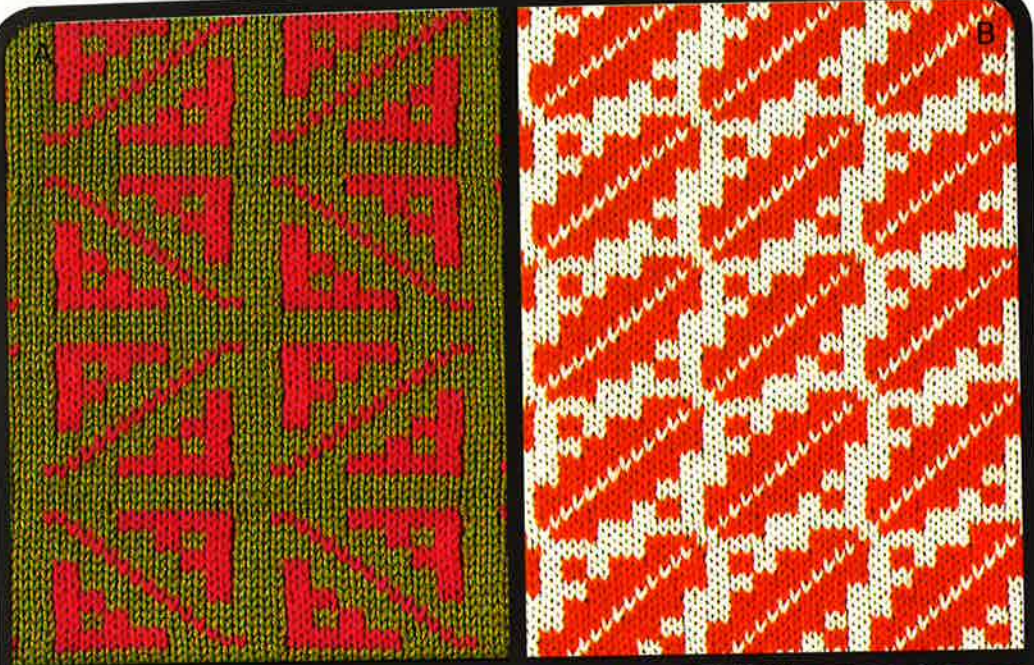

107-2



108-5



108-4



 
108-1



メモ欄の(A)は地糸口、(B)は色糸口の糸の切り替え位置を示します。

(A) and (B) in MEMO WINDOW mean the Yarn changing position for main yarn and second yarn respectively.

109-3

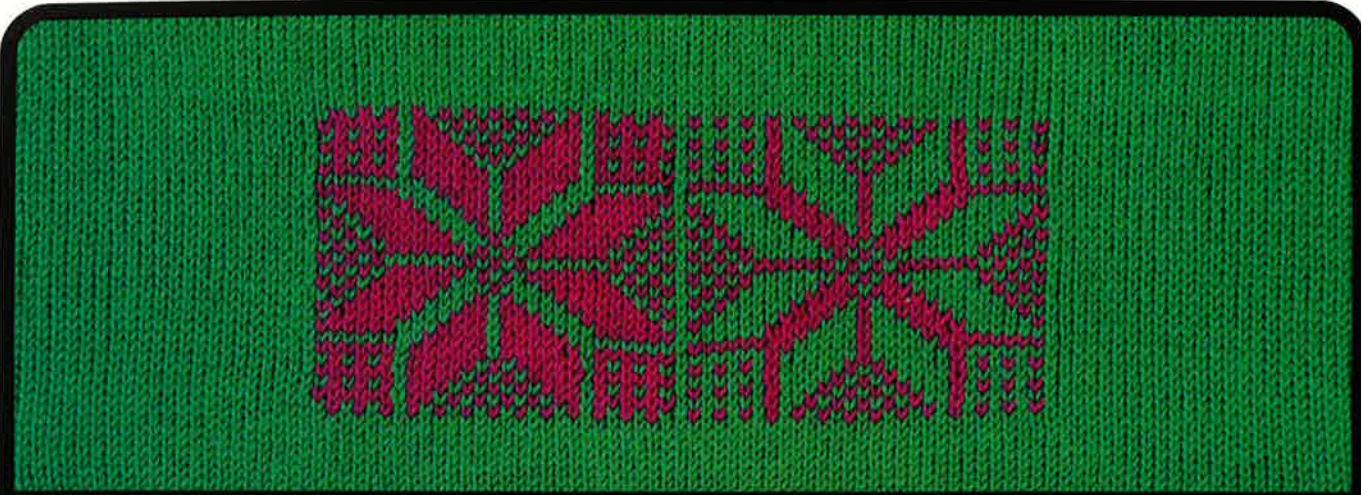

109-2



109-1



110-4



103-3



103-2

 
108-2




108-3



110-3

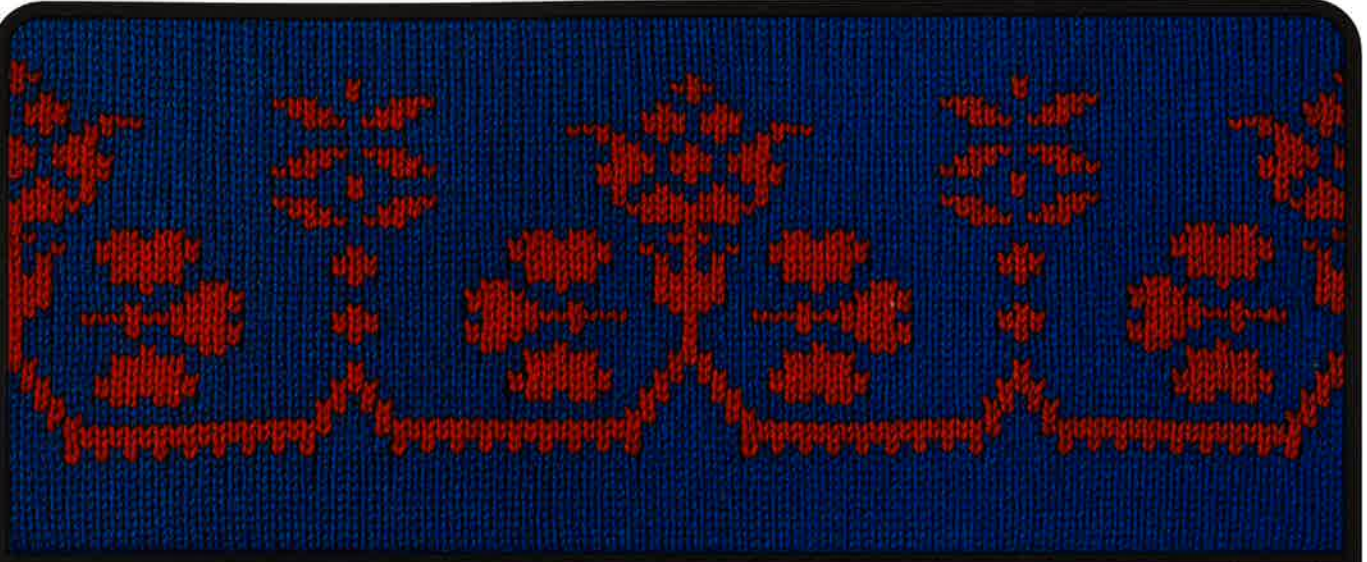

107-3

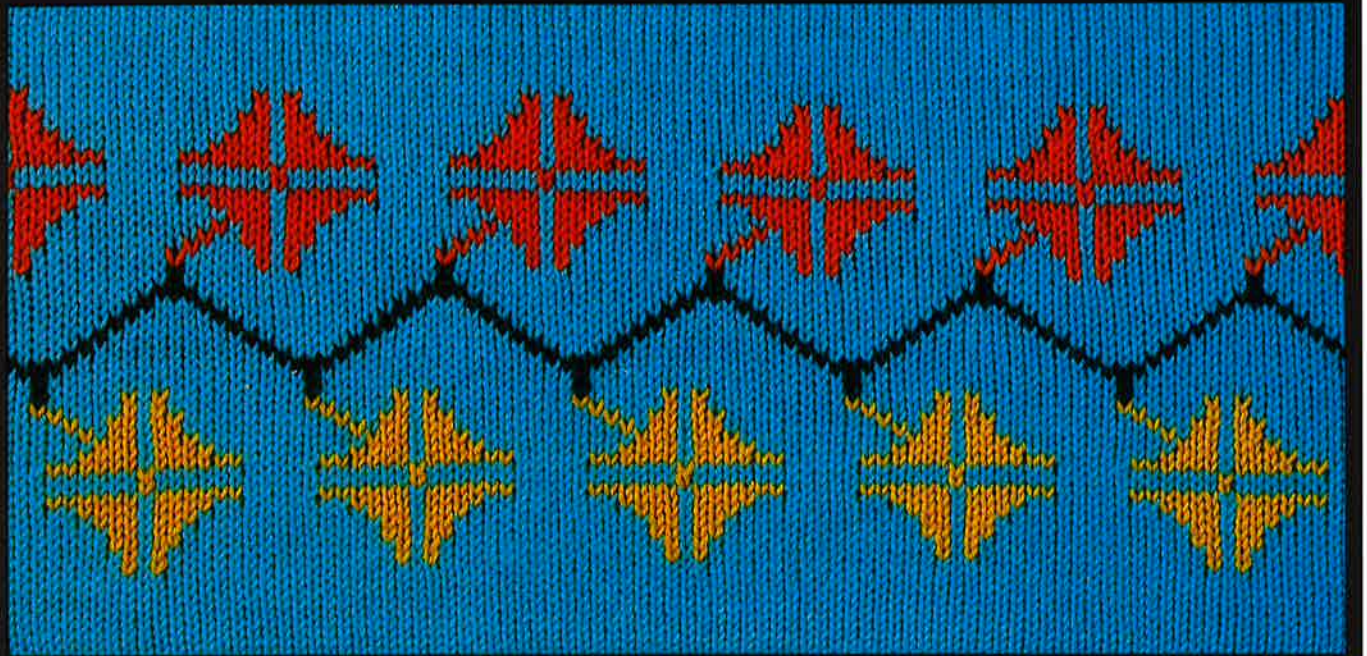 

110-1



110-2

