IMPORTANT NOTE

This machine is an improved model incorporating a new safety device which will allow the needles to slip out if the tension of your knitting is too wide. If this occurs the needles can be pushed back without any damage to the machine.

In the event of some of the needles being pushed in by accident, simply lift the clappetts with your crochet hook and slide the hooks back into position. This operation can be carried out in the slot through which the shuttle travels.

When knitting it is very important that the wool remains very loose when being fed into the machine.