
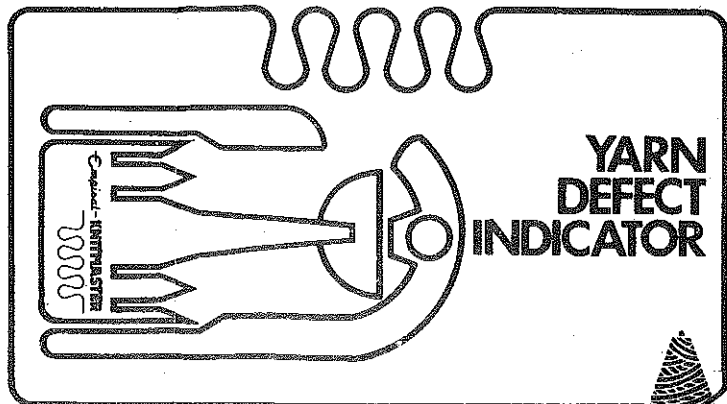


Empisal-KNITMASTER

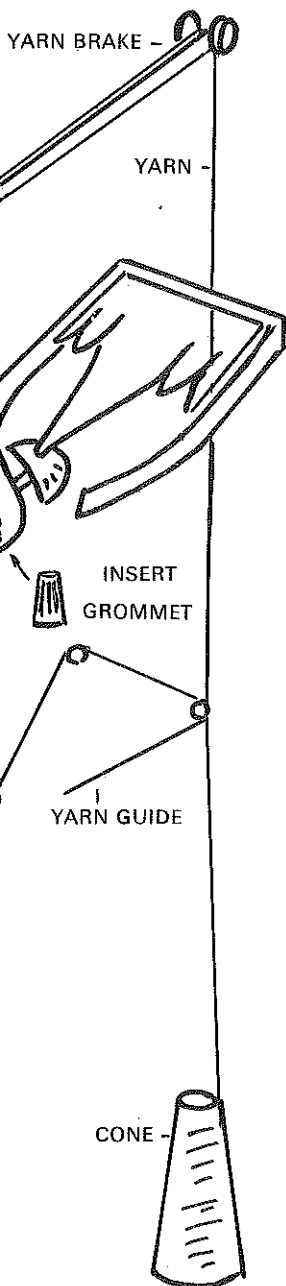

KNITMASTER LTD., 30-40 Elcho Street, London SW11 4AX.

INSTRUCTIONS

1. REMOVE YARN BRAKE FROM ROD.
2. PLACE PLASTIC GROMMET ON ROD AND PUSH DOWN 4in. BELOW YARN BRAKE POSITION.
3. PLACE Y.D.I. ON ROD AND PRESS FIRMLY ONTO PLASTIC GROMMET.
4. PLACE YARN TO RUN THROUGH APPROPRIATE SLOT IN Y.D.I.—OUTER SLOTS 1 TO 4 PLY, INNER SLOTS DOUBLE-KNIT PLUS.

(SEE DIAGRAM)

N.B. AFTER REMOVING ANY DEFECT, ENSURE YARN IS IN CORRECT SLOT—DO **NOT** PULL KNOTS OR SLUBS DOWNWARDS THROUGH SLOTS.