


PUNCH-TUCK RIB PATTERNS

SERIES
SERIE

57

(No. 281 ~ 290)

DISEÑOS DE PUNCH-
TUCK RIB

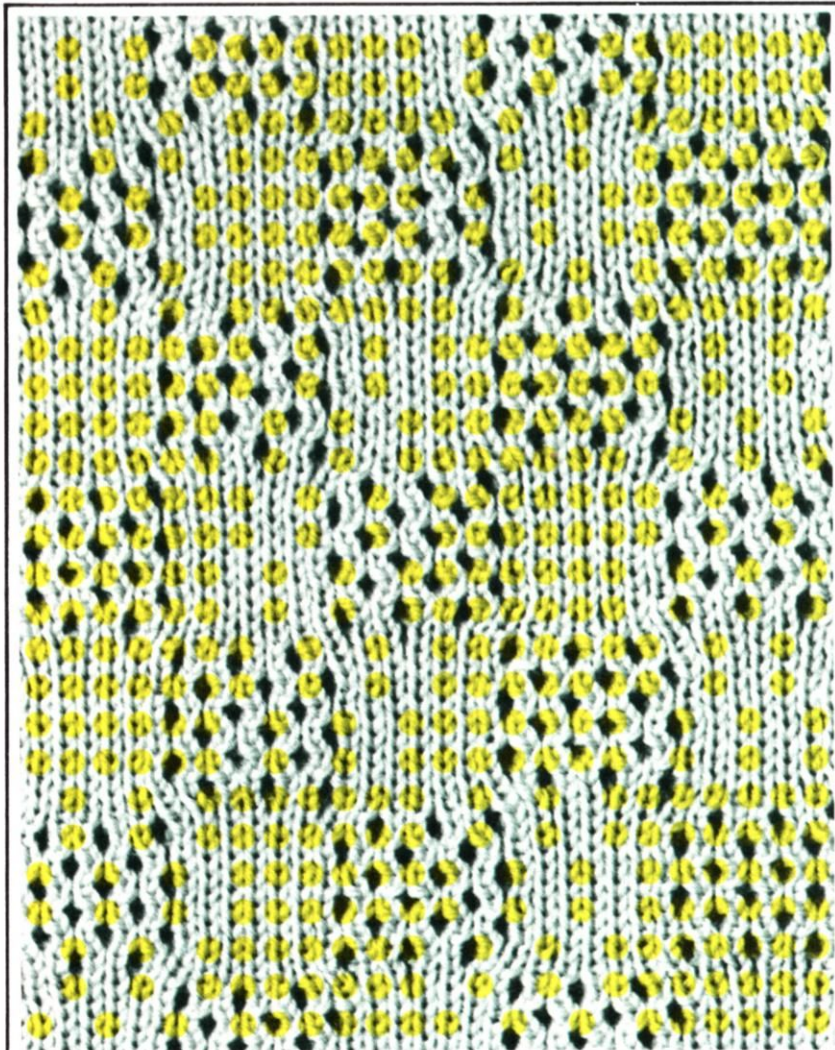

This Punch Card Set is used in combination with the "Memomatic" machine and it's corresponding ribber. The Cards No. 281 thru No. 289 are for "Punch-tuck Rib Pattern Knitting" and the Card No. 290 is for needle selection automatically.

Esta serie de las tarjetas perforadas se usa en combinación con la máquina "Memomatic" y su máquina auxiliar. Las tarjetas No. 281 por No. 289 son para tejido de "Punch-tuck Rib" y No. 290, para la selección de agujas automática.

The Cards for Punch-tuck Rib Pattern Knitting (No. 281 - No. 289) Las tarjetas para tejido de "Punch-tuck Rib" (No. 281-No. 289)

The "Punch-tuck Rib Pattern" can be produced in combination with the "tuck" knitting on main-machine using pattern card while ribbing on ribber.

"Punch-tuck Rib" es el tejido combinado del tejido "Recogido" en la máquina maestra y del tejido "Resorte" en la máquina auxiliar.

The operation table below is the procedures to knit "Punch-tuck Rib Pattern".

La tabla de operaciones siguiente indica el método de tejer "Punch-tuck Rib".

Needle arrangement					Half pitch lever H (right)						
Order		Main machine carriage			Ribber carriage			Swing pointer	Direction	Remarks	
		Cam lev.	Russel lev. (both)	Side lev. (both)	Stop knob	Set lev.	Pick knob	Russel lev.			
(1) Casting on	1	STOCK-INET		■	●	① ①	▲	— —	5	→	Suspend the cast on cast on comb with weights.
	2	SLIP	"	"	"	① ①	"	"	"	←	Bound off cast on
	3	STOCK-INET	"	"	"	"	"	"	"	→	
	4	SLIP	"	"	"	"	"	"	"	←	
(2) Main knitting (To be repeated)	1	TUCK	"	▲	▼	① ①	"	"	"	→	
	2	"	"	"	"	"	"	"	"	←	

Disposición de las agujas										Palanca de medio paso H (derecha)	
Orden	Carro de la máquina principal				Perilla de Parada	Carro de la auxiliar			Escala de oscilación	Dirección	Notas
	Palanca de leva	Palancas Russel (ambas)	Palancas laterales (ambas)	Palanca de ajuste		Palanc. de recogido	Palanca Russel				
(1) Enmallada rematada	1	JERSEY		■	●	① ①	▲	— —	5	→	Cuelgue el peine y las pesas
	2	DESLI-ZAR	"	"	"	① ①	"	"	"	←	Rematado
	3	JERSEY	"	"	"	"	"	"	"	→	
	4	DESLI-ZAR	"	"	"	"	"	"	"	←	
(2) Tejido principal (a repetir)	1	RECO-GER	"	▲	▼	① ①	"	"	"	→	
	2	"	"	"	"	"	"	"	"	←	

Remarks:—

Notas:—

Medium weight yarn is the most suitable yarn for the garments knitted in "Punch-tuck Rib Pattern" producing fine touch and better appearance.


"Punch-tuck Rib Pattern Knitting" can be made only when a ribber is combined with the "Memomatic" machine.

El estambre de medio peso es el más recomendable para las prendas tejidas en "Punch-tuck Rib" con el tacto rico y la apariencia buena.

"Punch-tuck Rib" pueden tejerlo sólo en el caso de que se acopla la máquina "Memomatic" con su auxiliar.


CARD
Tarj. No. 281

1 pat. = 12 sts, 30 rows.
1 diseño = 12 puntos 30 cras.

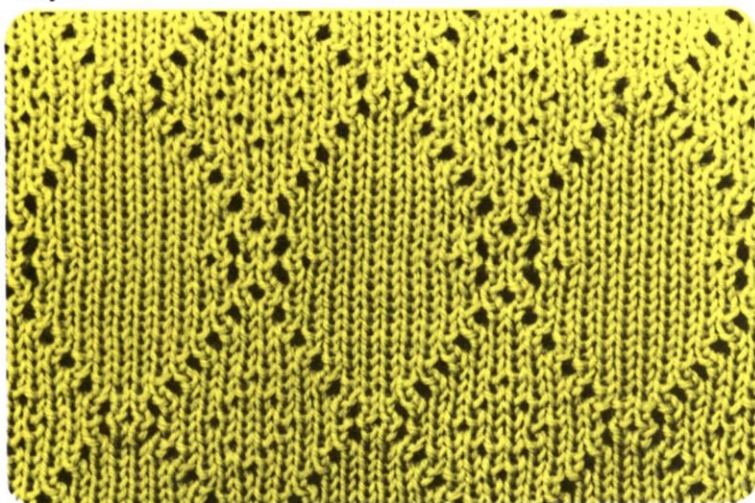

CARD
Tarj. No. 282

1 pat. = 8 sts, 12 rows.
1 diseño = 8 puntos 12 cras.

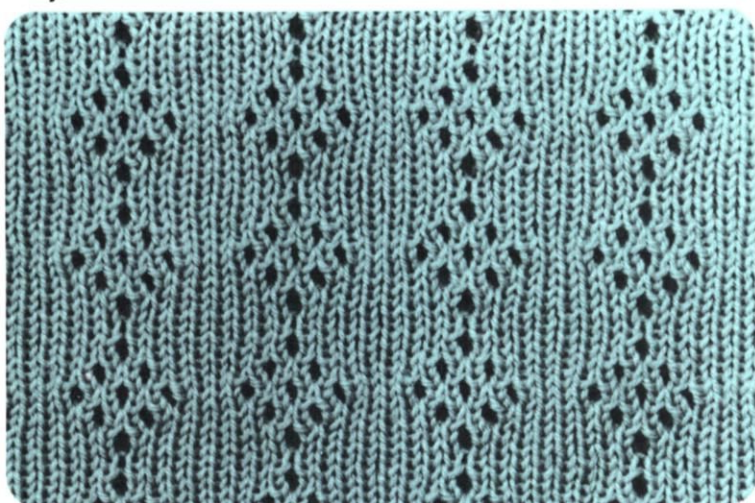


CARD
Tarj. No. 283

1 pat. = 6 sts, 8 rows.
1 diseño = 6 puntos 8 cras.




CARD
Tarj. No. 284

1 pat. = 12 sts, 48 rows.
1 diseño = 12 puntos 48 cras.

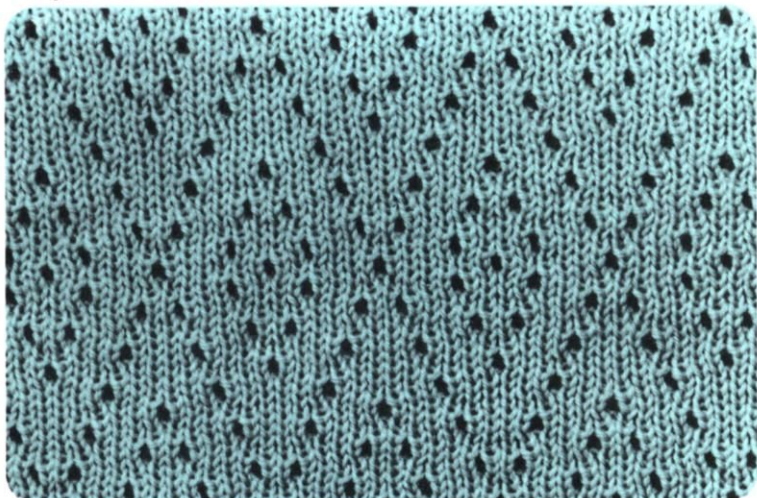


CARD
Tarj. No. 285

1 pat. = 12 sts, 24 rows.
1 diseño = 12 puntos 24 cras.

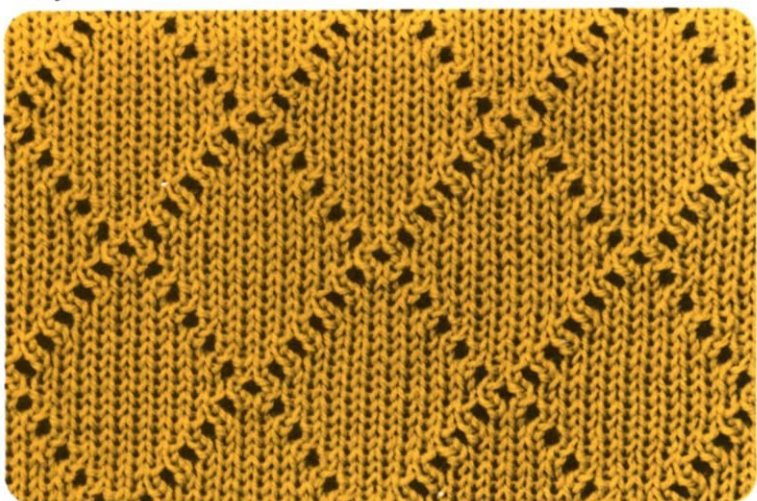


CARD
Tarj. No. 286

1 pat. = 12 sts, 24 rows.
1 diseño = 12 puntos 24 cras.

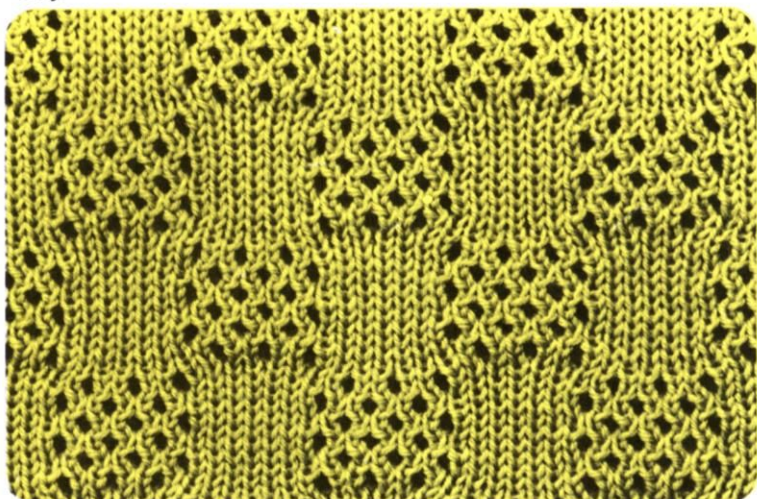


CARD No. 287
Tarj.

1 pat. = 12 sts, 28 rows.
1 diseño = 12 puntos 28 cras.

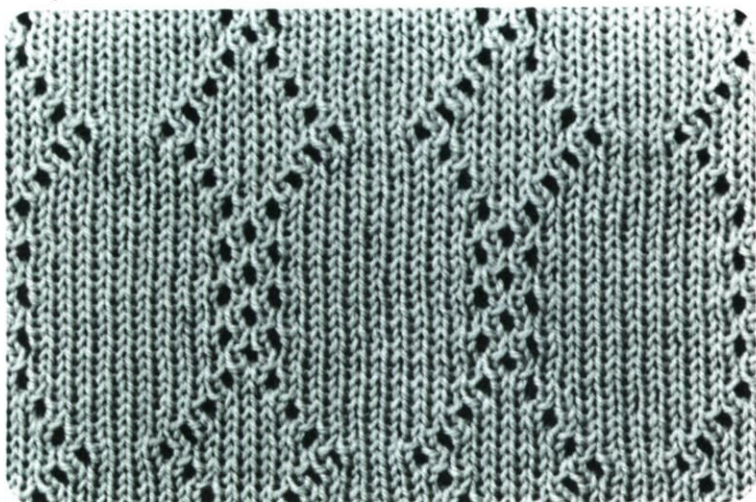


CARD No. 288
Tarj.

1 pat. = 8 sts, 12 rows.
1 diseño = 8 puntos 12 cras.

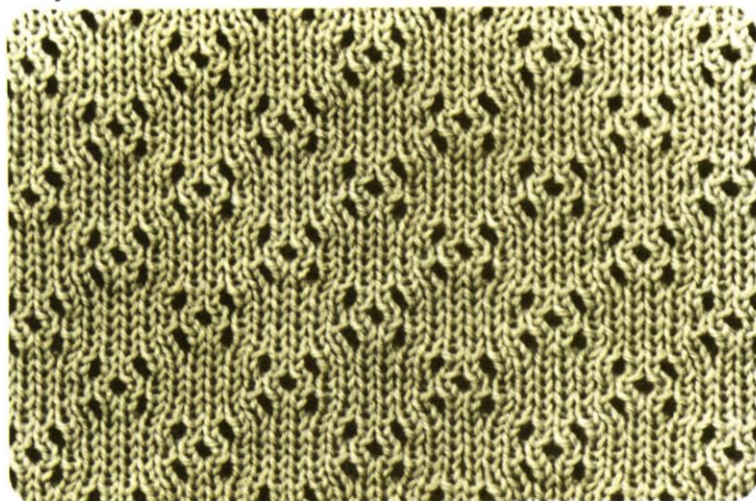

CARD No. 289
Tarj.

1 pat. = 8 sts, 12 rows.
1 diseño = 8 puntos 12 cras.

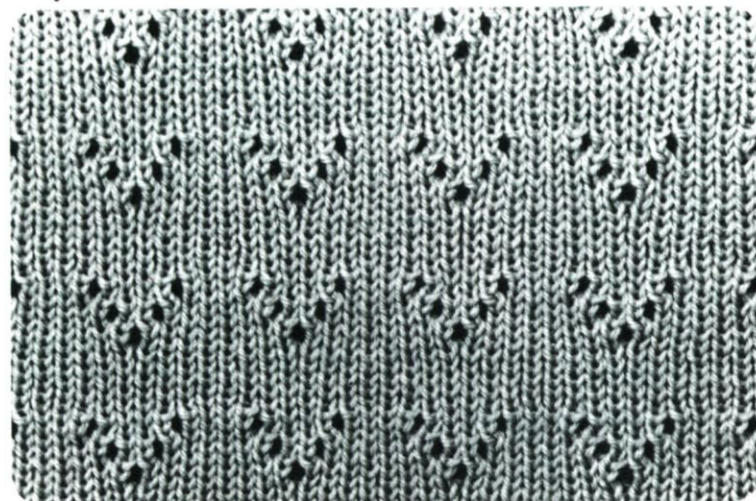

INSTRUCTIONS OF CARD NO. 290 - For Needle Selection. Instrucciones de Tarjeta No. 290 - Para la selección de agujas.

This card is used in place of the Needle Pusher, and is combined with various Needle Pushers in one card for easy needle selection.

Insert the Card in the main knitter and feed up to the holes you like to use. The needle selection is made for the fifth rows counting from the guide number printed at the right side of the card.


Set the Stop Knob at ● position. The position of the Touch Lever can indicate the position of holes.

Esta tarjeta se usa en lugar del Selector de agujas y se combina de varios selectores de agujas en la tarjeta para selección de agujas automática.

Inserte la tarjeta perforada en la máquina principal y dé vuelta a la tarjeta hasta que salgan los agujeros que quiere Ud. usar.

La selección de agujas se hace en la quinta carrera calculando desde el número de memoria de la tarjeta en el lado derecho de la tarjeta.

Coloque la perilla de parada en posición ●. La posición de las palancas de toque le indica a Ud. la posición de agujeros.

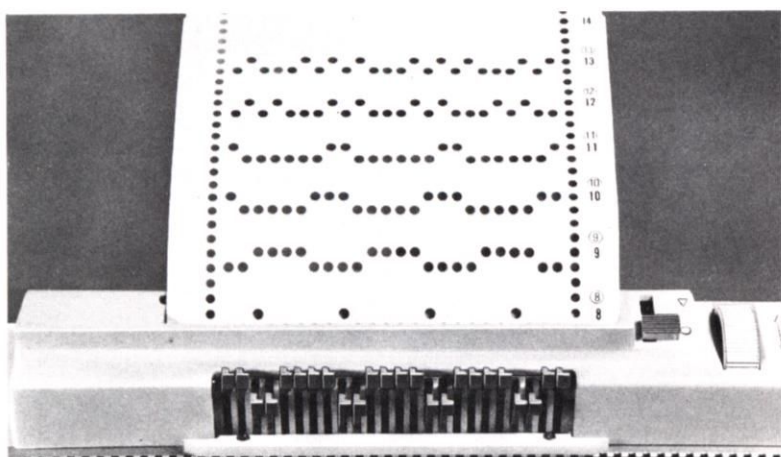


Bring out the required number of needles to B position and operate the carriage two or three times so that the needles will be lined in B position and the memory will memorize the pattern.

Needle selection can be made by means of firstly uncoupling the Arm and then operate the Carriage while lifting the handle backward so that the center part of the carriage will be raised.


Selecione el número requerido de agujas a la posición B y pase el carro suavemente dos o tres veces de un lado a otro para que las agujas se alineen en posición B y el tambor obtenga la memoria.

La selección de agujas se hace sin el brazo y operate el carro mientras sube el manija hacia atrás para que la parte céntrica del carro se levante.

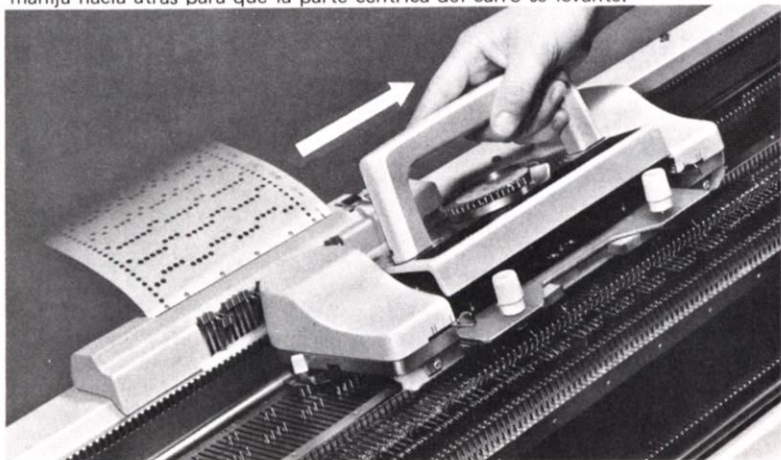

Needle setting of the ribber can be made by selecting the required needles manual to C and B positions in combination with the knitting machine.

La selección de agujas de la auxiliar se hace poniendo manualmente las agujas necesarias a las posiciones B y C en combinación con la máquina principal.

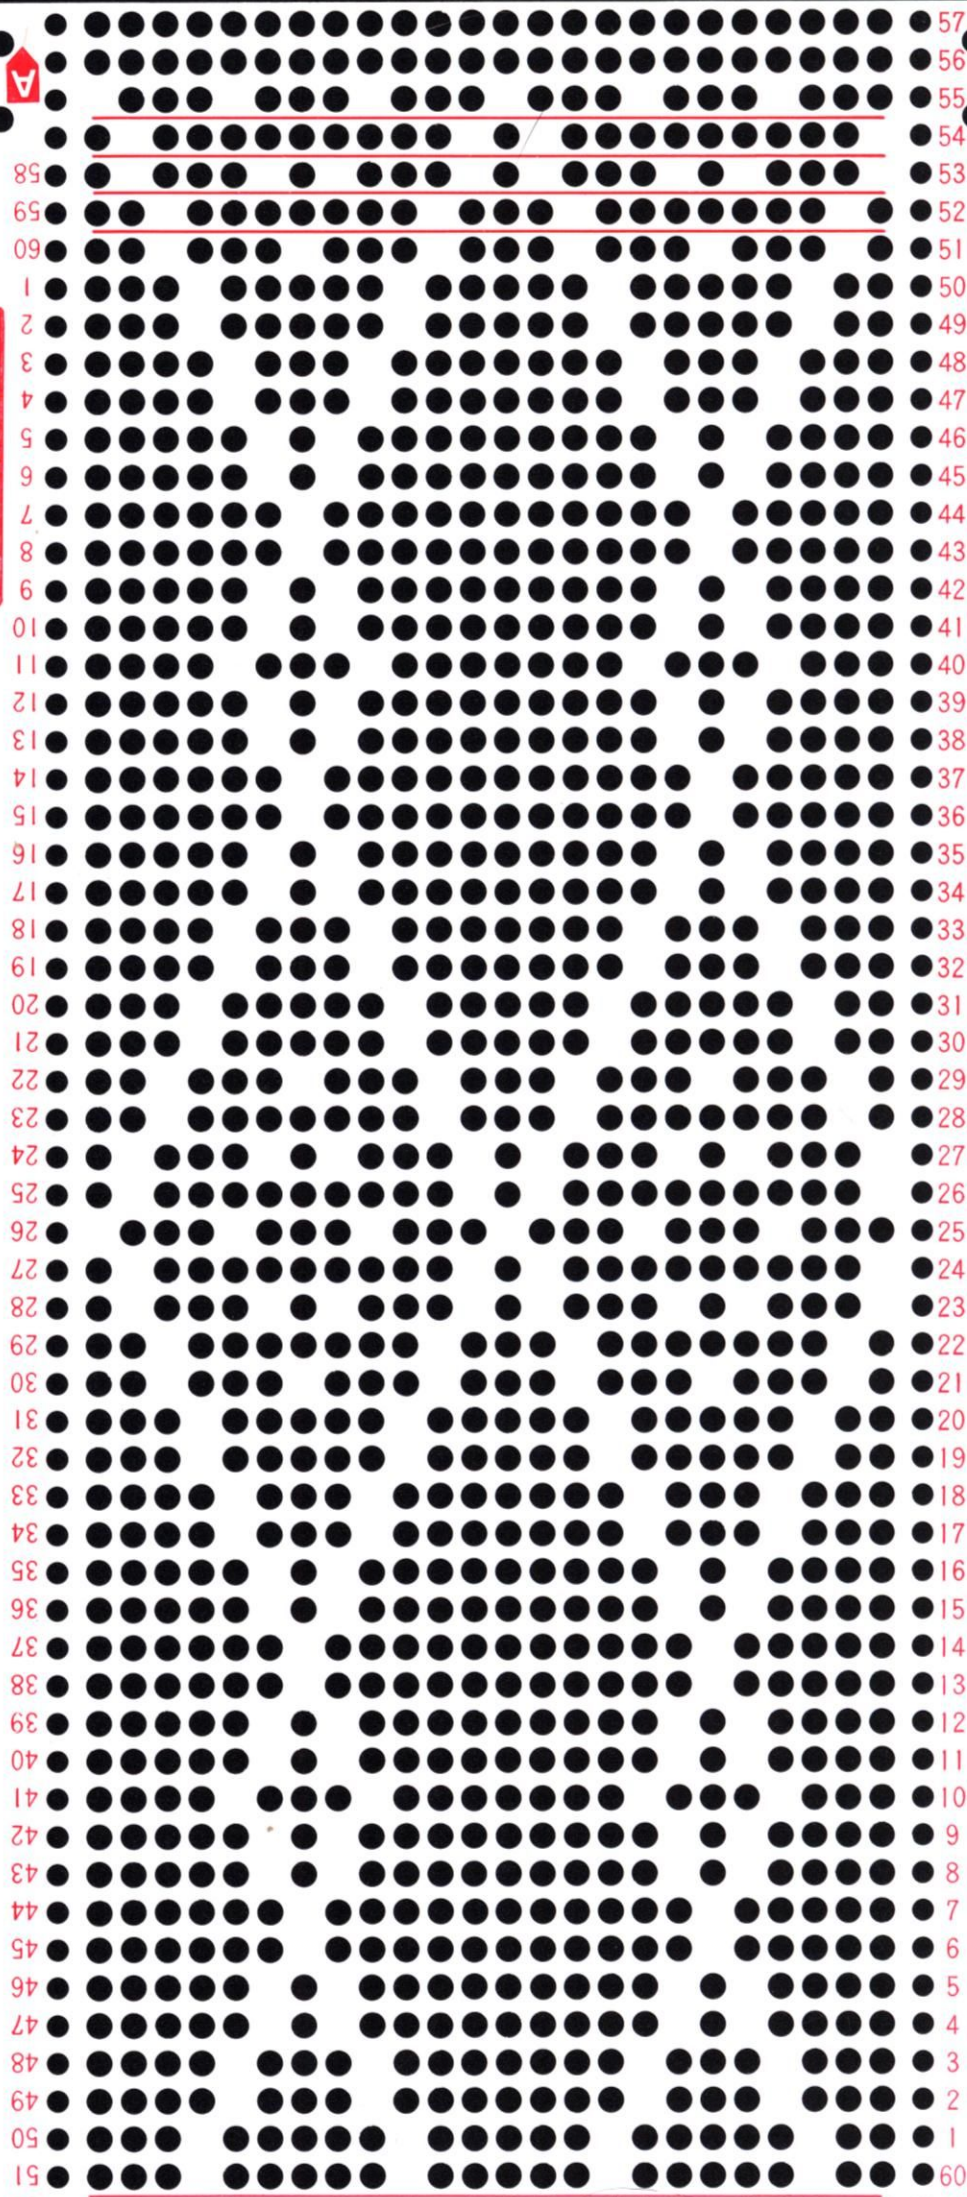

57
56
55
54
53
52
51
50
49
48
47
46
45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
60
59
58

51 ● 60

● ● ● ● ● ● ● ● ● ● ● ●

[illegible][illegible]

55


95

57




No. 282

A

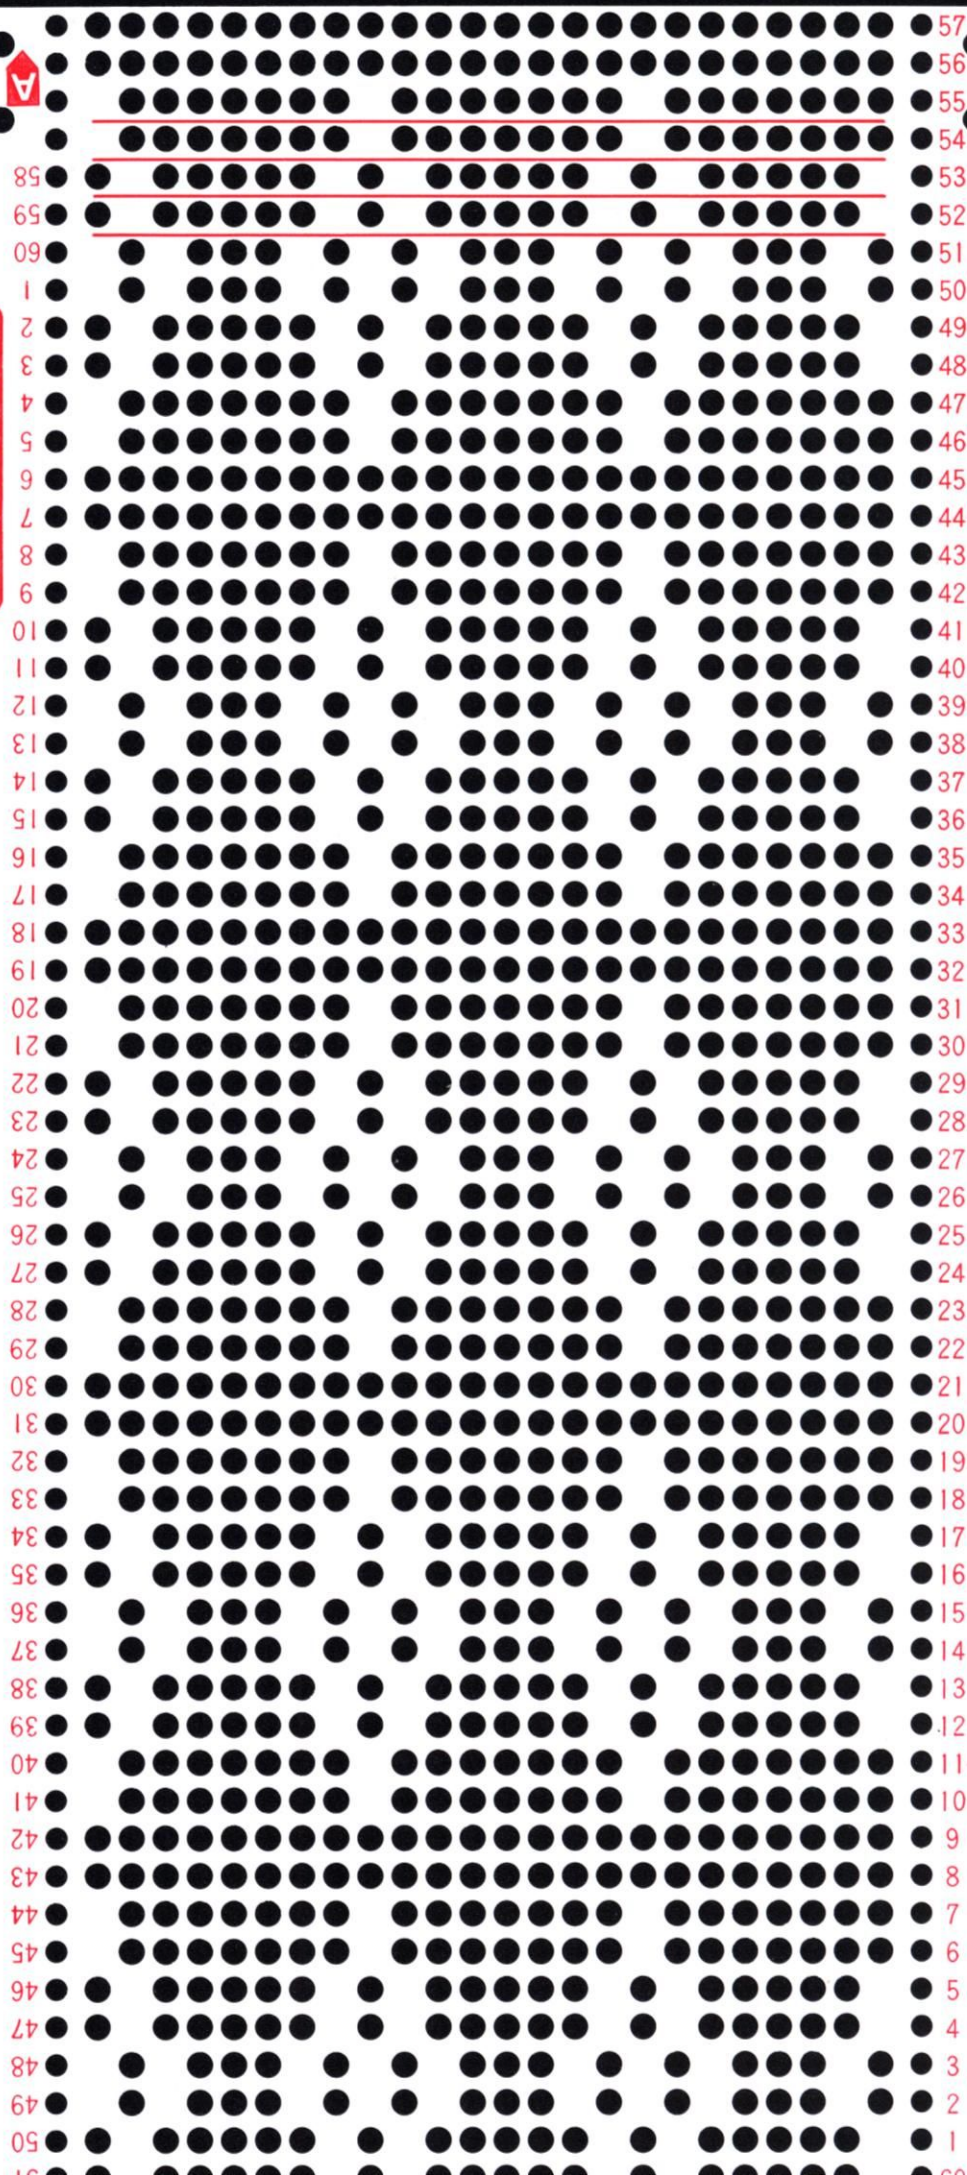


57
56
55
54
53
52
51
50
49
48
47
46
45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1

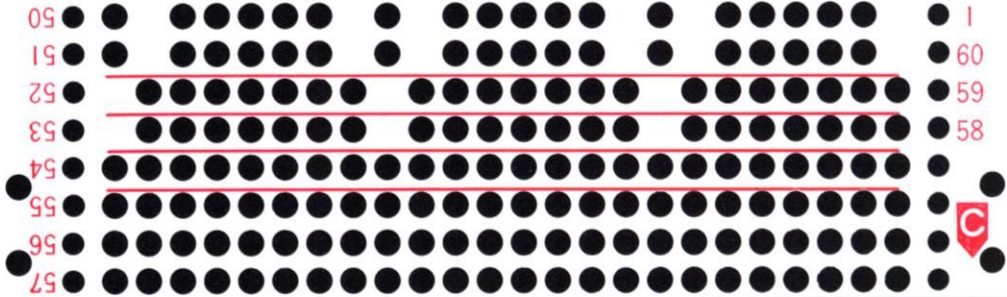

A

No. 283

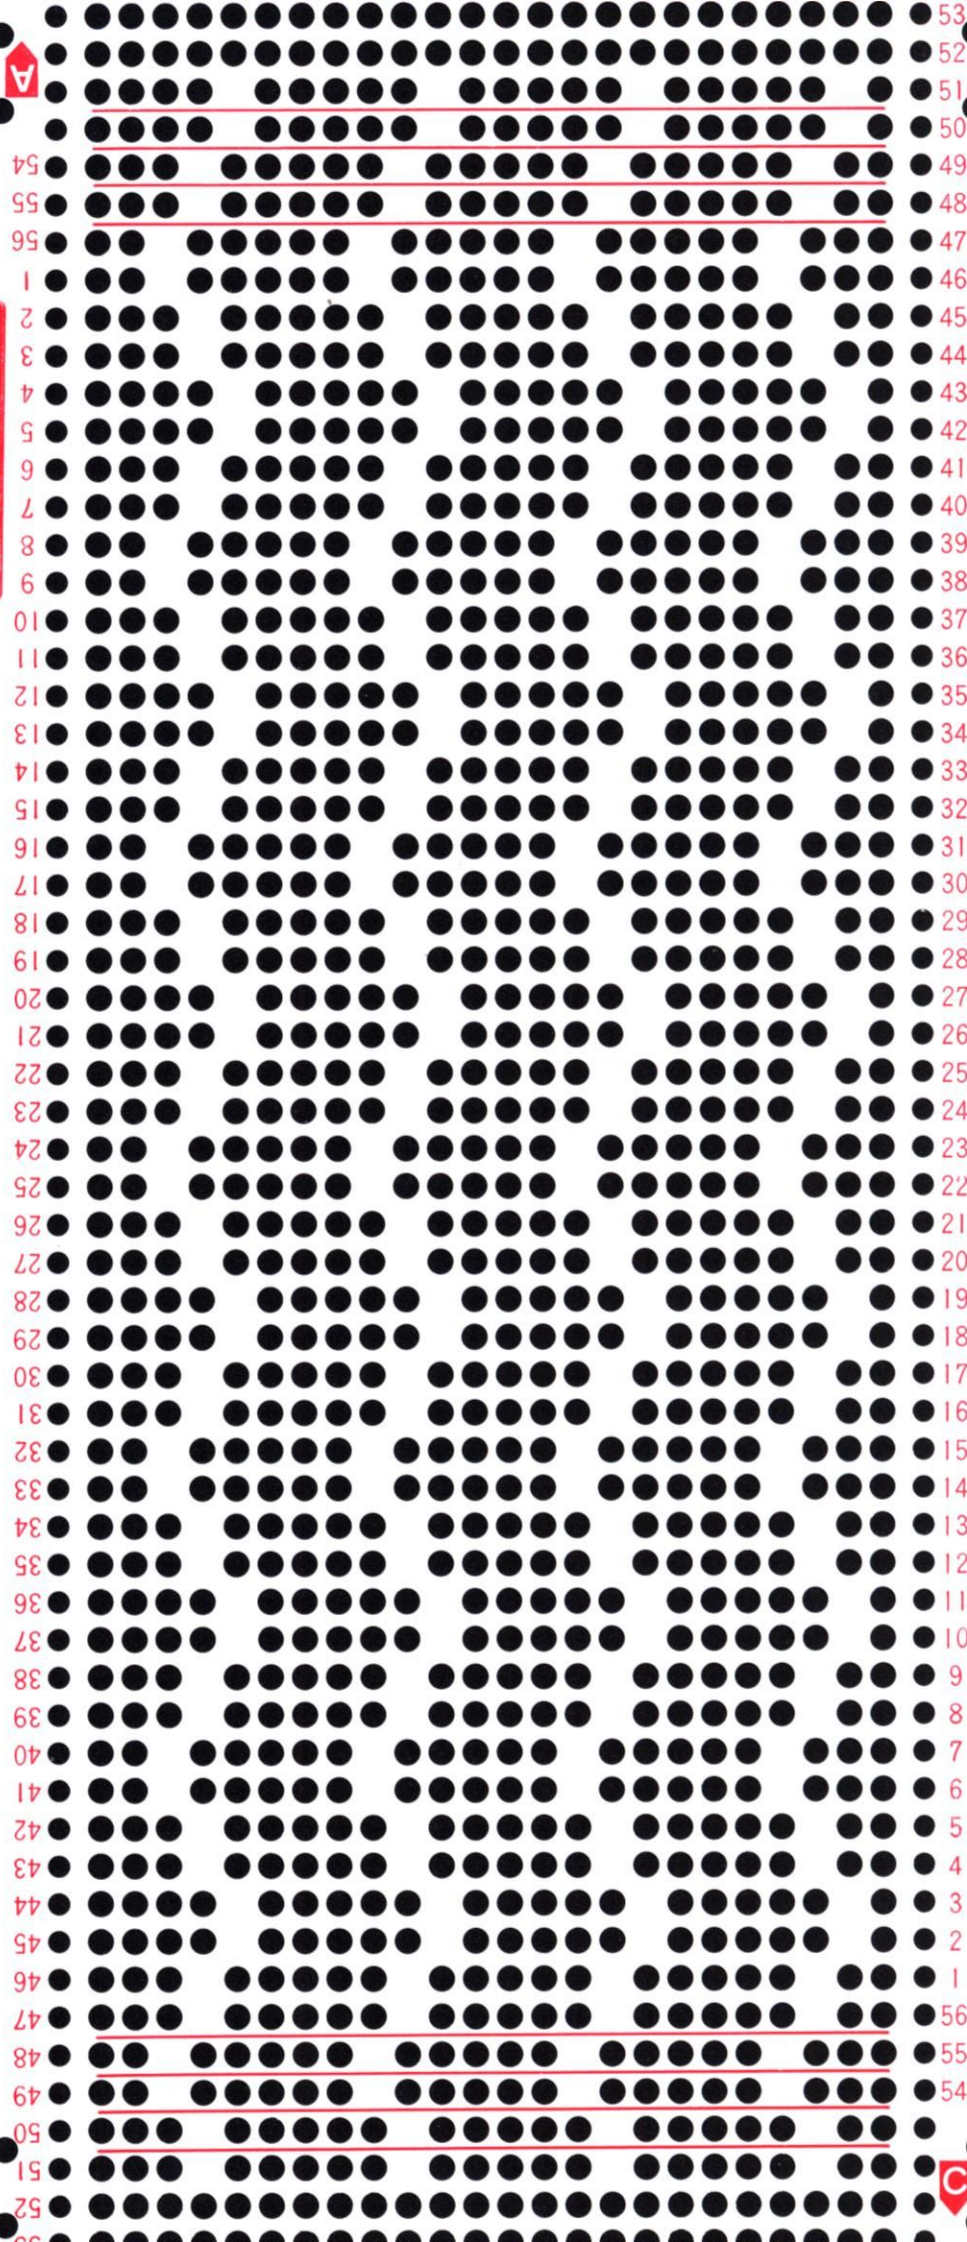

C

A

No. 284

45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
48
47
46
45

C

A

No. 285

45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
48
47
46
45

C

A

No. 286

45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
48
47
46
45

C

No. 287

A

53
52
51
50
49
48
47
46
45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
56
55
54
53


C

No. 288





51
50
49
48
47
46
45
44
43
42
41
40
39
38
37
36
35
34
33
32
31
30
29
28
27
26
25
24
23
22
21
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
60
59
58

● 57
● 56
● 55
● 54
● 53
● 52
● 51
● 50
● 49
● 48
● 47
● 46
● 45
● 44
● 43
● 42
● 41
● 40
● 39
● 38
● 37
● 36
● 35
● 34
● 33
● 32
● 31
● 30
● 29
● 28
● 27
● 26
● 25
● 24
● 23
● 22
● 21
● 20
● 19
● 18
● 17
● 16
● 15
● 14
● 13
● 12
● 11
● 10
● 9
● 8
● 7
● 6
● 5
● 4
● 3
● 2
● 1
● 60

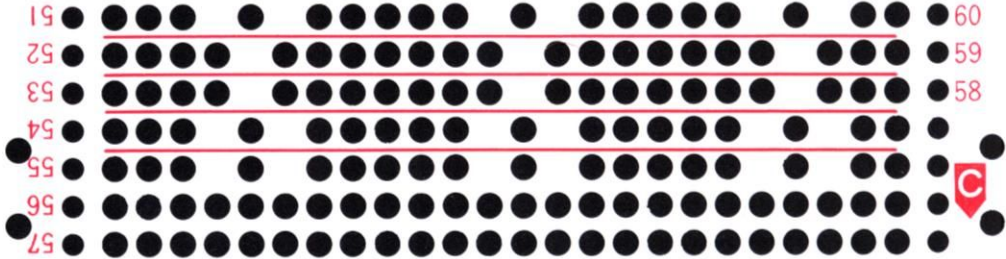

No. 289

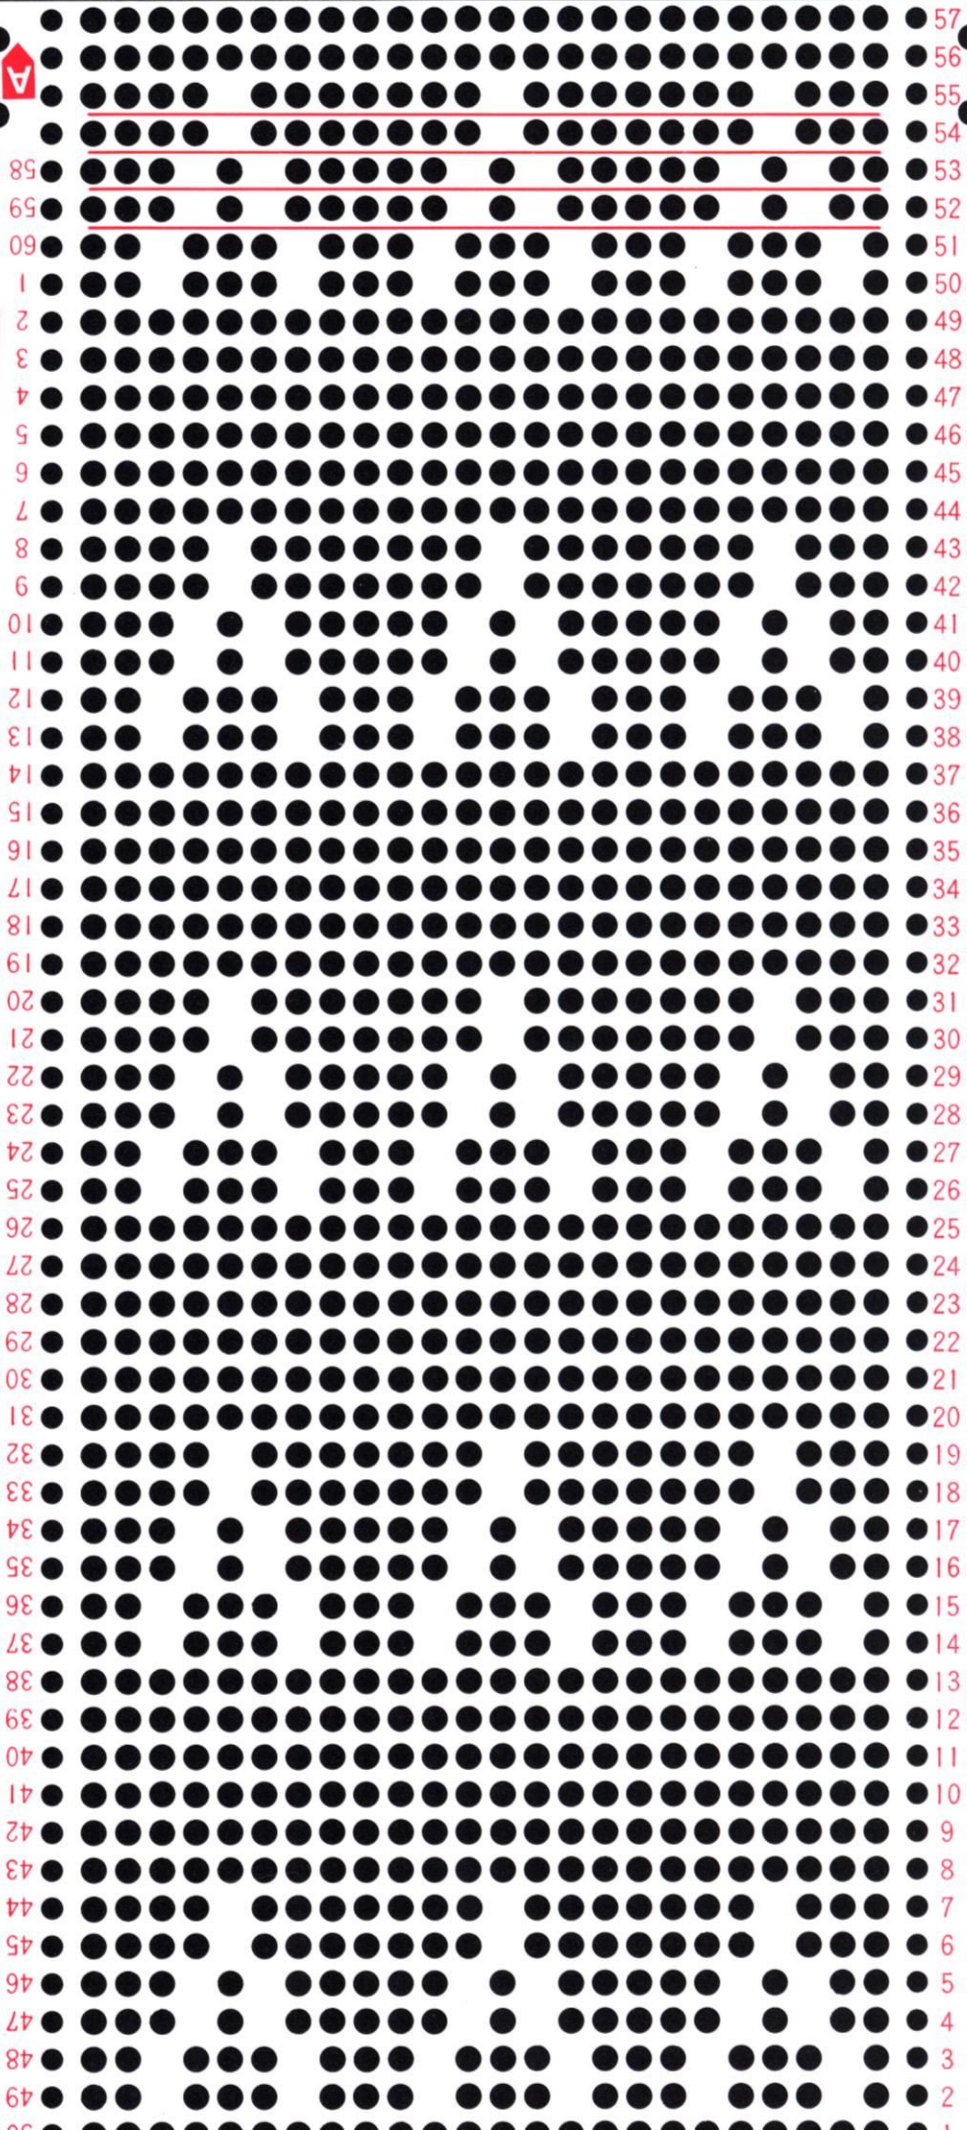

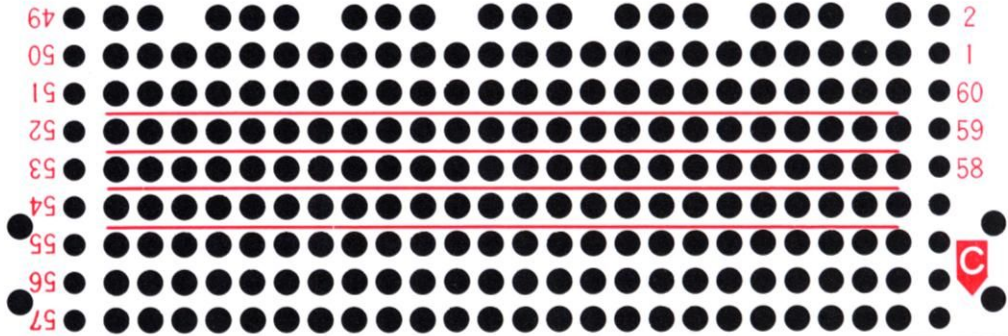



- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13

13

13

14

14